


PARTS BOOK

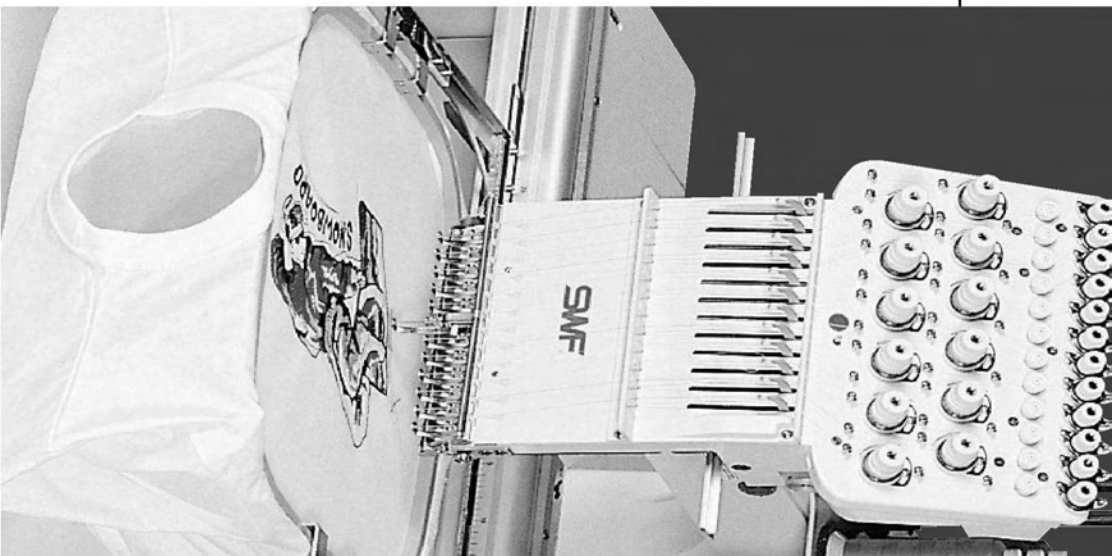


**SINGLE-HEAD AUTOMATIC
EMBROIDERY MACHINE**

SMF[®]

PME-100326

SunStar CO.,LTD

Machine Layout

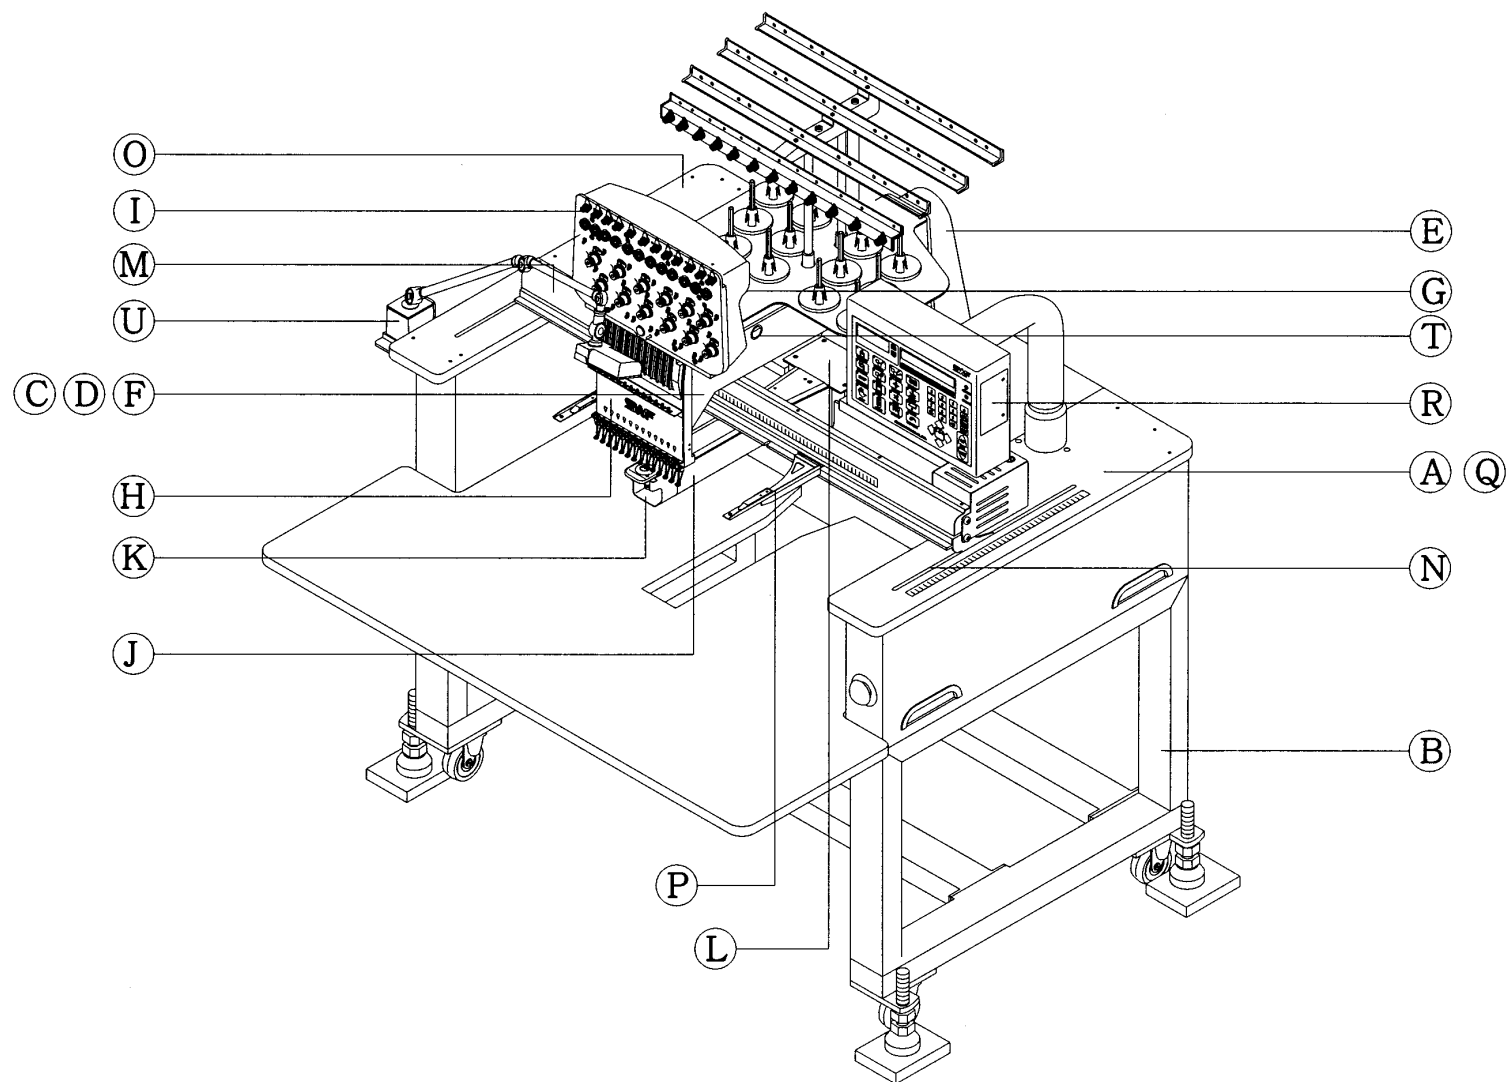



CONTENT


1. 조에 속한 파트는 개별 조립 시 제품의 파손 또는 재봉 불량 발생될 수 있어 해당 파트에 대한 주문 시에는 조 품목으로만 구입이 가능합니다.
2. 본 책자는Parts Book으로 제작되었으므로 매뉴얼로 사용 불가합니다.

1. The parts classified as ass'y items may cause damage to the machine or bad sewing when they are separately assembled.
Hence, when they are ordered, they can be purchased as ass'y items only.
2. This is a parts book. It cannot be used as a manual.

A	Body & Table	7
B	Stand (Option)	9
C	Arm I	11
D	Arm II	13
E	Main Drive System	15
F	Wiper Set	17
G	Color Change Set	19
H	Head	21
I	Thread Tension Unit	23
J	Bed	25
K	Picker Set	27
L	Thread Cutting Set	29
M	X-Axis Drive Set	31
N	Y-Axis Drive Set	33
O	Spool Stand	35
P	Border & Tubular Frame	37
Q	Main Controller	39
R	Operation Unit	41
S	Bobbin Winder	43
T	Lubrication	45
U	Lamp (Option)	47

A


Body & Table

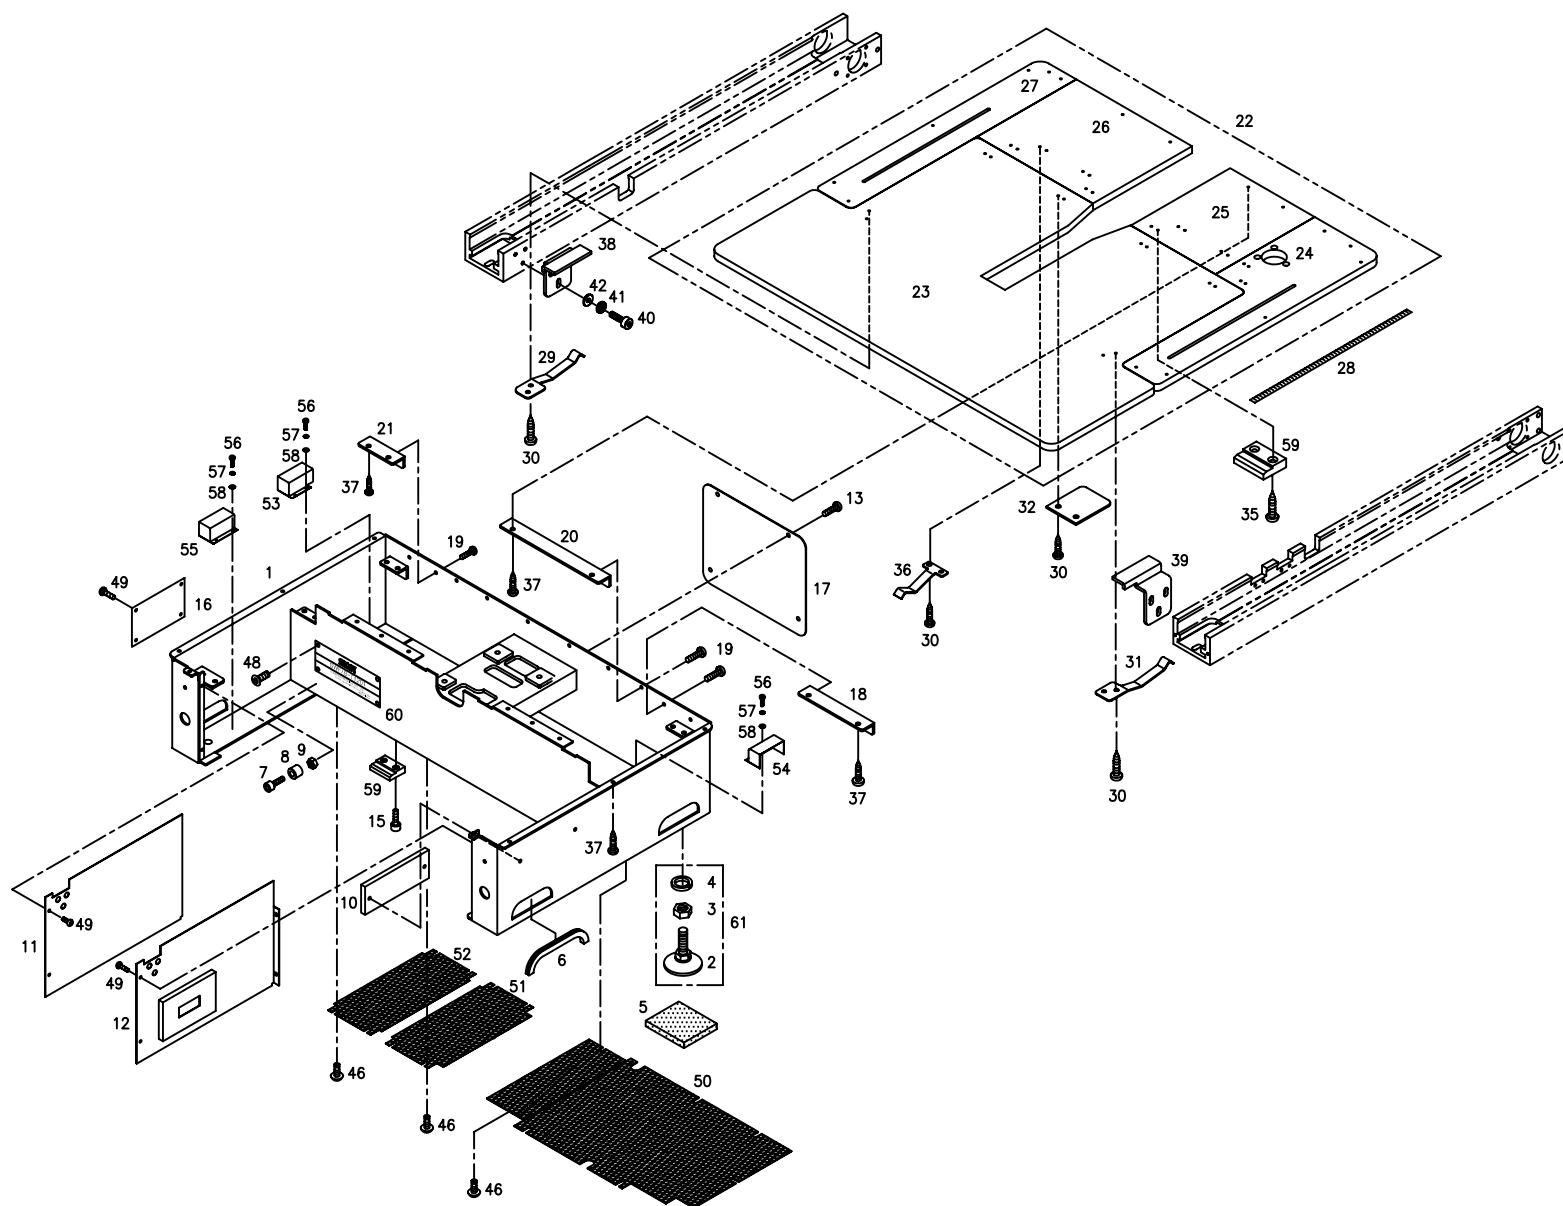

[illegible]


B

Stand (Option)

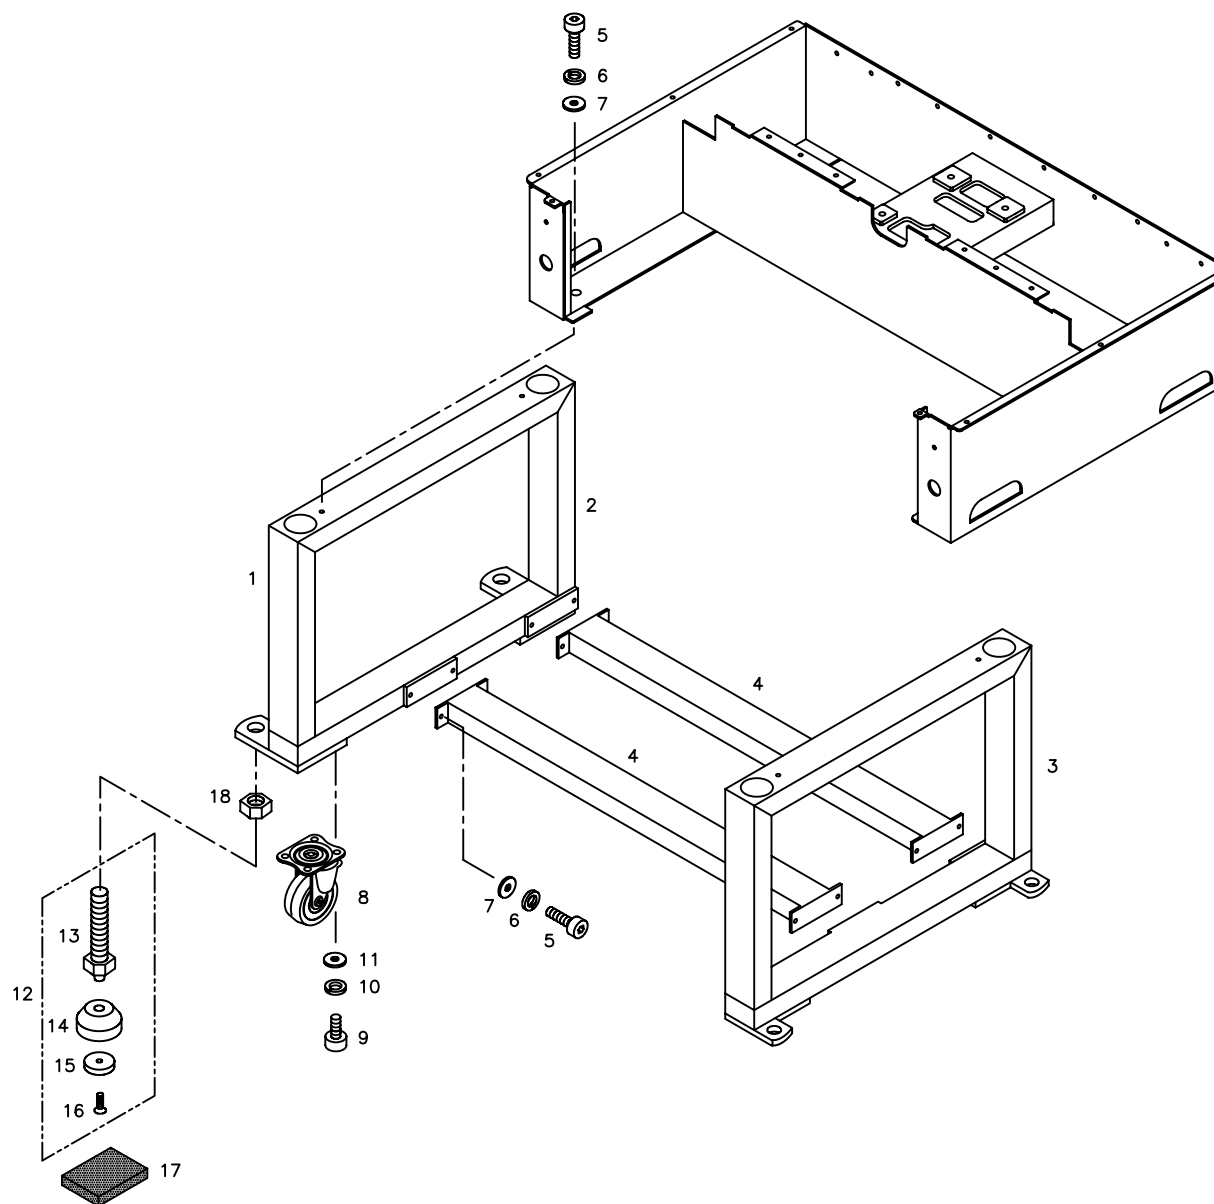


C

Arm I

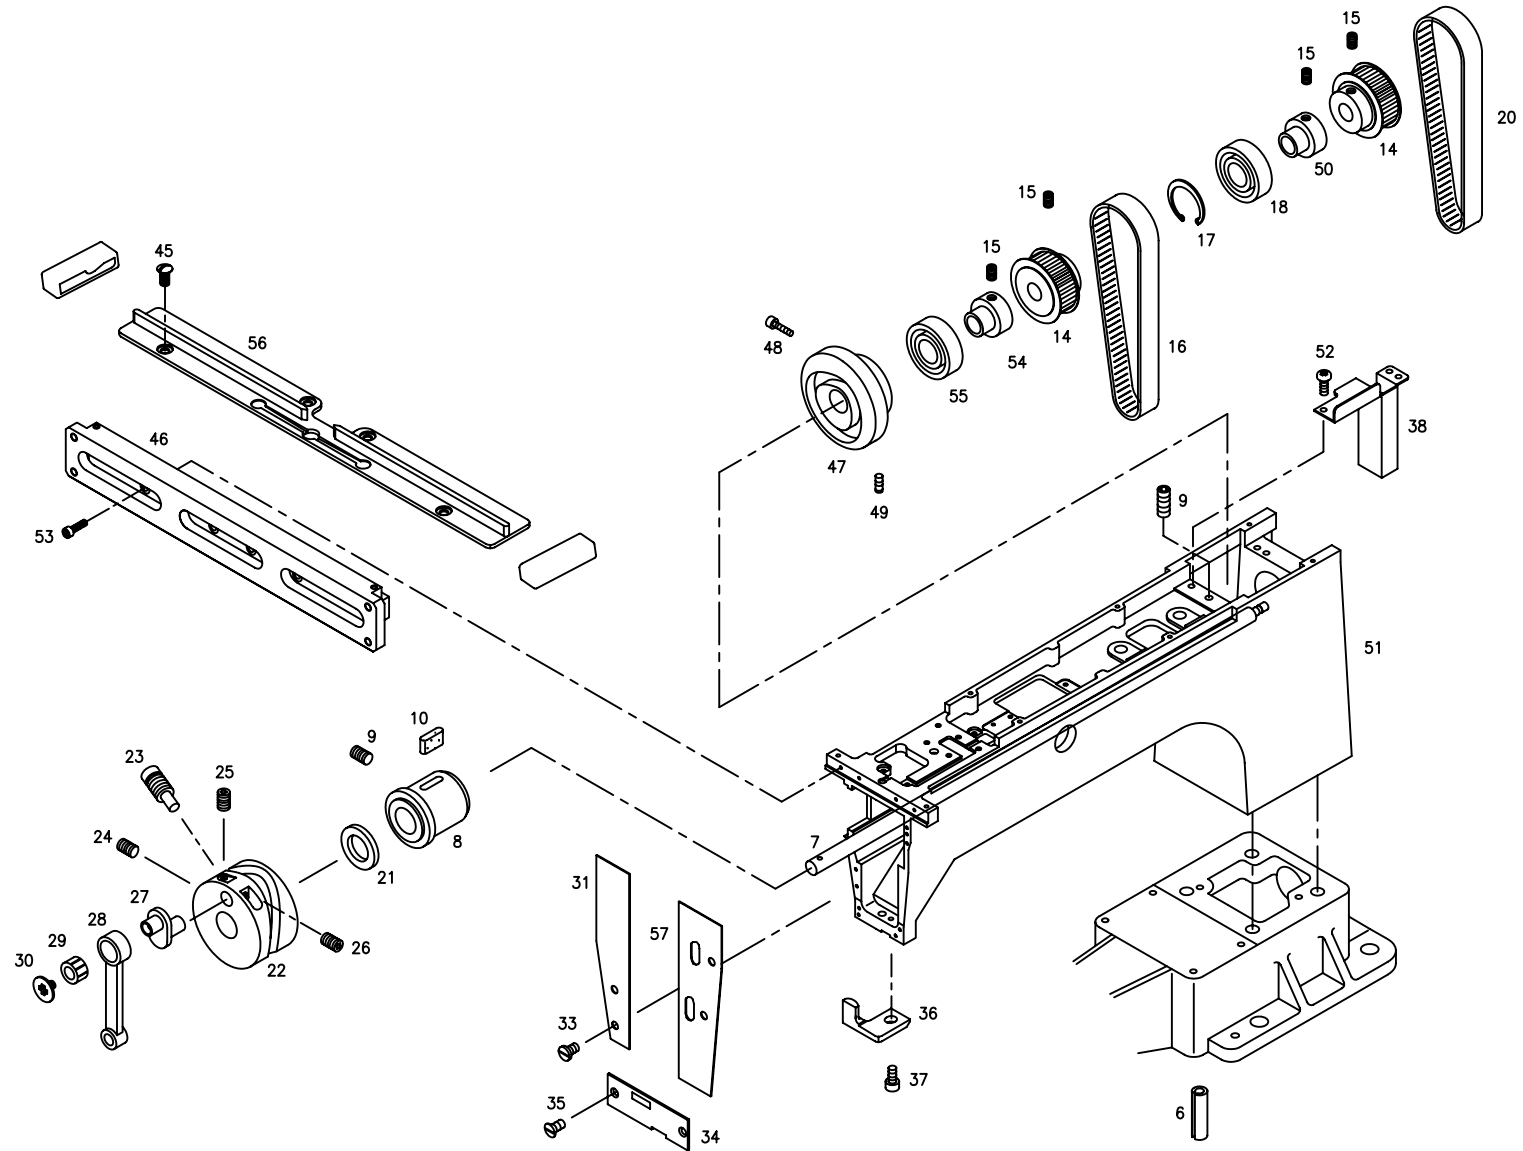


D

Arm II

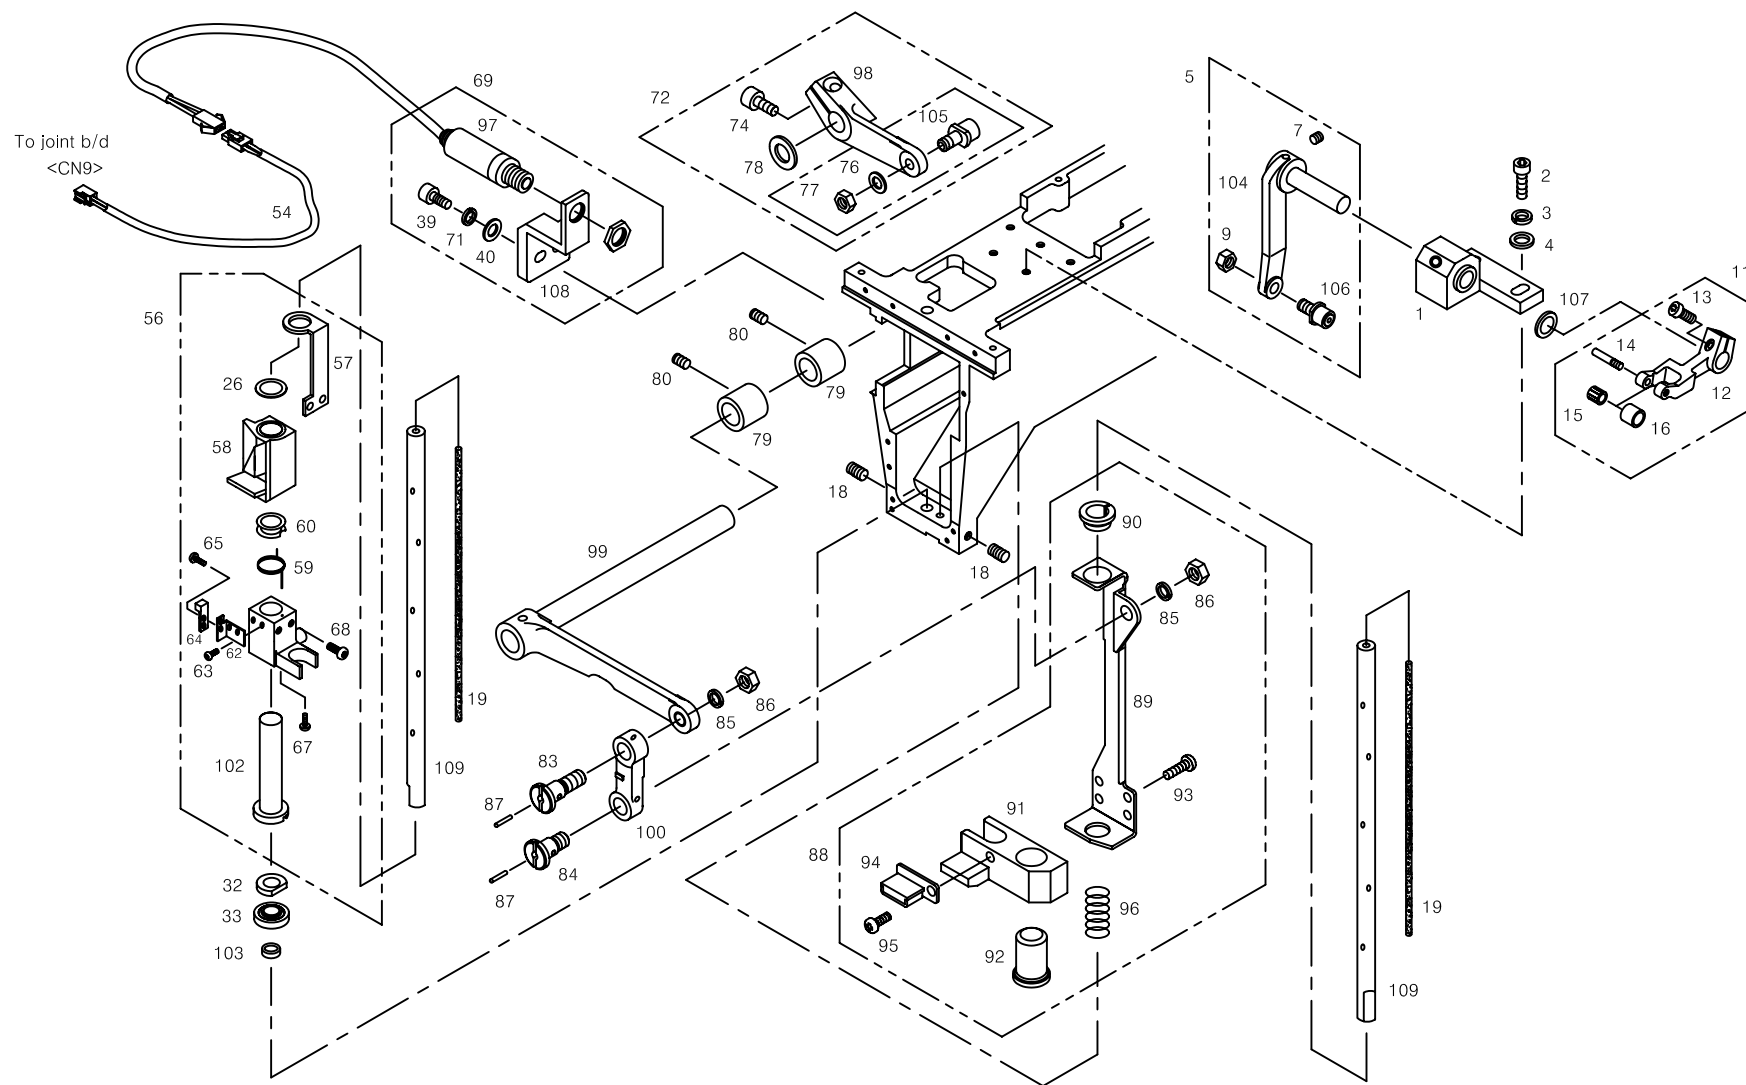


[illegible]

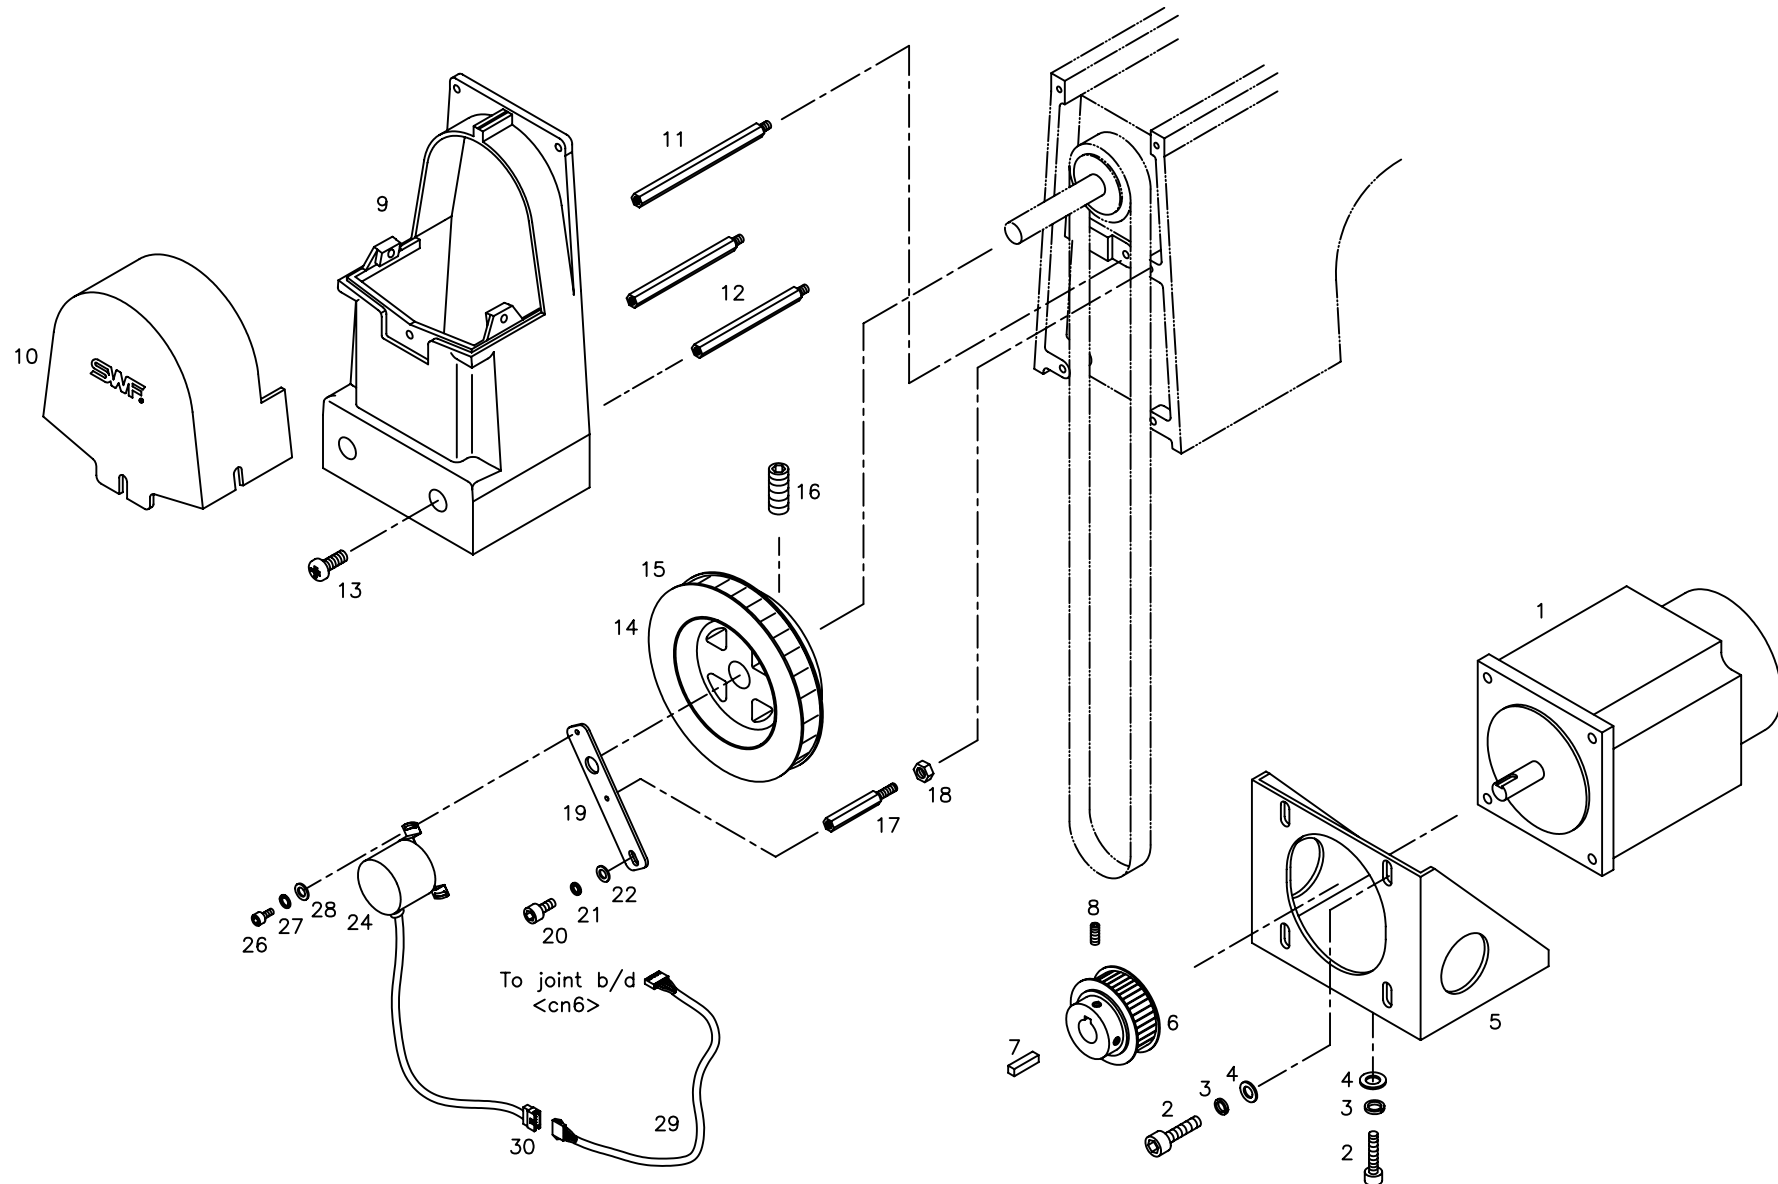

F

Wiper Set

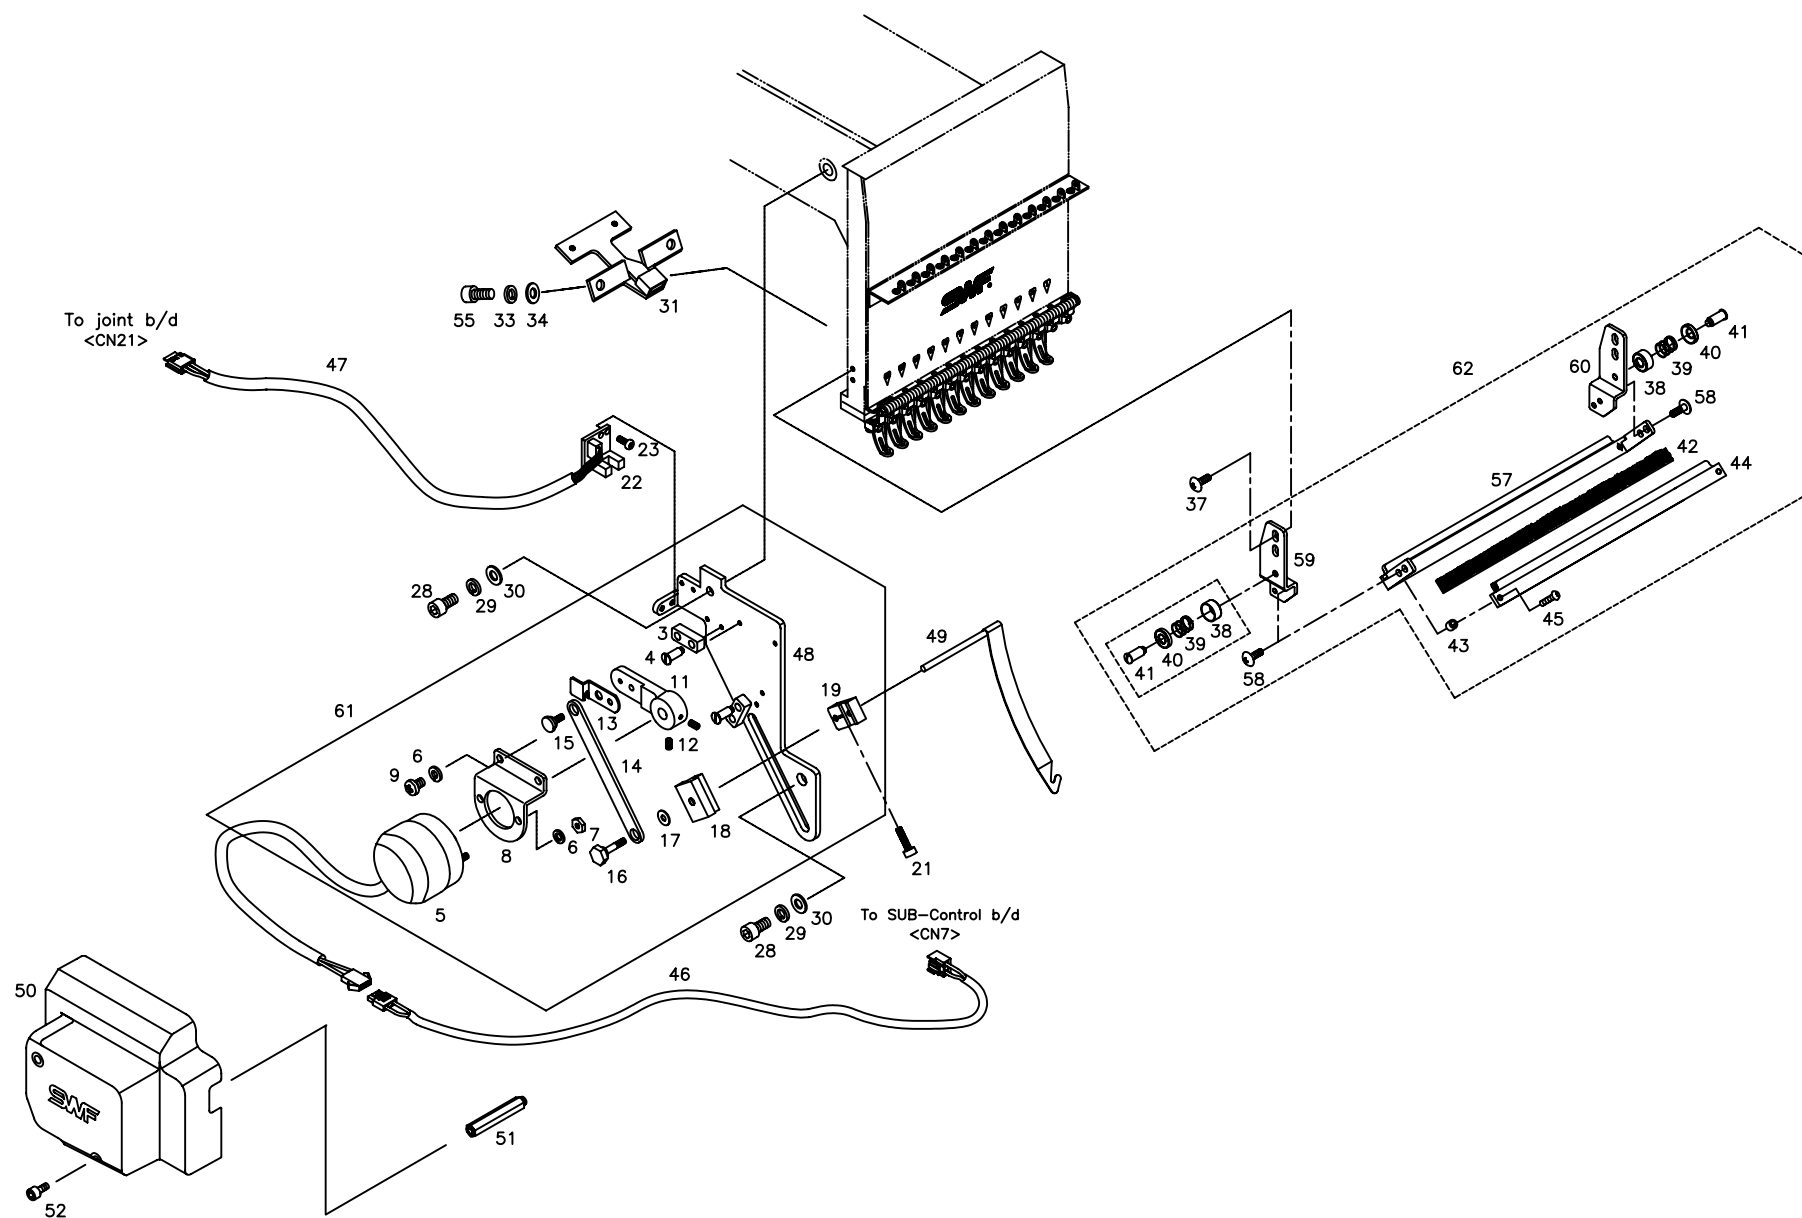


[illegible]

G

Color Change Set

SWF®

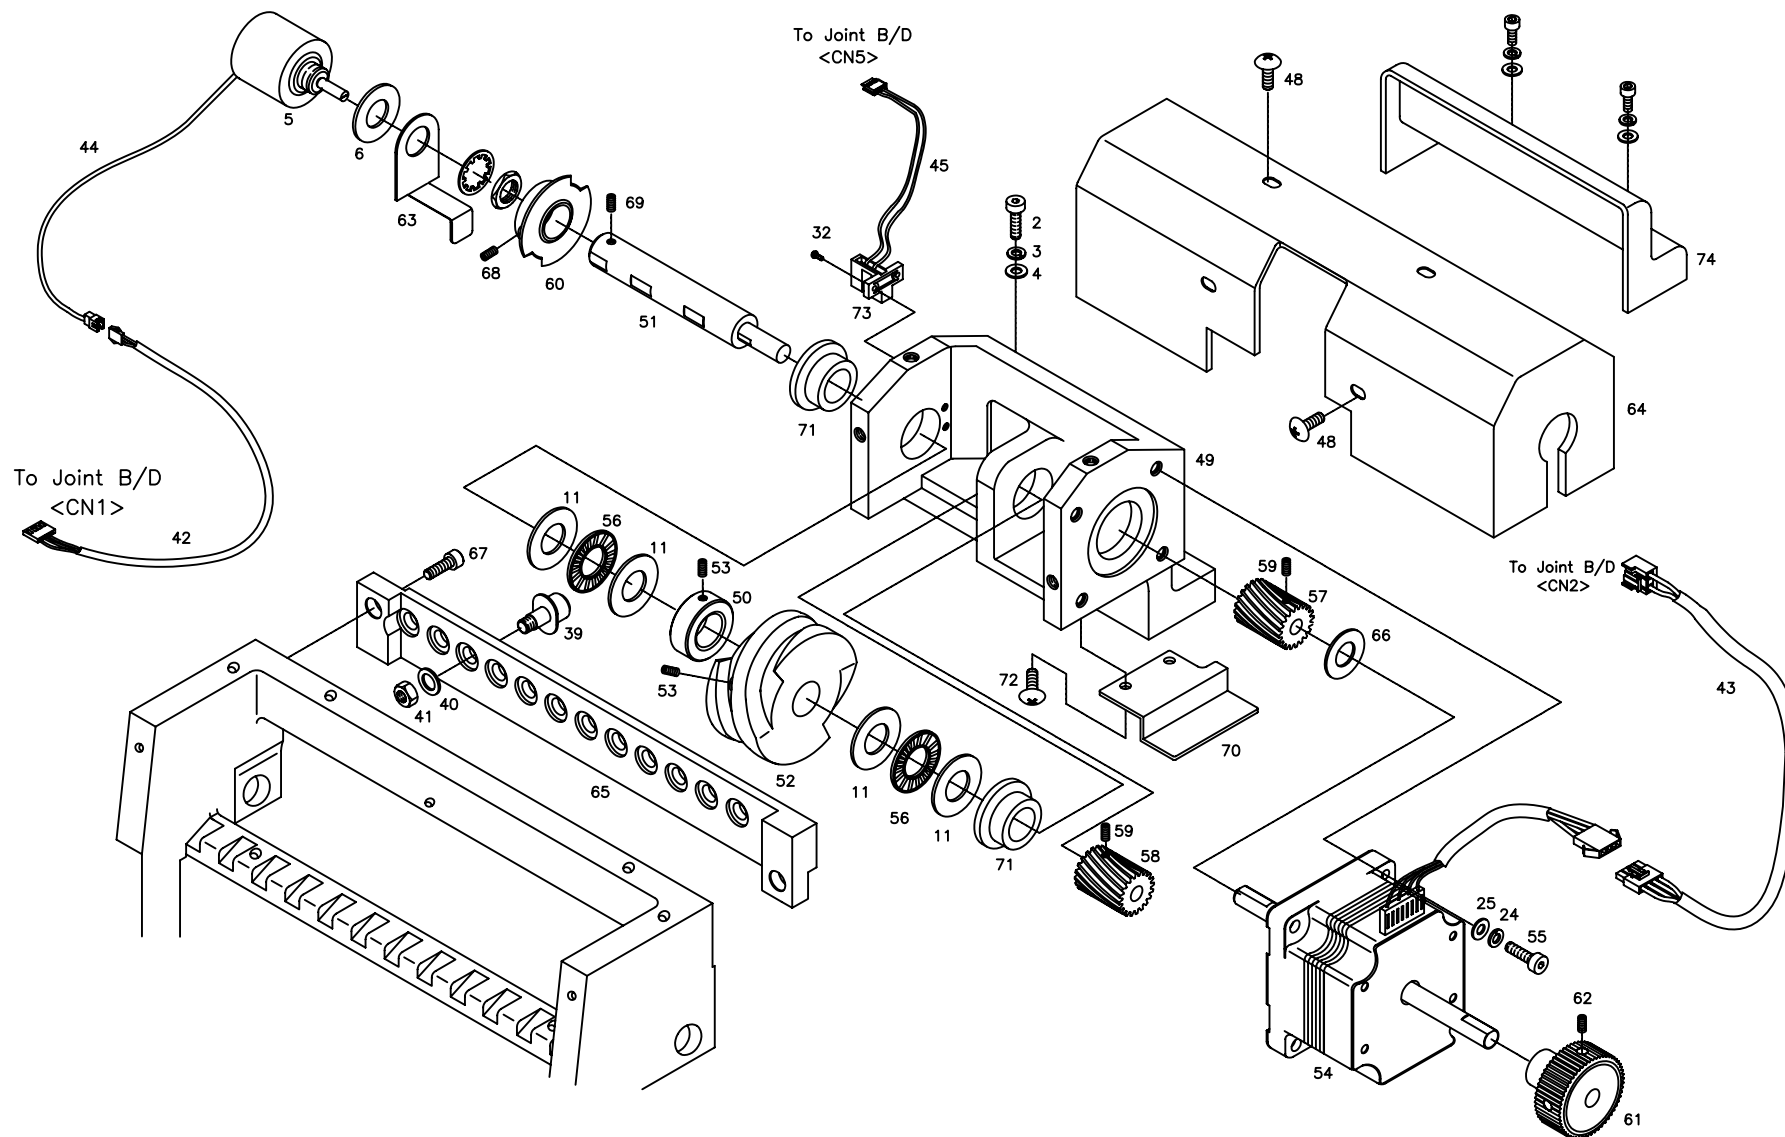


[illegible]

H


Head

SWF®

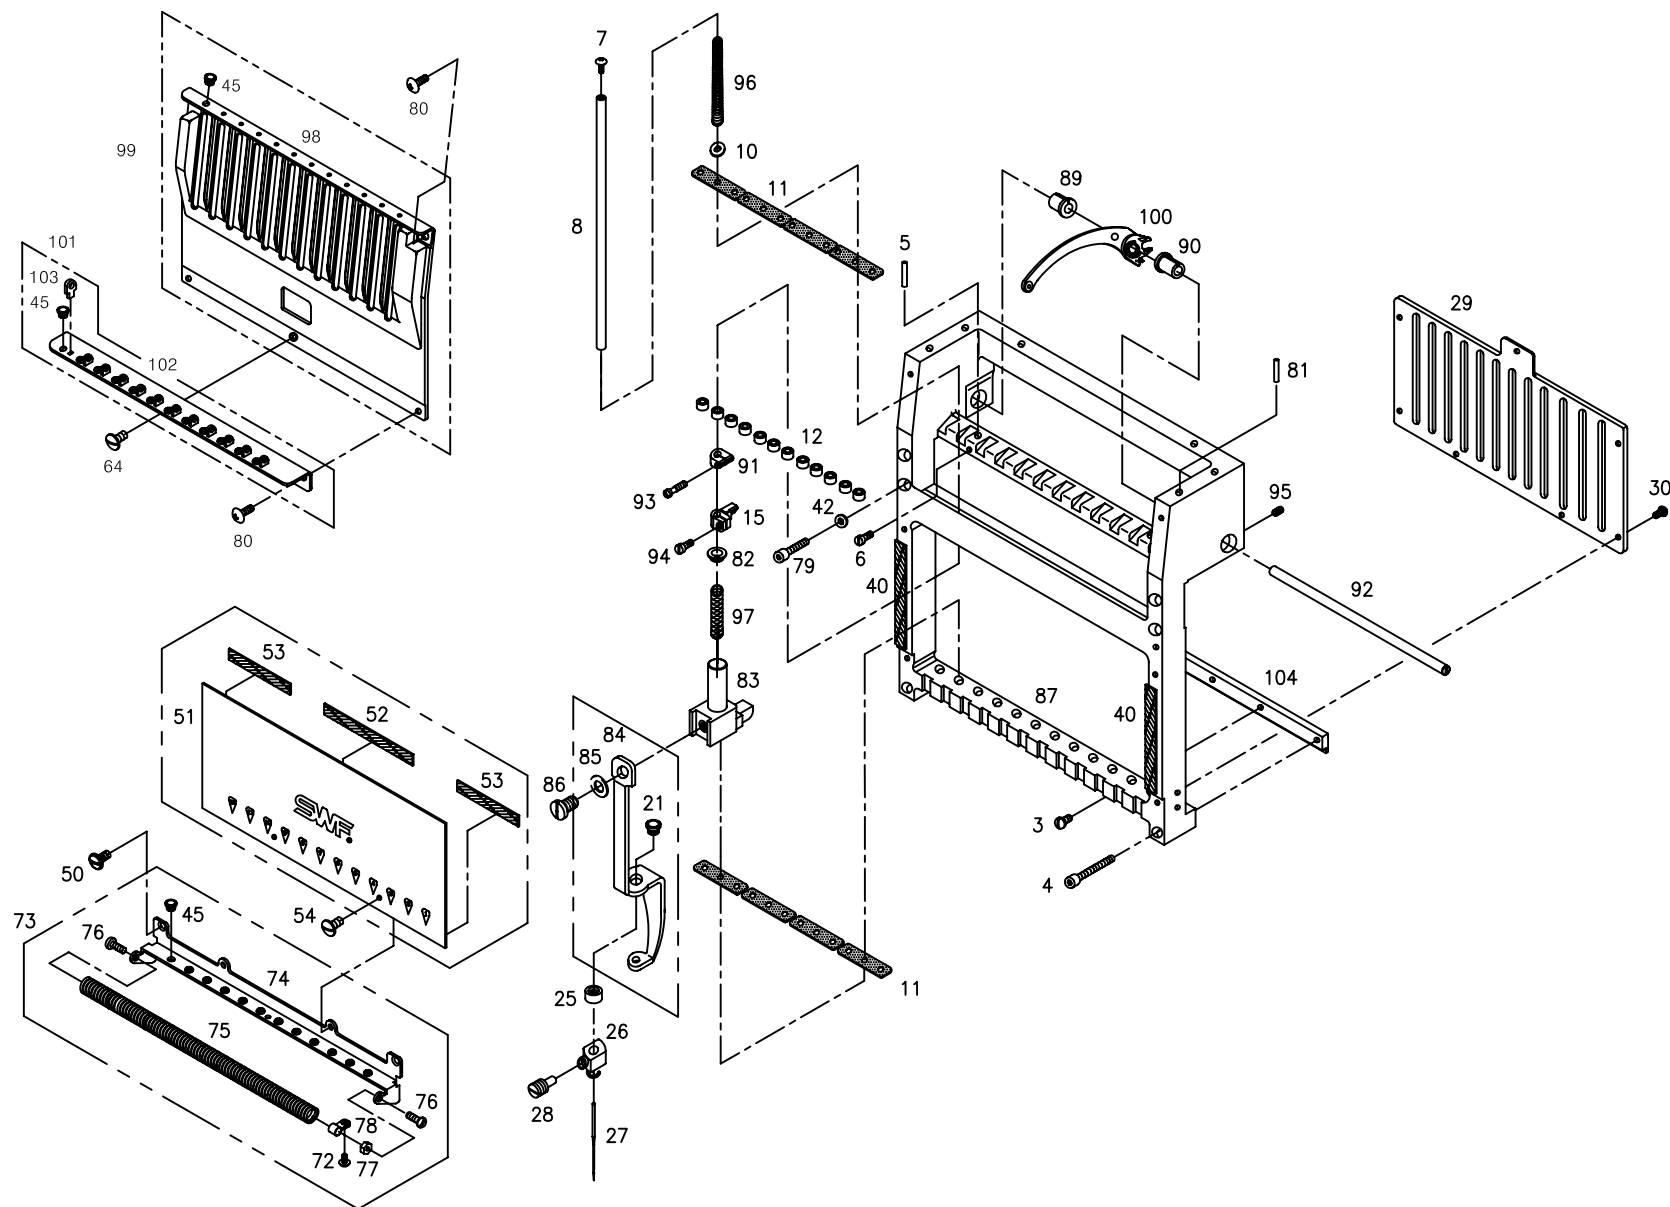

Ref.No	Part No.	Part Names	Q'ty
H-003	05013SC-A001	Head Rail Screw	3
H-004	05014SC-7113	HEX. SOCKET BOLT (M4*L25)	2
H-005	05015CW-A001	Head Positooing Pin	2
H-006	03022SC-4517	Pin Screw (M4*L5)	2
H-007	05019SC-A001	Needle Bar Cover Screw (M5*L6)	12
H-008	05018CW-A001	NEEDLE BAR	12
H-010	05022SW-A001	Needle Bar Felt Washer	12
H-011	05021SF-A001	Felt	8
H-012	05016SN-1211	Needle Bar Cushion Rubber	12
H-015	GP-044776-00	Needle Bar Holder	12
H-021	05031AF-A001	Presser Foot Guide Bush	12
H-025	05035RB-A001	Presser Foot Cushion Rubber"A	12
H-026	05036AF-A001	Needle Fixed Holder	12
H-027	05037DB-A001	Needle	12
H-028	05363SC-A001	Needle Fixed Screw (A/S)	12
H-029	05027PM-T121	Needle Bar Guide Rail (12C)	1
	05027PM-T151	Needle Bar Guide Rail (15C)	
H-030	05041SC-A001	Guide Rail SCrew	9
H-040	05063RB-A001	Magnetic Rubber "A"	2
H-042	05009SW-1111	Washer (@4-S)	4
H-045	05452CM-A001	Eyelet "A"	36
H-050	05062SC-A001	Thread Guide (L) Screw	2
H-051	05641PR-AB00	Gead Face Plate (L) (12C)	1
	05641PR-T151	Gead Face Plate (L) (15C)	
H-052	05642RB-A001	Magnetic Rubber "B"	1
H-053	05643RB-AB00	Magnetic Rubber "C"	2
H-054	05062SC-A001	Thread Guide (L) Screw (12C)	2
	05062SC-A001	Thread Guide (L) Screw (15C)	3
H-064	05062SC-A001	Thread Guide (M) Screw (12C)	1
	05062SC-A001	Thread Guide (M) Screw (15C)	2
H-072	05060SC-8118	Spring Holder Screw (M3*L4) (12C)	1
	05060SC-8118	Spring Holder Screw (M3*L4) (15C)	2
H-073	10400004B000	Thread Guide (L)Set (New) (12C)	1
	10400005T000	Thread Guide (L)Set (New) (15C)	
H-074	10400104B000	Thread Guide (L) (New) (12C)	1
	10400105T000	Thread Guide (L) (New) (15C)	
H-075	10400204B000	Thread Hook Spring (12C)	1
	10400205T000	Thread Hook Spring (15C)	
H-076	096440C-8119	Spring Adjusting Screw (9/64,N40,L11.8)	2
H-077	096440N-3211	Spring Adjusting Nut (9/64-40)	1

Ref. No	Part No.	Part Names	Q'ty
H-078	10400304B000	Spring Holder (12C)	1
	10400304B000	Spring Holder (15C)	2
H-079	05008SC-4113	Hex.Socket Bolt (M4*L16)	4
H-080	05070SC-3123	Head Face Plate (E) Screw (9/64,N40,L10)	4
H-081	01303700H000	Tension Plate Pin	2
H-082	05021PM-H001	Presser Foot Spring Guide	12
H-083	05023PM-H001	Presser Foot Holder Set	12
H-084	05024PR-CT01	Presser Foot	12
H-085	05027PR-H001	Washer	12
H-086	05026SC-H001	Presser Foot Holder Screw	12
H-087	GP-023229-00	Head (12C)	1
	GP-023232-00	Head (15C)	
H-089	08203000A000	Take-Up Lever Shaft Bush(L)	1
H-090	08200800A000	Take-Up Lever Shaft Bush(R)	1
H-091	11101200T000	Upper Dead Point Stopper	12
H-092	08200404A000	Take-Up Lever Shaft	1
H-093	05026SC-4113	Stopper Screw	12
H-094	05028SC-4113	Holder Screw	12
H-095	07009SC-4517	Hex.Socket Set Screw (M5*L6)	2
H-096	05008AF-T121	Needle Bar Return Spring	12
H-097	05017AF-T121	Presser Foot Pressure Spring	12
H-098	10200104B000	Head Face Plate (U) (12C)	1
	10200105B000	Head Face Plate (U) (15C)	
H-099	05045BM-T151	Thread Guide (U) Set (12C)	1
	10200004B000	Thread Guide (U) Set (15C)	
H-100	07005BM-B002	TAKE-UP LEVER SET	12
H-101	10300004A000	Thread Guide (M) Set (12C)	1
	10300005A000	Thread Guide (M) Set (15C)	
H-102	10300114A000	Thread Guide (M) (12C)	1
	10300115A000	Thread Guide (M) (15C)	
H-103	10110000A000	Eyelet "B" (12C)	12
	10110000A000	Eyelet "B" (15C)	15
H-104	08201304H000	Head Rail (12C)	1
	08201305H000	Head Rail (15C)	

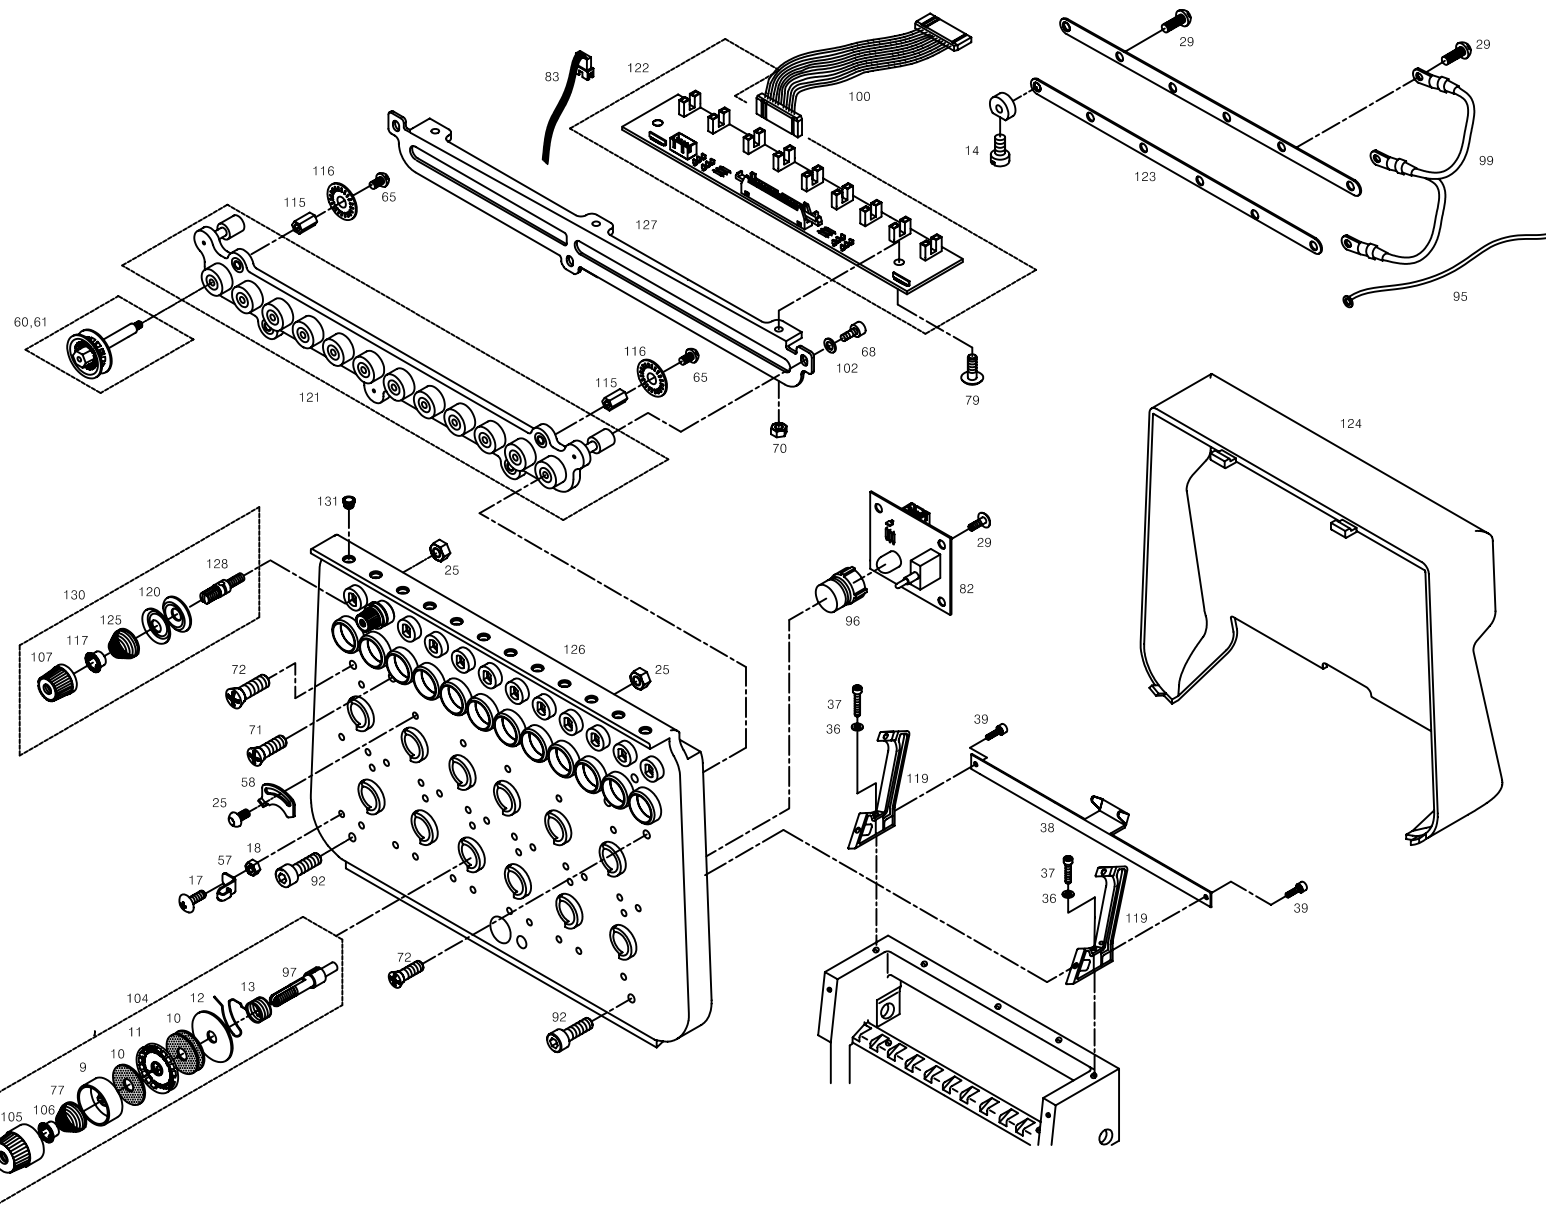


Ref. No	Part No.	Part Names	Q'ty
I-009	11086PM-A001	Tension Spring Collar	12
I-010	11084AF-A001	Felt	24
I-011	11085AF-A001	Rotary Tension Disc	12
I-012	11083PM-A001	Disc Plate	12
I-013	11082AF-A001	THREAD TAKE-UP SPRING	12
I-015	11009SC-A001	Stud Screw	12
I-017	09005SC-3123	Plus Screw (M3*L6)	24
I-018	11014SN-1211	Hex.Nut (M3-No2)	24
I-025	05016SN-1211	Hex. Nut	12
I-027	09005SC-3123	Plus Screw (M3*L6)	12
I-029	09005SC-3123	Plus Screw (M3*L6)	12
I-036	05009SW-1111	Washer (@4)	2
I-037	11029SC-4113	Hex. Socket Bolt (M4*L20)	2
I-038	11032PR-T121	Cable Supporter (12C)	1
	11032PR-T151	Cable Supporter (15C)	1
I-039	02010AF-3123	Hex.Socket Screw (M4*L8)	2
I-057	11012PR-B001	Thread Guide (New) (12C)	24
	11012PR-B001	Thread Guide (New) (15C)	30
I-058	11009PR-B001	Thread Breakage Detecting Plat	12
I-060	11075PM-B001	Thread Sensor Roller(B1/Long) (12C)	12
	11075PM-B001	Thread Sensor Roller(B1/Long) (15C)	7
I-061	11076PM-B001	Thread Sensor Roller(B2/Short) (15C)	8
I-065	08011SC-8118	Screw (M2*L4)	12
I-068	02023SC-7113	Hex.Socket Screw (M4*L8)	3
I-070	05016SN-1211	Hex.Nut (M4)	3
I-071	15089SC-7119	C.S SCREW (M4*L10)	2
I-072	02002SC-7119	PLUSS SCREW (M4*L8)	5
I-077	11087SP-B001	Tension Adjusting Spring	12
I-079	02010SC-3123	Truss Screw (M4*L8)	3
I-082	03-0000-EMB1	Head On/Off S/W Board (12C)	1
	02-0000-EMB1	Head On/Off S/W Board (15C)	
I-083	02101800B000	Wheel Sensor B/D to S/W Board	1
I-092	04010MC-7113	Hex.Socket Bolt (M4*L10)	2
I-095	25126EL-B001	Sensor Board To Wheel Earth	1
I-096	08300400A000	Lamp Cover	1
I-097	11081CW-A001	Thread Tension Adjusting Stud	12
I-099	02103903H000	Earth Cable (12C)	1
	25124EL-B001	Earth Cable (15C)	
I-100	02102200U000	Wheel Sensor B/D To Adjusting Plate	1
I-102	06003SW-2111	Washer (@4)	3

[illegible]


J

Bed

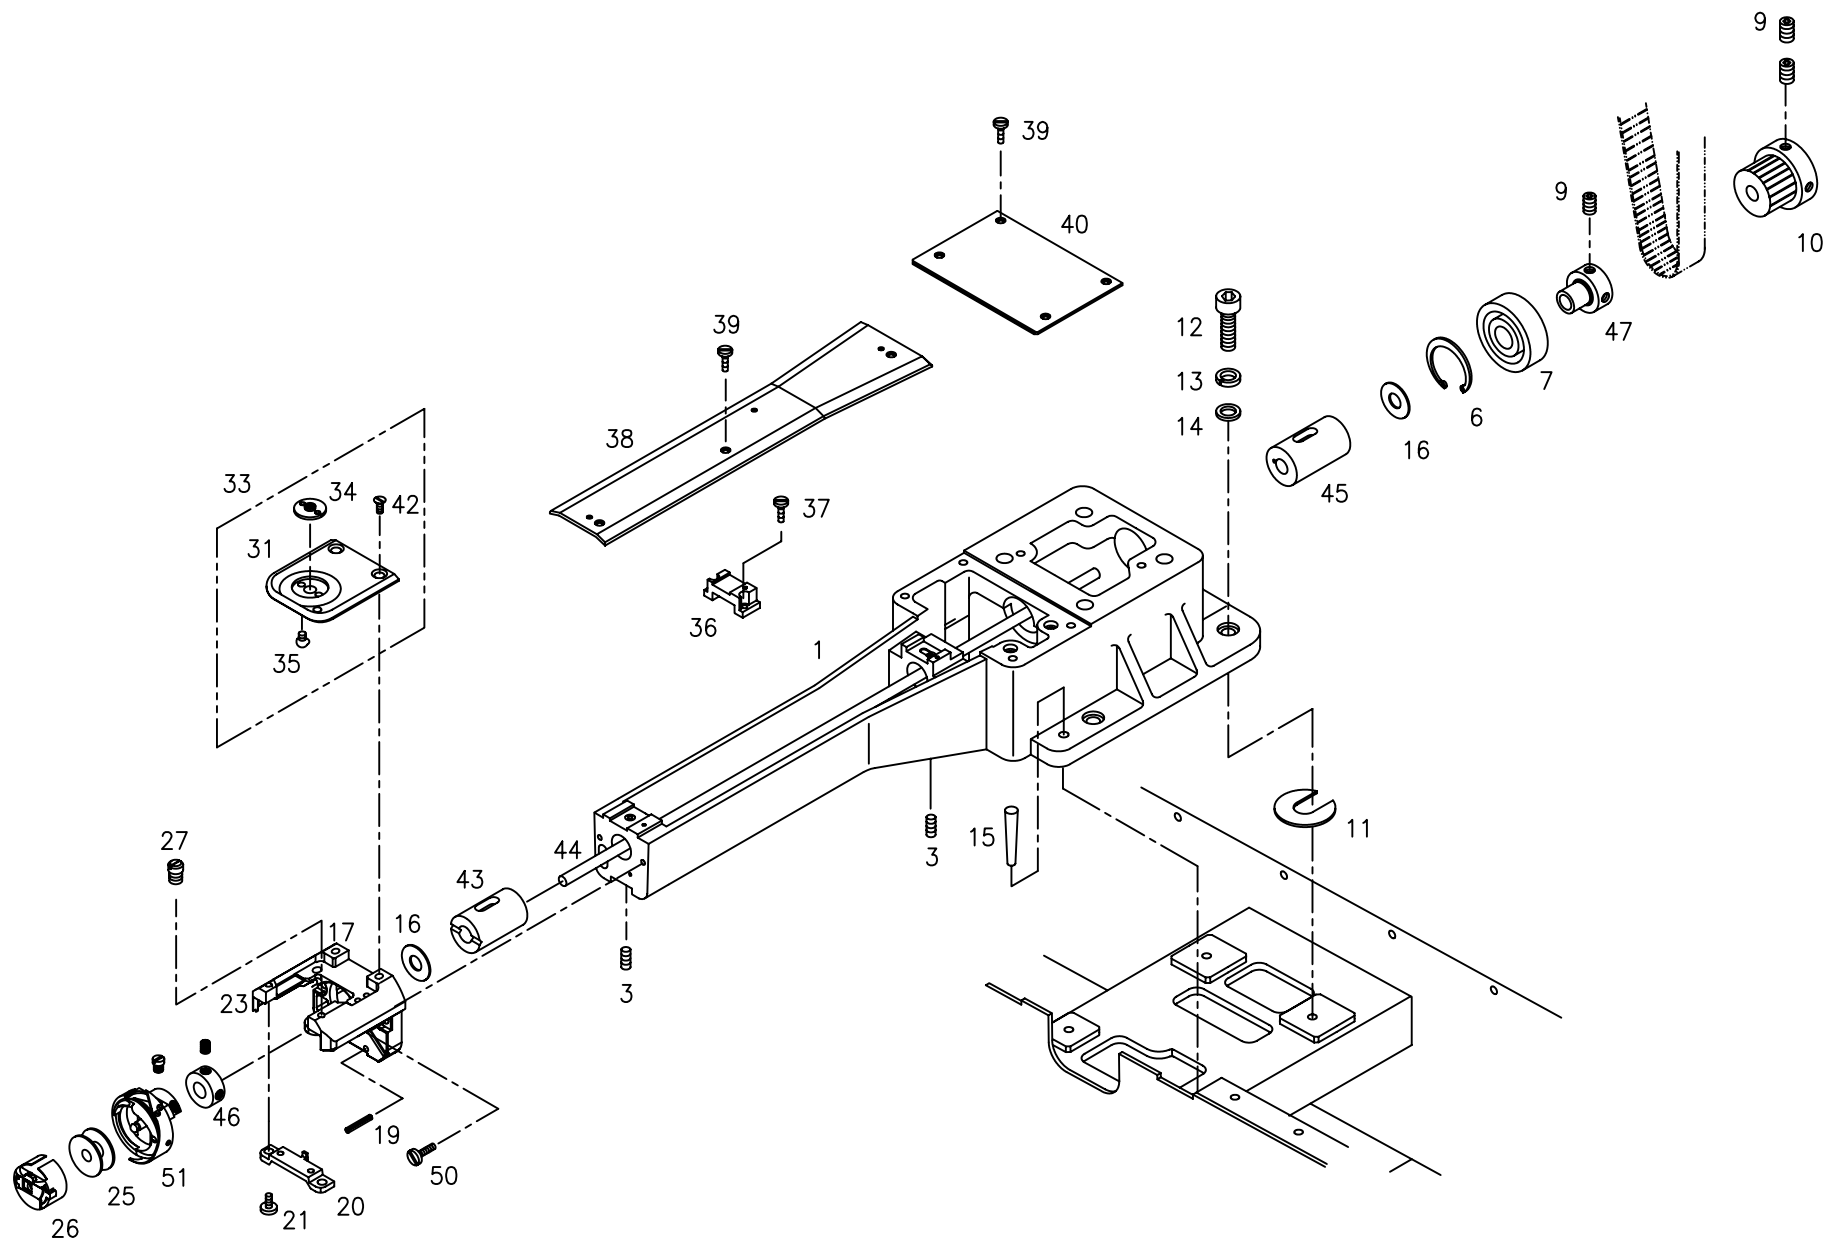


K

Picker Set

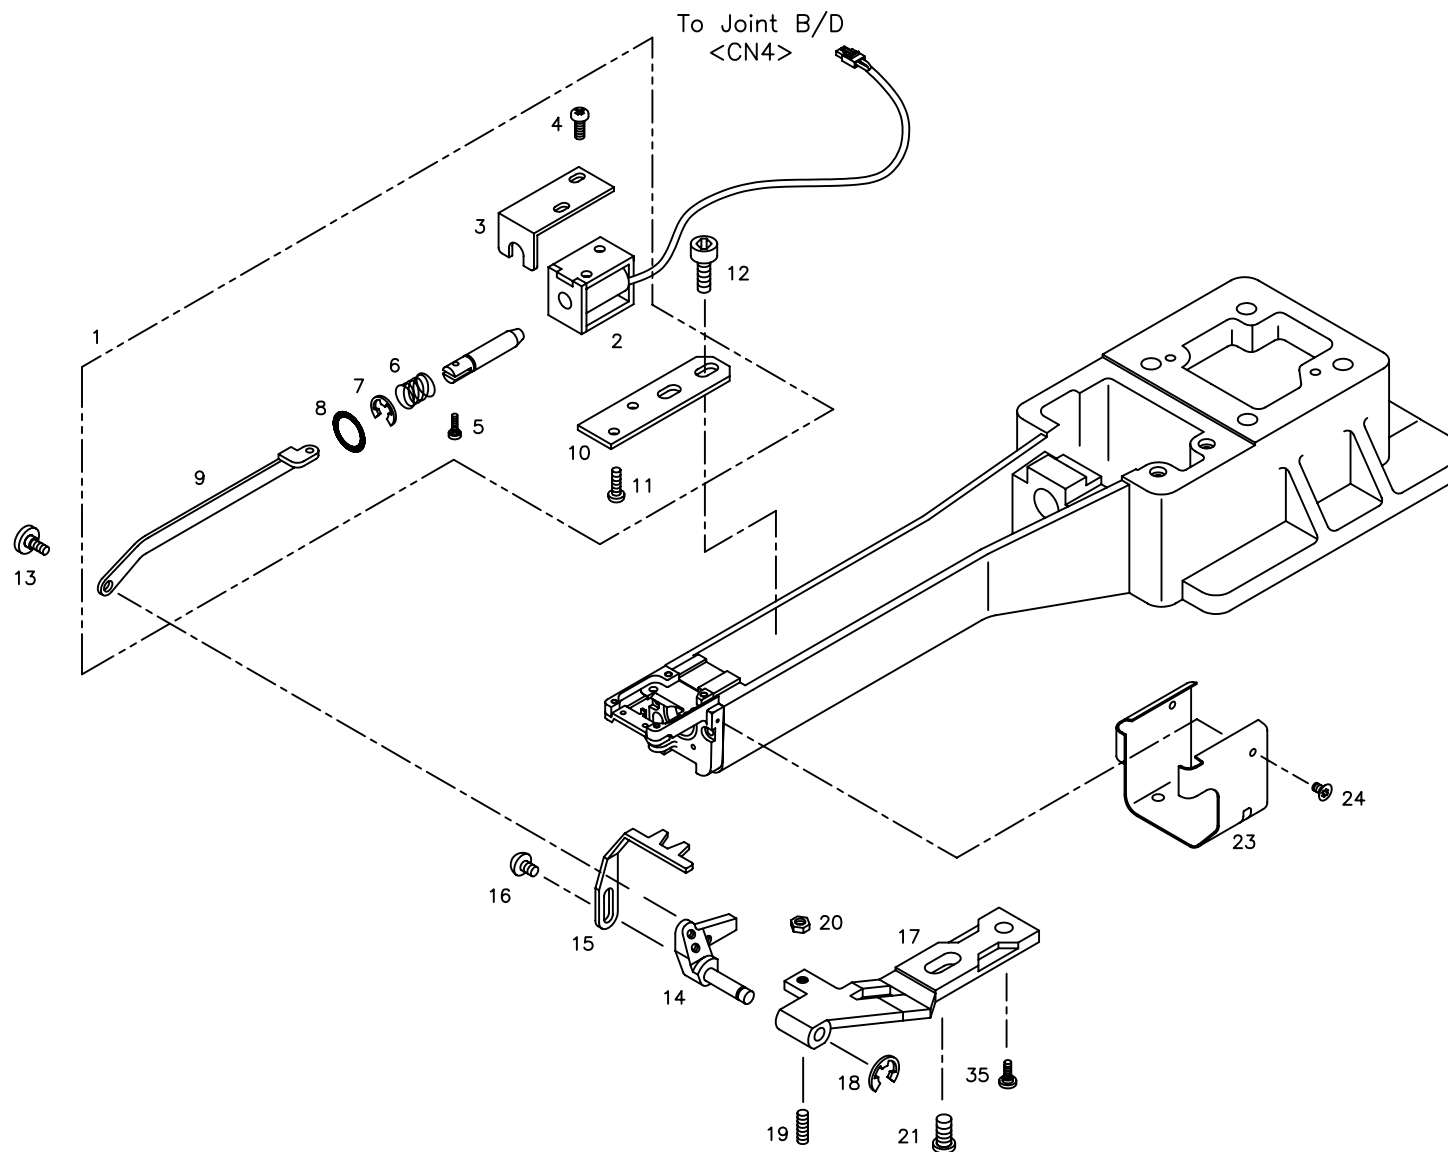

L


Thread Cutting Set

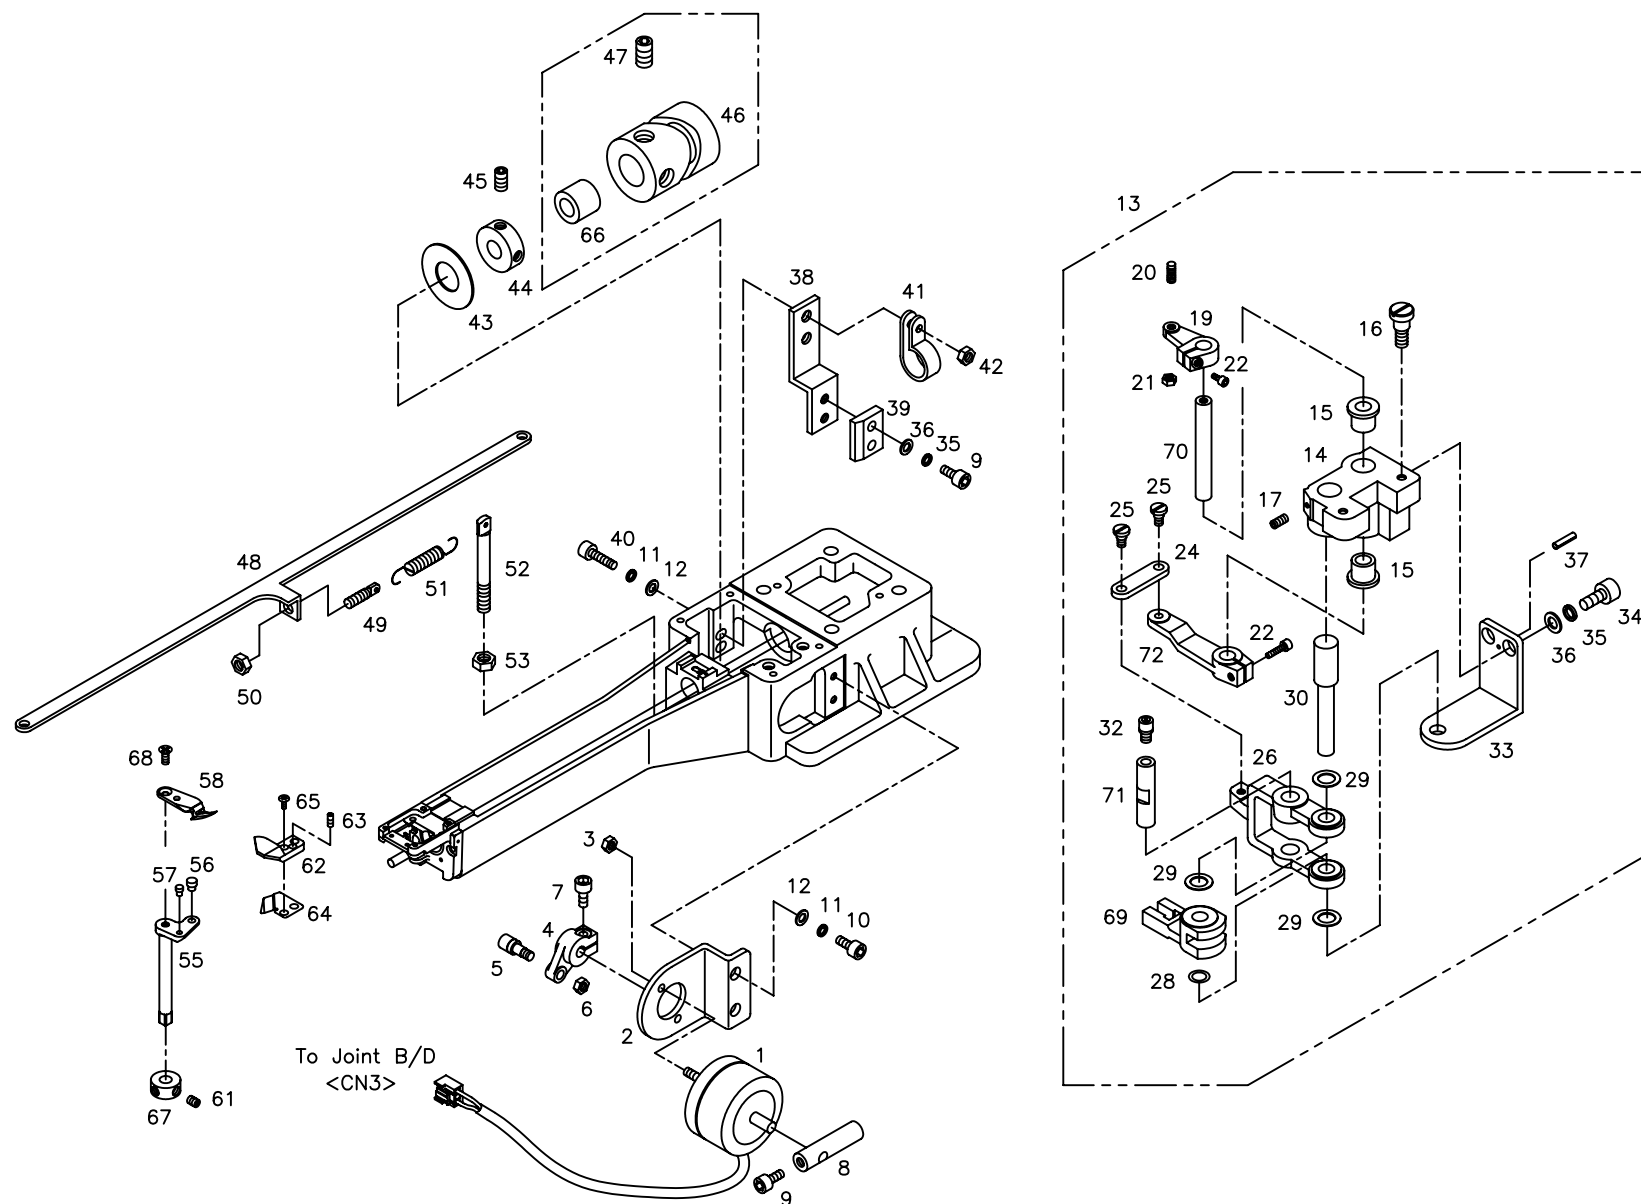

[illegible]


M

X-Axis Drive Set

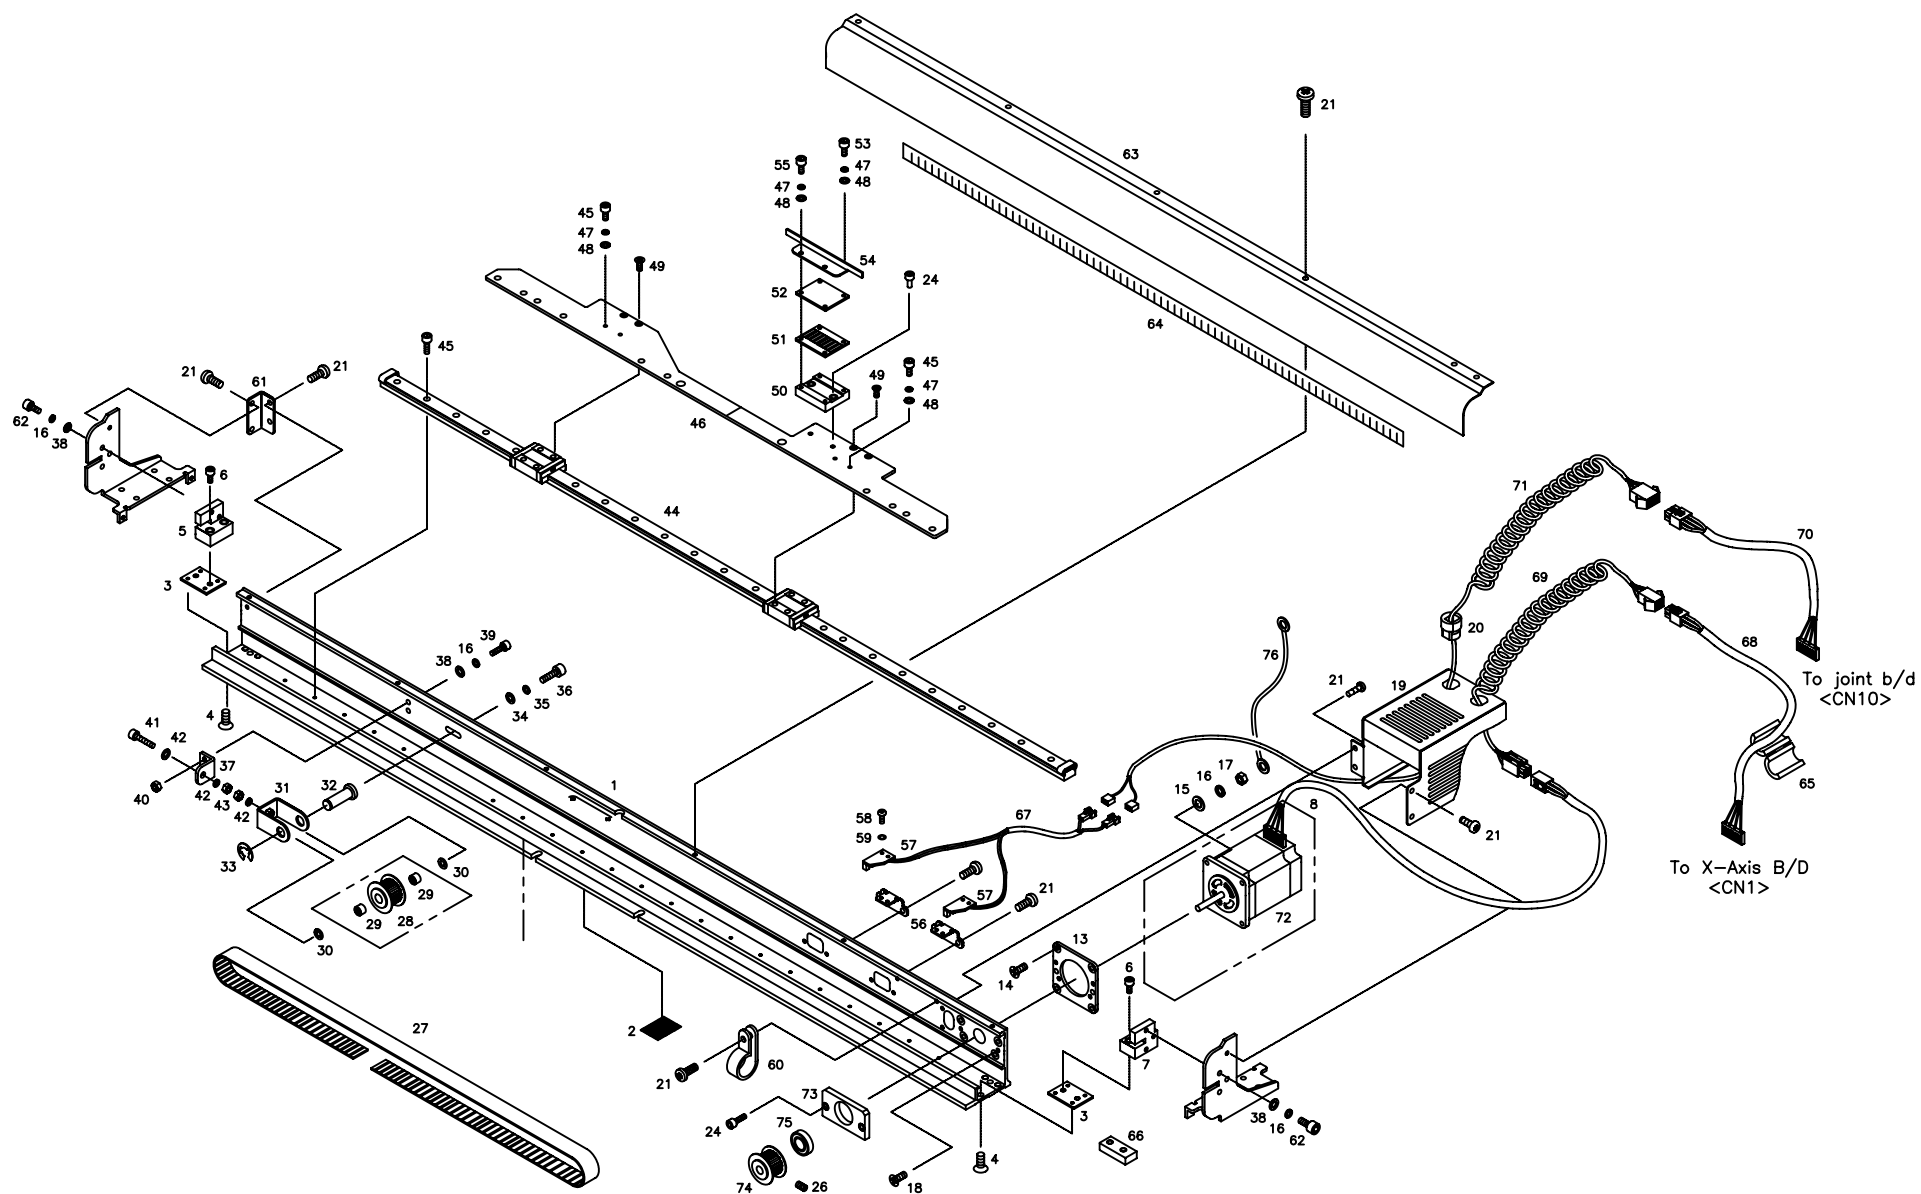


N

Y-Axis Drive Set

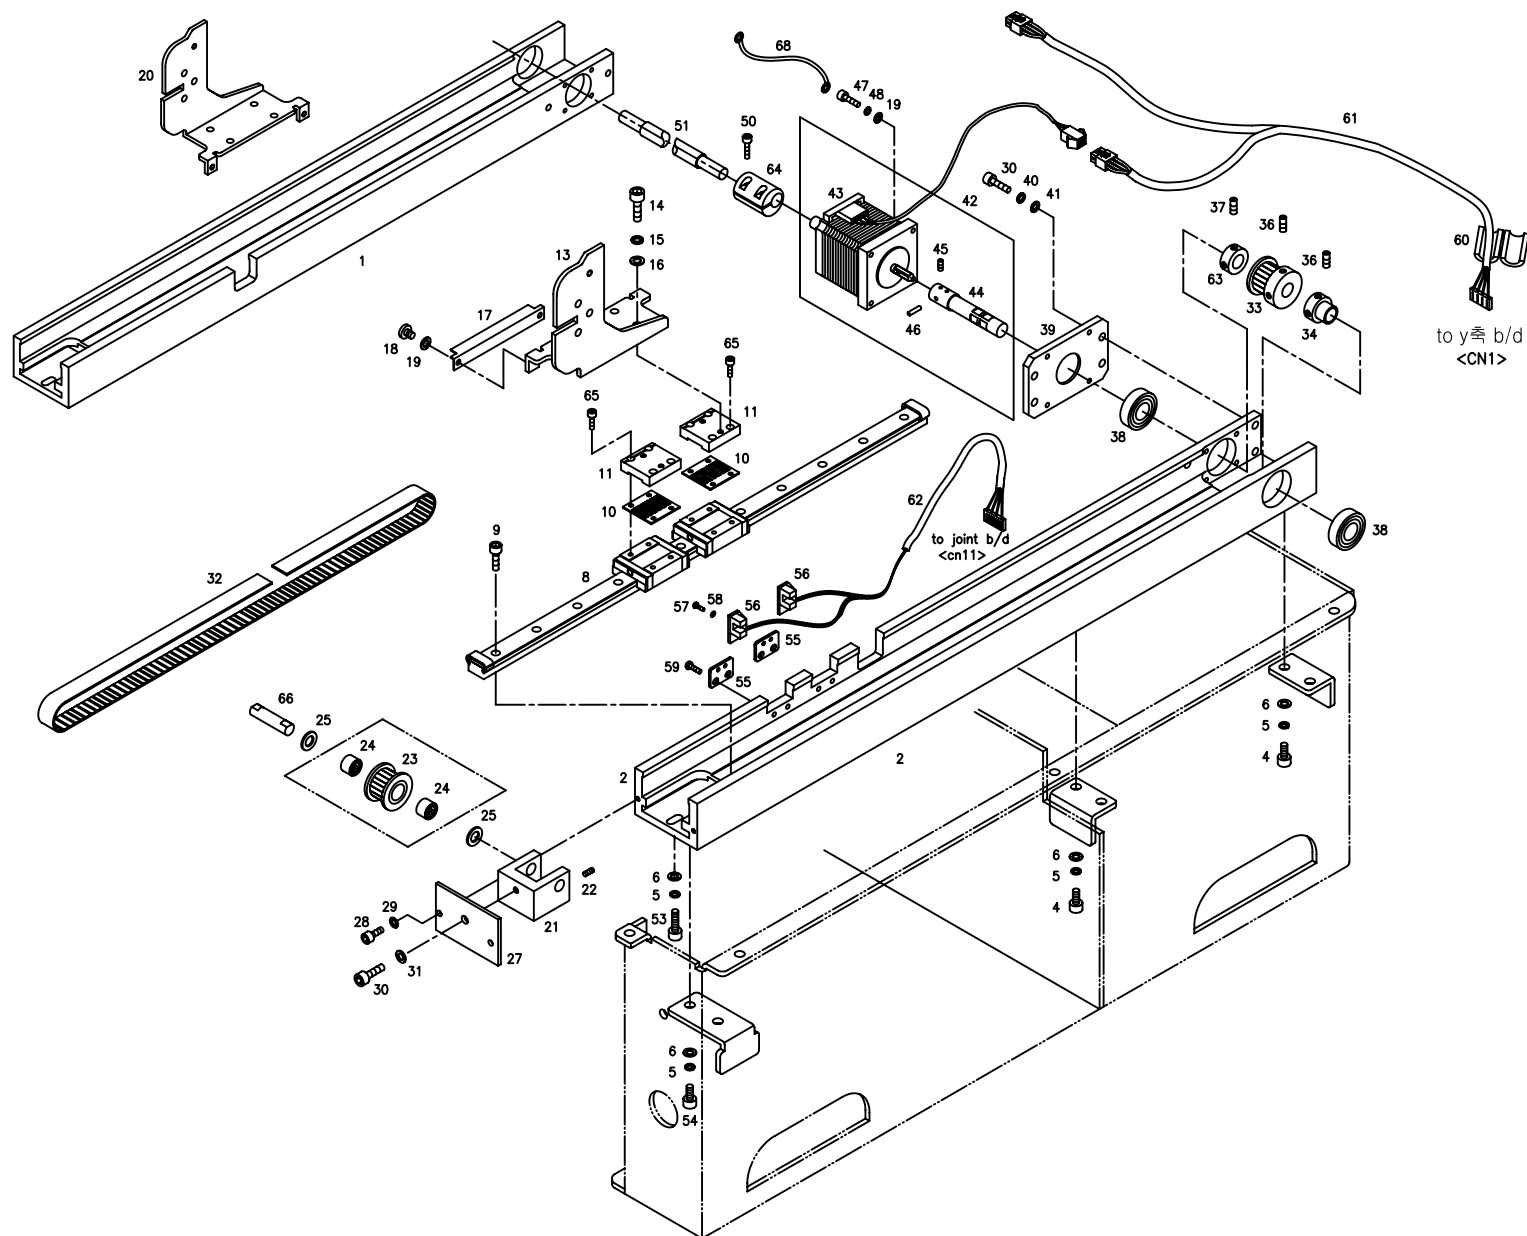



Ref.No	Part No.	PartNames	Q'ty
N-001	13001AD-T121	Y-Axis Frame (L)	1
N-002	13002AD-T121	Y-Axis Frame (R)	1
N-004	14002SC-7113	HEX.SOCKET BOLT (M6*L15)	8
N-005	16014SW-4115	Spring Washer (@6)	10
N-006	08057SW-1111	Washer (@6)	10
N-008	13047LM-T121	Y-Axis Lm Guide Rail Set	2
N-009	13020SC-7113	HEX. SOCKET BOLT (M3*L8)	24
N-010	13057PR-T121	Timing Belt Fixing Plate	4
N-011	05016SN-1211	Y-Driver Bracket	4
N-013	13064PR-T121	X-Frame Supporter(R)	1
N-014	07016SC-7113	HEX.SOCKET BOLT (M4*L12)	8
N-015	02028SW-9115	Spring Washer (@4)	8
N-016	05009SW-1111	Washer (@4-L)	8
N-017	16067PR-T121	Y-Sensor Plate	1
N-018	09018SC-8118	Plus Screw (M4*L6)	2
N-019	18015SW-3111	Washer (@4)	10
N-020	13060PR-T121	X-Frame Supporter(L)	1
N-021	13036AD-T121	Y-Axis Tension Adjusting Base	2
N-022	03022SC-4517	Hex. Socket Set Screw (M4*L5)	2
N-023	12017PU-T121	Timing Pulley "A"	2
N-024	12018BR-T121	Neddle Bearing Hk1010(Ina)	4
N-025	12019BR-T121	Fiber Washer R-Tw1020	4
N-027	13068PR-T121	Y-Frame Cover	2
N-028	02015SC-7113	HEX.SOCKET BOLT(M4*L10)	4
N-029	06003SW-2111	Washer (@4)	4
N-030	08062SC-7113	HEX. SOCKET BOLT (M5*L20)	6
N-031	18049SW-3111	WASHER (@5)	2
N-032	13035BT-T121	Y-Axis Timing Belt	2
N-033	13033PU-T121	Y-Drive Timing Pulley	2
N-036	04012AF-A001	Hook Shaft Bush Screw	12
N-037	04016AF-A001	Cam Collar Screw	4
N-038	13026BR-T121	Needle Bearing (6002Z)	4
N-039	13003AD-T121	Y-Axis Motor Bracket	2
N-040	18048SW-3115	SPRING WASHER (5@)	8
N-041	16018SW-1111	Washer (@5)	8
N-042	13004BM-T121	Y-Driving Motor Set	2
N-043	13004AF-T121	Y-Driving Motor	2
N-044	ST-000018-00	Y-Driving Shaft (A)	2
N-045	15005SC-4517	Hex. Socket Set Screw (M4*L3)	4
N-046	12004ET-T121	Spring Pin (@3*L10)	2

[illegible]

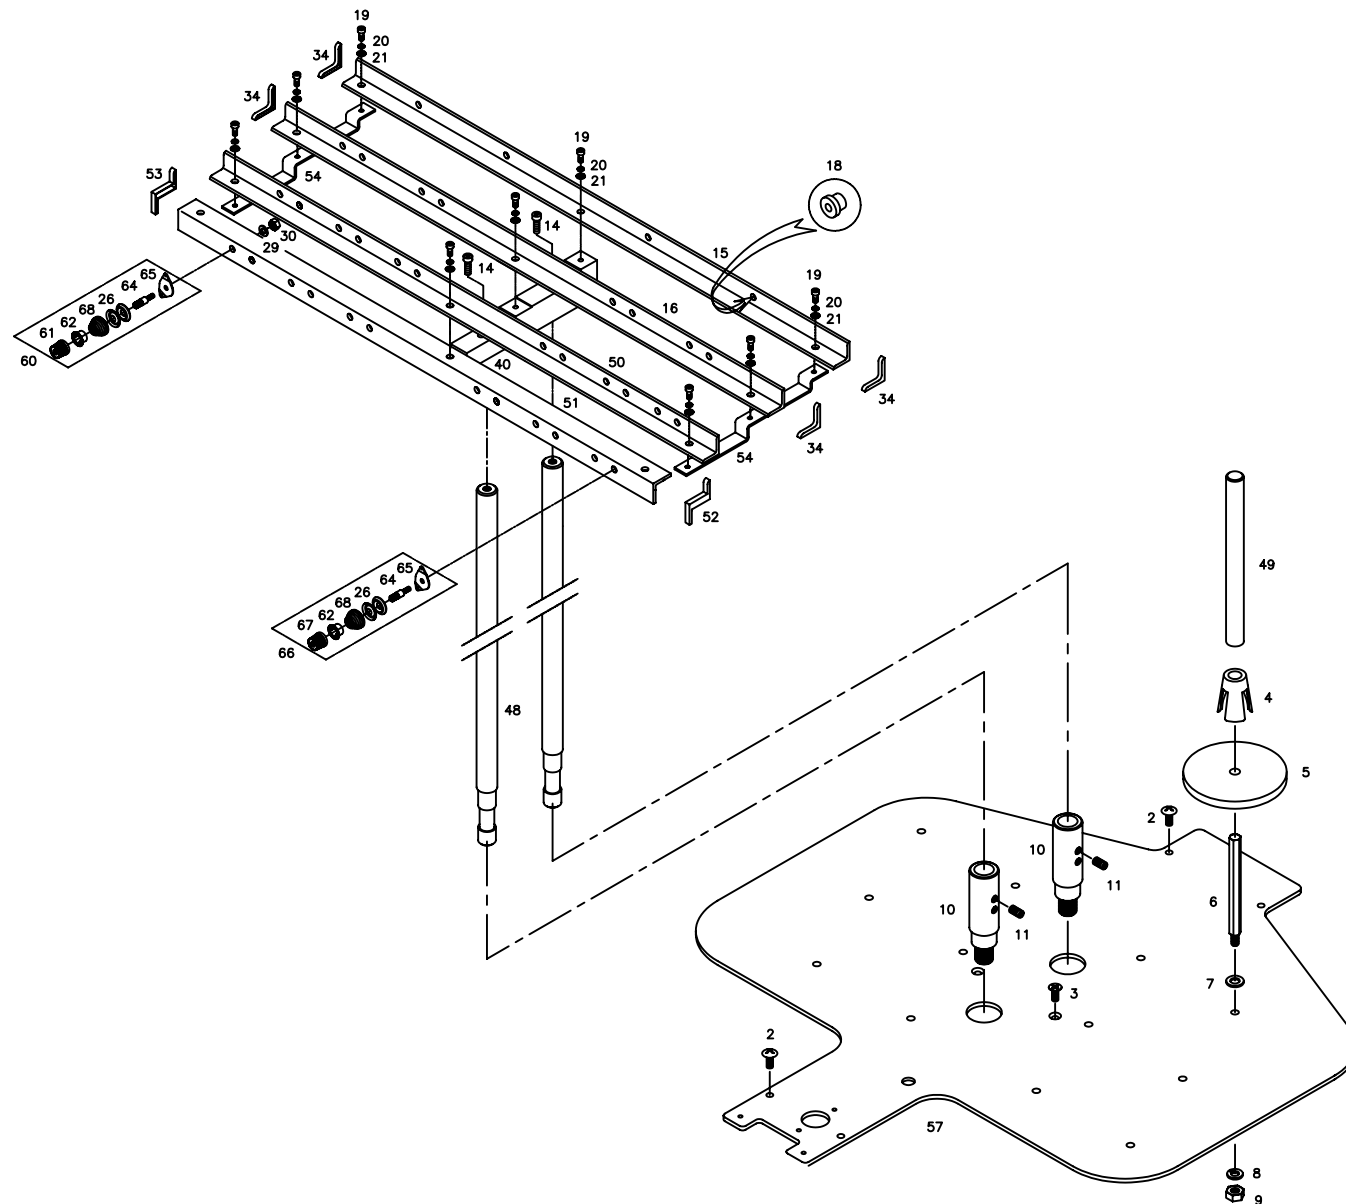


[illegible]

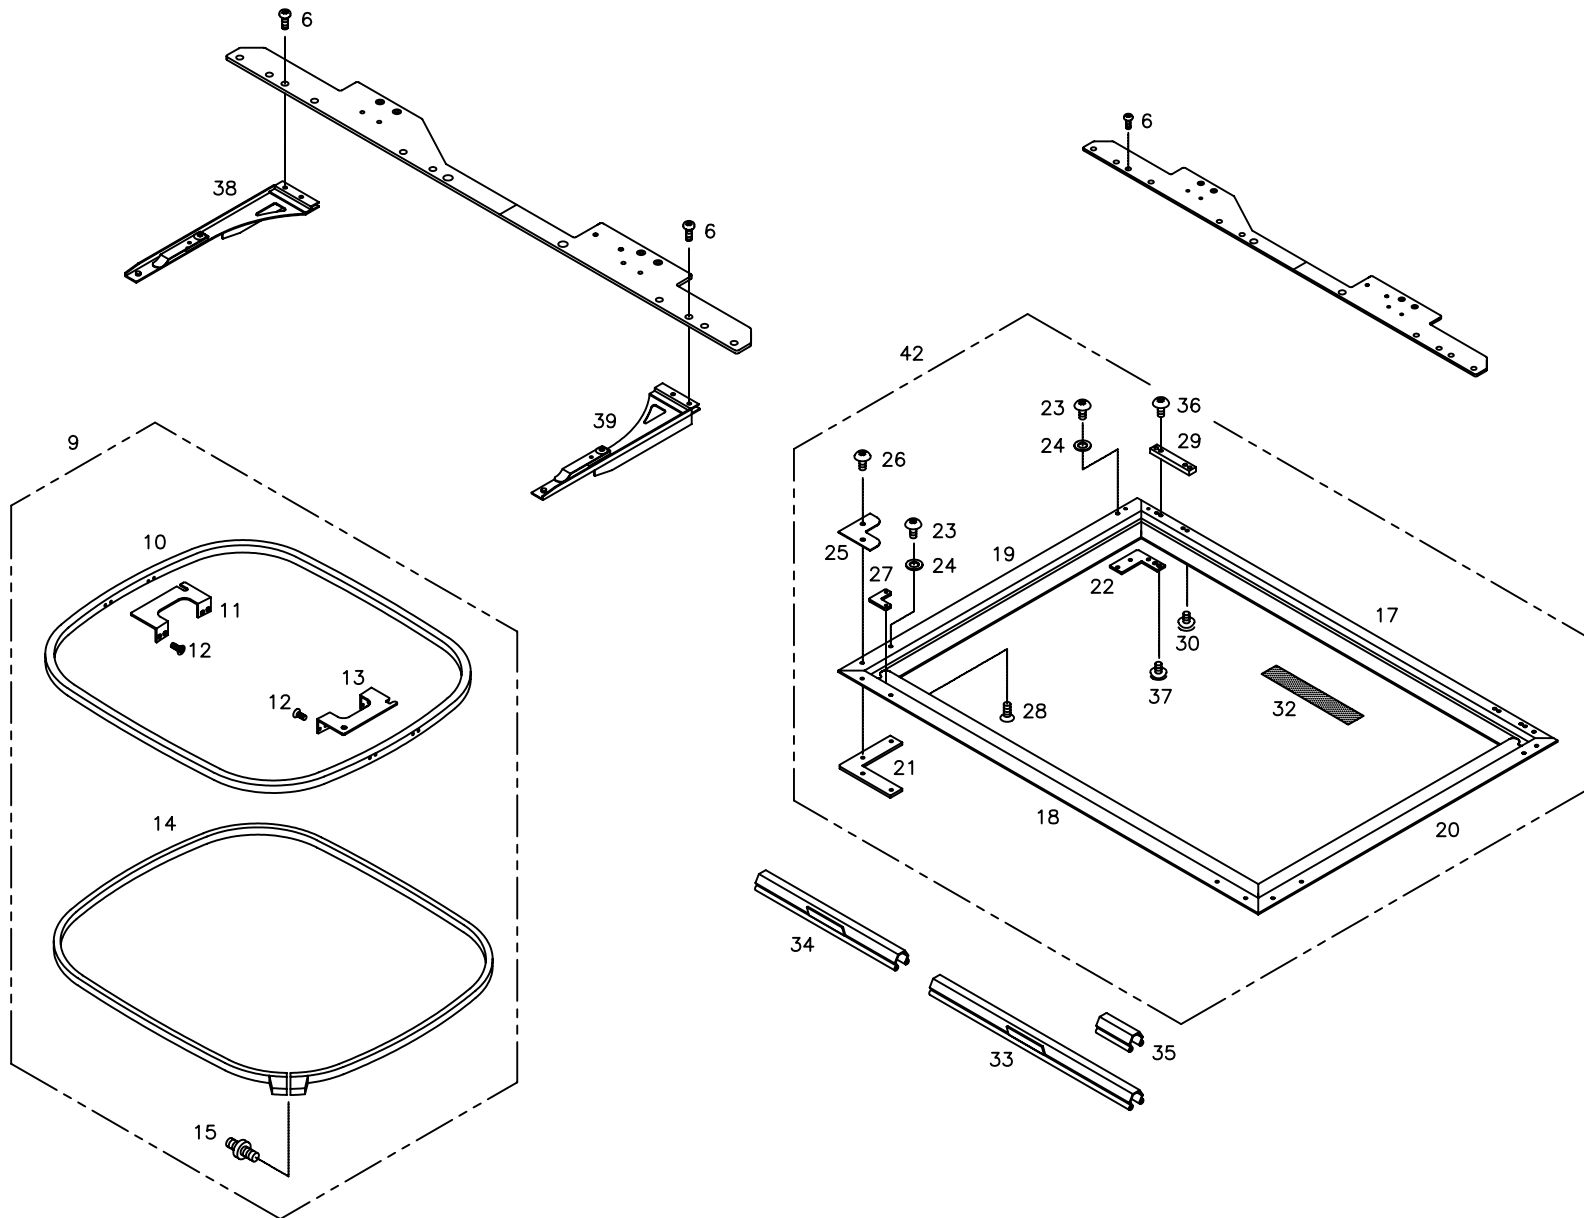


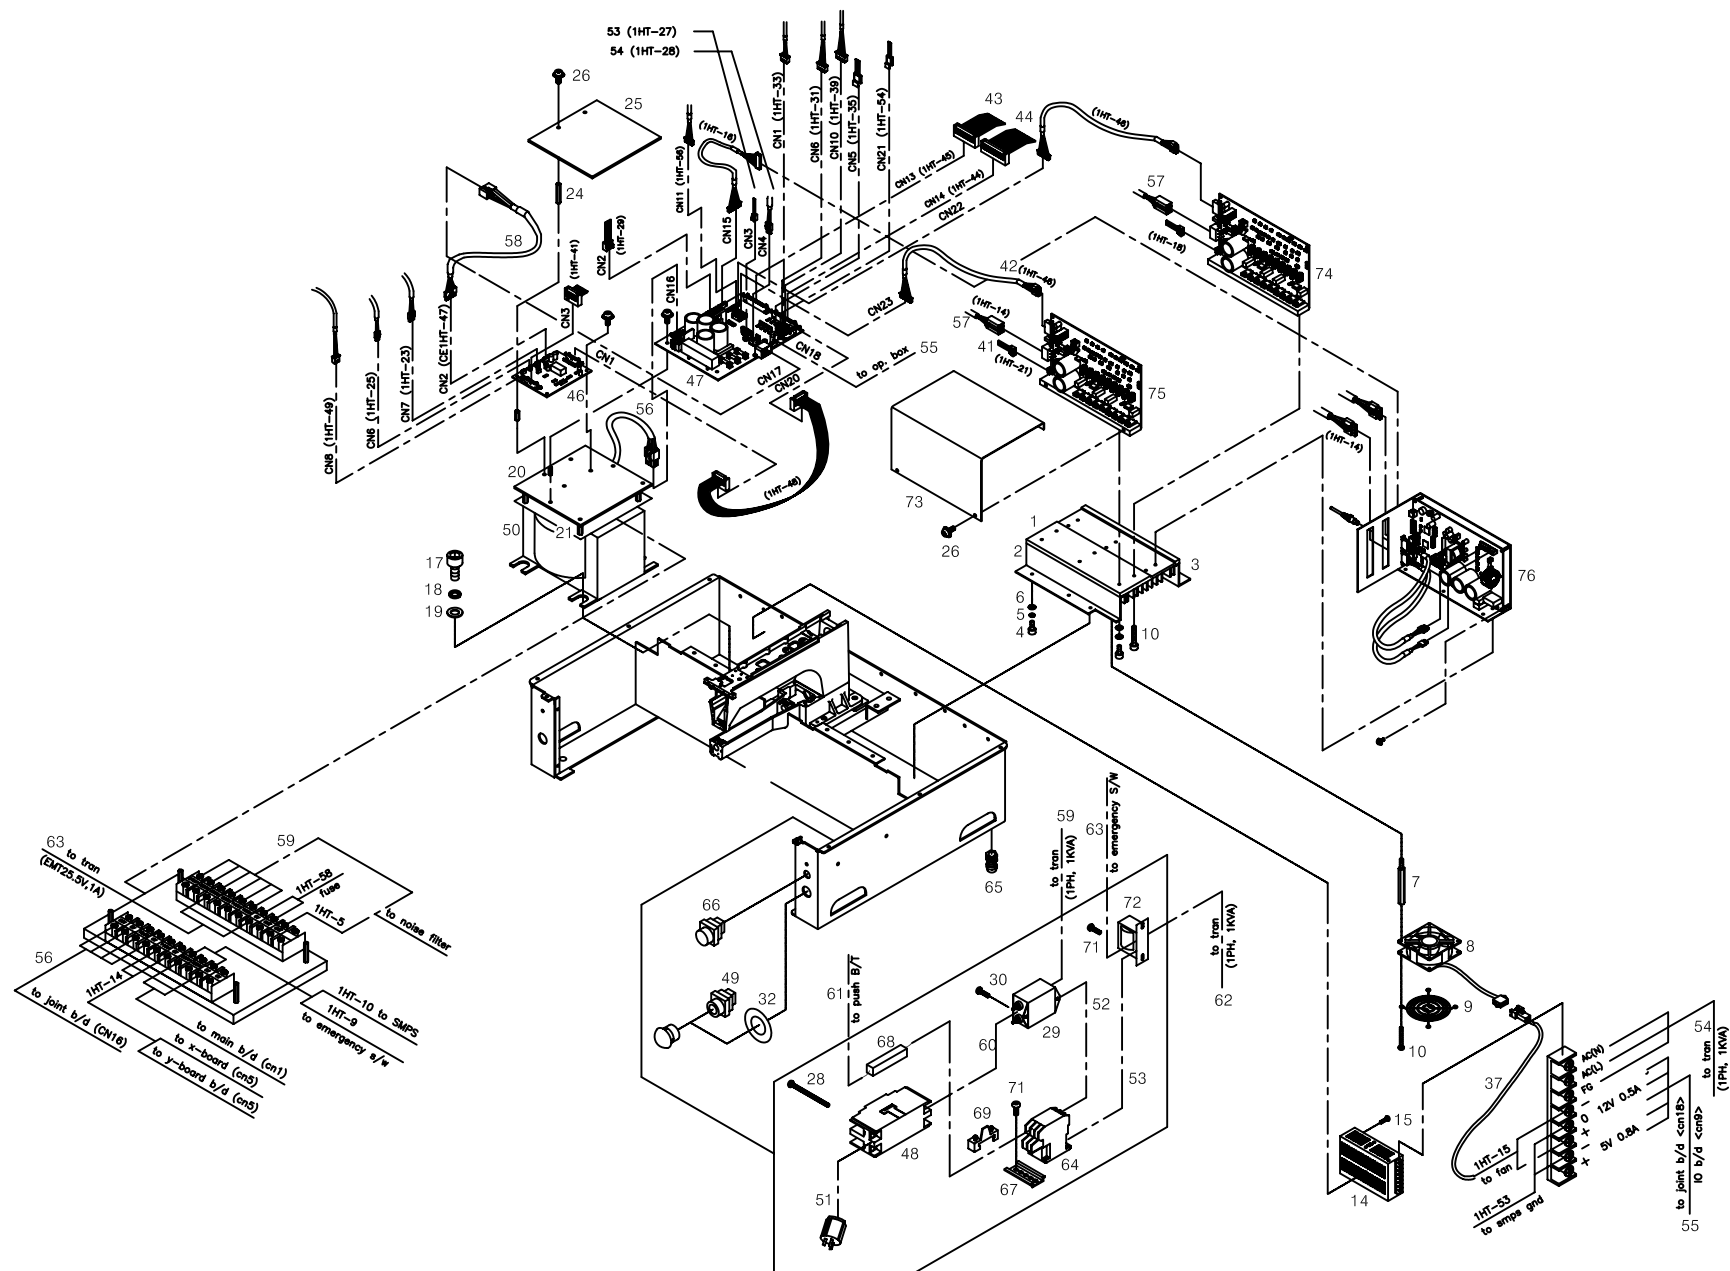

Ref.No	Part No.	PartNames	Q'ty
Q-001	10-004A-AT01	Heatsink	1
Q-002	10-001A-AT01	Bracket(L)	1
Q-003	10-002A-AT01	Bracket(R)	1
Q-004	02014SC-7113	HEX. SOCKET BOLT (M4*L5)	6
Q-005	02028SW-9115	Spring Washer (@4)	6
Q-006	05009SW-1111	Washer (@4-L)	6
Q-007	10-001M-AT01	Stud	4
Q-008	01-002A-AT01	Cooling Fan	1
Q-009	05016SN-1211	Fan Cover	1
Q-010	01-002M-AU12	Plus Screw (M4*L35)	4
Q-014	GP-007473-00	SMPS	1
Q-015	02023SC-7113	HEX.SOCKET BOLT (M4*L8)	2
Q-016	20026EL-T121	Transformer (1Kva)	1
Q-017	08035SC-7113	HEX. SOCKET BOLT (M6*L10)	4
Q-018	16014SW-4115	Spring Washer (@6)	4
Q-019	08057SW-1111	Washer (@6)	4
Q-020	20030PR-T121	Intercept Plate	1
Q-021	20032SC-T121	Plus Screw (M3*L10)	4
Q-024	20036SC-T121	Cover Stud	4
Q-025	20037ET-T121	Cover	1
Q-026	22015SC-9134	Plus Screw (M3*L6)	8
Q-028	01020SC-8118	Hex. Socket Bolt (M4*L65)	2
Q-029	GP-007476-00	NOISE FILTER	1
Q-030	20042SC-9134	Plus Screw (M4*L6)	2
Q-032	02015ET-T121	Sticker	1
Q-037	25015EL-T121	Smps To Fan (1Ht-15)	1
Q-041	25021EL-T121	Y-Step Motor Power 1 (1Ht-21)	1
Q-042	25046EL-T121	Joint Power Signal (1Ht-46)	1
Q-043	25045EL-T121	Cable (25-45)	1
Q-044	25044EL-T121	Cable (25-44)	1
Q-046	20036EL-T121	Sub Control Board (1H,4H)	1
Q-047	20033EL-T126	Joint Board (6Head)	1
Q-048	05000300T000	Main Power S/W (Abs52Bf-10A)	1
Q-049	02000800T000	Emergency Switch Set	1
Q-050	05000100T000	Main Transformer (1Ph,1Kva)	1
Q-051	02100100T000	Main Cable (Ce1Ht-1)	1
Q-052	02100300T000	Nfb2 - Noise Filter Cable	1
Q-053	02100500T000	Filter To Transformer Cable	1
Q-054	02101000T000	Transformer To Smps	1
Q-055	02101100T000	From Smps To Joint Io Power	1


[illegible]

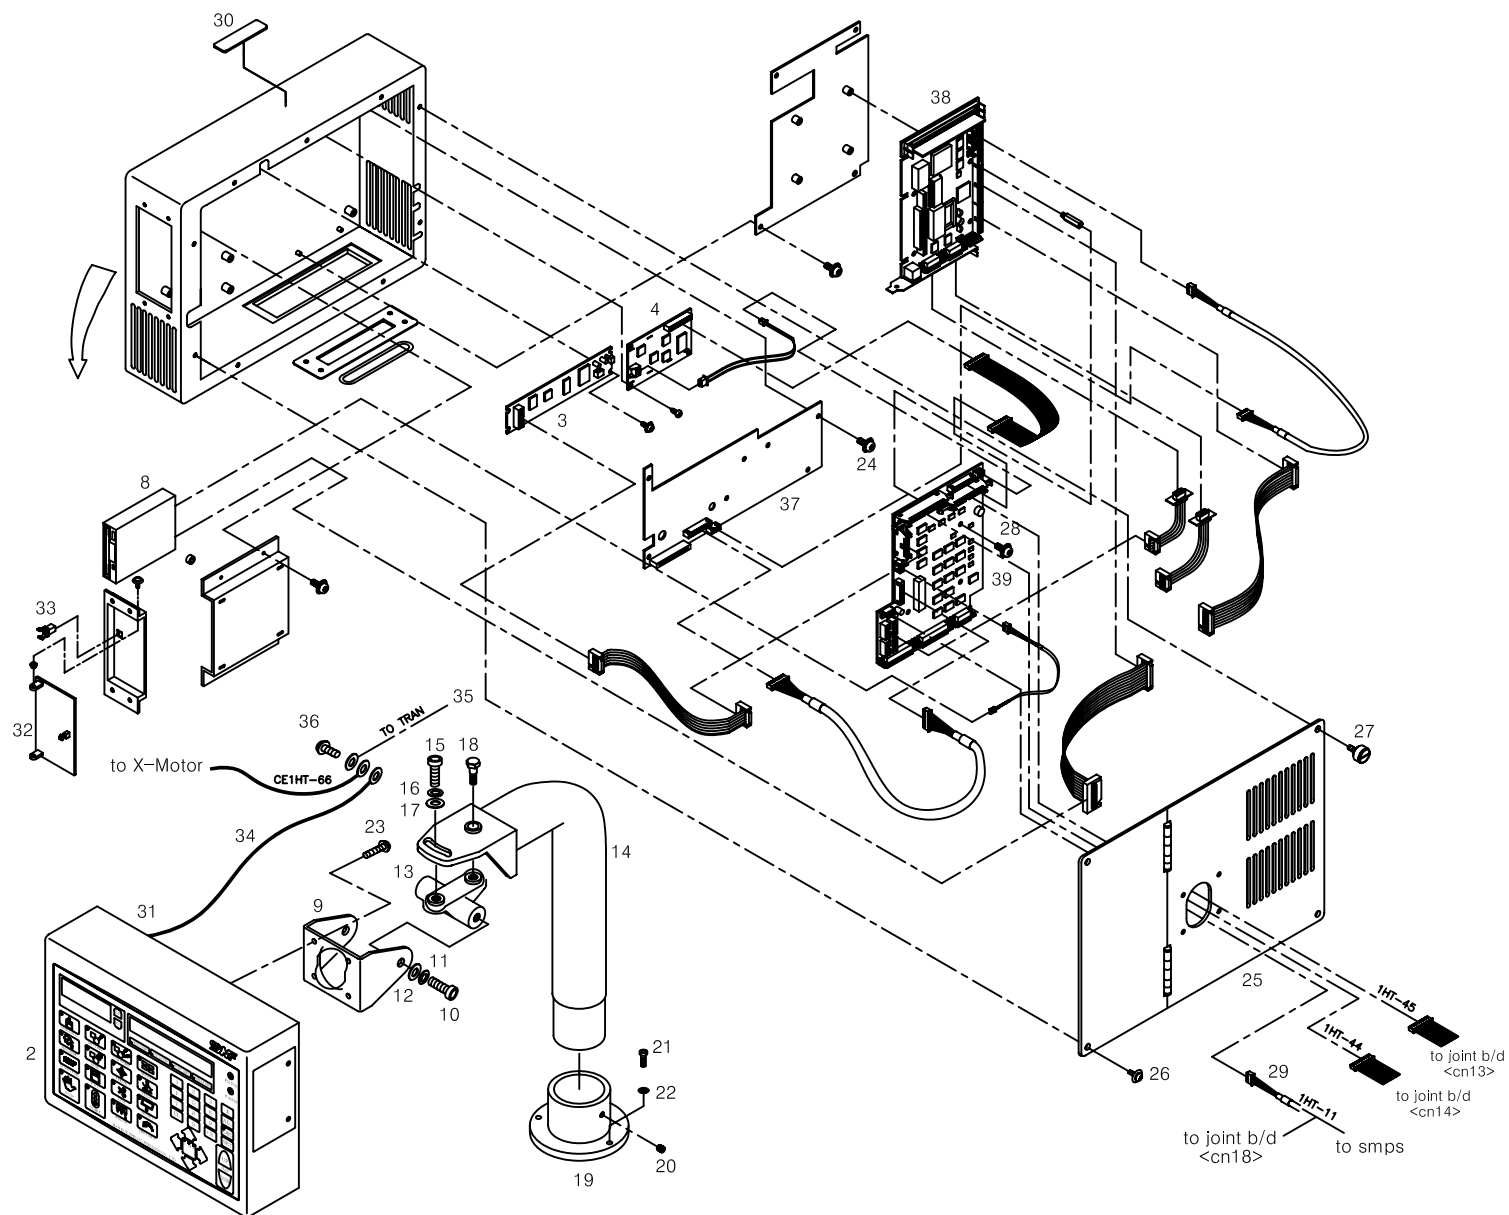

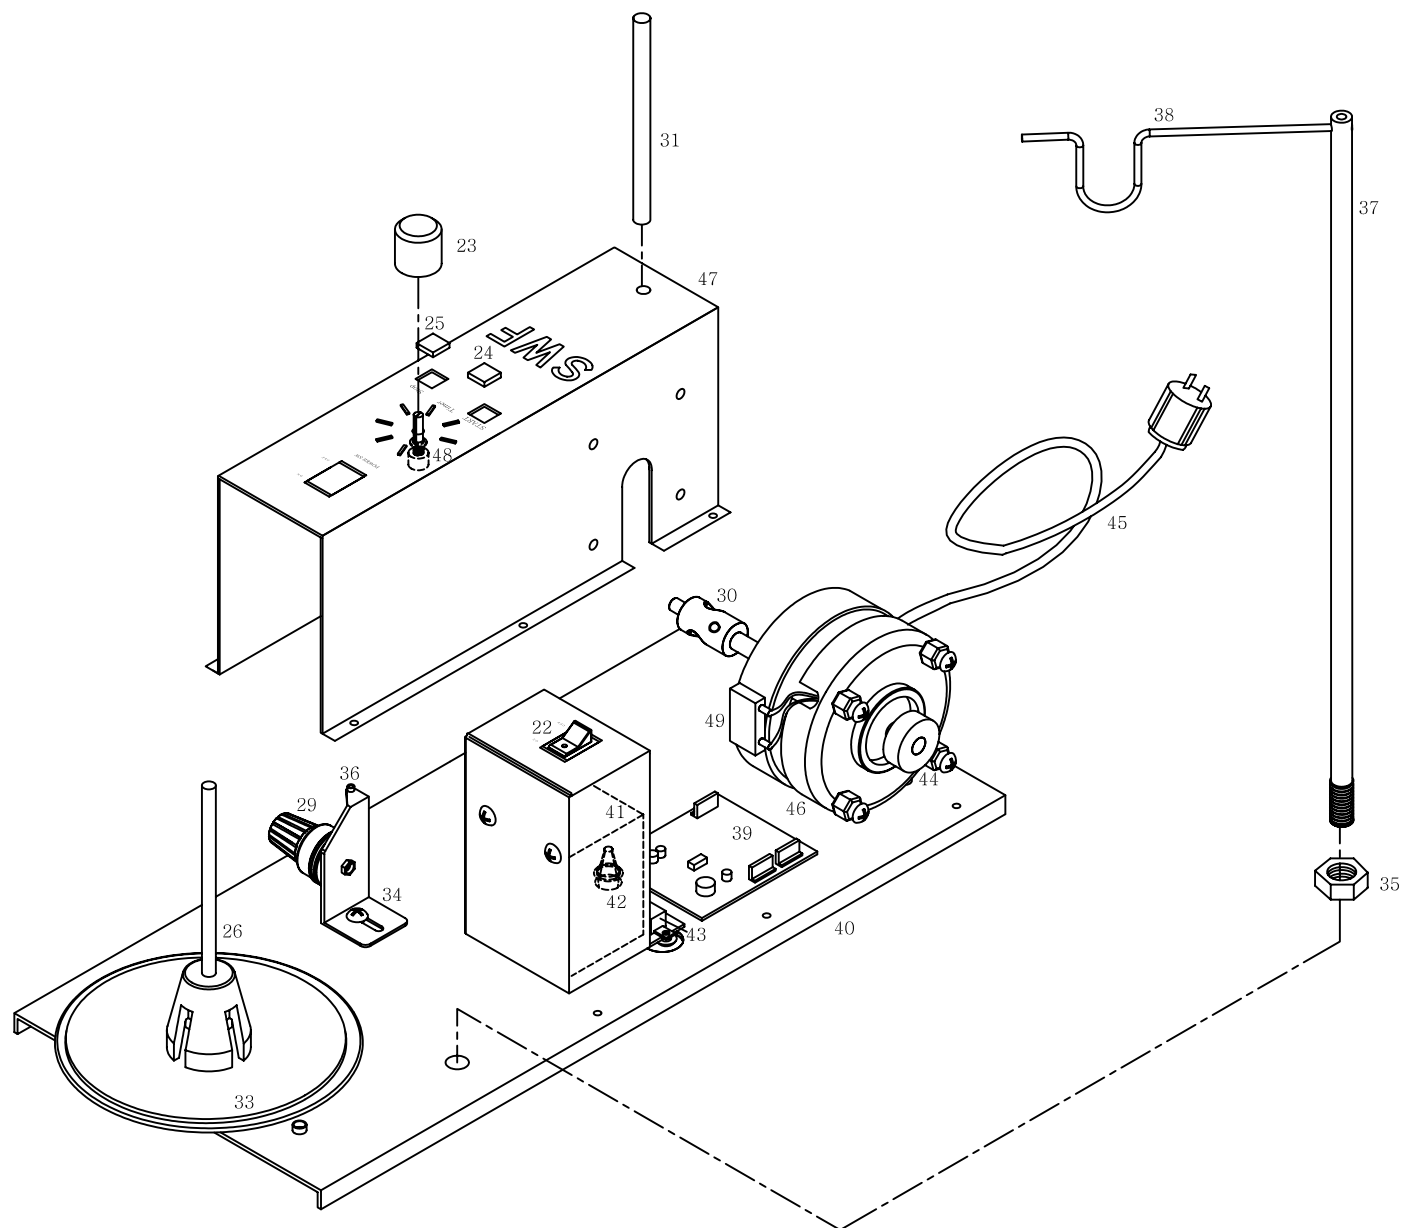

T


Lubrication

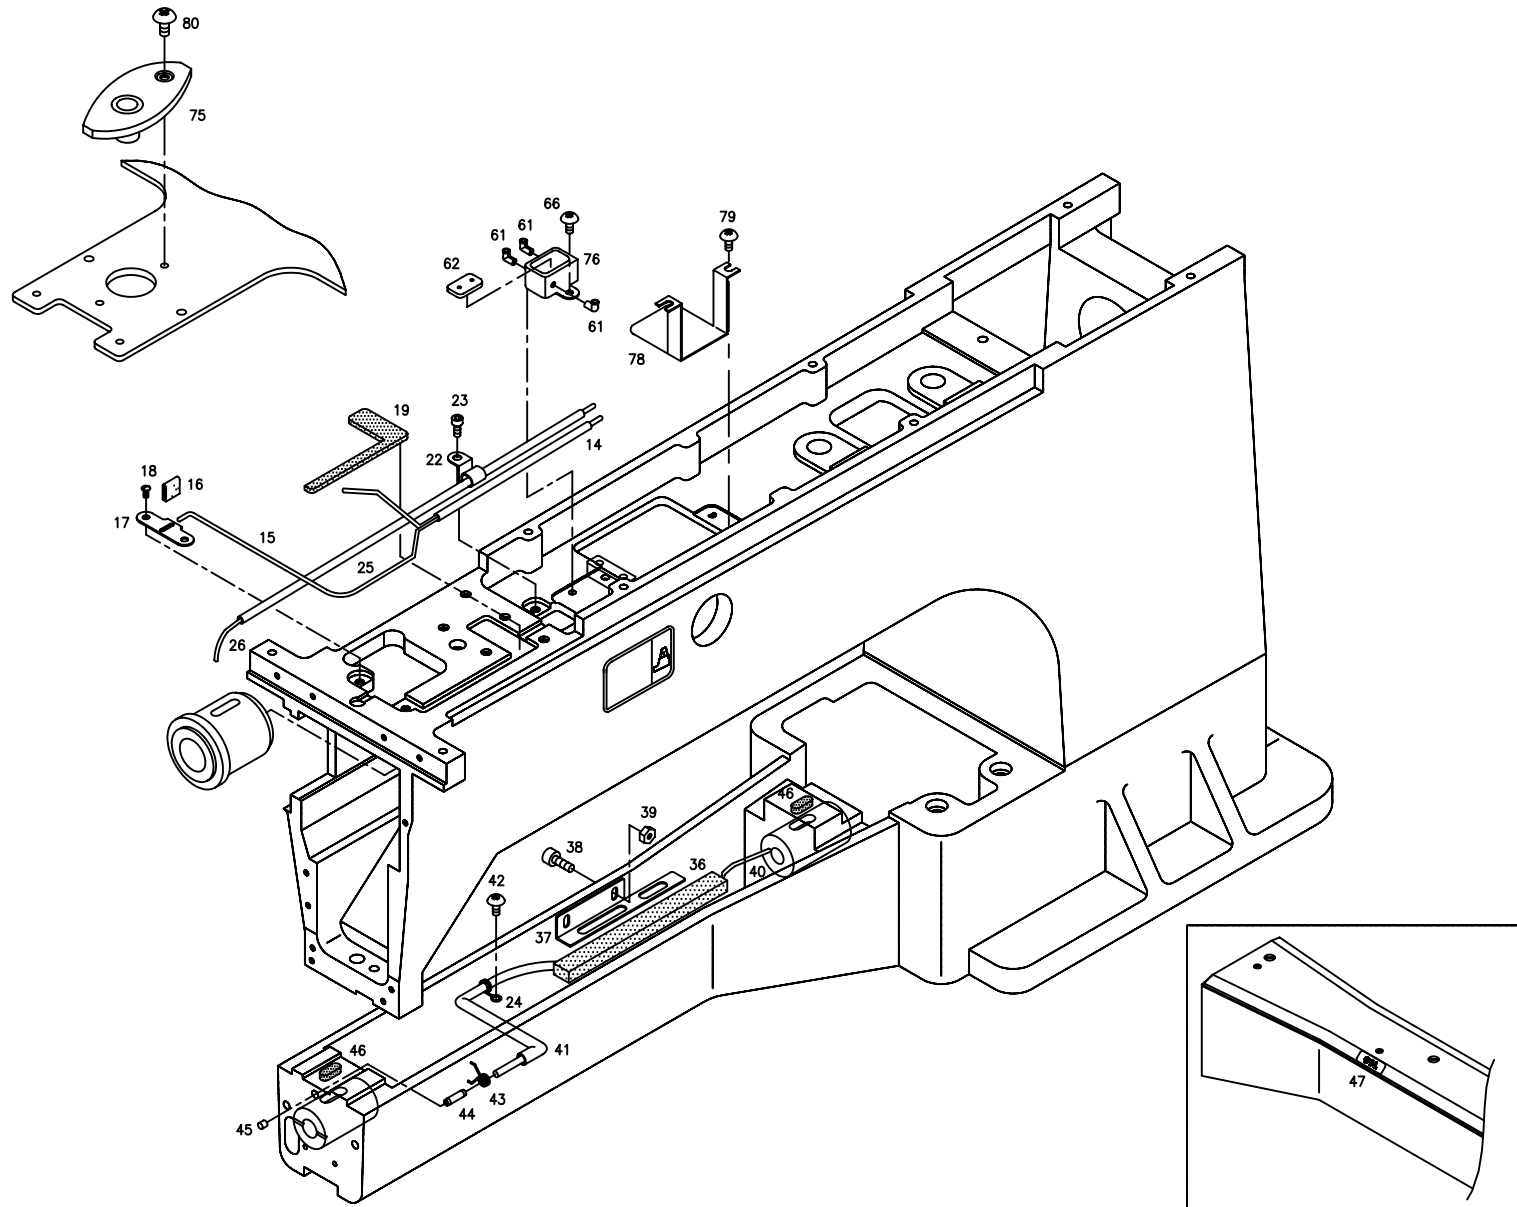

U

Lamp (Option)

SWF®

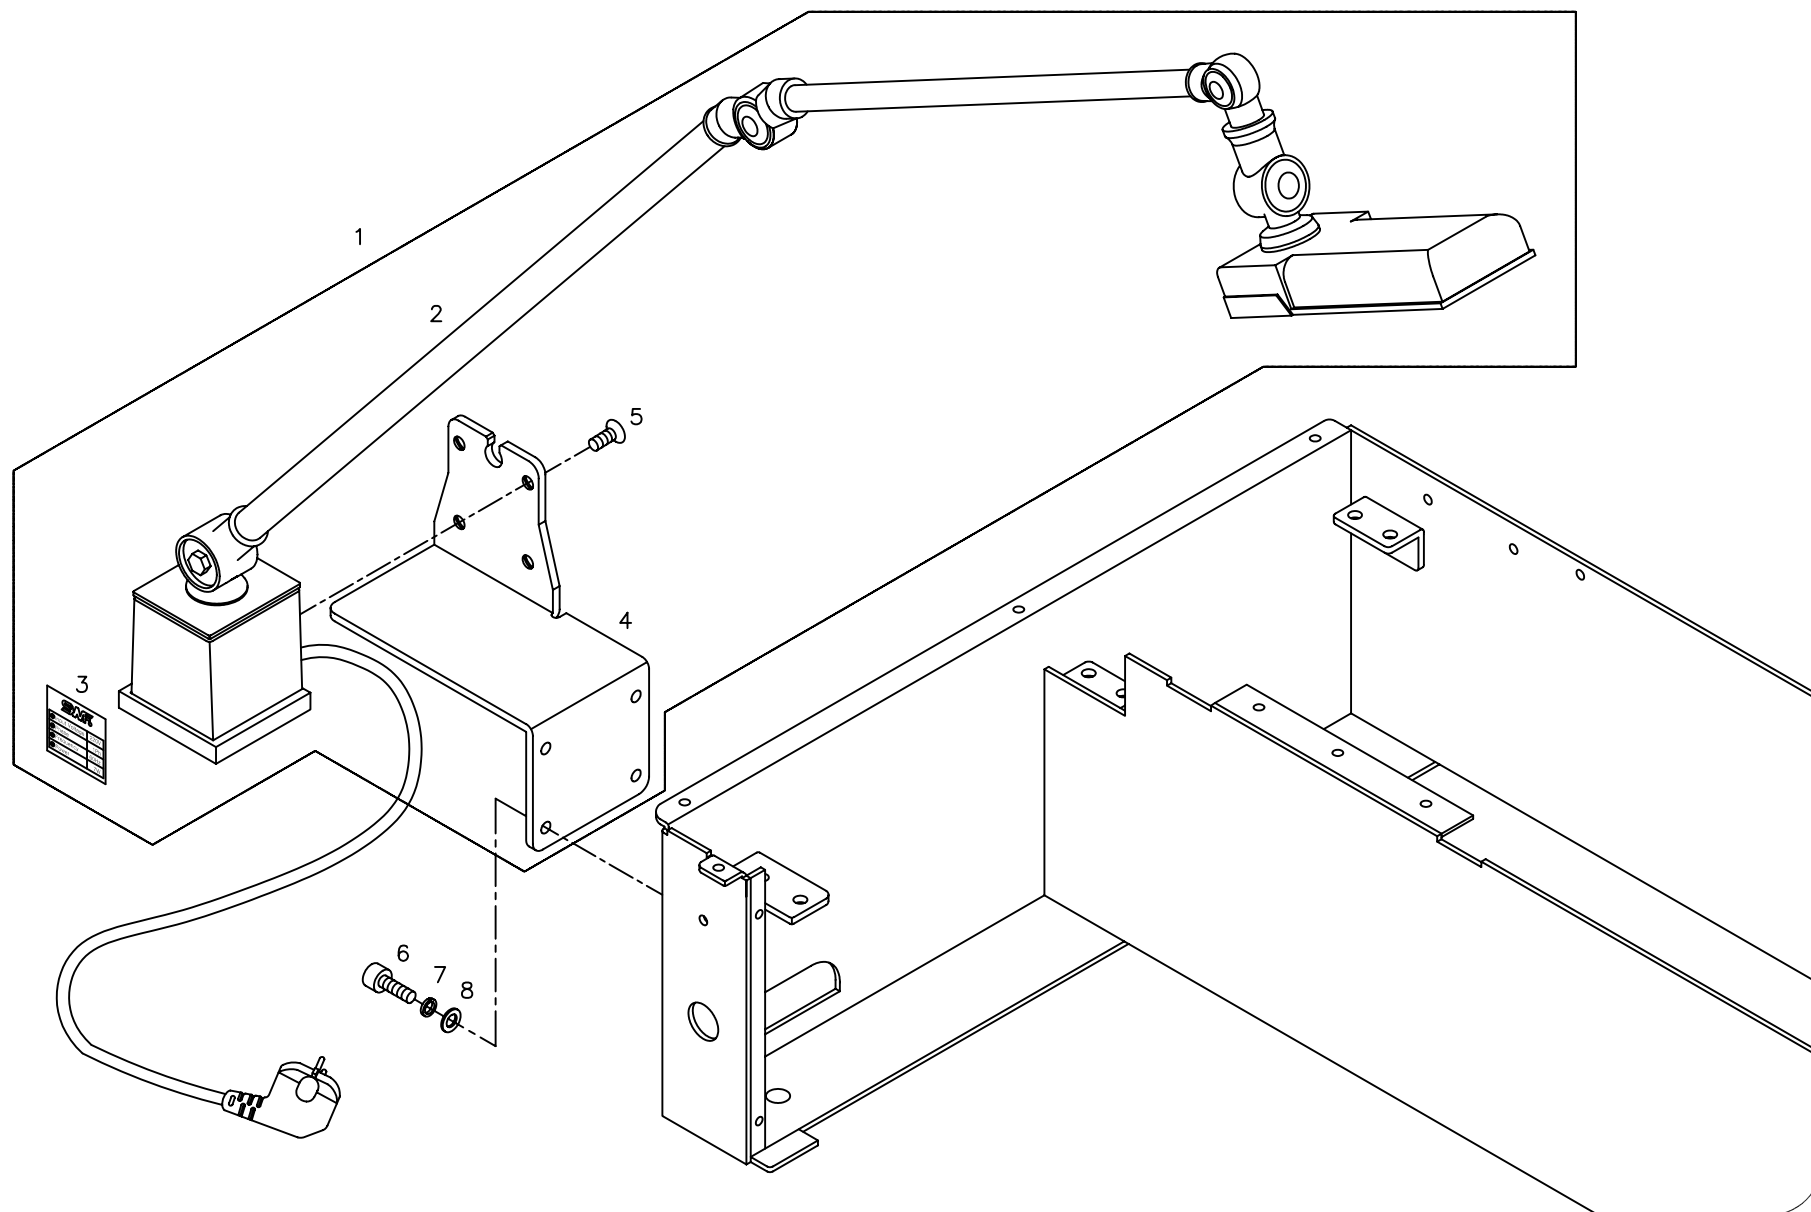

[illegible][illegible]