

PARTS BOOK

K-Series Tubular-small

K-UK1204-45

PME-130626

Notice

1. 본 책자는Parts Book으로 제작되었으므로 매뉴얼로 사용 불가합니다.
2. 조에 속한 파트는 개별 조립 시 제품의 파손 또는 자수 불량일 수 있어 해당 파트에 대한 주문 시에는 조 품목으로만 구입이 가능합니다.
3. 당사의 Part Book은 다음과 같은 순서로 분류되어 있으니 제품을 구입한 소비자께서는 다음과 같은 순서로 제품을 검색하여 주십시오.

- 1) Machine Layout
- 2) Section
- 3) Part List

※소모성 부품은 자수 기계의 보증 기간과 상관 없음.

1. This is a parts book. It cannot be used as a manual.
2. The parts classified as ass'y items may cause damage to the machine or bad embroidery when they are separately assembled.
Hence, when they are ordered, they can be purchased as ass'y items only.
3. The Part Book is classified as below and users could search products in the following order.

 
- 1) Machine Layout
- 2) Section
- 3) Part List

※Consumable parts shall not be guaranteed even in warranty period

Information

A. Structure of Part Book

1. Machine Layout

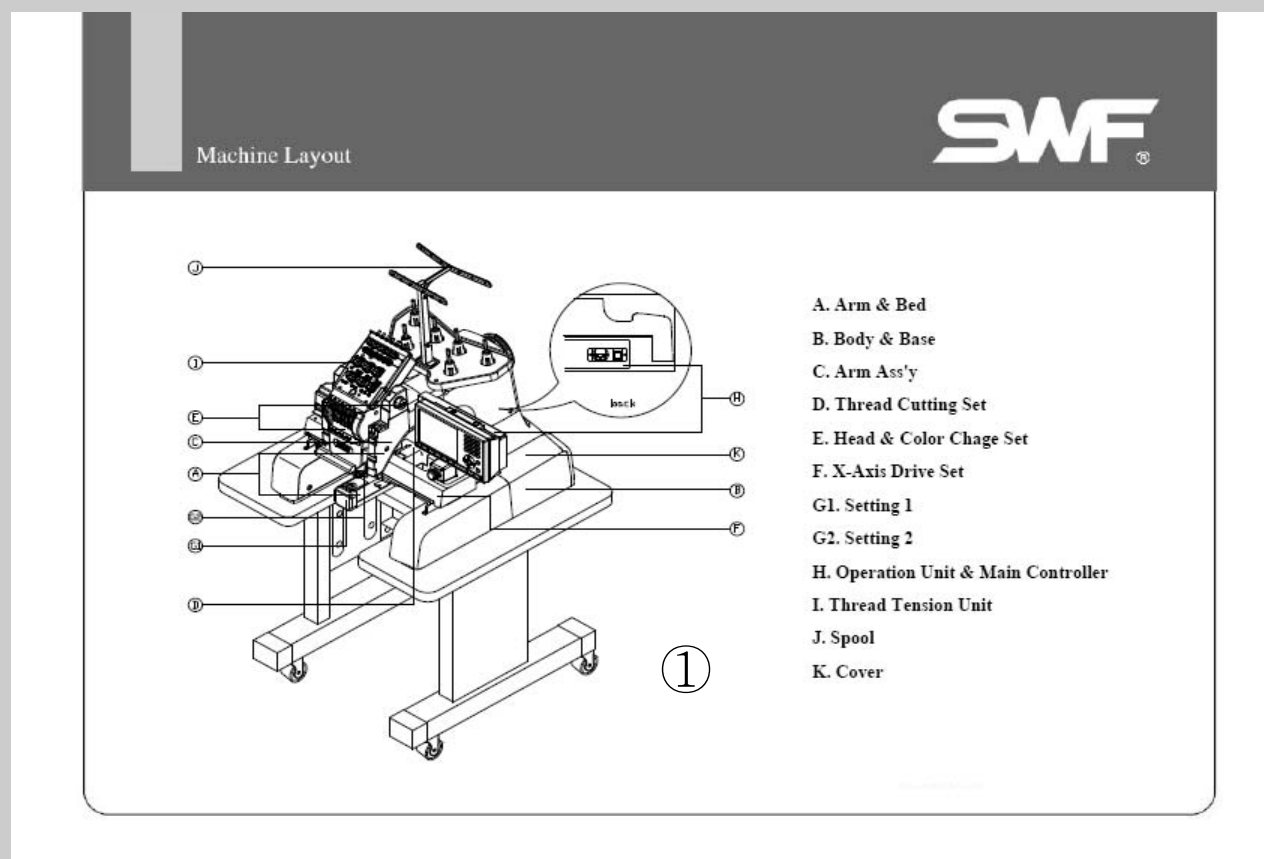


Information

A. Structure of Part Book

2. Section

 - ① : Index Number
 - ② : Index Group
 - ③ : Related Parts
- Ex) A-1, A-2, A-3...

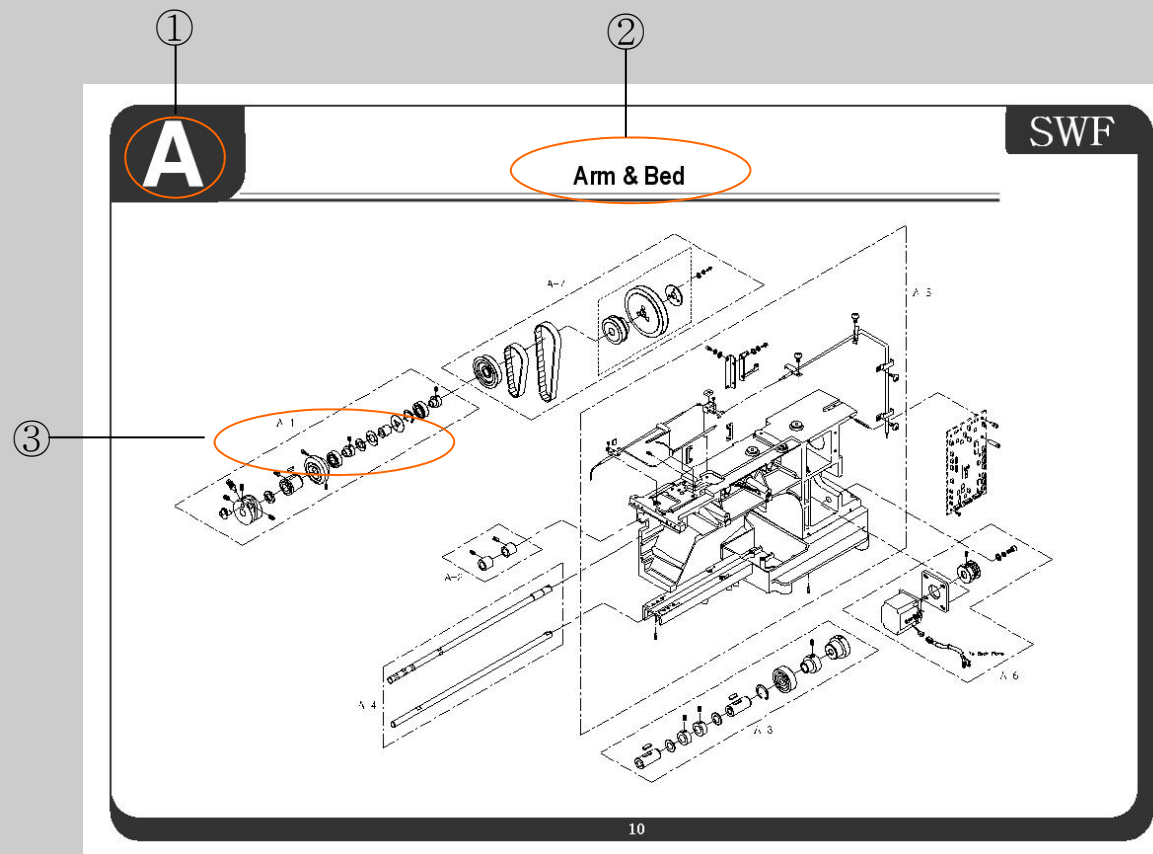


Information

A. Structure of Part Book

3. Part List

①

 A-1

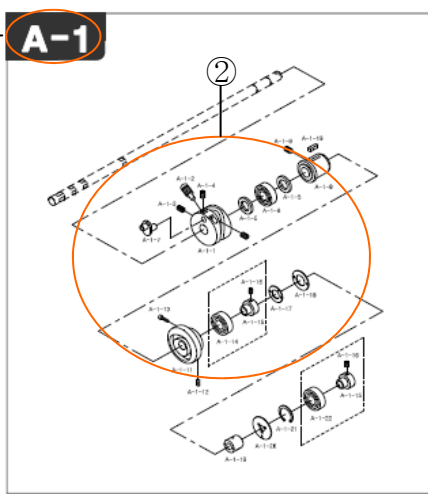

Note

③ Ref No	④ Part No	⑤ Part Name	⑥ Applied Period	⑦ Interchangeability	⑧ Hardware	⑨ Qty	⑩ Remark
A-1-1	0101SCM-T900	Twice-up Lever Driving Cam	Oct-08-07 ~ Oct-08-07			1	
A-1-2	09-033421-00	Twice-up Lever Driving Cam	Oct-08-07 ~	X		1	
A-1-3	01017CW-T121	Cam Screw (8/32x20L=17)				1	
A-1-4	01016SC-4313	Screw (1/8x3/8x20 L=7.5)			O	1	
A-1-5	01016SC-4313	Hex. Socket Set Screw (1/4" 20x40 L=4.5)				1	
A-1-6	01020RR-A001	Washer				2	
A-1-7	01020RR-A001	Washer				1	
A-1-8	01020RR-T900	Needle Bar Crank				1	
A-1-9	01012MP-T121	Upper Shaft Bushing (H)				1	
A-1-10	01004SC-4317	Screw (1/8x3/8x20 L=14)			O	3	
A-1-11	01014SP-T121	Pelt				1	
A-1-12	01014SP-T121	Presser Foot Driving Cam				1	
A-1-13	04012AP-A001	Screw (1/8x3/8x20)			O	3	
A-1-14	11098SC-4313	Screw (M4xL20)			O	1	
A-1-15	01020RR-A001	Washer (600422)				1	
A-1-16	010000001000	Rearizer Collar				2	
A-1-17	04012AP-A001	Screw (1/8x3/8x20)			O	3	
A-1-18	WS-00018R-00	Washer				1	
A-1-19	CL-000097-00	Code Wheel				1	
A-1-20	CL-000097-00	Collar				1	
A-1-21	01016SC-4313	Rearizer Pin				1	
A-1-22	01016SC-4313	C-Roller (H477)			O	1	
A-1-23	01016SC-4313	Rearizer (600422)			O	1	

Note) * : Checks the timing of application.

① Index Number
Ex) A-1, A-2...

② Part View

Information

A. Structure of Part Book

③ Ref. No

④ Part No

Ex)

Category	CODE	Remark
Old part	16009SC-4113	
New part	AS -000000-00	Set parts (Set 구성품)
	GP -000000-00	Instrumental parts (기구적 파트)
	EP -000000-00	Electrical parts (전기적 파트)

⑤ Parts Name : 파트들의 고유 품명을 표기 : Refers to unique names of parts

⑥ Applied Period

Ex1) 2007년2월10일 적용, 2008년7월10일 폐기
-> Feb.10.07 ~ Jul.10.08

Ex1) Applied from Feb. 10, 2007, To on July 10, 2008
-> Feb.10.07 ~ Jul.10.08

Ex2) 2007년 2월 10일 부터 파트북 발행일 까지 적용
-> Feb.10.07 ~

Ex2) Applied from Feb. 10, 2007
-> Feb.10.07 ~

Information

A. Structure of Part Book

⑦ Interchangeability

O : 구 부품을 신 부품으로 교환 가능

신 부품을 구 부품으로 교환 가능

: It is interchangeable between old and new part.

X : 구 부품을 신 부품으로 교환 불가능

신 부품을 구 부품으로 교환 불가능

: It is not interchangeable between old and new part.

△ : 구 부품을 신 부품으로 교환 가능

신 부품을 구 부품으로 교환 불가능

: It is interchangeable by new part only.

Interchangeability		
O	X	△
Old -> New: OK New -> Old : OK	Old -> New: NO New -> Old : No	Old -> New: OK New -> Old : No

⑧ Hardware : 시중에서 구매 할 수 있는 부품

: Parts that can be purchased in the market

 
⑨ Q'ty : 사용 파트의 수량을 표기

: Quantity of part

⑩ Remark

⑪ Index Number

Machine Layout

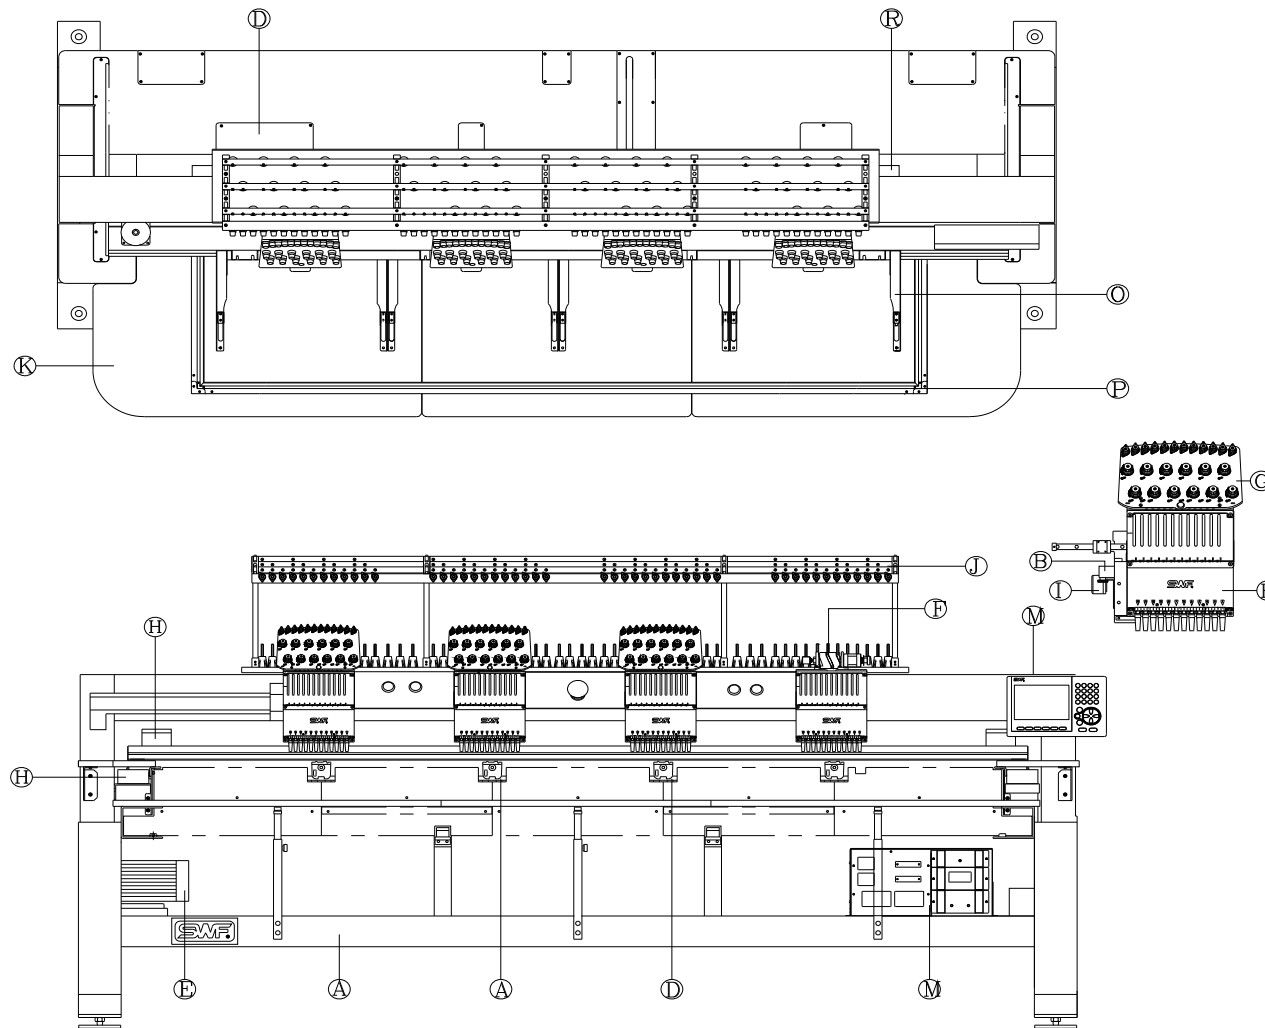

- A. Beam Body & Bed
- B. Arm 1
- C. Arm 2
- D. Thread Cutting Set
- E. Main Drive Sytem
- F. Head & Color Change
- G. Thread Tension Unit
- H1. X-Y Drive Set(UK1204)
- H2. X-Y Drive Set(UK1206)
- H3. X-Y Drive Set(UH1506C)
- I. Setting
- J. Spool
- K1. TABLE (UK1204)
- K2. TABLE (UK1206)
- K3. TABLE (UH1506C)
- L. Cable
- M. Con Box & O/P Box
- N. Lamp & Switch
- O. Bobbin Winder
- P. Cover
- Q1. Tubular Frame
- Q2. Border Frame




CONTENT

A	Beam Body & Bed	10
B	Arm 1	13
C	Arm 2	20
D	Thread Cutting Set	29
E	Main Drive System	35
F	Head & Color Change	41
G	Thread Tension Unit	50
H1	X-Y Drive (UK1204)	54
H2	X-Y Drive (UK1206)	64
H3	X-Y Drive (UH1506C)	75
I	Setting	84


J	Spool	91
K1	Table (UK1204)	95
K2	Table (UK1206)	99
K3	Table (UK1506C)	103
L	Cable	107
M	Con Box & O/P Box	110
N	Lamp & Switch	116
O	Bobbin Winder	121
P	Cover	124
Q1	Tubular Frame	130
Q2	Border Frame	135
R	Index	139

Beam Body & Bed

 
A-1

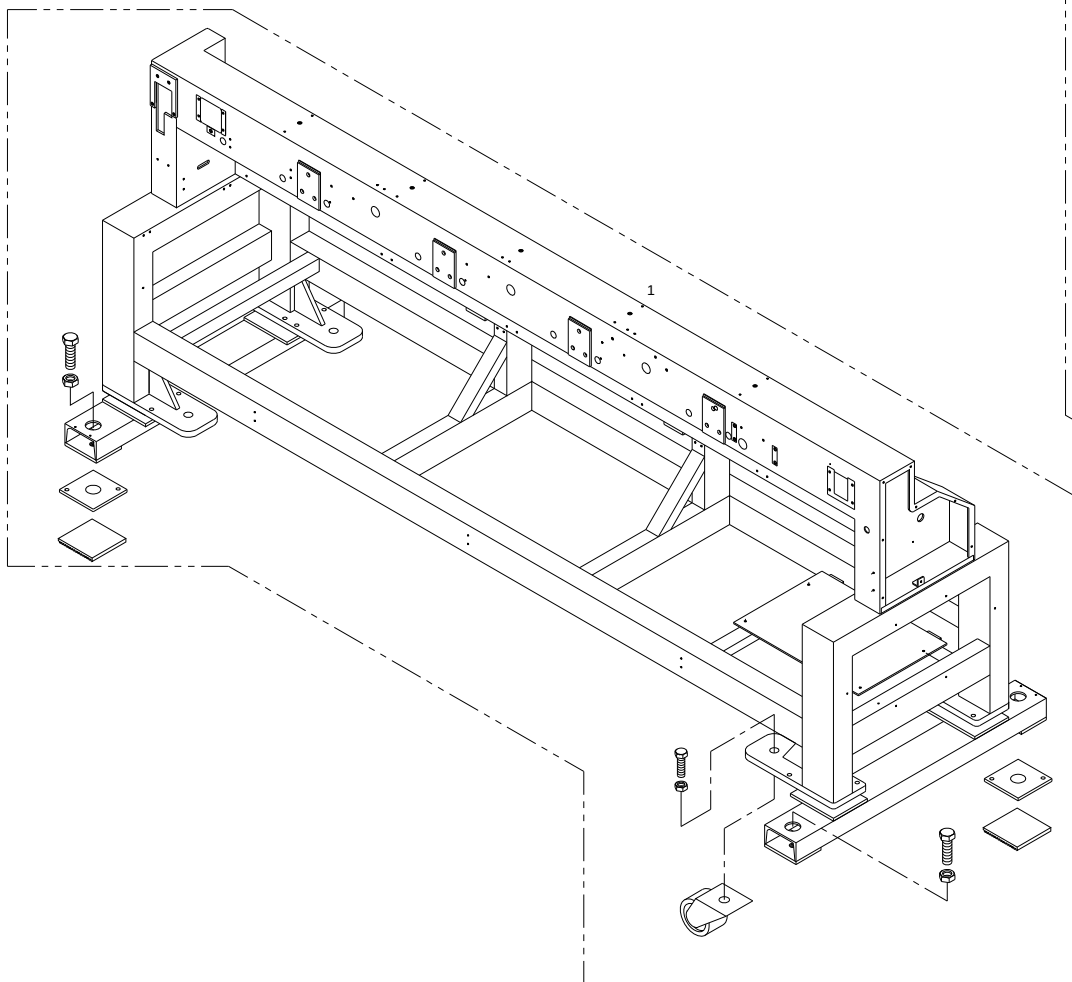

A-2

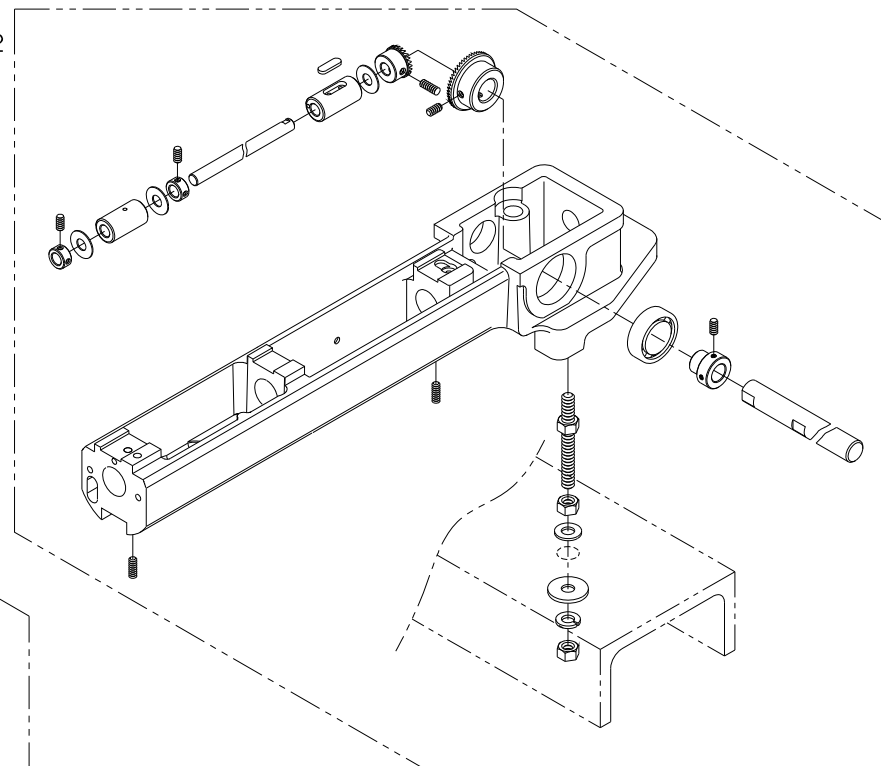 

A-1

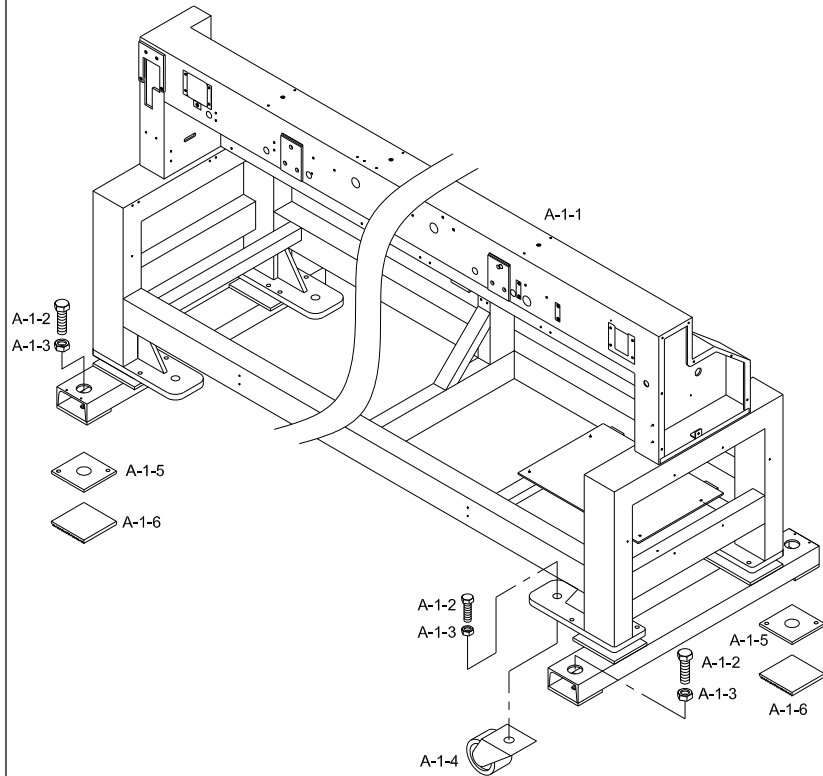 


Note

Ref.No	Part No.	Part Name	Application date	Interchangeability	Hardware	Q'ty	Remarks
A-1-1	GP-044502-00	Beam & Body (Ass'Y) UK1204	Des,12,08 ~	X		1	
	GP-044502-01		Feb,06,09 ~	△			
	GP-044502-02		Mar,05,09 ~	△			
	GP-044502-03		Jun,29,09 ~	△			
	GP-044502-04		Jul,16,09 ~	△			
	GP-044502-05		Sep,17,09 ~	△			
	GP-044502-06		Apr,20,11 ~	△			
	GP-044502-07		Jul,06,11 ~	△			
	GP-044502-08		Sep,01,11 ~	△			
	GP-044502-09		Oct,08,11 ~	△			
	GP-044502-10		Nov,15,11 ~	△			
	GP-044978-00	Beam & Body Ass'Y UK1206	Feb,05,09 ~	X		1	
	GP-044978-01		Mar,05,0 ~	△			
	GP-044978-02		Jun,29,09 ~	△			
	GP-044978-03		Mar,08,10 ~	△			
	GP-044978-04		Apr,08,11 ~	△			
	GP-044978-05		Apr,25,11 ~	△			
	GP-044978-06		Jul,06,11 ~	△			
	GP-044078-00	Beam & Body UH1506C	Nov,07,08 ~	X		1	
	GP-044078-01		Nov,27,08 ~	△			
	GP-044078-02		Jan,05,09 ~	△			
	GP-044078-03		Mar,05,09 ~	△			
	GP-044078-04		Mar,25,09 ~	△			
	GP-044078-05		Jun,22,09 ~	△			
	GP-044078-06		Jun,29,09 ~	△			
	GP-044078-07		Jul,16,09 ~	△			
	GP-044078-08		Sep,17,09 ~	△			
	GP-044078-09		Apr,20,11 ~	△			
	GP-044078-10		Jul,06,11 ~	△			
	GP-044078-11		Sep,01,11 ~	△			
	GP-044078-12		Nov,15,11 ~	△			
A-1-2	SC-000337-00	Hex. Bolt (M20*L70)	Mar,21,05 ~	X	○	4	
A-1-3	02036SN-1211	Hex. Nut (M20-No2)			○	4	
A-1-4	CR-000001-00	HAMMER CASTER SET	Nov,08,04 ~	X		4	
A-1-5	GP-010074-00	Leveling Base	Jun,13,05 ~	X		4	
A-1-6	CST-FD002400	Rubber for Body Leveling Plate		X		4	

A

[illegible]

 Arm 1

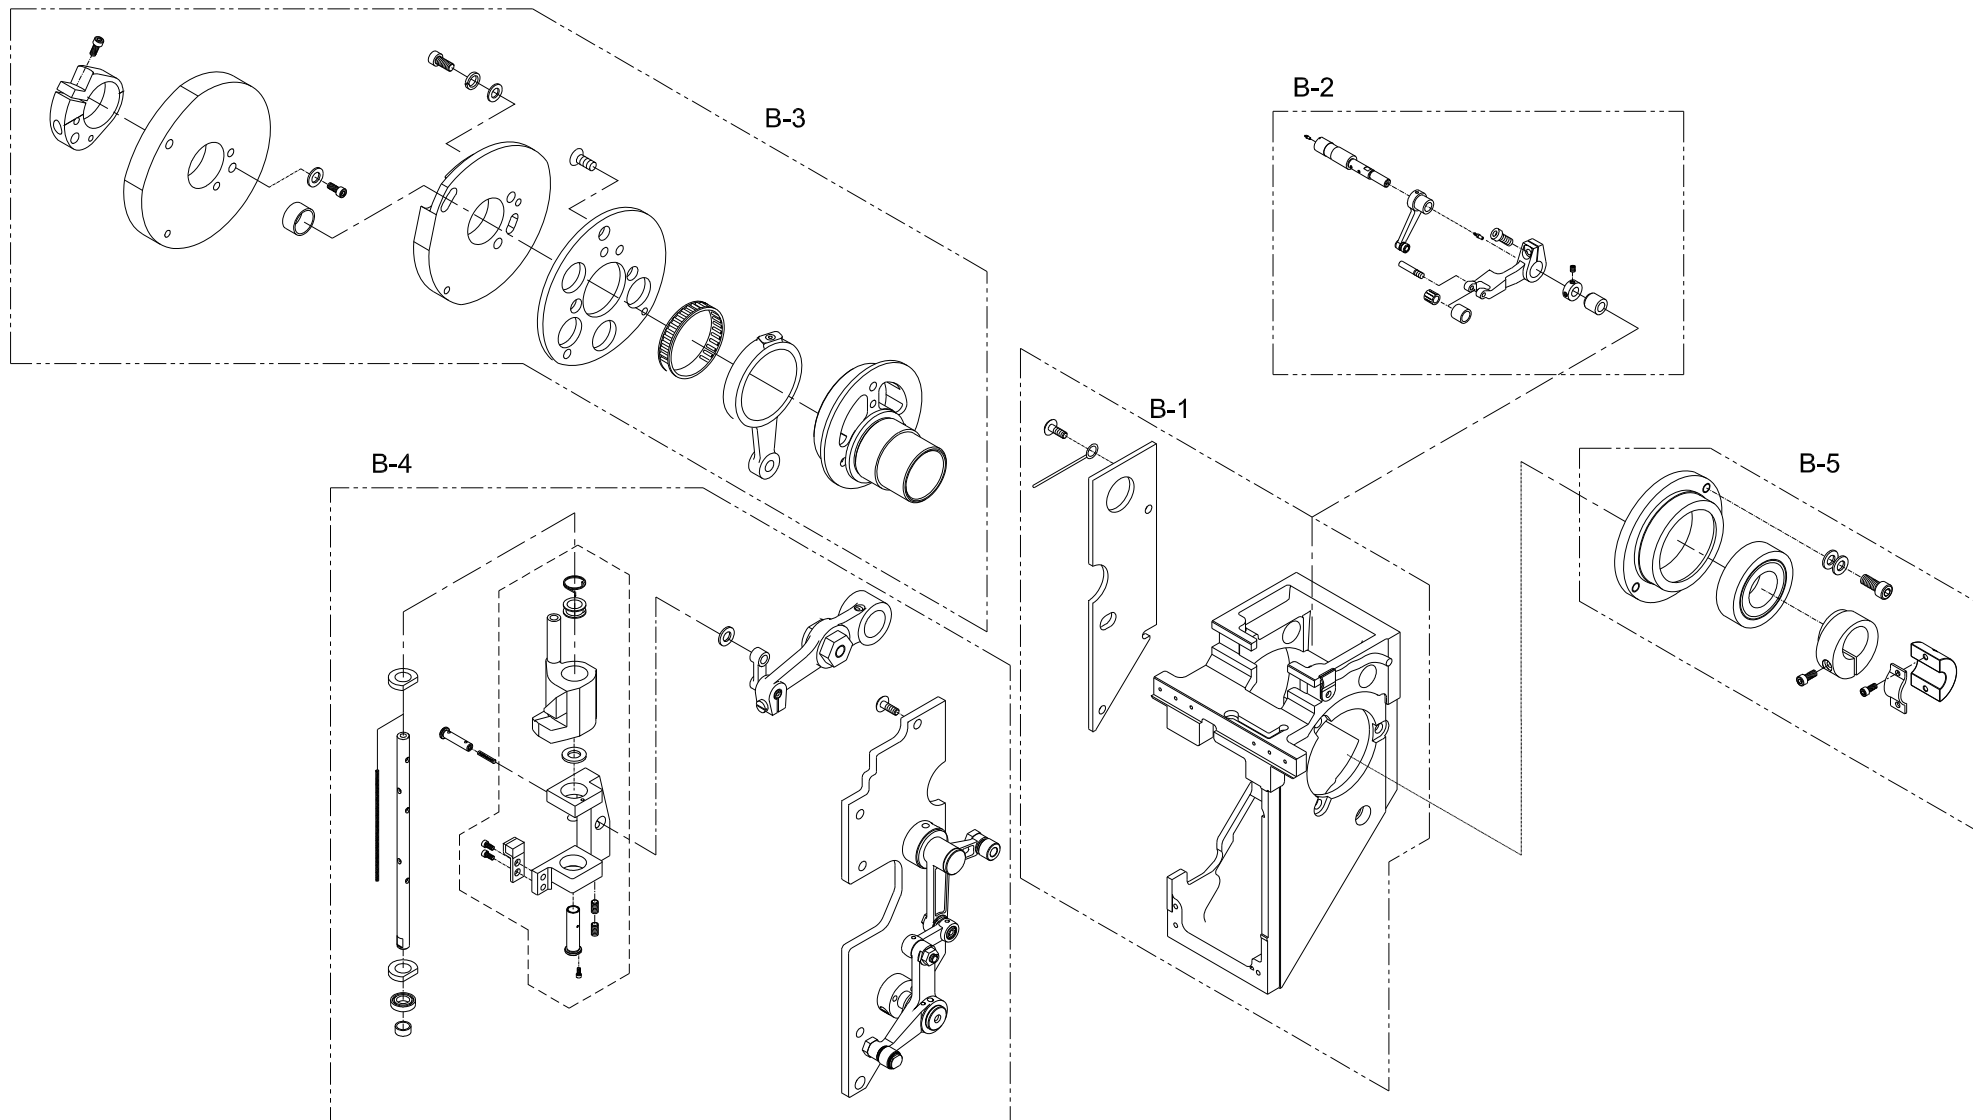

This exploded view diagram illustrates the assembly of the B-1 door. The main components shown are:

- B-1-1**: The main door panel.
- B-1-2**: A long screw used for mounting the door to the frame.
- B-1-3**: A washer or spacer ring.
- B-1-4**: A circular gasket or seal.
- B-1-5**: A small bracket or clip.
- B-1-6**: A small screw or pin.
- B-1-7**: A small bracket or clip.
- B-1-8**: A small screw or pin.
- B-1-9**: A vertical support or hinge component.
- B-1-10**: A small screw or pin.
- B-1-11**: A small screw or pin.

The diagram shows the door panel (B-1-1) being assembled with the support (B-1-9) and the mounting hardware (B-1-2, B-1-3, B-1-4). The gasket (B-1-4) is shown being placed around the perimeter of the door. The small brackets (B-1-5, B-1-7) and screws (B-1-6, B-1-8) are shown being attached to the bottom of the door panel.

Note



Note

B

Note


B

[illegible]

Note



 Arm 2

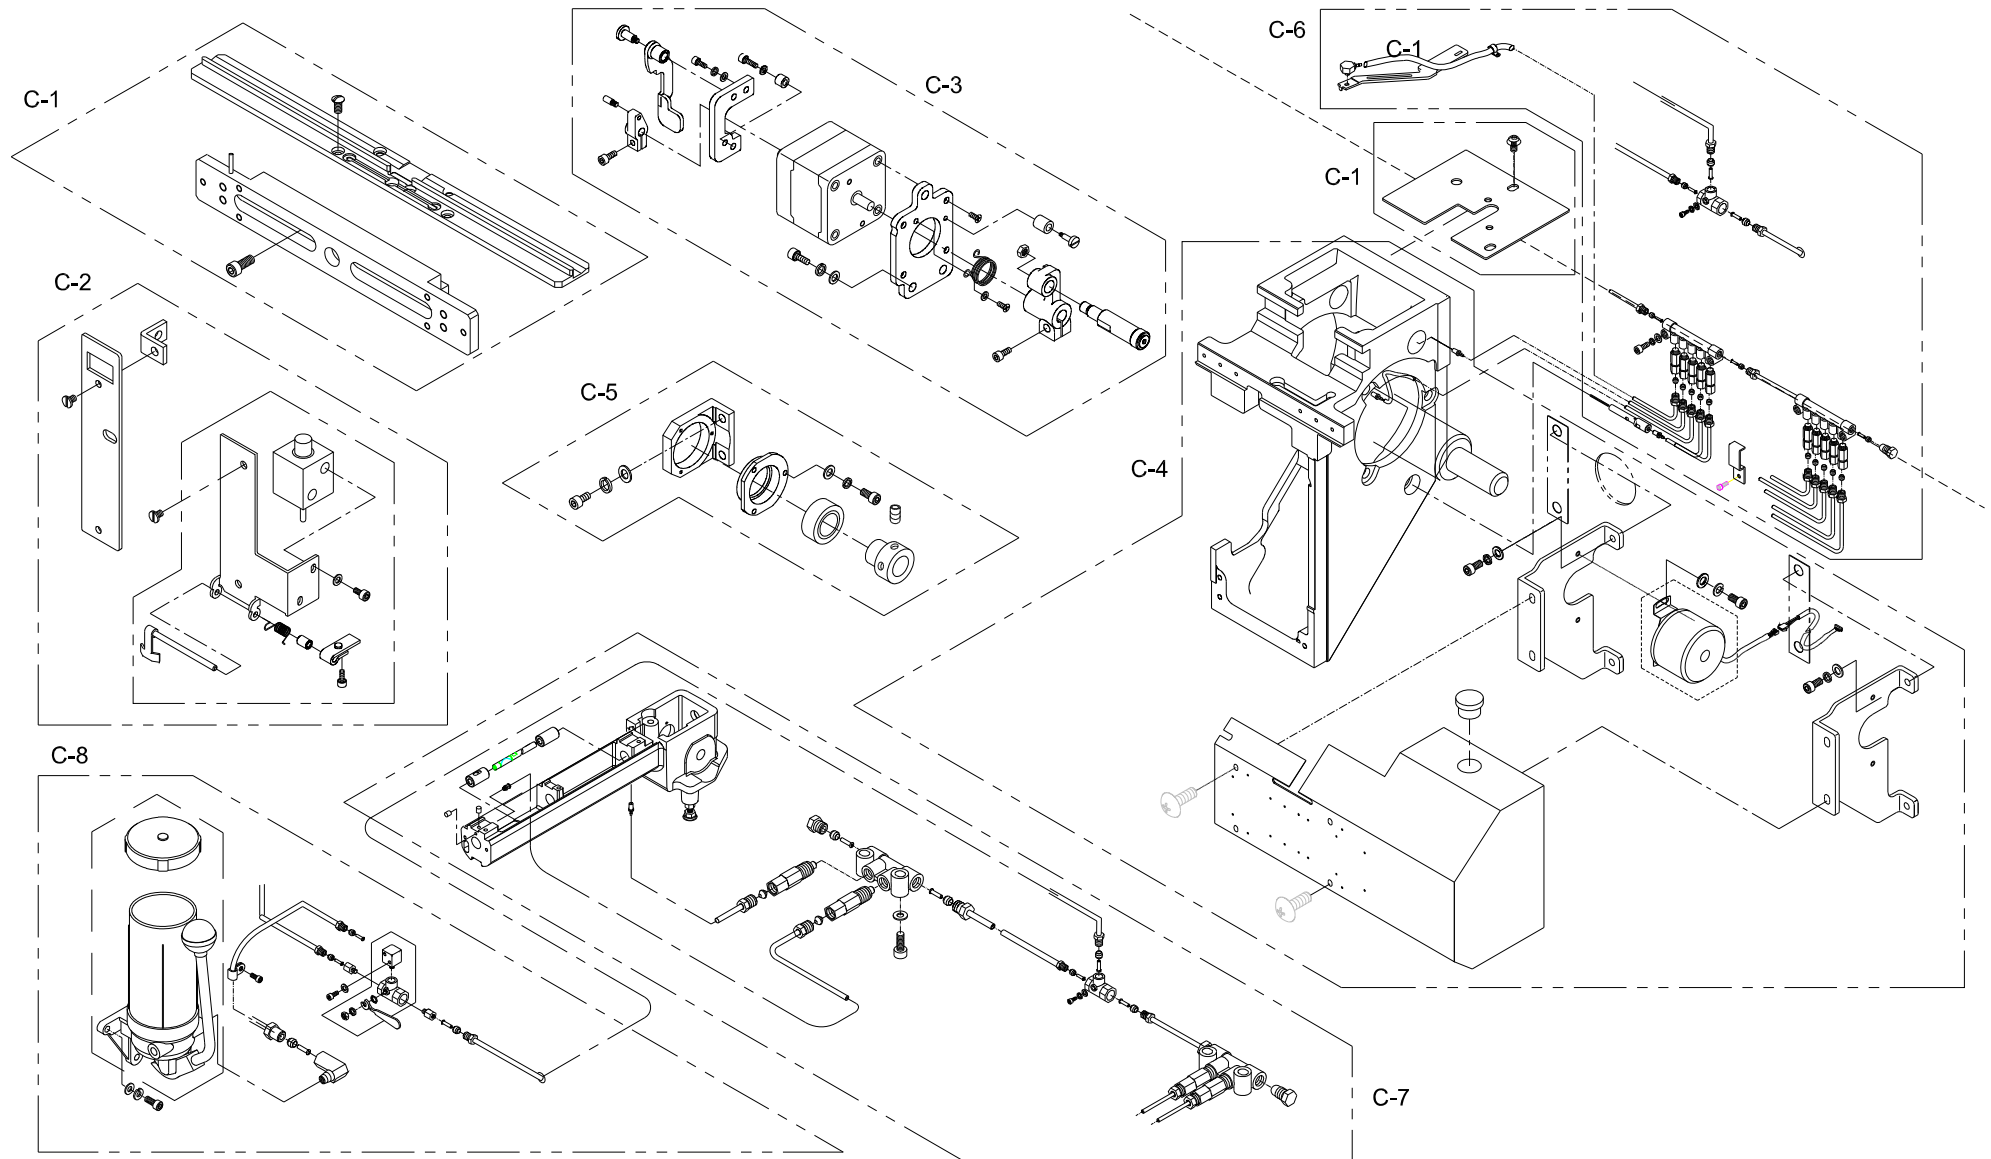

C-1

Diagram illustrating the assembly components and their installation:

- C-1-1**: Main base plate.
- C-1-2**: Screws for securing the base plate.
- C-1-3**: Longitudinal rail or guide.
- C-1-4**: Screws for securing the rail.
- C-1-5**: Mounting plate for the upper assembly.
- C-1-6**: Screws for securing the mounting plate.

Note



C-2

This exploded view diagram illustrates the assembly of the C-2 unit. The components are labeled as follows:

- C-2-1**: The main rectangular housing or frame.
- C-2-2**: A vertical plate or divider that fits into the side of the main housing.
- C-2-3**: A screw used to secure the vertical plate (C-2-2) to the main housing (C-2-1).
- C-2-4**: A long, thin metal rod or pin that passes through the bottom of the main housing and the vertical plate.
- C-2-5**: A small spring or washer that fits onto the rod (C-2-4) near the bottom of the vertical plate.
- C-2-6**: A small cylindrical component that fits onto the rod (C-2-4) below the spring.
- C-2-7**: A bracket or support piece that fits onto the rod (C-2-4) at the bottom.
- C-2-8**: A screw used to secure the bottom bracket (C-2-7) to the main housing.
- C-2-9**: A small cylindrical component that fits into the side of the main housing.
- C-2-10**: A small screw or pin that secures the side component (C-2-9) to the main housing.
- C-2-11**: A small screw or pin that secures the bottom of the vertical plate to the main housing.
- C-2-12**: A long, thin metal plate or support that fits behind the main housing.
- C-2-13**: A small bracket or support piece that fits onto the top of the main housing.
- C-2-14**: A screw used to secure the top bracket (C-2-13) to the main housing.

Note



[illegible]

Note	
------	--



[illegible]

Note

C

This exploded view diagram illustrates the assembly of the front panel. The components are labeled as follows:


- C-5-1**: Front panel housing.
- C-5-2**: Small screw.
- C-5-3**: Washer.
- C-5-4**: Nut.
- C-5-5**: Flange.
- C-5-6**: Small screw.
- C-5-7**: Washer.
- C-5-8**: Nut.
- C-5-9**: Flange.
- C-5-10**: Knob.
- C-5-11**: Spacer ring.

The diagram shows the front panel housing (C-5-1) with various screws (C-5-2, C-5-6) and washers (C-5-3, C-5-7) being installed. The flange (C-5-5) is shown being attached to the housing. The knob (C-5-10) is shown being attached to the flange (C-5-9) using a nut (C-5-8) and washer (C-5-7). The spacer ring (C-5-11) is shown being installed between the flange (C-5-5) and the housing (C-5-1).

Note



 C-6

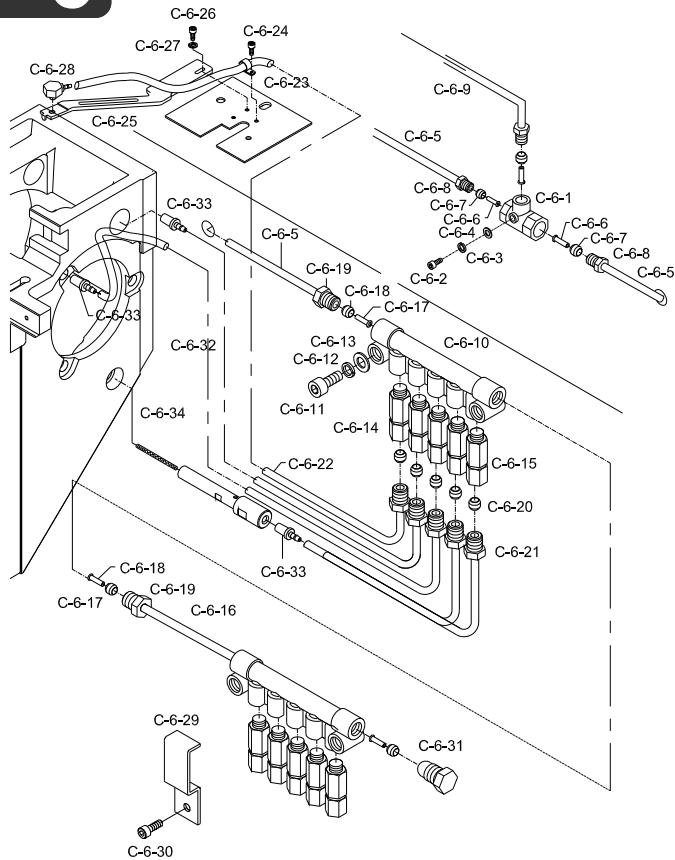

Note

Ref.No	Part No.	Part Name	Application date	Interchangeability	Hardware	Q'ty	Remarks
C-6-1	01303900H000	Oil Distribution Junction				2	
C-6-2	14046SC-7113	Hex.Socket Bolt (M6*L30)			O	1	
C-6-3	03026SW-9115	Spring Washer (@6)			O	1	
C-6-4	03025SW-1211	Washer (@6)			O	1	
C-6-5	01303800H000	Hose				2	
C-6-6	01300300H000	Oil Pump Hose Insert				3	
C-6-7	01300400H000	Oil Pump Compression Sleeve				3	
C-6-8	01300500H000	Oil Pump Compression Bushing				3	
C-6-9	01302400H000	Stop Valve Adapter Hose (@4)				1	
C-6-10	01302700U000	Mos Metering Valve Junction				20	
C-6-11	14046SC-7113	Hex.Socket Bolt (M6*L30)			O	40	
C-6-12	03026SW-9115	Spring Washer (@6)			O	3	
C-6-13	03025SW-1211	Washer (@6)			O	40	
C-6-14	01300900H000	Mos Metering Valve				20	
C-6-15	01302000H000	Mos Metering Valve (Mos-1)				120	
C-6-16	01302800HD00	Mos Valve Junction Hose @4				18	
C-6-17	01300300H000	Oil Pump Hose Insert				44	
C-6-18	01300400H000	Oil Pump Compression Sleeve				44	
C-6-19	01300500H000	Oil Pump Compression Bushing				44	
C-6-20	01301300H000	Bed Oil Compression Sleeve				80	
C-6-21	01301400H000	Bed Oil Compression Bushing				80	
C-6-22	01302900H000	Needle Bar Supply Hose				20	
C-6-23	01303600H000	Needle Bar Oil Hose Holder				20	
C-6-24	05007SC-7113	Hex. Socket Bolt (M3*L5)			O	20	
C-6-25	GP-029277-00	Head Oil Hose Guide	Apr,20,07 ~ Jul,23,07	X		20	
	GP-029277-01		Jul,24,07 ~ Oct,24,07	△			
	GP-029277-02		Oct,25,07 ~	△			
C-6-26	05007SC-7113	Hex. Socket Bolt (M3*L5)			O	40	
C-6-27	06011SW-2111	Washer (@3)			O	40	
C-6-28	01303110H000	Elbow Tube End (E*0.3*2.4)				20	
C-6-29	18033PR-UK01	Oil Tube Guide				20	
C-6-30	02023SC-7113	Hex. Socket Bolt (M4*L8)			O	20	
C-6-31	01301900H000	Close Plug (M8*1.0)				3	
C-6-32	01303200H000	Take-Up Lever Oil Supply Hose				20	
C-6-33	01301600H000	Hook Oil Supply Nipple				60	
C--34	01303300H000	Needle Bar Driving Shaft Hose				20	

This diagram illustrates the exploded view of the C-7 hydraulic cylinder assembly. The main components are shown in their relative positions for assembly. Key parts include the cylinder body, piston rod, piston, and various seals and fittings. The assembly is labeled with part numbers C-7-1 through C-7-22, indicating the sequence and location of each component. The diagram shows the cylinder body with the piston rod extending from it. The piston is mounted on the rod, and various seals and fittings are shown being installed onto the cylinder body and piston rod. The assembly is shown in a disassembled state to show the relationship between the parts.

Note



C-8


This diagram illustrates the assembly of the C-8 water pump. The main components shown are:

- C-8-1**: The pump housing, shown in an exploded view with the impeller cover.
- C-8-2**: The impeller cover, shown in an exploded view with the impeller.
- C-8-3**: The impeller, shown in an exploded view with the impeller cover.
- C-8-4**: The impeller nut, shown in an exploded view with the impeller.
- C-8-5**: The pump motor, shown in an exploded view with the pump housing.
- C-8-6**: The pump housing, shown in an exploded view with the pump motor.
- C-8-7**: The pump housing, shown in an exploded view with the pump motor.
- C-8-8**: The pump housing, shown in an exploded view with the pump motor.
- C-8-9**: The pump housing, shown in an exploded view with the pump motor.
- C-8-10**: The pump housing, shown in an exploded view with the pump motor.
- C-8-11**: The pump housing, shown in an exploded view with the pump motor.
- C-8-12**: The pump housing, shown in an exploded view with the pump motor.
- C-8-13**: The pump housing, shown in an exploded view with the pump motor.
- C-8-14**: The pump housing, shown in an exploded view with the pump motor.
- C-8-15**: The pump housing, shown in an exploded view with the pump motor.
- C-8-16**: The pump housing, shown in an exploded view with the pump motor.
- C-8-17**: The pump housing, shown in an exploded view with the pump motor.
- C-8-18**: The pump housing, shown in an exploded view with the pump motor.
- C-8-19**: The pump housing, shown in an exploded view with the pump motor.
- C-8-20**: The pump housing, shown in an exploded view with the pump motor.


Note



 Thread Cutting Set

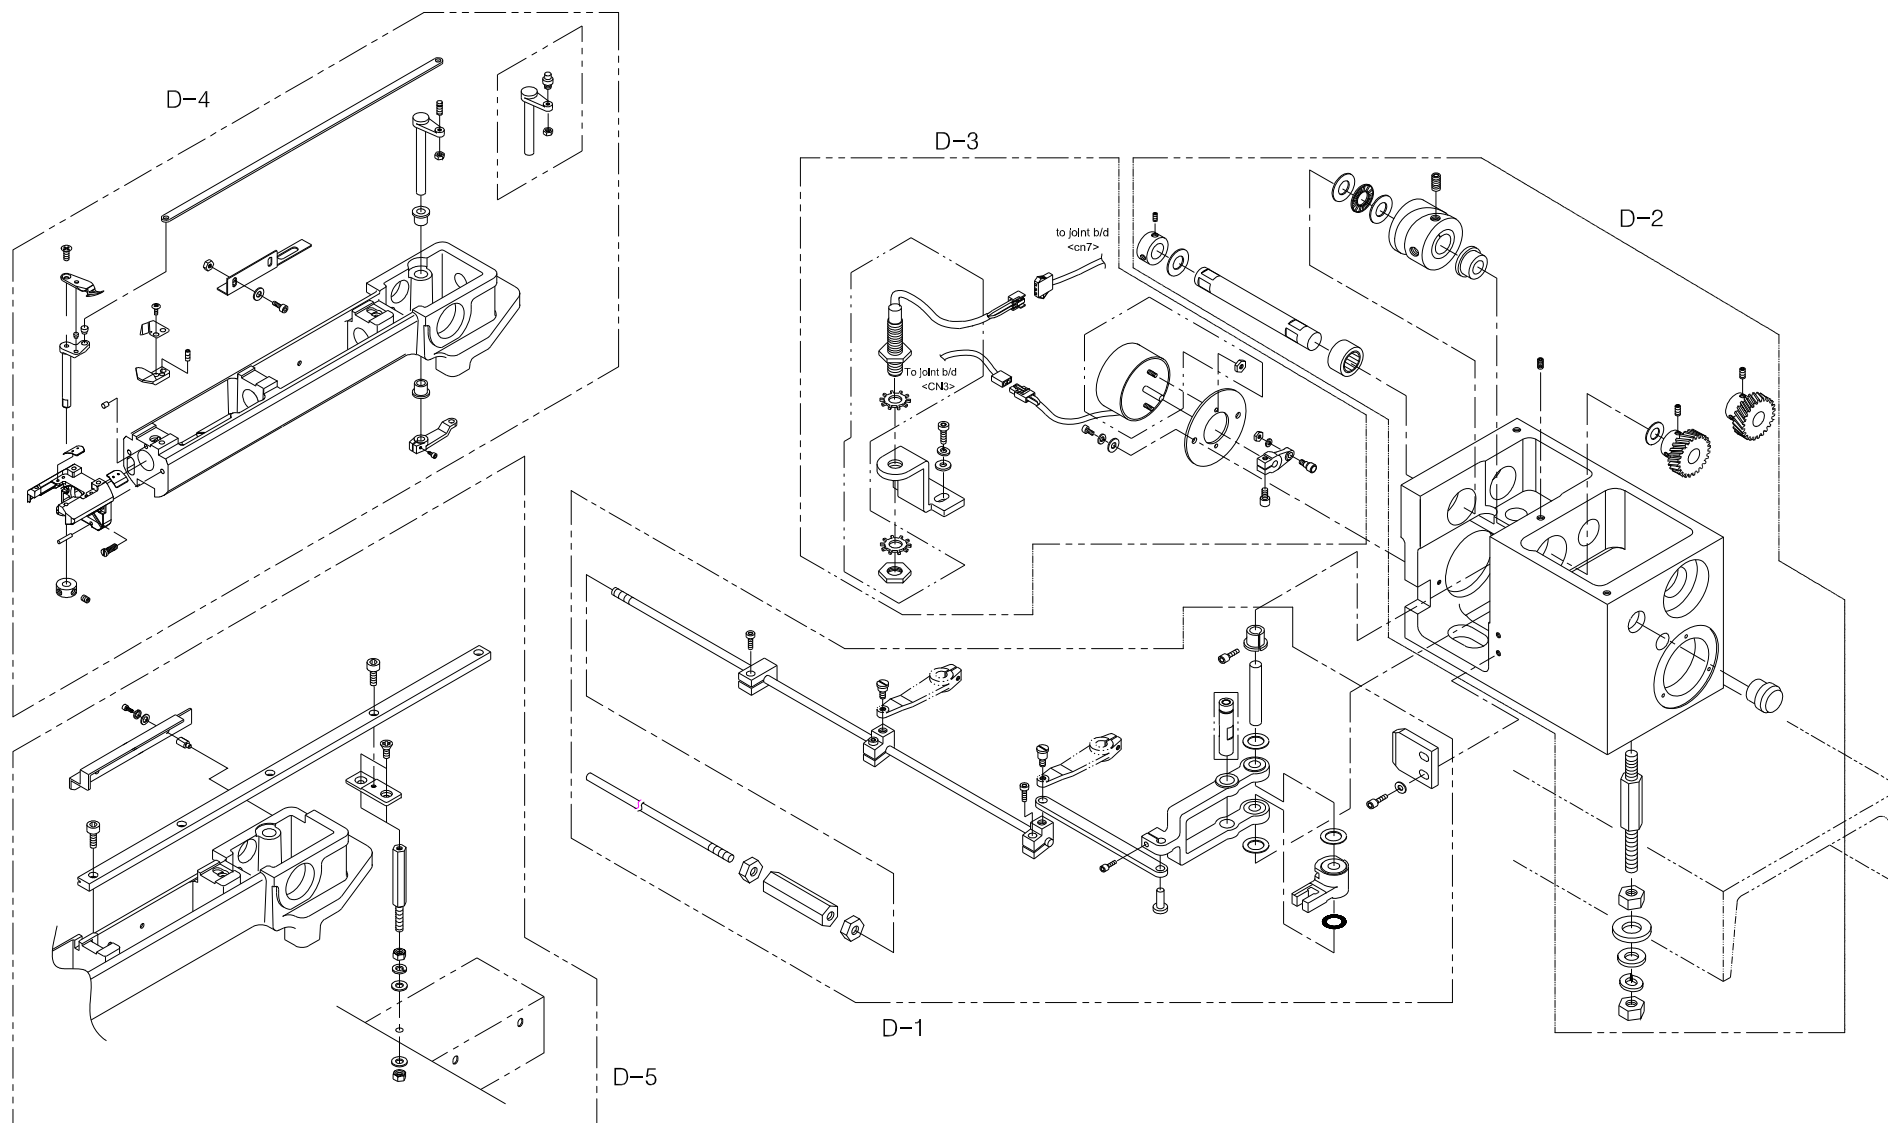

D-1

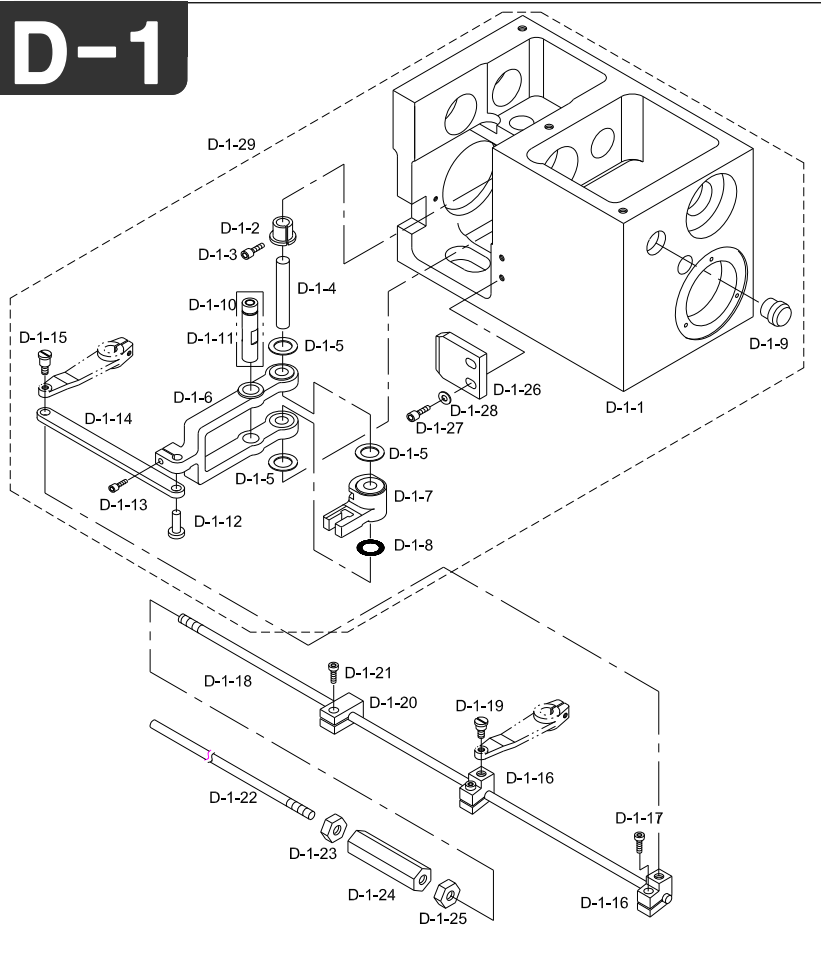 

Note

Ref.No	Part No.	Part Name	Application date	Interchangeability	Hardware	Q'ty	Remarks
D-1-1	GP-011445-00	Mes Cam Driving Box	Aug,29,05 ~	X		1	
D-1-2	08203000A000	Take-Up Lever Shaft Bush(L)				1	
D-1-3	02014SC-7113	Hex. Socket Bolt (M4*L5)			○	1	
D-1-4	07025CW-UK01	Lever Shaft (@8*L70)			○	1	
D-1-5	07024BR-UK01	Fiber Washer(R-Tw0805)				3	
D-1-6	07028CL-UK01	Mes Driving Lever				1	
D-1-7	07029CL-UK01	Mes Driving Crank				1	
D-1-8	08022RB-T121	O-Ring (@10)			○	1	
D-1-9	08071RB-UK01	Thread Driver Box Rubber				1	
D-1-10	07030AF-UK01	Roller				1	
D-1-11	07026CW-UK01	Roller Shaft				1	
D-1-12	08034CW-UK01	Lever Connecting Pin				1	
D-1-13	04010MC-7113	Hex.Socket Bolt (M4*L10)			○	1	
D-1-14	03000700TH00	Thread Lever Connect Link				1	
D-1-15	SC-001609-00	Link Stud Bolt	Jan,13,09 ~	X		1	
D-1-16	08023CL-UK01	Mes Shaft Cramp				4	
D-1-17	02015SC-7113	Hex.Socket Bolt(M4*L10)			○	4	
D-1-18	23004SH-UK02	Mes Driving Shaft @6,L520 (UK1202)				1	
	23004SH-UK01	Mes Driving Shaft (UK1204)					
	23006SH-UK06	Mes Driving Shaft "A" L=1255 (UK1206)					
	02000300UH60	MES DRIVING SHAFT L2020 (UH1506C)					
	02000300UH80	Mes Driving Shaft "A" L1443 (UH1508)					
D-1-19	SC-001610-00	Clamp Stud Bolt	Jan,13,09 ~	X		3	
D-1-20	08023CW-A001	Mes Shaft Cramp				1	
D-1-21	02015SC-7113	Hex.Socket Bolt(M4*L10)			○	1	
D-1-22	23007SH-UK06	Mes Driving Shaft "B" L=1255 (UK1206)				1	
	02000400UH80	MES DRIVING SHAFT "B" L1377 (UH1508)					
D-1-23	17051SN-A001	Mes Priving Shaft Joint				1	
D-1-24	13042SN-1111	Hex.Nut (M6*T5-R)			○	1	
D-1-25	17053SN-1111	Hex. Nut(L) (M6*T5-L)			○	1	
D-1-26	08021PM-UK01	Lever Stopper				1	
D-1-27	02015SC-7113	Hex.Socket Bolt(M4*L10)			○	2	
D-1-28	18015SW-3111	Washer (4@)			○	2	
D-1-29	03900000UH00	Mes Cam Driving Box Assy				1	

This exploded view diagram illustrates the assembly of the D-2 component. The main body is a rectangular block with internal features. The assembly sequence is indicated by callouts D-2-1 through D-2-18. Key components include:

- D-2-1:** A small cylindrical component.
- D-2-2:** A small cylindrical component.
- D-2-3:** A small cylindrical component.
- D-2-4:** A small cylindrical component.
- D-2-5:** A small cylindrical component.
- D-2-6:** A small cylindrical component.
- D-2-7:** A small cylindrical component.
- D-2-8:** A small cylindrical component.
- D-2-9:** A small cylindrical component.
- D-2-10:** A small cylindrical component.
- D-2-11:** A small cylindrical component.
- D-2-12:** A small cylindrical component.
- D-2-13:** A small cylindrical component.
- D-2-14:** A small cylindrical component.
- D-2-15:** A small cylindrical component.
- D-2-16:** A small cylindrical component.
- D-2-17:** A small cylindrical component.
- D-2-18:** A small cylindrical component.

Note

D

Diagram illustrating the assembly of the D-1-29 component, showing various parts and their assembly sequence:

- D-3-12**: A large threaded component, likely a nut or washer, shown at the top left.
- To joint b/d <CN3>**: A label indicating the connection point for the cable assembly.
- D-3-18**: A cable connector component, shown at the top right.
- D-3-17**: A cable connector component, shown in the middle left.
- D-3-14**, **D-3-15**, **D-3-16**: A small assembly of three components (a screw, a washer, and a plate) shown in the middle left.
- D-3-13**: A U-shaped bracket component, shown in the middle left.
- D-3-5**: A large circular component, likely a motor or actuator, shown in the center.
- D-3-2**, **D-3-3**, **D-3-4**: Small screws or pins, shown near the center.
- D-3-6**: A small rectangular component, shown at the top right.
- D-3-11**, **D-3-10**, **D-3-7**, **D-3-9**, **D-3-8**: A complex assembly of components (a bracket, a pin, a screw, a washer, and a nut) shown at the bottom right.
- D-3-1**: A circular flange or plate component, shown in the bottom right.
- D-1-29**: The main assembly, shown in the center.

D

D-4

This exploded view diagram illustrates the assembly of the D-4 component. The main assembly is shown in a perspective view, with various parts labeled with callouts. The components are as follows:

- D-4-1**: Main housing or base component.
- D-4-2**: Small cylindrical pin or bush.
- D-4-3**: Small cylindrical pin or bush.
- D-4-4**: Small rectangular plate or bracket.
- D-4-5**: Small rectangular plate or bracket.
- D-4-6**: Small cylindrical pin or bush.
- D-4-7**: Small rectangular plate or bracket.
- D-4-8**: Small cylindrical pin or bush.
- D-4-9**: Small rectangular plate or bracket.
- D-4-10**: Small cylindrical pin or bush.
- D-4-11**: Small cylindrical pin or bush.
- D-4-12**: Small cylindrical pin or bush.
- D-4-13**: Long, thin rectangular plate or bracket.
- D-4-14**: Small rectangular plate or bracket.
- D-4-15**: Small cylindrical pin or bush.
- D-4-16**: Small cylindrical pin or bush.
- D-4-17**: Small rectangular plate or bracket.
- D-4-18**: Small cylindrical pin or bush.
- D-4-19**: Small cylindrical pin or bush.
- D-4-20**: Small rectangular plate or bracket.
- D-4-21**: Small cylindrical pin or bush.
- D-4-22**: Small rectangular plate or bracket.
- D-4-23**: Small rectangular plate or bracket.
- D-4-24**: Small rectangular plate or bracket.
- D-4-25**: Small rectangular plate or bracket.
- D-4-26**: Small cylindrical pin or bush.
- D-4-27**: Small rectangular plate or bracket.

The diagram shows the assembly sequence for the D-4 component, with parts being added to the main housing (D-4-1) in a specific order. The parts are labeled with callouts and are shown in their relative positions to the main assembly.

Note

D

D-5

This exploded view diagram illustrates the assembly of the D-5 component. The main assembly is shown in a perspective view, with various parts labeled with callouts:


- D-5-1**: The main horizontal rail or track.
- D-5-2**: A screw used to secure the rail to the main assembly.
- D-5-3**: A small rectangular plate or bracket.
- D-5-4**: A screw used to secure the plate to the rail.
- D-5-5**: A long, thin rod or pin.
- D-5-6**: A small circular washer or spacer.
- D-5-7**: A small circular washer or spacer.
- D-5-8**: A small circular washer or spacer.
- D-5-9**: A small circular washer or spacer.
- D-5-10**: A small cylindrical component, possibly a pin or bush.
- D-5-11**: A small rectangular plate or bracket.
- D-5-12**: A small screw or pin.
- D-5-13**: A small screw or pin.
- D-5-14**: A small screw or pin.

The diagram shows the assembly of the rail (D-5-1) to the main assembly, with the plate (D-5-3) and rod (D-5-5) being attached to the rail. The washers (D-5-6, D-5-7, D-5-8, D-5-9) are shown being inserted into the rail. The small components (D-5-10, D-5-11, D-5-12, D-5-13, D-5-14) are also shown being inserted into the rail.

Note

D

 Main Drive System

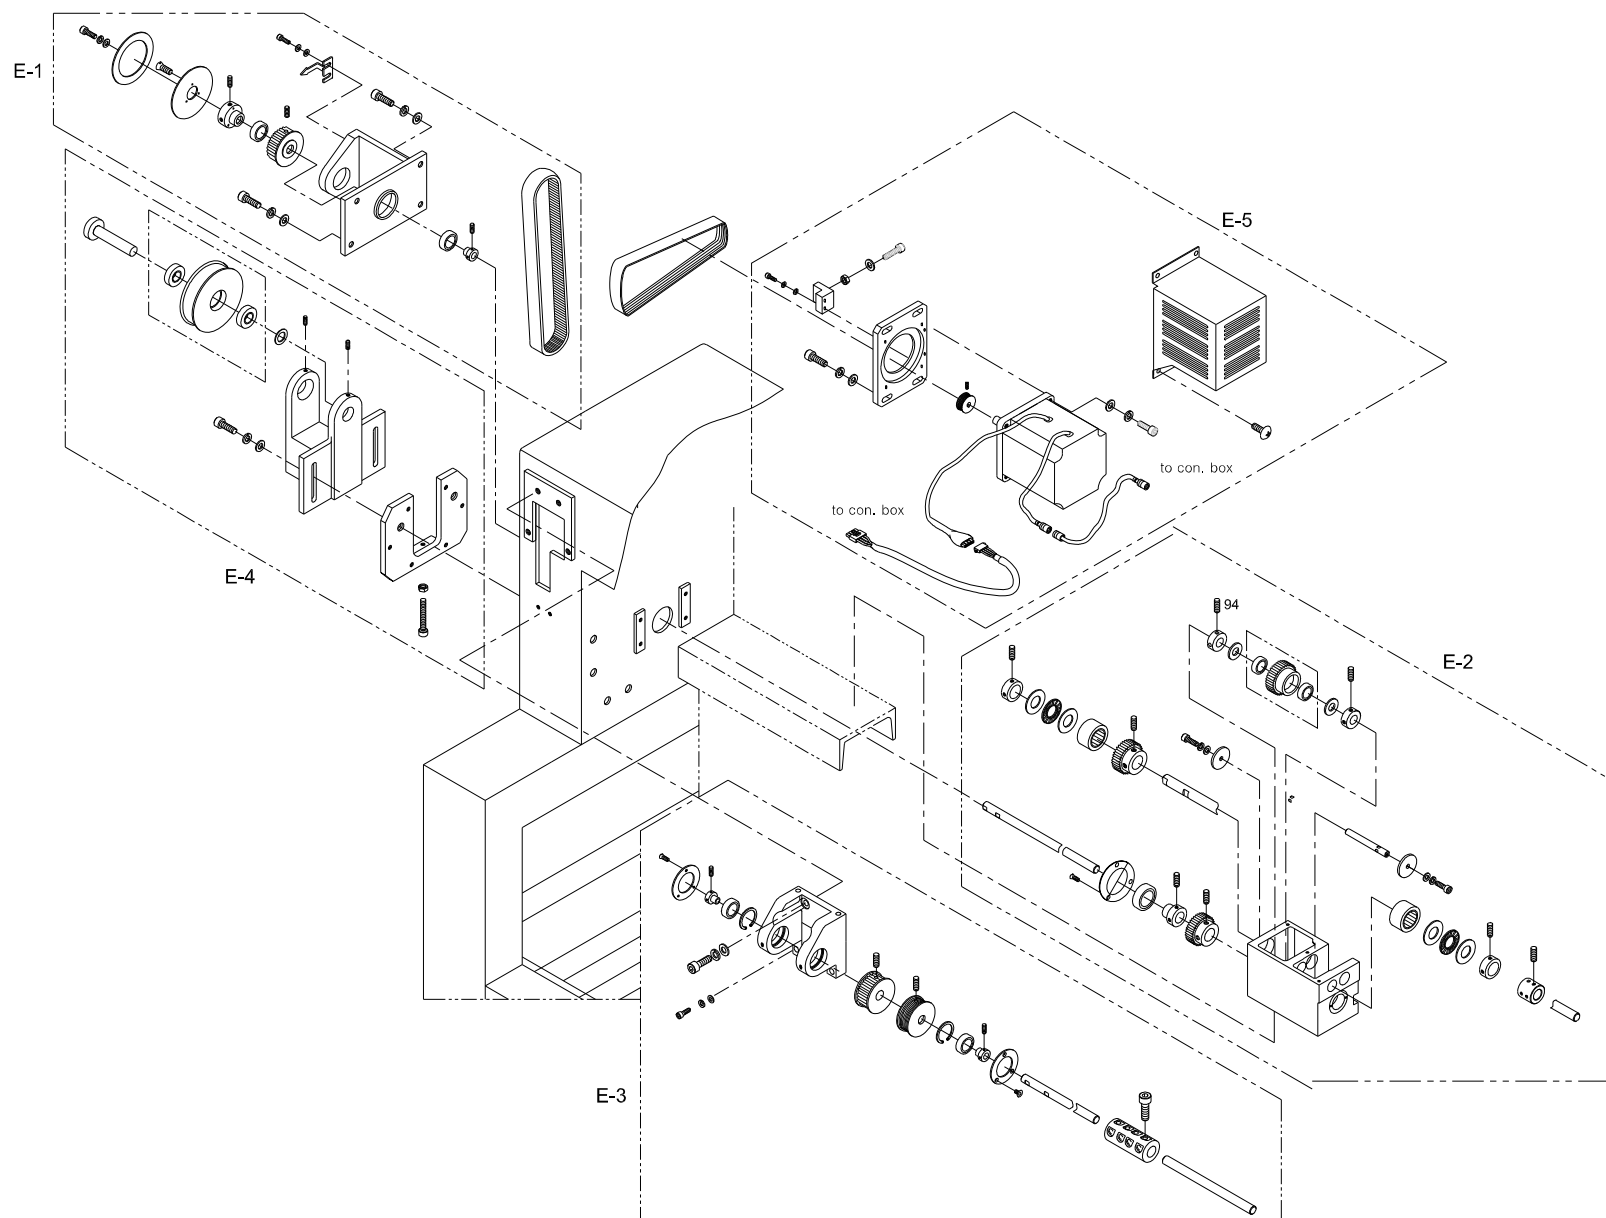

Note

E

This diagram illustrates the exploded view of a mechanical assembly, likely a pump or motor component. The parts are labeled as follows:

- E-2-1:** Main housing or base.
- E-2-2:** Small circular component, possibly a seal or gasket.
- E-2-3:** Small circular component, possibly a seal or gasket.
- E-2-4:** Small circular component, possibly a seal or gasket.
- E-2-5:** Small circular component, possibly a seal or gasket.
- E-2-6:** Small circular component, possibly a seal or gasket.
- E-2-7:** Small circular component, possibly a seal or gasket.
- E-2-8:** Long cylindrical component, possibly a shaft or pin.
- E-2-9:** Small circular component, possibly a seal or gasket.
- E-2-10:** Small circular component, possibly a seal or gasket.
- E-2-11:** Small circular component, possibly a seal or gasket.
- E-2-12:** Small circular component, possibly a seal or gasket.
- E-2-13:** Small circular component, possibly a seal or gasket.
- E-2-14:** Small circular component, possibly a seal or gasket.
- E-2-15:** Small circular component, possibly a seal or gasket.
- E-2-16:** Small circular component, possibly a seal or gasket.
- E-2-17:** Small circular component, possibly a seal or gasket.
- E-2-18:** Small circular component, possibly a seal or gasket.
- E-2-19:** Small circular component, possibly a seal or gasket.
- E-2-20:** Small circular component, possibly a seal or gasket.
- E-2-21:** Small circular component, possibly a seal or gasket.
- E-2-22:** Small circular component, possibly a seal or gasket.
- E-2-23:** Small circular component, possibly a seal or gasket.
- E-2-24:** Small circular component, possibly a seal or gasket.
- E-2-25:** Small circular component, possibly a seal or gasket.
- E-2-26:** Small circular component, possibly a seal or gasket.

The diagram shows the assembly sequence and the relative positions of the components. Dashed lines indicate the alignment and assembly path for each part.

Note

E

E-3

This exploded view diagram illustrates the assembly of a mechanical component, likely a pump or motor housing. The components are numbered as follows:

- E-3-1:** Main housing or bracket.
- E-3-2:** Spring.
- E-3-3:** Washer or spacer.
- E-3-4:** Washer or spacer.
- E-3-5:** Bolt or screw.
- E-3-6:** Bolt or screw.
- E-3-7:** Bolt or screw.
- E-3-8:** Washer or spacer.
- E-3-9:** Washer or spacer.
- E-3-10:** Washer or spacer.
- E-3-11:** Bolt or screw.
- E-3-12:** Washer or spacer.
- E-3-13:** Bolt or screw.
- E-3-14:** Gear or pulley.
- E-3-15:** Bolt or screw.
- E-3-16:** Bolt or screw.
- E-3-17:** Flange or cover plate.
- E-3-18:** Bolt or screw.
- E-3-19:** Bolt or screw.
- E-3-20:** Bolt or screw.
- E-3-21:** Long shaft or rod.

The diagram shows the assembly sequence and relative positions of these parts, with dashed lines indicating the alignment and fit of the components.

Note

E

E-4

This exploded view diagram illustrates the assembly of the E-4 component. The diagram shows the following parts and their assembly sequence:

- E-4-10**: A long screw with a washer, shown at the top left.
- E-4-9**: A pulley or wheel component, shown in the upper middle.
- E-4-11**: A small washer or spacer, shown below the pulley.
- E-4-8**: Two small screws, shown to the right of the pulley.
- E-4-5**: A spring, shown in the middle left.
- E-4-6**: A small washer or spacer, shown below the spring.
- E-4-7**: A small washer or spacer, shown below E-4-6.
- E-4-4**: A U-shaped bracket or support, shown in the center.
- E-4-1**: A larger U-shaped bracket or support, shown below E-4-4.
- E-4-3**: A small screw, shown below E-4-1.
- E-4-2**: A long screw, shown below E-4-3.
- E-4-13**: A small washer or spacer, shown at the bottom left.
- E-4-12**: A small screw, shown below E-4-13.

The diagram uses dashed lines to indicate the assembly path and the relative positions of the components. The main assembly is shown on the right, with dashed lines indicating the internal structure and the placement of the components.

 
Note

E


Note



Head & Color Change

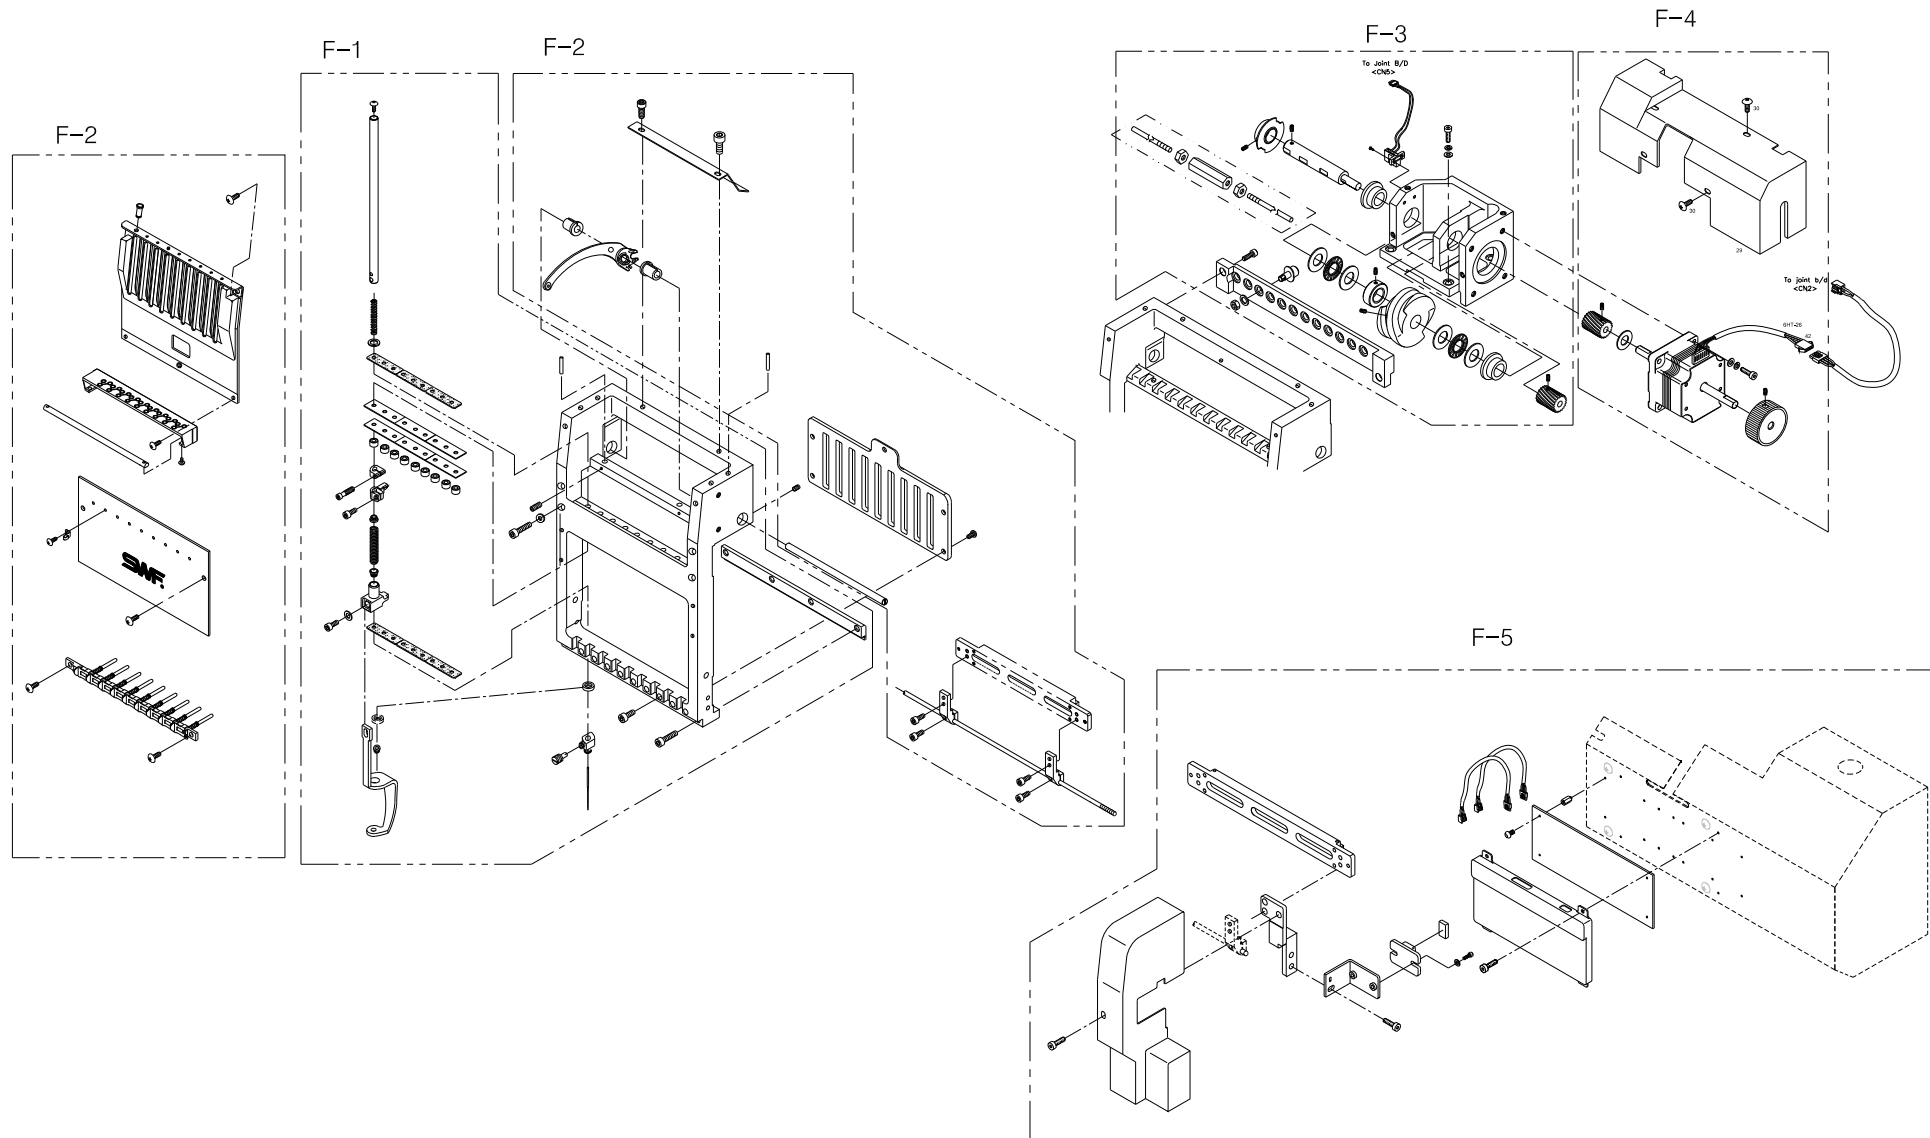

F-1

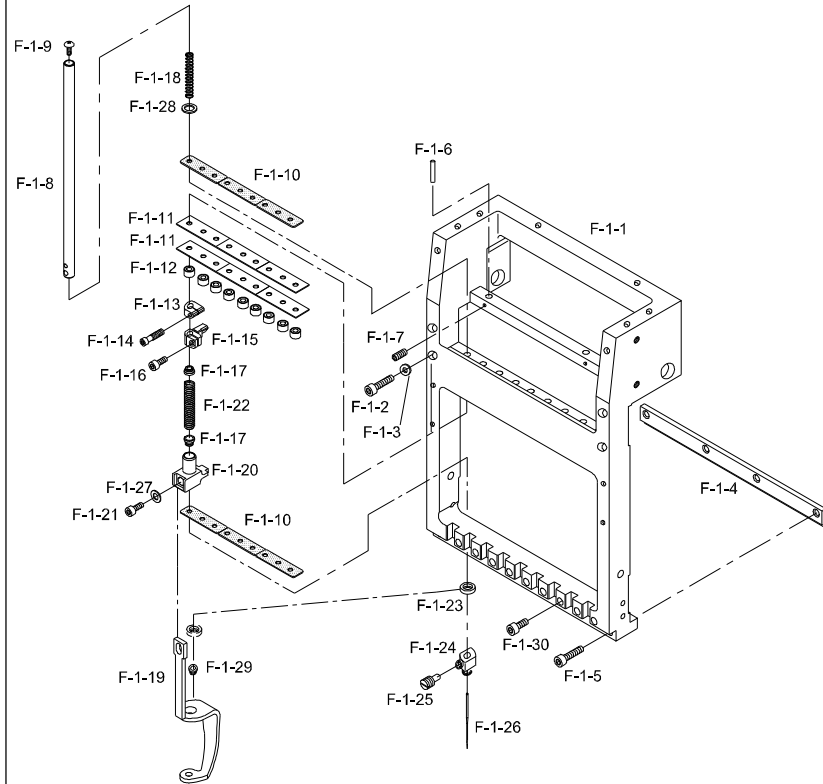 

Note

Ref.No	Part No.	Part Name	Application date	Interchangeability	Hardware	Q'ty	Remarks
F-1-1	GP-007356-00	Head (6C)	Jan,28,05 ~	X		4	
	GP-007356-01		Jul,21,06 ~	△			
	GP-007356-02		Nov,14,06 ~	△			
	GP-007356-03		Mar,26,07 ~	△			
	GP-011947-00	Head (9C)	Sep,14,05 ~	X		4	
	GP-011947-01		Nov,14,06 ~	△			
	GP-011947-02		Mar,26,07 ~	△			
	GP-011947-03		Nov,02,07 ~	△			
	GP-011947-04		Sep,11,08 ~	△			
	GP-011947-05		Nov,03,08 ~	△			
	GP-014937-00	Head (12C)	Feb,01,06 ~	X		4	
	GP-014937-01		Nov,14,06 ~	△			
	GP-014937-02		Mar,26,07 ~	△			
	GP-014937-03		Nov,02,07 ~	△			
	GP-014937-04		Sep,11,08 ~	△			
	GP-014937-05		Nov,03,08 ~	△			
	GP-007334-00	Head (15C)	Jan,27,05 ~	X		4	
	GP-007334-01		Jan,28,05 ~	△			
	GP-007334-02		Jul,21,06 ~	△			
	GP-007334-03		Nov,14,06 ~	△			
	GP-007334-04		Mar,26,07 ~	△			
	GP-007334-05		Nov,02,07 ~	△			
	GP-007334-06		Sep,11,08 ~	△			
	GP-007334-07		Nov,03,08 ~	△			
F-1-2	05008SC-4113	Hex.Socket Bolt (M4*L16)			○	16	
F-1-3	06003SW-2111	Washer (@4)			○	16	
F-1-4	GP-011944-00	Head Rail	Sep,14,05 ~	X		4	
	GP-011944-01		Sep,11,08 ~	△			
	GP-014096-00	Head Rail (12C)	Des,24,05 ~	X		4	
	GP-014096-01		Sep,11,08 ~	△			
F-1-5	SC-000417-00	Hex. Socket Bolt (M4*L23)	Sep,14,05 ~	X	○	8	
F-1-6	05015CW-A001	Head Base Pin(@5*L15)			○	8	
F-1-7	03022SC-4517	Hex. Socket Set Screw(M4*L5)			○	8	
F-1-8	LNB-KA000100	Needle Bar	Dec,21,10 ~	X		36	
	LNB-KA000101		Apr,14,12 ~	△			
F-1-9	05019SC-A001	Needle Bar Cover Screw (M5*L6)			○	36	
F-1-10	05021SF-A001	FELT				30	
F-1-11	05023RB-A001	Needle Bar Cushion Rubber "A"				30	
F-1-12	05024RB-A001	Needle Bar Cushion Rubber "B"				36	
F-1-13	11101200T000	Upper Dead Point Stopper				36	

This exploded view diagram illustrates the assembly of the front panel. The main component is the front panel frame (F-1-1), which is shown with various mounting points and slots. The assembly process involves attaching several components in a specific sequence:

 
- Top Mounting:** The top panel (F-1-10) is secured with screws (F-1-11, F-1-12) and a spring (F-1-18). A long vertical component (F-1-9) is attached to the top left.
- Internal Components:** The internal frame (F-1-13) is secured with screws (F-1-14, F-1-15) and a spring (F-1-16). The internal frame is then secured to the main panel with screws (F-1-17, F-1-22).
- Bottom Mounting:** The bottom panel (F-1-10) is secured with screws (F-1-21, F-1-27) and a spring (F-1-20). A long vertical component (F-1-19) is attached to the bottom left.
- Side Mounting:** The side panel (F-1-4) is secured with screws (F-1-23, F-1-24, F-1-25, F-1-26) and a spring (F-1-29).
- Other Components:** A long vertical component (F-1-8) is attached to the top left. A long vertical component (F-1-5) is attached to the bottom right.

The diagram uses dashed lines to indicate the assembly path and the relative positions of the components. The components are labeled with part numbers: F-1-1, F-1-2, F-1-3, F-1-4, F-1-5, F-1-6, F-1-7, F-1-8, F-1-9, F-1-10, F-1-11, F-1-12, F-1-13, F-1-14, F-1-15, F-1-16, F-1-17, F-1-18, F-1-19, F-1-20, F-1-21, F-1-22, F-1-23, F-1-24, F-1-25, F-1-26, F-1-27, F-1-28, F-1-29, and F-1-30.

[illegible]

43


F-2

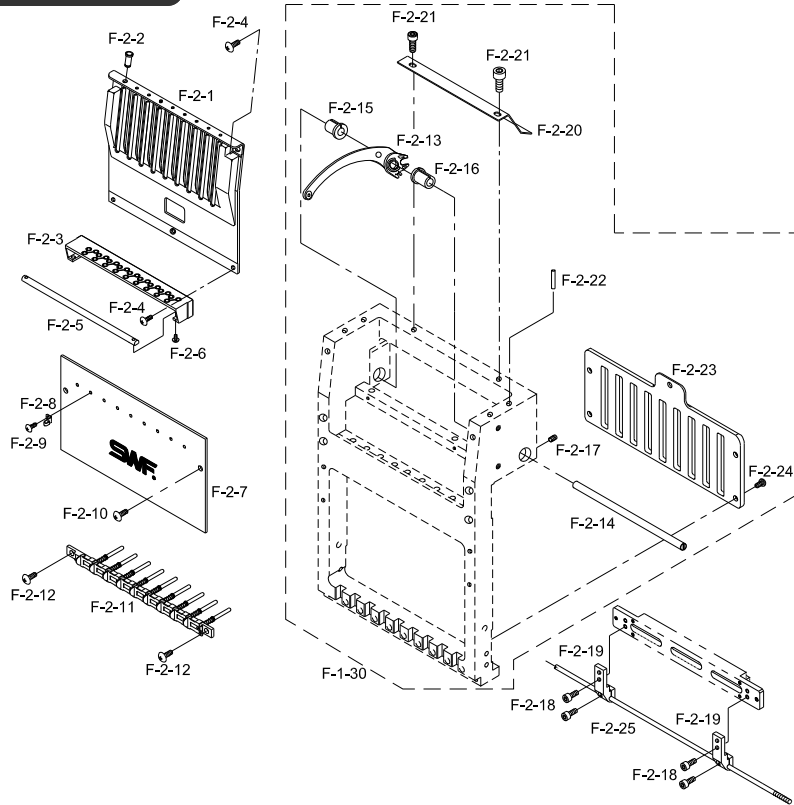

Note

Ref.No	Part No.	Part Name	Application date	Interchangeability	Hardware	Q'ty	Remarks
F-2-1	10200103B000	Head Face Plate (U) 9C				4	
F-2-2	10200100H000	Thread Guide Bush "A-1"				45	
F-2-3	AS-000483-00	Thread Guide (M) Set (6C)	Jun,23,04 ~	X		4	
	AS-000483-01		May,10,07 ~	△			
	AS-000483-02		Jun,18,07 ~	△			
	AS-000483-03		Des,11,08 ~	△			
	AS-000483-04		Jan,30,09 ~	△			
	AS-000483-05		Feb,17,09 ~	△			
	AS-000483-06		Jan,26,10 ~	△			
	AS-000483-07		Aug,13,10 ~	△			
	AS-000484-00	Thread Guide (M) Set (9C)	Jun,23,04 ~	X			
	AS-000484-01		May,10,07 ~	△			
	AS-000484-02		Jun,18,07 ~	△			
	AS-000484-03		Aug,29,07 ~	△			
	AS-000484-04		Des,11,08 ~	△			
	AS-000484-05		Des,11,08 ~	△			
	AS-000484-06		Jan,14,09 ~	△			
	AS-000484-07		Jan,30,09 ~	△			
	AS-000484-08		Feb,17,09 ~	△			
	AS-000484-09		Jan,26,10 ~	△			
	AS-000484-10		Aug,13,10 ~	△			
	AS-000485-00	Thread Guide (M) Set (12C)	Jun,23,04 ~	X			
	AS-000485-01		May,10,07 ~	△			
	AS-000485-02		Jun,18,07 ~	△			
	AS-000485-03		Des,11,08 ~	△			
	AS-000485-04		Jan,14,09 ~	△			
	AS-000485-05		Jan,30,09 ~	△			
	AS-000485-06		Feb,17,09 ~	△			
	AS-000485-07		Jan,26,10 ~	△			
	AS-000485-08		Aug,13,10 ~	△			
	AS-000486-00	Thread Guide (M) Set (15C)	Jun,23,04 ~	X			
	AS-000486-01		May,10,07 ~	△			
	AS-000486-02		Jun,18,07 ~	△			
	AS-000486-03		Des,11,08 ~	△			
	AS-000486-04		Jan,14,09 ~	△			
	AS-000486-05		Jan,30,09 ~	△			
	AS-000486-06		Feb,17,09 ~	△			
F-2-4	SC-001625-00	Thread Guide (M) Screw (9/64 n=40)	Jan,19,09 ~	X		8	
F-2-5	GP-044297-00	Thread Guide Shaft (6C)	Nov,25,08 ~	X		4	
	GP-044297-01		Des,16,08 ~	△			
	GP-044297-02		Jan,30,09 ~	△			
	GP-044297-03		Feb,17,09 ~	△			
	GP-044298-00	Thread Guide Shaft (9C)	Nov,25,08 ~	X		4	
	GP-044298-01		Des,16,08 ~	△			
	GP-044298-02		Jan,30,09 ~	△			
	GP-044298-03		Feb,17,09 ~	△			

 
F-2

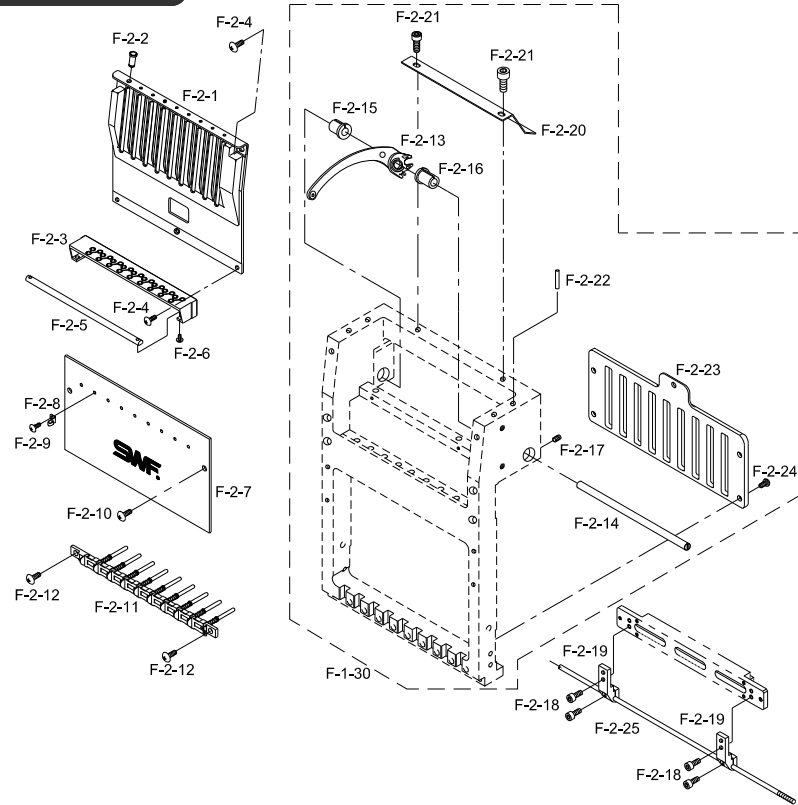

Note

Ref.No	Part No.	Part Name	Application date	Interchangeability	Hardware	Q'ty	Remarks
F-2-5	ST-000002-00	Thread Guide Shaft (12C)	Des,11,08 ~	X		4	
	ST-000002-01		Jan,30,09 ~	△			
	ST-000002-02		Feb,17,09 ~	△			
	GP-044299-00	Thread Guide Shaft (15C)	Nov,25,08 ~	X		4	
	GP-044299-01		Des,16,08 ~	△			
	GP-044299-02		Jan,30,09 ~	△			
F-2-6	GP-044299-03		Feb,17,09 ~	△			
	13054SC-3123	Truss Screw (M3 X L8)			○	16	
F-2-7	GP-007194-00	Head Face Plate(L)	Jan,21,05 ~	X		4	
	GP-007194-01		Jan,23,06 ~	△			
	GP-007194-02		Apr,06,06 ~	△			
	GP-007194-03		Jun,12,06 ~	△			
	GP-007194-04		Apr,06,09 ~	△			
F-2-8	11012PR-B001	Thread Guide				45	
F-2-9	09005SC-3123	Truss Bolt (M3*L5)			○	45	
F-2-10	05070SC-3123	HEAD FACE PLATE (U) SCREW				8	
F-2-11	10900003I000	Thread Holding Device A'ssy				4	
F-2-12	05070SC-3123	Truss Bolt 9/64 n=40				8	
F-2-13	07005BM-B002	Take-Up Lever Set				45	
F-2-14	08200503A000	Take-Up Lever Shaft (9C)				4	
F-2-15	08203000A000	Take-Up Lever Shaft Bush(L)				4	
F-2-16	08200800A000	Take-Up Lever Shaft Bush(R)				4	
F-2-17	07009SC-4517	Hex. Socket Bolt(M5*L6)			○	8	
F-2-18	02015SC-7113	Hex.Socket Bolt(M4*L8)			○	20	
F-2-19	GP-011945-00	Color Change Bracket "B"	Sep,14,05 ~	X		8	
F-2-20	GP-037186-00	Cable Support "B"	Jun,15,09 ~	X		4	
F-2-21	02023SC-7113	Hex.Socket Bolt(M4*L5)			○	8	
F-2-22	01303700H000	TENSION PLATE PIN				8	
F-2-23	GP-008539-00	Needle Bar Guide Rail (6C)	Apr,08,05 ~	X		4	
	GP-011931-00	Needle Bar Guide Rail (9C)	Sep,14,05 ~	X		4	
	GP-014095-00	Needle Bar Guide Rail (12C)	Des,24,05 ~	X		4	
F-2-24	05041SC-A001	Bolt (9/64 n=40)			○	20	
F-2-25	05000103UK00	Color Change Shaft (6C)				1	
	23007SH-UK01	Color Change Shaft (12C)				1	
	23007SH-UK14	Color Change Shaft (15C)				1	
	06000104UH60	Color Change Shaft (@6*L2237) (UH1206C)				1	
	06000105UH60	Color Change Shaft (@6*L2282) (UH1506C)				1	

 F-3

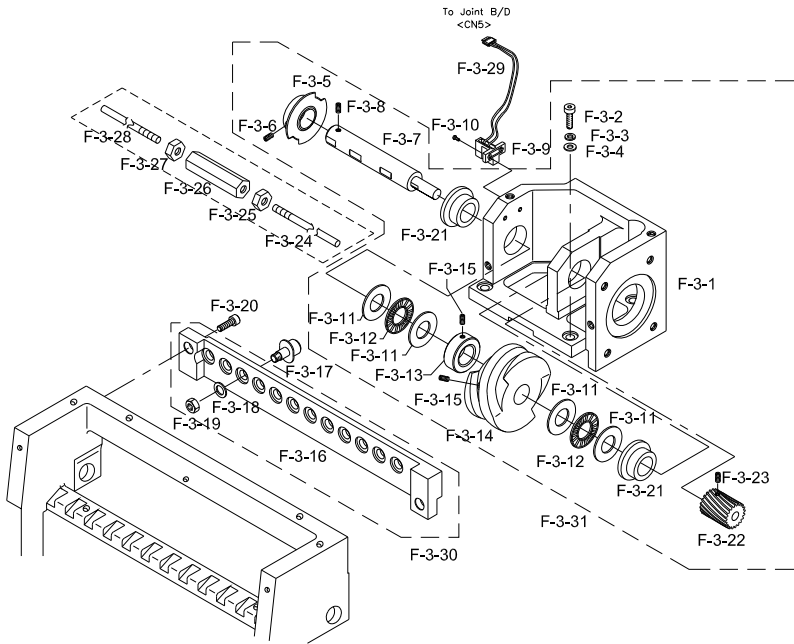

Note

Ref.No	Part No.	Part Name	Application date	Interchangeability	Hardware	Q'ty	Remarks
F-3-1	13001CA-UK06	Color Change Base				1	
F-3-2	05008SC-4113	Hex.Socket Bolt (M4*L16)			○	4	
F-3-3	18014SW-3115	Spring Washer (@4-No2)			○	4	
F-3-4	18015SW-3111	Washer (4@)			○	4	
F-3-5	13032AD-UK06	Color Change Film Set				1	
F-3-6	04014SC-4517	Hex.Socket Set Screw (M5*L5)			○	2	
F-3-7	13007CW-UK06	Color Change Shaft				1	
F-3-8	08113SC-A001	Collar Screw				1	
F-3-9	08102300B000	Half Turn Sensor (Gp1S51V)				1	
F-3-10	08006SC-8118	Plus Screw (M3*L5)			○	2	
F-3-11	13010BR-T121	Washer (@12*@26*1T)				4	
F-3-12	13041BR-UK01	Washer (12*@26*1T)				2	
F-3-13	13010CW-UK06	Color Change Collar				1	
F-3-14	13005CM-UK06	Color Change Cam				1	
F-3-15	04012AF-A001	Hook Shaft Bush Screw				5	
F-3-16	08103102C010	Color Change Roller Base (6C)				1	
	13026CL-D104	Color Change Roller Base (9C)					
	13026CL-UK06	Color Change Roller Base (12C)					
	13026CL-UK16	Color Change Roller Base (15C)					
F-3-17	15029AF-T121	Roller Set				12	
F-3-18	18048SW-3115	Spring Washer (@5)			○	12	
F-3-19	12010SN-1211	Hex.Nut (M5)			○	12	
F-3-20	18047SC-7113	Hex/ Socket Bolt (M5*L15)			○	2	
F-3-21	GP-006252-00	Color Change Bushing	Des,15,04 ~	X		2	
F-3-22	13021GA-UK06	Color Change Gear (R)				1	
F-3-23	08113SC-A001	Collar Screw				2	
F-3-24	05000103UK00	Color Change Shaft (UK604)				1	
	23007SH-UK01	Color Change Shaft (UK1204)					
	23007SH-UK14	Color Change Shaft (UK1504)					
	06000102UK60	Color Change Shaft "A" (UK606,UK906)					
	23012SH-UK06	Color Change Shaft "A" (UK1206)					
	23012SH-UK16	Color Change Shaft "A" (UK1506)					
F-3-25	17053SN-1111	Hex. Nut (L) (M6*T5-L) (UK1206)			○	1	
F-3-26	17051SN-A001	Mes Priving Shaft Joint (UK1206)				1	
F-3-27	13042SN-1111	Hex.Nut (M6*T5-R) (UK1206)			○	1	
F-3-28	06000202UK60	Color Change Shaft "B" (UK606)				1	
	23013SH-UK06	Color Change Shaft "B" (UK906)					
	23013SH-UK16	Color Change Shaft "B" (UK1506)					
F-3-29	25037EL-UK01	Half Turn Cable (2Ht-36) (UK1202)				1	
	25033EL-UK06	Cable (25-33) (UK1206)				1	

Exploded view diagram of the F-3 assembly, showing various components and their assembly sequence. The diagram includes the following parts and labels:

- F-3-1**: Main housing or frame.
- F-3-2**: Small circular component.
- F-3-3**: Small circular component.
- F-3-4**: Small circular component.
- F-3-5**: Circular component with a central hole.
- F-3-6**: Small circular component.
- F-3-7**: Small circular component.
- F-3-8**: Small circular component.
- F-3-9**: Small circular component.
- F-3-10**: Small circular component.
- F-3-11**: Small circular component.
- F-3-12**: Small circular component.
- F-3-13**: Small circular component.
- F-3-14**: Small circular component.
- F-3-15**: Small circular component.
- F-3-16**: Small circular component.
- F-3-17**: Small circular component.
- F-3-18**: Small circular component.
- F-3-19**: Small circular component.
- F-3-20**: Small circular component.
- F-3-21**: Small circular component.
- F-3-22**: Small circular component.
- F-3-23**: Small circular component.
- F-3-24**: Small circular component.
- F-3-25**: Small circular component.
- F-3-26**: Small circular component.
- F-3-27**: Small circular component.
- F-3-28**: Small circular component.
- F-3-29**: Small circular component.
- F-3-30**: Small circular component.
- F-3-31**: Small circular component.
- F-3-32**: Small circular component.
- F-3-33**: Small circular component.
- F-3-34**: Small circular component.
- F-3-35**: Small circular component.
- F-3-36**: Small circular component.
- F-3-37**: Small circular component.
- F-3-38**: Small circular component.
- F-3-39**: Small circular component.
- F-3-40**: Small circular component.
- F-3-41**: Small circular component.
- F-3-42**: Small circular component.
- F-3-43**: Small circular component.
- F-3-44**: Small circular component.
- F-3-45**: Small circular component.
- F-3-46**: Small circular component.
- F-3-47**: Small circular component.
- F-3-48**: Small circular component.
- F-3-49**: Small circular component.
- F-3-50**: Small circular component.
- F-3-51**: Small circular component.
- F-3-52**: Small circular component.
- F-3-53**: Small circular component.
- F-3-54**: Small circular component.
- F-3-55**: Small circular component.
- F-3-56**: Small circular component.
- F-3-57**: Small circular component.
- F-3-58**: Small circular component.
- F-3-59**: Small circular component.
- F-3-60**: Small circular component.
- F-3-61**: Small circular component.
- F-3-62**: Small circular component.
- F-3-63**: Small circular component.
- F-3-64**: Small circular component.
- F-3-65**: Small circular component.
- F-3-66**: Small circular component.
- F-3-67**: Small circular component.
- F-3-68**: Small circular component.
- F-3-69**: Small circular component.
- F-3-70**: Small circular component.
- F-3-71**: Small circular component.
- F-3-72**: Small circular component.
- F-3-73**: Small circular component.
- F-3-74**: Small circular component.
- F-3-75**: Small circular component.
- F-3-76**: Small circular component.
- F-3-77**: Small circular component.
- F-3-78**: Small circular component.
- F-3-79**: Small circular component.
- F-3-80**: Small circular component.
- F-3-81**: Small circular component.
- F-3-82**: Small circular component.
- F-3-83**: Small circular component.
- F-3-84**: Small circular component.
- F-3-85**: Small circular component.
- F-3-86**: Small circular component.
- F-3-87**: Small circular component.
- F-3-88**: Small circular component.
- F-3-89**: Small circular component.
- F-3-90**: Small circular component.
- F-3-91**: Small circular component.
- F-3-92**: Small circular component.
- F-3-93**: Small circular component.
- F-3-94**: Small circular component.
- F-3-95**: Small circular component.
- F-3-96**: Small circular component.
- F-3-97**: Small circular component.
- F-3-98**: Small circular component.
- F-3-99**: Small circular component.
- F-3-100**: Small circular component.

Note	
------	--

[illegible]

F-4

The diagram illustrates the assembly of the F-4 component. It shows an exploded view of the main assembly and a detailed view of the internal mechanism.

Main Assembly Components:

- F-4-11:** The main housing or frame.
- F-4-12:** Two screws used to secure the housing.
- F-4-31:** The internal assembly, shown in a dashed box.

Internal Assembly (F-4-31) Components:

- F-4-1:** A small cylindrical component.
- F-4-2:** A small cylindrical component.
- F-4-3:** A bracket or support structure.
- F-4-4:** A small cylindrical component.
- F-4-5:** A small cylindrical component.
- F-4-6:** A small cylindrical component.
- F-4-7:** A large cylindrical component.
- F-4-8:** A small cylindrical component.
- F-4-9:** A small cylindrical component.
- F-4-10:** A cable with a connector.
- 6HT-26:** A cable with a connector.
- To joint b/d <CN2>:** A cable with a connector.

Note

F

F-5


This exploded view diagram illustrates the assembly of the F-5 front panel. The components and their assembly sequence are as follows:

- F-5-1**: The main front panel, which is attached to the rear plate (**F-5-7**) using screws **F-5-11**.
- F-5-2**: A vertical support bracket that is secured to the rear plate (**F-5-7**) with screws **F-5-12** and **F-5-13**.
- F-5-3**: A horizontal support bracket that is attached to the vertical bracket (**F-5-2**) using screw **F-5-14**.
- F-5-4**: The bottom bezel, which is mounted to the front panel (**F-5-1**) using screw **F-5-10**.
- F-5-5**: A rectangular plate that is mounted to the front panel (**F-5-1**) using screw **F-5-9**.
- F-5-6**: Two cables that are plugged into the ports on the front panel (**F-5-1**).
- F-5-8**: A small component that is mounted to the front panel (**F-5-1**) using screw **F-5-8**.
- F-5-15**: A small component that is mounted to the front panel (**F-5-1**) using screw **F-5-15**.

Note

F

 Thread Tension Unit

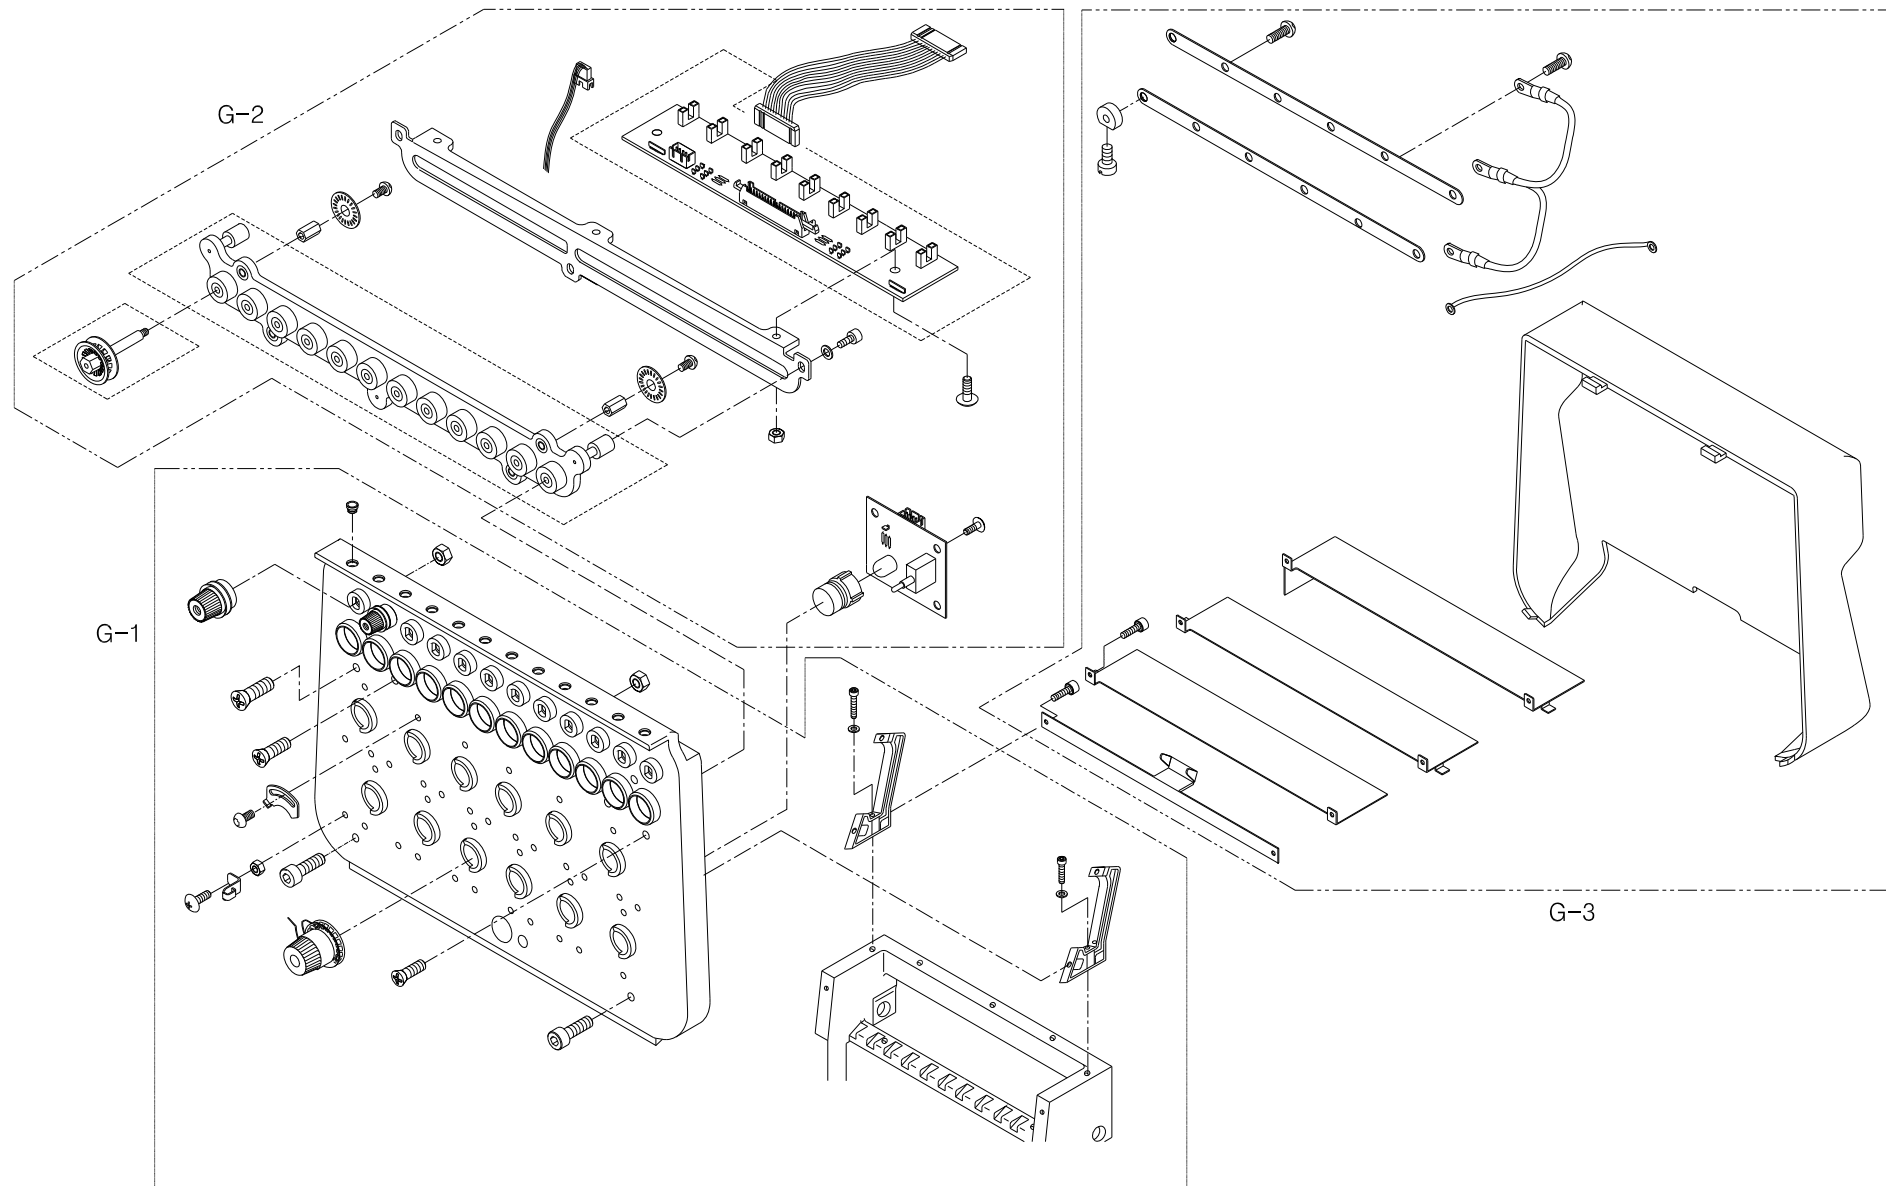


[illegible]

[illegible]


Note	
------	--

The logo of the German Society for Quality Management (DGQ) is a black square with rounded corners, containing a white capital letter 'G'.

 X-Y Drive (UK1204)

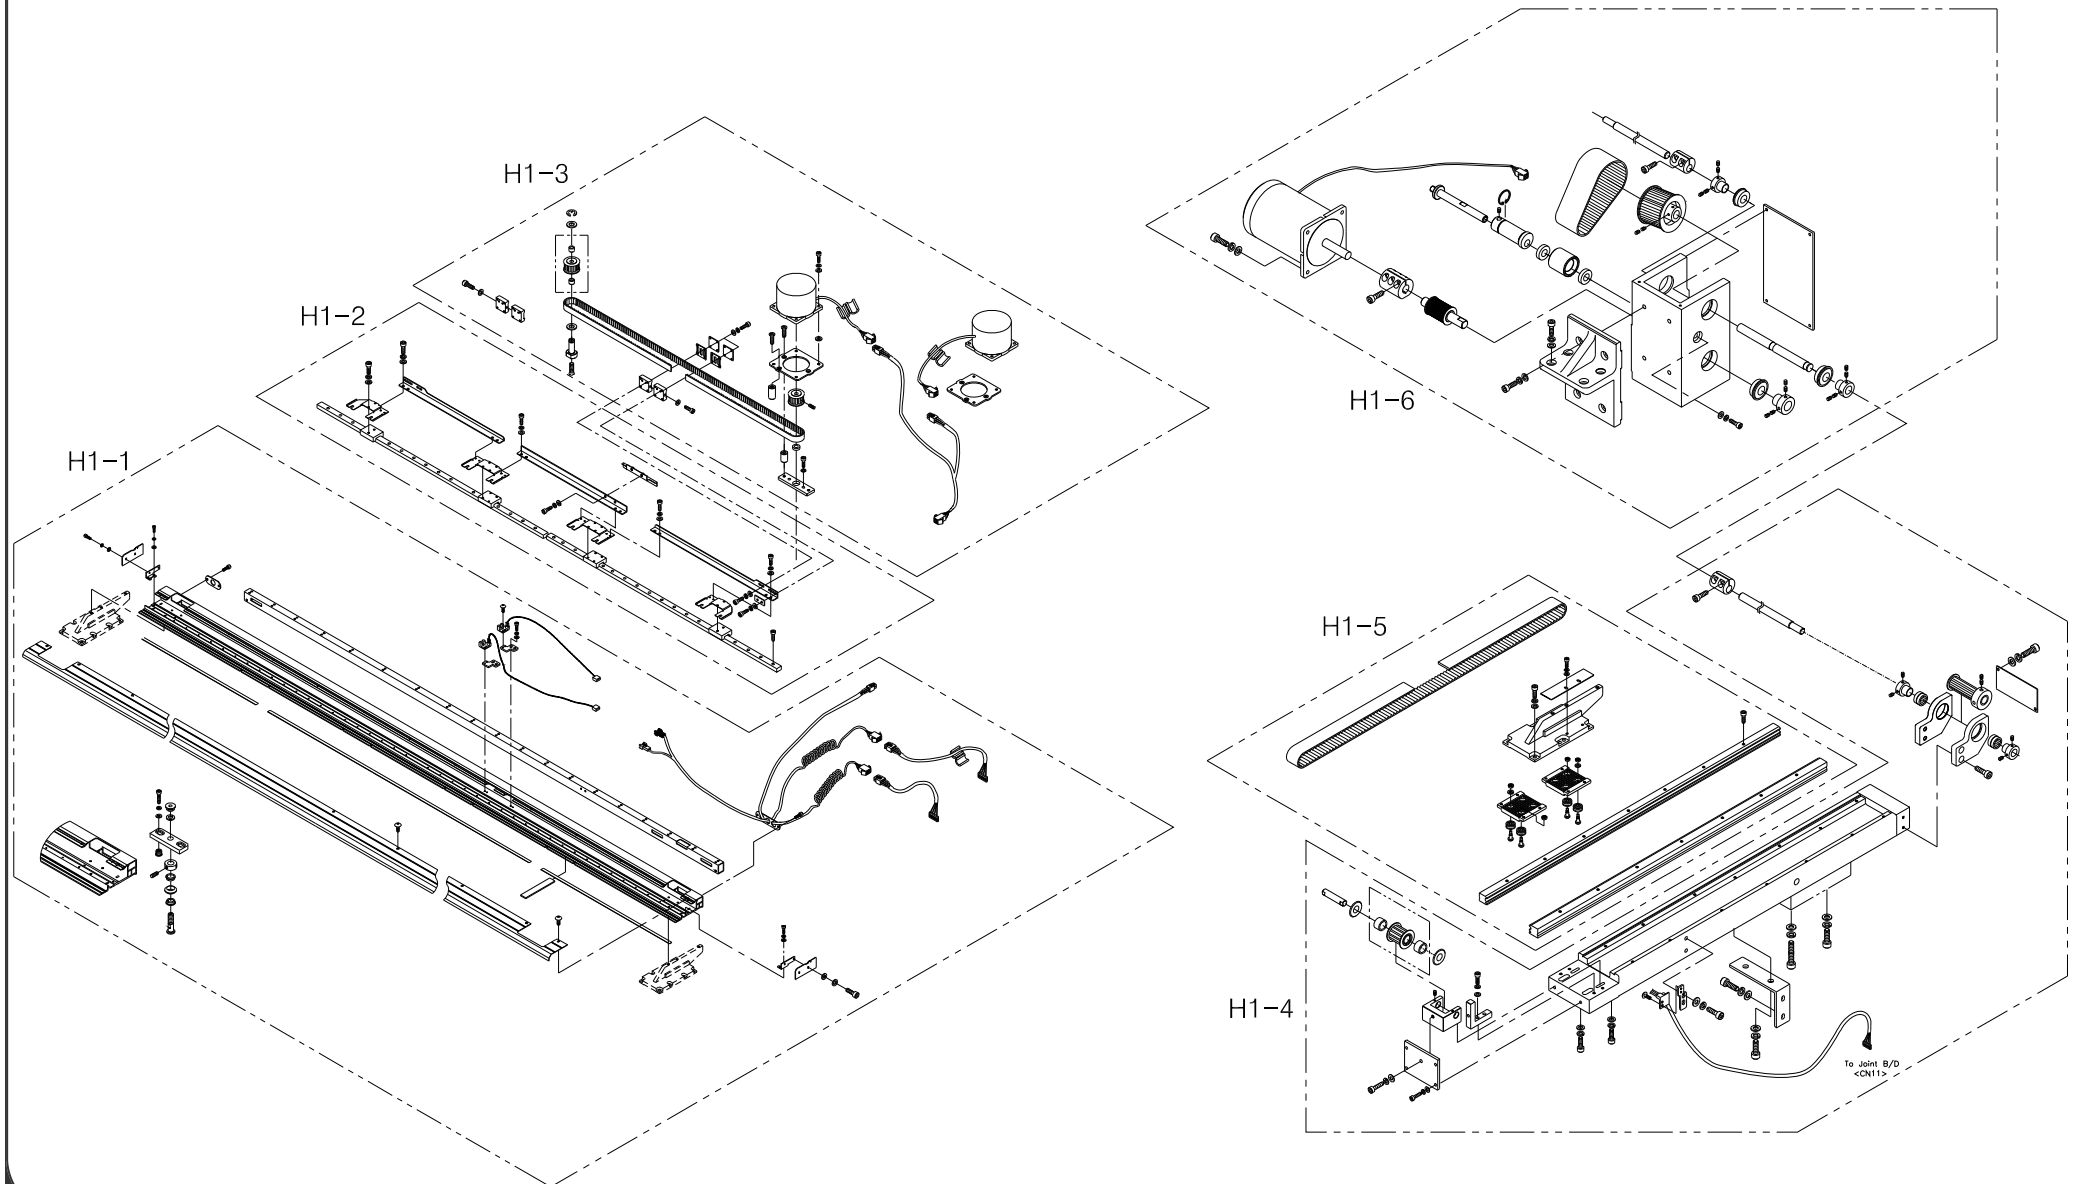

H1-1

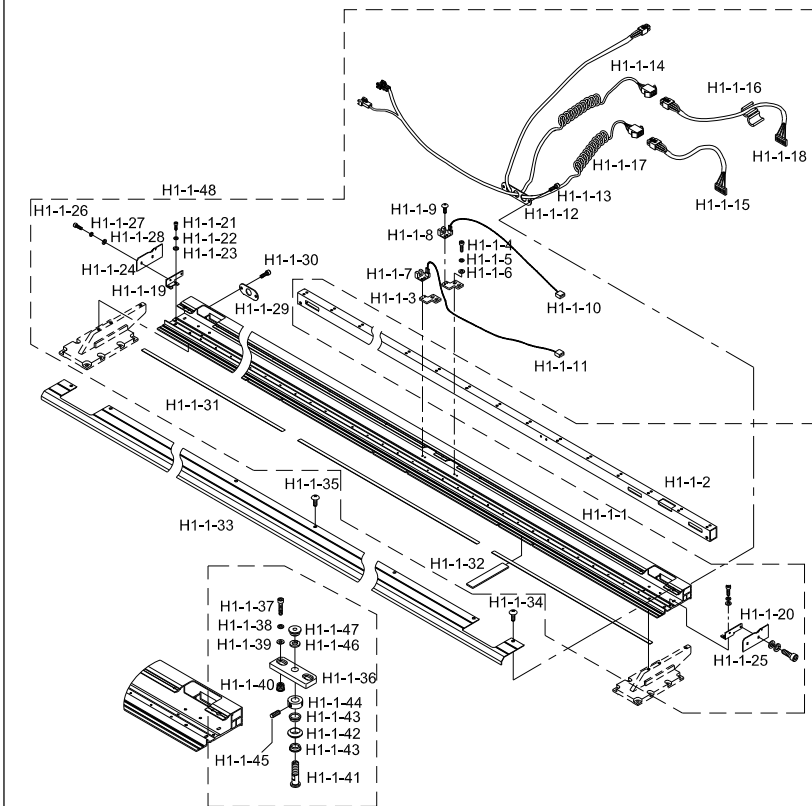 

Note

Ref.No	Part No.	Part Name	Application date	Interchangeability	Hardware	Q'ty	Remarks
H1-1-1	GP-014076-00	X-LM GUIDE FRAME L2635	Des,23,05 ~	X		1	
H1-1-2	GP-012663-00	X-Frame Support Bar	Oct,13,05 ~	X		1	
H1-1-3	15067PR-UK01	Sensor Plate				2	
H1-1-4	03071SC-7113	HEX. SOCKET BOLT (M3*L10)			○	4	
H1-1-5		Spring Washer				4	
H1-1-6		Washer				4	
H1-1-7	03201700UH00	X-Positioning Sensor				1	
H1-1-8	03201600UH00	X-Positioning Sensor				1	
H1-1-9	07016SC-7113	HEX.SOCKET BOLT (M4*L12)			○	8	
H1-1-10	25052EL-UK01	LAST-SENSOR (BLACK) 4HT-52				1	
H1-1-11	25053EL-UK01	LAST-SENSOR (WHITE) 4HT-53				11	
H1-1-12	15087PR-UK02	Cable Plate For Bushing				1	
H1-1-13	02023SC-7113	HEX.SOCKET BOLT (M4*L8)			○	2	
H1-1-14	25019EL-T121	Power Cable 2 (1Ht-19)				1	
H1-1-15	25041EL-UK01	X Original In (4Ht-41)				1	
H1-1-16	15045EL-UK01	Bid (L)				1	
H1-1-17	25038EL-UK06	Cable (25-38)				1	
H1-1-18	02101300U040	Cable (Sh-13-1)				1	
H1-1-19	GP-005104-00	X-FRAME SIDE COVER HOLDER (L)	Oct,07,04 ~	X		1	
H1-1-20	GP-005105-00	X-FRAME SIDE COVER HOLDER (R)	Oct,07,04 ~	X		1	
H1-1-21	02023SC-7113	Hex. Socket Bolt (M4*L8)			○	8	
H1-1-22	18014SW-3115	Spring Washer (@4-No2)			○	8	
H1-1-23	05009SW-1111	Washer (@4-L)				8	
H1-1-24	GP-005106-00	X-AXIS FRAME SIDE COVER (L)	Oct,07,04 ~	X		1	
H1-1-25	GP-005107-00	X-AXIS FRAME SIDE COVER (R)	Oct,07,04 ~	X		1	
H1-1-26	15042SC-3123	Truss Screw (M4*L6)			○	4	
H1-1-27	18015SW-3111	WASHER (4@)			○	4	
H1-1-28	18014SW-3115	SPRING WASHER (@4-NO2)			○	4	
H1-1-29	15082PR-W121	FIXING PLATE FOR BUSHING				1	
H1-1-30	02023SC-7113	HEX.SOCKET BOLT (M4*L8)			○	2	
H1-1-31	03200700UK40	Tubular Frame Rail Plate				2	
H1-1-32	03201800UH00	Felt (190*30*1.5T)				4	
H1-1-33	03201300UK40	X-Cover (L=2635)				1	
H1-1-34	15042SC-3123	Truss Screw (M4*L6)			○	12	
H1-1-35	18153SC-3123	Plus Screw (M4*L10)			○	2	
H1-1-36	15100CL-UK01	Roller Fixed Plate				2	
H1-1-37	03006MC-8118	PLUS SCREW (M3*L6)			○	4	
H1-1-38	18014SW-3115	Spring Washer (@4-No2)			○	4	
H1-1-39	18015SW-3111	Washer (4@)			○	4	

H1-1

This exploded view diagram illustrates the assembly of the H1-1 door. The components are labeled as follows:

- Top Section:** H1-1-14, H1-1-16, H1-1-17, H1-1-18, H1-1-15, H1-1-13, H1-1-12, H1-1-9, H1-1-8, H1-1-7, H1-1-6, H1-1-5, H1-1-4, H1-1-10, H1-1-11.
- Left Section:** H1-1-26, H1-1-27, H1-1-28, H1-1-21, H1-1-22, H1-1-23, H1-1-24, H1-1-19, H1-1-30, H1-1-29.
- Bottom Section:** H1-1-31, H1-1-35, H1-1-33, H1-1-32, H1-1-34, H1-1-20, H1-1-25, H1-1-37, H1-1-38, H1-1-39, H1-1-47, H1-1-46, H1-1-40, H1-1-36, H1-1-44, H1-1-43, H1-1-42, H1-1-45, H1-1-41.

The diagram shows the door frame (H1-1-2) and the door panel (H1-1-1) being assembled with various hardware and components. The components are shown in their relative positions and orientations for assembly.

Note



H1-2


Exploded view diagram of the H1-2 assembly, showing various components and their assembly sequence. The diagram includes the following labeled parts:

- H1-2-10, H1-2-11, H1-2-12 (Screws)
- H1-2-4, H1-2-5, H1-2-6 (Screws)
- H1-2-3 (Bracket)
- H1-2-9 (Bracket)
- H1-2-8 (Bracket)
- H1-2-12, H1-2-11, H1-2-10 (Screws)
- H1-2-14 (Bracket)
- H1-2-15 (Bracket)
- H1-2-13 (Bracket)
- H1-2-7 (Bracket)
- H1-2-2 (Bracket)
- H1-1-48 (Bracket)
- H1-2-1 (Main Rail)

Note



 
H1-3

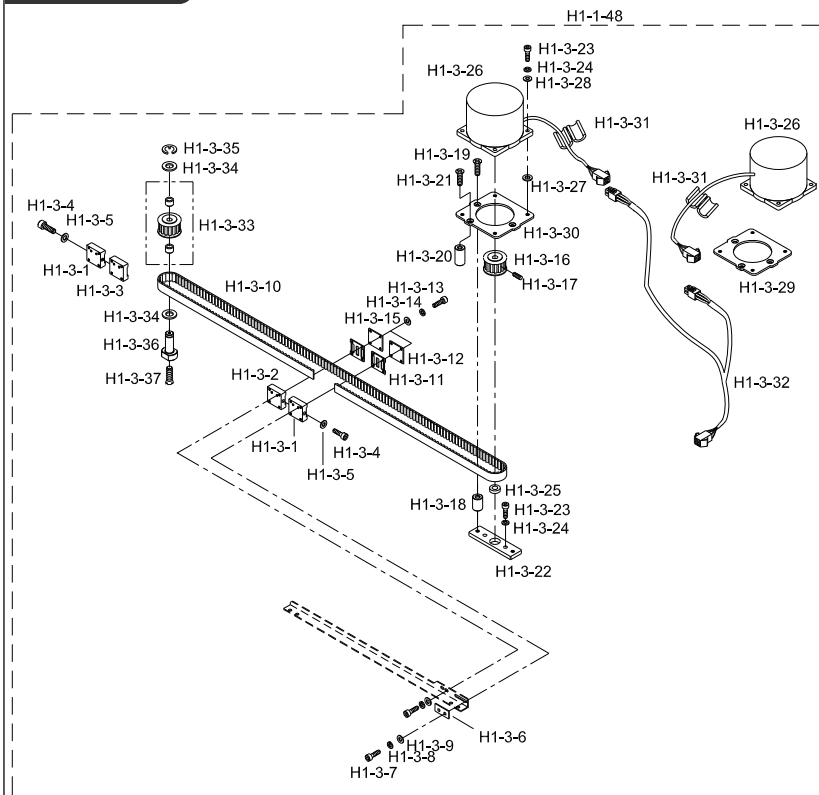

Note

Ref.No	Part No.	Part Name	Application date	Interchangeability	Hardware	Q'ty	Remarks
H1-3-1	14045AD-UK01	Belt Bracket (B)				2	
H1-3-2	14049AD-UK01	Belt Bracket (C)				1	
H1-3-3	14048AD-UK01	Belt Bracket (A)				1	
H1-3-4	15034SC-4113	Hex. Socket Boit (M4*L45)			○	2	
H1-3-5	18015SW-3111	Washer (4@)			○	2	
H1-3-6	14020PR-UK01	Space				2	
H1-3-7	02023SC-7113	Hex. Socket Bolt (M4*L8)			○	4	
H1-3-8	18014SW-3115	Spring Washer (@4-No2)			○	4	
H1-3-9	18015SW-3111	Washer (4@)			○	4	
H1-3-10	12048BT-T121	X-Axis Timing Belt				2	
H1-3-11	14051PR-UK01	Fixing Plate				4	
H1-3-12	14052PR-UK01	Fixing Plate Holder				4	
H1-3-13	02015SC-7113	HEX.SOCKET BOLT(M4*L10)			○	4	
H1-3-14	18014SW-3115	Spring Washer (@4-No2)			○	4	
H1-3-15	18015SW-3111	Washer (4@)			○	4	
H1-3-16	14063PU-UK01	Timing Pulley "B"				2	
H1-3-17	04014SC-4517	Hex.Socket Set Screw(M5*L5)			○	4	
H1-3-18	14065AD-UK01	Motor Fixing Shaft (A)				4	
H1-3-19	15053SC-4119	Plus Screw (M5*L30)			○	4	
H1-3-20	14067AD-UK01	Motor Fixing Shaft (B)				2	
H1-3-21	15055SC-4119	Plus Screw (M5*L35)			○	2	
H1-3-22	14069AD-UK01	Motor Block				2	
H1-3-23	08076SC-7113	Hex. Socket Bolt (M5*L12)			○	12	
H1-3-24	18048SW-3115	Spring Washer (@5)			○	12	
H1-3-25	14071BR-UK01	Bearing Bc616Zz			○	2	
H1-3-26	15076AF-UK01	X-Motor (103H8221-5044)				2	
H1-3-27	15061PR-UK01	Motor Space(@5*@11*2T)				8	
H1-3-28	16018SW-1111	Washer (@5)			○	8	
H1-3-29	14074PR-UK01	Motor Base (L)				1	
H1-3-30	14075PR-UK01	Motor Base (R)				1	
H1-3-31	15044EL-T121	Bid (S)				2	
H1-3-32	25014EL-UK01	Cable (4Ht-14)				1	
H1-3-33	12017PU-T121	Timing Pulley "A"				2	
	12018BR-T121	Needle Bearing Hk1010(Ina)				4	
H1-3-34	12019BR-T121	Fiber Washer R-Tw1020				4	
H1-3-35	08044SR-4013	E-Ring (@8)			○	2	
H1-3-36	03106000U000	Timing Pulley Driving Pin				2	
H1-3-37	07016SC-7113	HEX.SOCKET BOLT (M4*L12)			○	4	

 H1-4

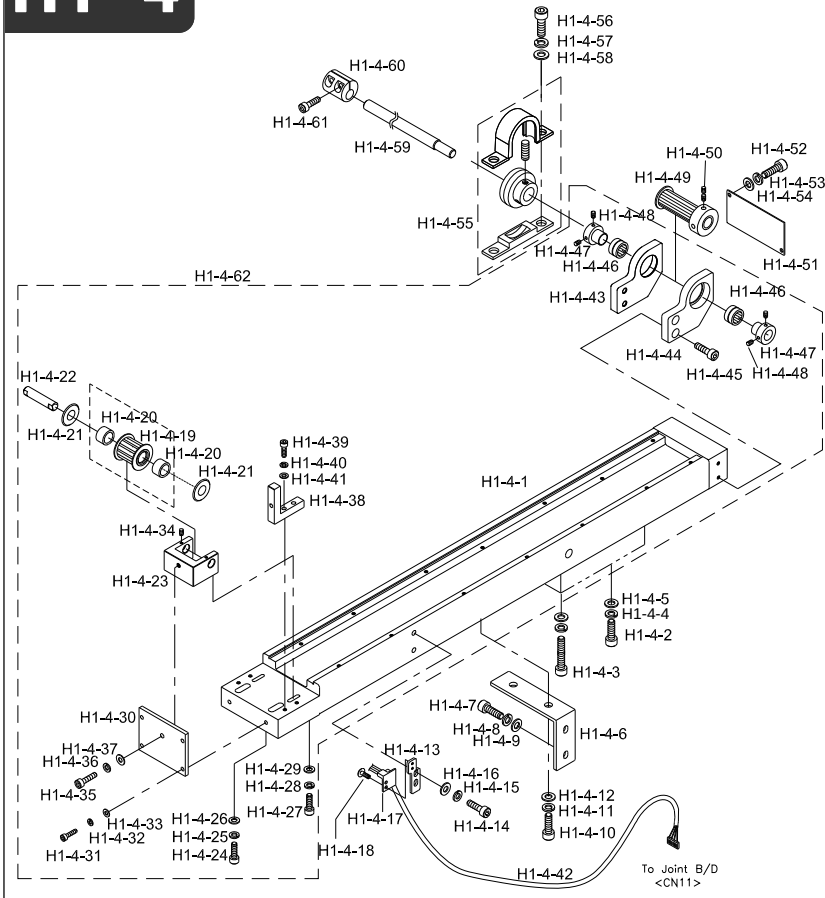

Note

Ref.No	Part No.	Part Name	Application date	Interchangeability	Hardware	Q'ty	Remarks
H1-4-1	03100200UH01	Y-Lm Guide Frame (L650)				2	
H1-4-2	14027SC-4113	Hex.Socket Bolt (M8*L30)			○	4	
H1-4-3	03003SC-4113	Hex. Socket Bolt "B"(M8*L35)			○	4	
H1-4-4	15095SW-3115	Spring Washer (@8)			○	4	
H1-4-5	04029SW-A001	Stud Bolt Washer(S) (@8)			○	4	
H1-4-6	16074PR-UK06	Y-Lm Support Fixing Plate				2	
H1-4-7	08076SC-7113	HEX. SOCKET BOLT (M5*L12)			○	4	
H1-4-8	18048SW-3115	Spring Washer (@5)			○	4	
H1-4-9	16018SW-1111	Washer (@5)			○	4	
H1-4-10	14006SC-7113	HEX.SOCKET SET SCREW(M8*L15)			○	4	
H1-4-11	15095SW-3115	SPRING WASHER (@8)			○	4	
H1-4-12	08041SW-1111	WASHER (@8-S)			○	4	
H1-4-13	03101300UH00	Sensor Bracket				1	
H1-4-14	02015SC-7113	Hex.Socket Bolt(M4*L10)			○	2	
H1-4-15	18014SW-3115	Spring Washer (@4-No2)			○	2	
H1-4-16	18015SW-3111	Washer (4@)			○	2	
H1-4-17	09018EL-UK01	Y-Positioning Sensor				1	
H1-4-18	08006SC-8118	Plus Screw (M3*L5)			○	2	
H1-4-19	04500100U000	TIMING PULLEY(16-S5M-32F)				2	
H1-4-20	15042BR-A001	Needle Bearing (1210Zz)			○	4	
H1-4-21	15046RB-A001	Driving Pin Washer (Tw1225)				4	
H1-4-22	16100CW-UK06	Timing Pulley Shaft (Y)				2	
H1-4-23	03100500UH00	Y-Tension Adjusting Bracket				2	
H1-4-24	08062SC-7113	Hex. Socket Bolt (M5*L20)			○	4	
H1-4-25	18048SW-3115	Spring Washer (5@)			○	4	
H1-4-26	18049SW-3111	Washer (@5)			○	4	
H1-4-27	11029SC-4113	HEX. SOCKET BOLT (M4*L20)			○	2	
H1-4-28	18014SW-3115	Spring Washer (@4-No2)			○	2	
H1-4-29	18015SW-3111	Washer (4@)			○	2	
H1-4-30	03100600UH00	Tension Adjusting Plate				2	
H1-4-31	07016SC-7113	Hex.Socket Bolt (M4*L12)			○	6	
H1-4-32	02028SW-9115	Spring Washer (@4)			○	6	
H1-4-33	05009SW-1111	Washer (@4-L)			○	6	
H1-4-34	08007SC-4517	Hex. Socket Set Screw (M3*L5)			○	4	
H1-4-35	16028SC-7113	HEX. SOCKET BOLT (M5*L25)			○	2	
H1-4-36	18048SW-3115	Spring Washer (5@)			○	2	
H1-4-37	18049SW-3111	Washer (@5)			○	2	
H1-4-38	03100700UH00	Fixed Block				2	
H1-4-39	11029SC-4113	HEX. SOCKET BOLT (M4*L20)			○	4	
H1-4-40	18014SW-3115	Spring Washer (@4-No2)			○	4	

H1

Note



H1-5


Diagram illustrating the assembly of the H1-5 component, showing various parts and their assembly sequence:

- H1-5-9**, **H1-5-10**, **H1-5-11**: Screws for the top plate.
- H1-5-8**: Top plate.
- H1-5-5**, **H1-5-6**, **H1-5-7**: Screws for the side plate.
- H1-5-4**: Side plate.
- H1-4-62**: Dashed line indicating the assembly path for the side plate.
- H1-5-14**, **H1-5-15**, **H1-5-17**: Screws for the bottom plate.
- H1-5-12**, **H1-5-13**, **H1-5-16**, **H1-5-18**: Screws for the bottom plate.
- H1-5-2**: Screw for the bottom plate.
- H1-5-3**: Bottom plate.
- H1-5-1**: Main assembly frame.

Note



 H1-6

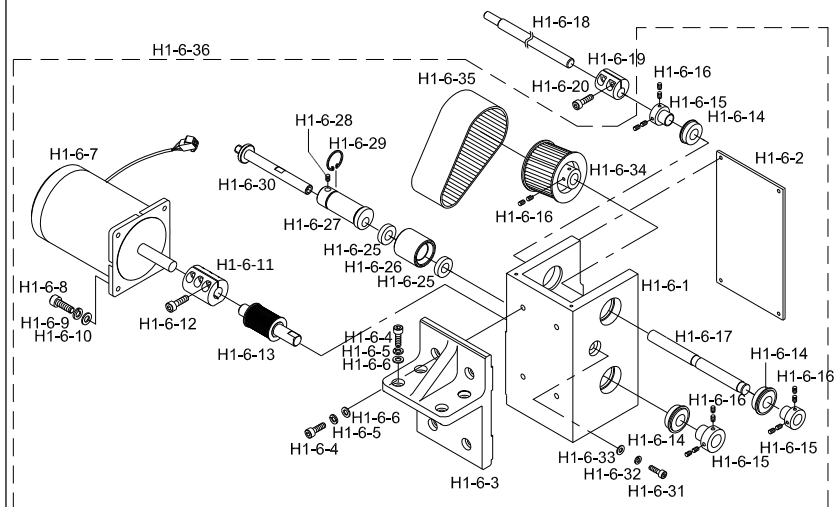

Note

Ref.No	Part No.	Part Name	Application date	Interchangeability	Hardware	Q'ty	Remarks
H1-6-1	GP-047007-00	Y-Driving Box	Sep,01,09 ~	X		1	
H1-6-2	GP-005374-00	Y-Driving Box CoverA	Nov,02,04 ~	X		2	
H1-6-3	GP-007513-00	Y-Driving Box Bracket	Feb,05,05 ~	X		2	
H1-6-4	03003SC-4113	Hex. Socket Bolt "B" (M8*L35)			○	20	
H1-6-5	15095SW-3115	Spring Washer (@8)			○	36	
H1-6-6	04029SW-A001	Stud Bolt Washer(S) (@8)			○	36	
H1-6-7	16059MT-E131	Y Motor (103H89222-5212)				1	
H1-6-8	14046SC-7113	Hex.Socket Bolt (M6*L30)			○	4	
H1-6-9	16014SW-4115	Spring Washer (@6)			○	4	
H1-6-10	08057SW-1111	Washer (@6)			○	4	
H1-6-11	GP-005380-00	Coupling				1	
H1-6-12	14061AF-4517	Hex. Socket Bolt (M8*L8)			○	2	
H1-6-13	GP-044367-00	Y-Driving Timing Pulley	Dec,02,08 ~	X		1	
	GP-044367-01		Jul,05,10 ~	△		1	
H1-6-14	01001100H000	Bearing(6004zz)			○	3	
H1-6-15	GP-043996-00	Bearing Stopper Collar	Oct,23,08 ~	X		3	
H1-6-16	04012AF-A001	Screw(15/64-28)			○	8	
H1-6-17	ST-000138-00	Y-Driving Shaft "B"	Sep,01,09 ~	X		2	
	GP-004159-00	Y-Driving Shaft	Aug,24,04 ~	X		2	
	GP-004159-01		Apr,27,05 ~	△			
H1-6-18	ST-000010-00	Y-Driving Shaft "A" L=1049	Des,18,08 ~	X		2	
	ST-000010-01		Sep,01,09 ~	△			
H1-6-19	GP-005380-00	Coupling "A"	Sep,01,09 ~	X		4	
H1-6-20	03016SC-4113	Hex. Socket Bolt (M5*L15)			○	8	
H1-6-25	03200400I000	Roller Bearing				2	
H1-6-26	GP-005379-00	Tension Adjusting Roller	Nov,02,04 ~	X		1	
H1-6-27	GP-005378-00	Idler Bush	Nov,02,04 ~	X		1	
H1-6-28	14060AF-4517	Hex. Socket Bolt (M6*L6)			○	1	
H1-6-29	03200700I000	C-Ring				1	
H1-6-30	GP-007512-00	Idler Shaft	Feb,05,05 ~	X		1	
	GP-007512-01		Des,18,08 ~	△			
H1-6-31	14002SC-7113	Hex. Socket Bolt (M6*L15)			○	1	
H1-6-32	16014SW-4115	Spring Washer (@6)			○	5	
H1-6-33	08057SW-1111	Washer				5	
H1-6-34	03200200B000	Lower Shaft Timing Pulley				1	

H1

H1-6


Exploded view diagram of the H1-6 engine assembly, showing various components and their assembly order. The diagram includes the following parts and their assembly sequence:

- H1-6-36**: Main engine block
- H1-6-35**: Air filter
- H1-6-18**: Spark plug
- H1-6-19**: Spark plug cap
- H1-6-16**: Piston and connecting rod assembly
- H1-6-20**: Piston pin
- H1-6-15**: Piston pin clip
- H1-6-14**: Piston pin clip
- H1-6-2**: Piston pin clip
- H1-6-28**: Piston pin clip
- H1-6-29**: Piston pin clip
- H1-6-30**: Piston pin clip
- H1-6-27**: Piston pin clip
- H1-6-25**: Piston pin clip
- H1-6-26**: Piston pin clip
- H1-6-11**: Piston pin clip
- H1-6-12**: Piston pin clip
- H1-6-13**: Piston pin clip
- H1-6-4**: Piston pin clip
- H1-6-5**: Piston pin clip
- H1-6-6**: Piston pin clip
- H1-6-3**: Piston pin clip
- H1-6-17**: Piston pin clip
- H1-6-14**: Piston pin clip
- H1-6-15**: Piston pin clip
- H1-6-16**: Piston pin clip
- H1-6-17**: Piston pin clip
- H1-6-18**: Piston pin clip
- H1-6-19**: Piston pin clip
- H1-6-20**: Piston pin clip
- H1-6-21**: Piston pin clip
- H1-6-22**: Piston pin clip
- H1-6-23**: Piston pin clip
- H1-6-24**: Piston pin clip
- H1-6-25**: Piston pin clip
- H1-6-26**: Piston pin clip
- H1-6-27**: Piston pin clip
- H1-6-28**: Piston pin clip
- H1-6-29**: Piston pin clip
- H1-6-30**: Piston pin clip
- H1-6-31**: Piston pin clip
- H1-6-32**: Piston pin clip
- H1-6-33**: Piston pin clip
- H1-6-34**: Piston pin clip
- H1-6-35**: Piston pin clip
- H1-6-36**: Piston pin clip


Note



 X-Y Drive (UK1206)

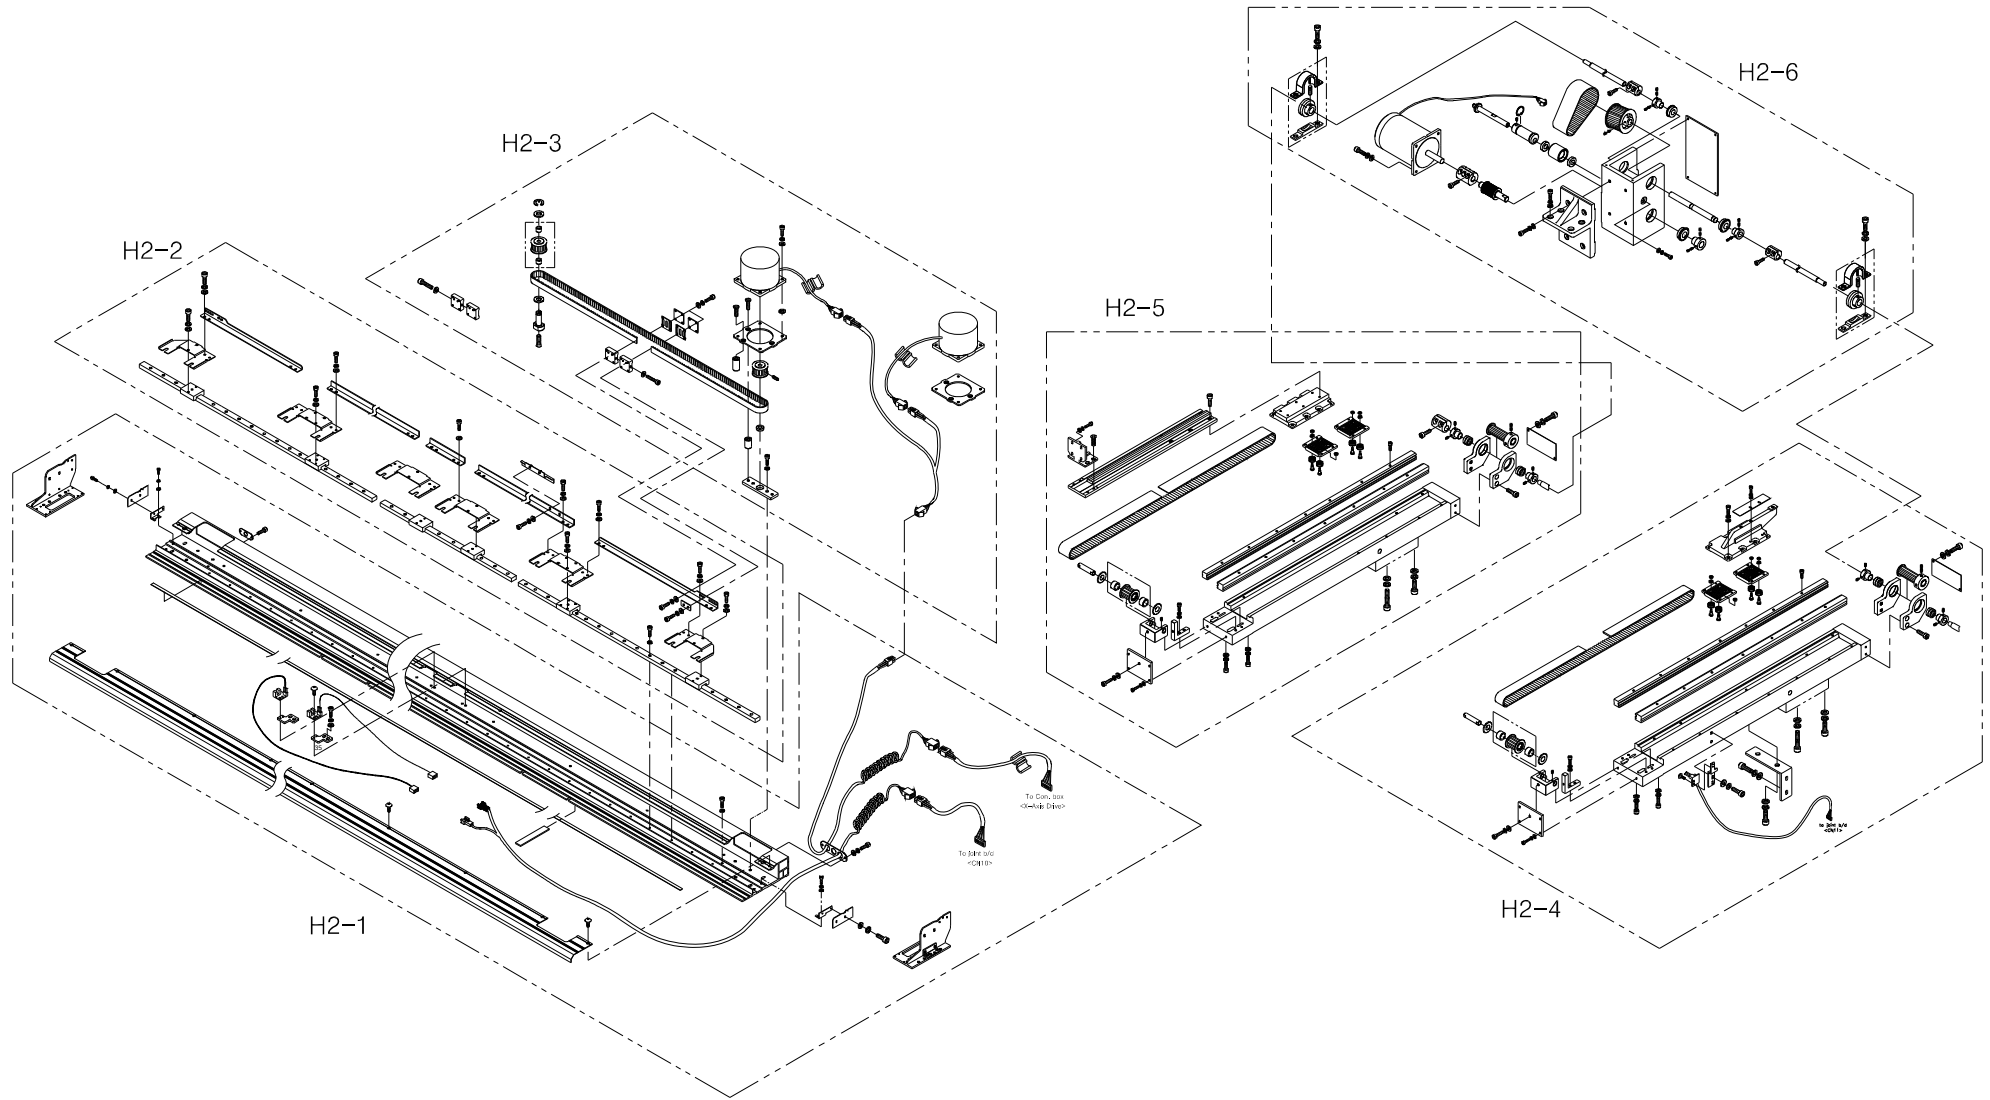

H2-1

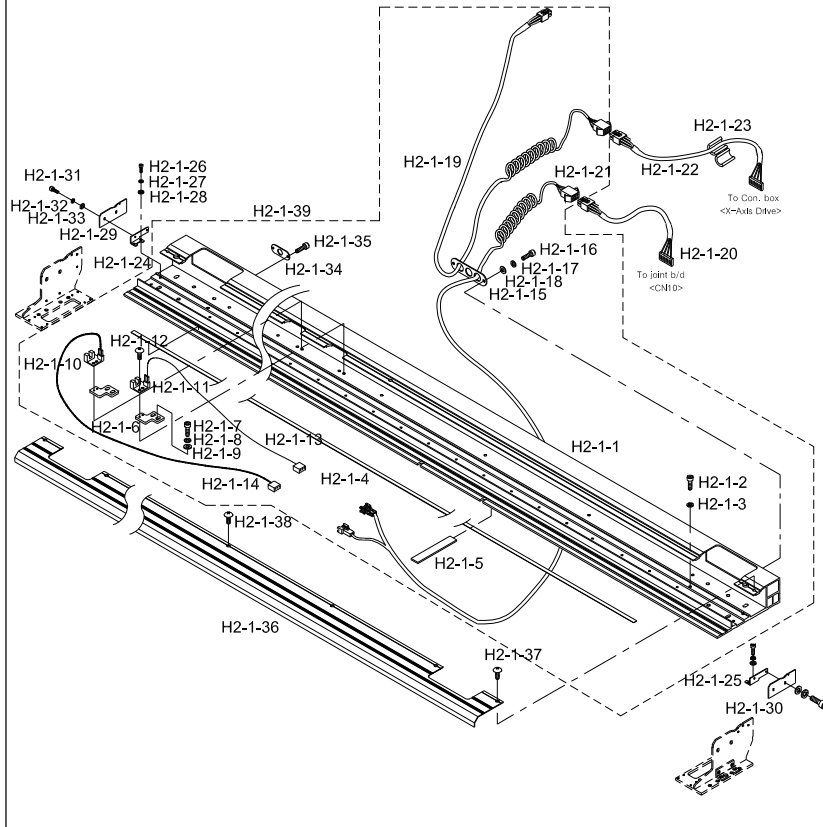 

Note

Ref.No	Part No.	Part Name	Application date	Interchangeability	Hardware	Q'ty	Remarks
H2-1-1	GP-008149-00	X-FRAME (L3661)	Mar,22,05 ~	X		1	
	GP-008149-01		Jun,02,05 ~	△			
H2-1-2	03071SC-7113	HEX. SOCKET BOLT (M3*L10)			○	94	
H2-1-3	11019SW-9115	Spring Washer (3@)			○	40	
H2-1-4	03200600UK60	TUBULAR FRAME RAIL PLATE (L3630)				1	
H2-1-5	15062SF-T121	Felt				6	
H2-1-6	15067PR-UK01	Sensor Plate				2	
H2-1-7	02015SC-7113	HEX.SOCKET BOLT(M4*L10)			○	4	
H2-1-8	02028SW-9115	Spring Washer (@4)			○	4	
H2-1-9	05009SW-1111	Washer (@4-L)			○	4	
H2-1-10	15044EL-UK01	X-Positioning Sensor				1	
H2-1-11	15043EL-UK01	X-Positioning Sensor				1	
H2-1-12	03006MC-8118	PLUS SCREW (M3*L6)			○	4	
H2-1-13	25052EL-UK01	Last-Sensor (Black) 4Ht-52				1	
H2-1-14	25053EL-UK01	Last-Sensor (White) 4Ht-53				1	
H2-1-15	14014PR-UK01	Bushing Plate				1	
H2-1-16	02023SC-7113	Hex.Socket Bolt (M4*L8)			○	4	
H2-1-17	18014SW-3115	Spring Washer (@4-No2)			○	2	
H2-1-18	18015SW-3111	Washer (4@)			○	2	
H2-1-19	25009EL-UK06	Cable (25-09)				1	
H2-1-20	25038EL-UK06	Cable (25-38)				1	
H2-1-21	25041EL-UK01	X Original In (4Ht-41)				1	
H2-1-22	02101300U000	CABLE (SH-13-2)				1	
H2-1-23	15045EL-UK01	Bid (L)				1	
H2-1-24	GP-005104-00	X-FRAME SIDE COVER HOLDER (L)	Oct,07,04 ~	X		1	
H2-1-25	GP-005105-00	X-FRAME SIDE COVER HOLDER (R)	Oct,07,04 ~	X		1	
H2-1-26	02023SC-7113	Hex. Socket Bolt (M4*L8)			○	8	
H2-1-27	18014SW-3115	Spring Washer (@4-No2)			○	8	
H2-1-28	05009SW-1111	Washer (@4-L)			○	8	
H2-1-29	GP-005106-00	X-AXIS FRAME SIDE COVER (L)	Oct,07,04 ~	X		1	
H2-1-30	GP-005107-00	X-AXIS FRAME SIDE COVER (R)	Oct,07,04 ~	X		1	
H2-1-31	15042SC-3123	Truss Screw (M4*L6)			○	4	
H2-1-32	18015SW-3111	WASHER (4@)			○	4	
H2-1-33	18014SW-3115	SPRING WASHER (@4-NO2)			○	4	
H2-1-34	15082PR-W121	FIXING PLATE FOR BUSHING				1	
H2-1-35	02023SC-7113	Hex.Socket Bolt (M4*L8)			○	2	
H2-1-36	GP-008150-00	X-Frame Cover L=3639	Mar,22,05 ~	X		1	
	GP-008150-01		May,18,05 ~	△			
H2-1-37	15042SC-3123	Truss Screw (M4*L6)			○	17	

H2-1

This diagram illustrates the exploded view of the H2-1 assembly, showing the main body and various accessories. The components are labeled as follows:

- Main Body:** H2-1-1
- Accessories:**
 - H2-1-2, H2-1-3 (Screws)
 - H2-1-4, H2-1-5, H2-1-6, H2-1-7, H2-1-8, H2-1-9, H2-1-10, H2-1-11, H2-1-12, H2-1-13, H2-1-14, H2-1-15, H2-1-16, H2-1-17, H2-1-18, H2-1-19, H2-1-20, H2-1-21, H2-1-22, H2-1-23, H2-1-24, H2-1-25, H2-1-26, H2-1-27, H2-1-28, H2-1-29, H2-1-30, H2-1-31, H2-1-32, H2-1-33, H2-1-34, H2-1-35, H2-1-36, H2-1-37, H2-1-38, H2-1-39
- Wiring:** H2-1-15, H2-1-16, H2-1-17, H2-1-18, H2-1-19, H2-1-20, H2-1-21, H2-1-22, H2-1-23, H2-1-24, H2-1-25, H2-1-26, H2-1-27, H2-1-28, H2-1-29, H2-1-30, H2-1-31, H2-1-32, H2-1-33, H2-1-34, H2-1-35, H2-1-36, H2-1-37, H2-1-38, H2-1-39
- Other Components:** H2-1-10, H2-1-11, H2-1-12, H2-1-13, H2-1-14, H2-1-15, H2-1-16, H2-1-17, H2-1-18, H2-1-19, H2-1-20, H2-1-21, H2-1-22, H2-1-23, H2-1-24, H2-1-25, H2-1-26, H2-1-27, H2-1-28, H2-1-29, H2-1-30, H2-1-31, H2-1-32, H2-1-33, H2-1-34, H2-1-35, H2-1-36, H2-1-37, H2-1-38, H2-1-39

Note

H2

H2-2


Diagram illustrating the assembly components and sequence for the H2-2 unit. The components are labeled as follows:

- H2-2-1
- H2-2-2
- H2-2-3
- H2-2-4
- H2-2-5
- H2-2-6
- H2-2-7
- H2-2-8
- H2-2-9
- H2-2-10
- H2-2-11
- H2-2-12
- H2-2-13
- H2-2-14
- H2-2-15
- H2-2-16
- H2-2-17
- H2-2-18
- H2-2-19
- H2-2-20
- H2-2-21
- H2-2-22
- H2-2-23
- H2-2-24
- H2-2-25
- H2-2-26
- H2-2-27
- H2-2-28
- H2-2-29
- H2-2-30
- H2-2-31
- H2-2-32
- H2-2-33
- H2-2-34
- H2-2-35
- H2-2-36
- H2-2-37
- H2-2-38
- H2-2-39

Note

H2

 
H2-3

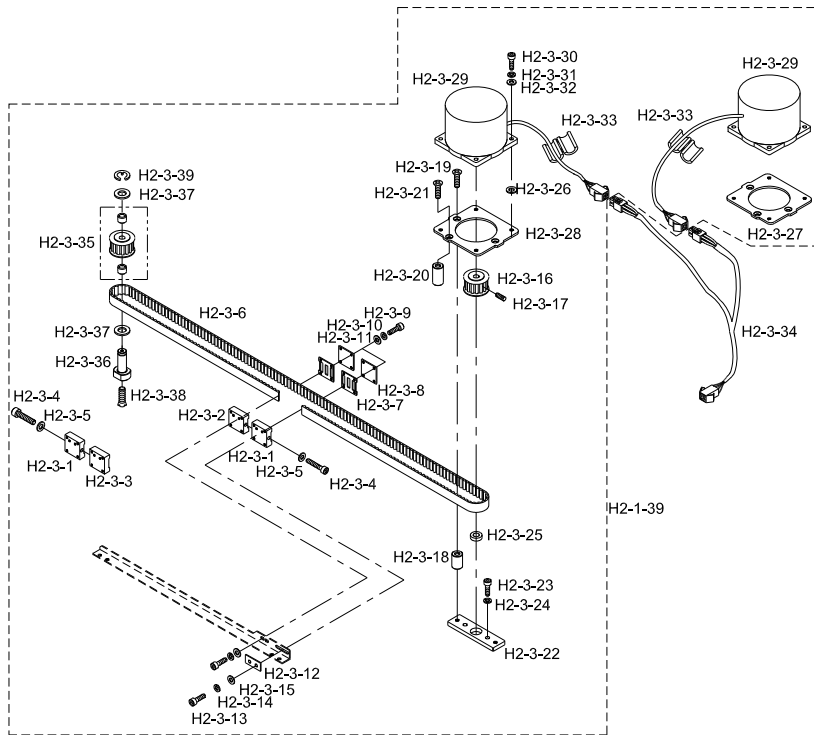

Note

Ref.No	Part No.	Part Name	Application date	Interchangeability	Hardware	Q'ty	Remarks
H2-3-1	14045AD-UK01	Belt Bracket (B)				2	
H2-3-2	14049AD-UK01	Belt Bracket (C)				1	
H2-3-3	14048AD-UK01	Belt Bracket (A)				1	
H2-3-4	15034SC-4113	Hex. Socket Boit (M4*L45)			○	2	
H2-3-5	05009SW-1111	Washer (@4-L)			○	2	
H2-3-6	12048BT-T121	X-Axis Timing Belt				2	
H2-3-7	14051PR-UK01	Fixing Plate				4	
H2-3-8	14052PR-UK01	Fixing Plate Holder				4	
H2-3-9	03071SC-7113	HEX. SOCKET BOLT (M3*L10)			○	16	
H2-3-10	11019SW-9115	Spring Washer (3@)			○	16	
H2-3-11	08011SW-1111	Spring Washer (@3-S)			○	16	
H2-3-12	14020PR-UK01	Space				2	
H2-3-13	02023SC-7113	Hex. Socket Bolt (M4*L8)			○	4	
H2-3-14	02028SW-9115	Spring Washer (@4)			○	4	
H2-3-15	05009SW-1111	Washer (@4-L)			○	4	
H2-3-16	14063PU-UK01	Timing Pulley "B"				2	
H2-3-17	04014SC-4517	Hex.Socket Set Screw(M5*L5)			○	4	
H2-3-18	14065AD-UK01	Motor Fixing Shaft (A)				4	
H2-3-19	15053SC-4119	Plus Screw (M5*L30)			○	4	
H2-3-20	14067AD-UK01	Motor Fixing Shaft (B)				2	
H2-3-21	15055SC-4119	Plus Screw (M5*L35)			○	2	
H2-3-22	14069AD-UK01	Motor Block				2	
H2-3-23	08076SC-7113	Hex. Socket Bolt (M5*L12)			○	12	
H2-3-24	18048SW-3115	Spring Washer (@5)			○	12	
H2-3-25	14071BR-UK01	Bearing Bc616Zz			○	2	
H2-3-26	15061PR-UK01	Motor Space (@5*@11*2T)				8	
H2-3-27	14074PR-UK01	Motor Base (L)				1	
H2-3-28	14075PR-UK01	Motor Base (R)				1	
H2-3-29	15076AF-UK01	X-MOTOR (103H8221-5044)				2	
H2-3-30	08076SC-7113	Hex. Socket Bolt (M5*L12)			○	8	
H2-3-31	18048SW-3115	Spring Washer (@5)			○	8	
H2-3-32	16018SW-1111	Washer (@5)			○	8	
H2-3-33	15044EL-T121	Bid (S)				2	
H2-3-34	25010EL-UK06	Cable (25-10)				1	
H2-3-35	12017PU-T121	Timing Pulley "A"				2	
H2-3-36	03106000U000	Timing Pulley Driving Pin				2	
H2-3-37	12019BR-T121	Fiber Washer R-Tw1020				4	
H2-3-38	15048SC-4119	Plus Screw (M5*L12)			○	2	
H2-3-39	08044SR-4013	E-Ring (@8)			○	2	

 
H2-4

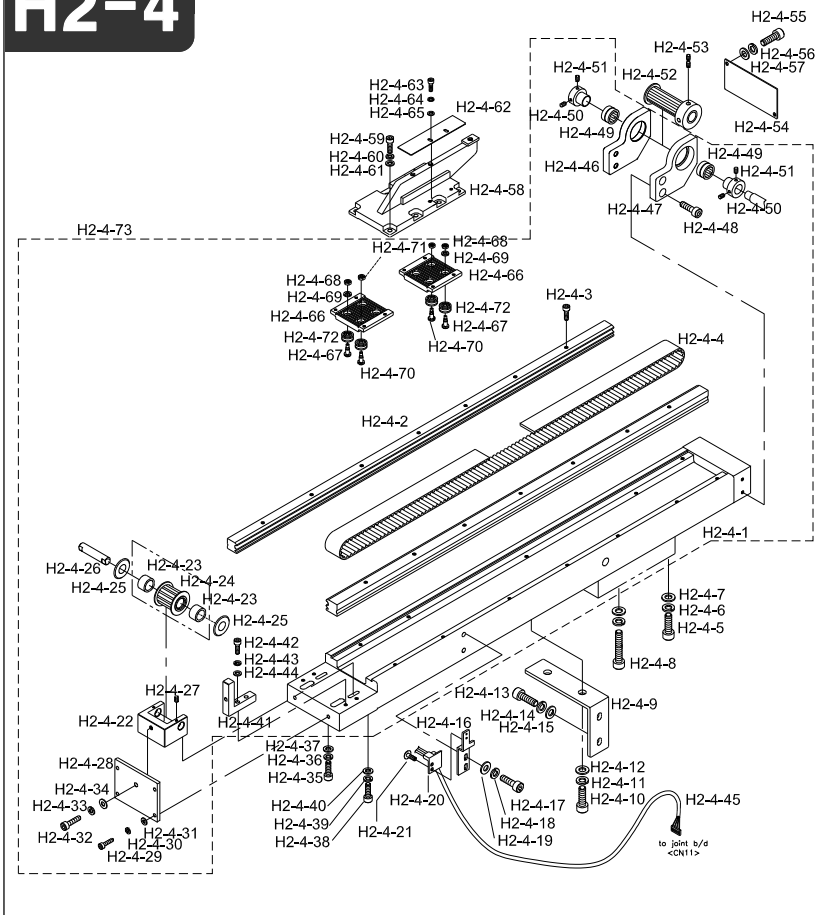

Note

Ref.No	Part No.	Part Name	Application date	Interchangeability	Hardware	Q'ty	Remarks
H2-4-1	GP-047345-00	Y-Lm Guide Support "A" (L)				1	
H2-4-2	03100100UH01	Y-Lm Guide Ass'Y				2	
H2-4-3	03071SC-A001	Hex.Socket Bolt (M3*L15)			○	30	
H2-4-4	16019BT-UK06	Y-Drive Timing Belt (25*AT5*1314)				1	
H2-4-5	15017SC-4113	Hex. Socket Bolt (M8*L45)			○	16	
H2-4-6	15095SW-3115	Spring Washer (@8)			○	44	
H2-4-7	04029SW-A001	Stud Bolt Washer(S) (@8)			○	60	
H2-4-8	15020SC-4113	Hex,Socket Bolt (M8*L50)			○	4	
H2-4-9	16074PR-UK06	Y-Lm Support Fixing Plate				2	
H2-4-10	14002SC-7113	Hex.Socket Bolt (M6*L15)			○	4	
H2-4-11	16014SW-4115	Spring Washer (@6)			○	4	
H2-4-12	08057SW-1111	Washer (@6)			○	4	
H2-4-13	08076SC-7113	HEX. SOCKET BOLT (M5*L12)			○	4	
H2-4-14	18048SW-3115	Spring Washer (@5)			○	4	
H2-4-15	16018SW-1111	Washer (@5)			○	4	
H2-4-16	03101300UH00	Sensor Bracket				1	
H2-4-17	02015SC-7113	Hex.Socket Bolt(M4*L10)			○	2	
H2-4-18	02028SW-9115	Spring Washer (@4)			○	2	
H2-4-19	05009SW-1111	Washer (@4-L)			○	2	
H2-4-20	09018EL-UK01	Y-Positioning Sensor				1	
H2-4-21	08006SC-8118	Plus Screw (M3*L5)			○	2	
H2-4-22	03100500UH00	Y-Tension Adjusting Bracket				2	
H2-4-23	12018BR-T121	Needle Bearing Hk1010(Ina)			○	4	
H2-4-24	04500100U000	Timing Pulley "A"				2	
H2-4-25	12019BR-T121	Fiber Washer R-Tw1020				4	
H2-4-26	03004200U000	Timing Pulley Pin (Y)				2	
H2-4-27	08007SC-4517	Hex. Socket Set Screw (M3*L5)			○	2	
H2-4-28	03100600UH00	Tension Adjusting Plate				2	
H2-4-29	07016SC-7113	Hex.Socket Bolt (M4*L12)			○	6	
H2-4-30	02028SW-9115	Spring Washer (@4)			○	6	
H2-4-31	05009SW-1111	Washer (@4-L)			○	6	
H2-4-32	16028SC-7113	Hex. Socket Bolt (M5*L25)			○	4	
H2-4-33	18048SW-3115	Spring Washer (@5)			○	4	
H2-4-34	16018SW-1111	Washer (@5)			○	4	
H2-4-35	08091SC-7113	Hex. Socket Bolt (M6*L20)			○	4	
H2-4-36	16014SW-4115	Spring Washer (@6)			○	4	
H2-4-37	08057SW-1111	Washer (@6)			○	4	
H2-4-38	11029SC-4113	Hex. Socket Bolt (M4*L20)			○	4	
H2-4-39	18014SW-3115	Spring Washer (@4)			○	4	

 H2-4

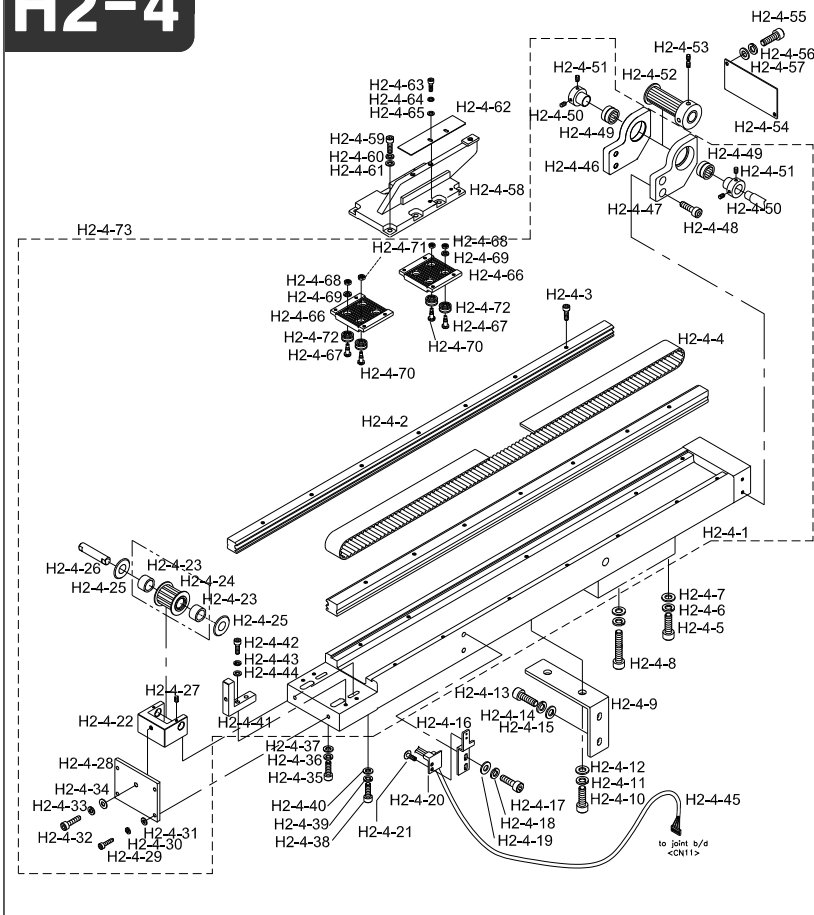


Note

Ref.No	Part No.	Part Name	Application date	Interchangeability	Hardware	Q'ty	Remarks
H2-4-40	18015SW-3111	Washer (@4)			○	4	
H2-4-41	03100700UH00	Fixed Block				2	
H2-4-42	11029SC-4113	Hex. Socket Bolt (M4*L20)			○	8	
H2-4-43	18014SW-3115	Spring Washer (@4)			○	8	
H2-4-44	18015SW-3111	Washer (@4)			○	8	
H2-4-45	25054EL-UK01	Cable (25-54)				1	
H2-4-46	03100900UH00	Y-Bearing Bracket (L)				2	
H2-4-47	03101000UH00	Y-Bearing Bracket (R)				2	
H2-4-48	16059SC-7113	Hex. Socket Bolt (M6*L12)			○	8	
H2-4-49	01029BR-A001	Needle Bearing (6002Z)			○	8	
H2-4-50	14058CW-A001	Bearing Collar				8	
H2-4-51	04012AF-A001	Hook Shaft Bush Screw				16	
H2-4-52	PL-000011-00	TIMING PULLEY(16-S5M-32F)	Jun,02,09 ~	X		2	
H2-4-53	04014SC-4517	Hex.Socket Set Screw (M5*L5)			○	8	
H2-4-54	GP-047317-00	Y-Bearing Bracket Cover				2	
H2-4-55	02023SC-7113	Hex. Socket Bolt (M4*L8)			○	8	
H2-4-56	02028SW-9115	Spring Washer (@4)			○	8	
H2-4-57	05009SW-1111	Washer (@4-L)			○	8	
H2-4-58	GP-005021-00	X-Y Connecting Bracket	Oct,01,04 ~	X		2	
H2-4-59	02015SC-7113	Hex.Socket Bolt (M4*L10)			○	16	
H2-4-60	18014SW-3115	Spring Washer (@4)			○	16	
H2-4-61	18015SW-3111	Washer (@4)			○	16	
H2-4-62	03101400UH00	Sensing Plate (Y)				1	
H2-4-63	22006SC-7113	Hex. Socket Bolt (M3*L8)			○	2	
H2-4-64	11019SW-9115	Spring Washer (3@)			○	2	
H2-4-65	08011SW-1111	Spring Washer (@3-S)			○	2	
H2-4-66	16104CL-H001	Belt Catcher Plate(Y)				4	
H2-4-67	15002CW-B001	Cam Roller Stud (A)				8	
H2-4-68	15029SN-3211	Hex. Nut (M4-No2)			○	8	
H2-4-69	02028SW-9115	Spring Washer (@4)			○	8	
H2-4-70	15003CW-B001	Cam Roller Stud (B)				8	
H2-4-71	12010SN-1211	Hex.Nut (M5)			○	8	
H2-4-72	15001BR-B001	Cam Roller Bearing				16	
H2-4-73	AS-016065-00	Y-Frame Assy (Wide)	Jul,16,09 ~	X		2	

H2

 H2-5

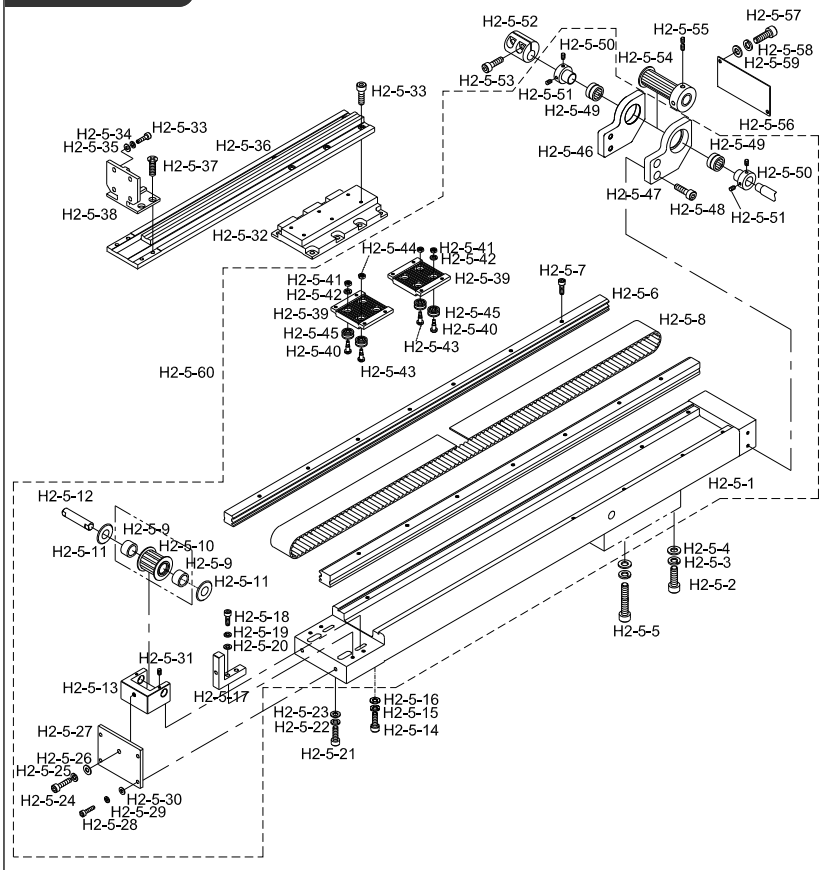

Note

Ref.No	Part No.	Part Name	Application date	Interchangeability	Hardware	Q'ty	Remarks
H2-5-1	GP-047345-00	Y-Lm Guide Support "A" (L)				1	
H2-5-2	15017SC-4113	Hex. Socket Bolt (M8*L45)			○	16	
H2-5-3	15095SW-3115	Spring Washer (@8)			○	16	
H2-5-4	04029SW-A001	Stud Bolt Washer(S) (@8)			○	16	
H2-5-5	15020SC-4113	Hex,Socket Bolt (M8*L50)			○	4	
H2-5-6	03100100UH01	Y-Lm Guide Ass'Y				2	
H2-5-7	03071SC-A001	Hex.Socket Bolt (M3*L15)				30	
H2-5-8	16093BT-UK06	Y-Drive Timing Belt "B"(L=1295)				2	
H2-5-9	15042BR-A001	Needle Bearing (1210Zz)			○	4	
H2-5-10	04500100U000	TIMING PULLEY(16-S5M-32F)				1	
H2-5-11	03200200B000	Lower Shaft Timing Pulley				1	
H2-5-12	16100CW-UK06	Timing Pulley Shaft (Y)				2	
H2-5-13	03100500UH00	Y-Tension Adjusting Bracket				2	
H2-5-14	11029SC-4113	Hex. Socket Bolt (M4*L20)			○	8	
H2-5-15	18014SW-3115	Spring Washer (@4)			○	8	
H2-5-16	18015SW-3111	Washer (@4)			○	8	
H2-5-17	03100700UH00	Fixed Block				2	
H2-5-18	11029SC-4113	Hex. Socket Bolt (M4*L20)			○	8	
H2-5-19	18014SW-3115	Spring Washer (@4)			○	8	
H2-5-20	18015SW-3111	Washer (@4)			○	8	
H2-5-21	08091SC-7113	Hex. Socket Bolt (M6*L20)			○	4	
H2-5-22	16014SW-4115	Spring Washer (@6)			○	4	
H2-5-23	08057SW-1111	Washer (@6)			○	4	
H2-5-24	16028SC-7113	Hex. Socket Bolt (M5*L25)			○	4	
H2-5-25	18048SW-3115	Spring Washer (@5)			○	4	
H2-5-26	16018SW-1111	Washer (@5)			○	4	
H2-5-27	03100900UH80	Tension Adjusting Plate (B)				2	
H2-5-28	07016SC-7113	Hex.Socket Bolt (M4*L12)			○	6	
H2-5-29	02028SW-9115	Spring Washer (@4)			○	6	
H2-5-30	05009SW-1111	Washer (@4-L)			○	6	
H2-5-31	08007SC-4517	Hex. Socket Set Screw (M3*L5)			○	8	
H2-5-32	03100300UH80	Bracket For Y-Sensing				2	
H2-5-33	18013AF-7113	Hex. Socket Bolt (M4*L10)			○	20	
H2-5-34	18014SW-3115	Spring Washer (@4-No2)			○	8	
H2-5-35	18015SW-3111	Washer (4@)			○	8	
H2-5-36	03100400UH80	X-Drive Connecting Plate				2	
H2-5-37	02002SC-7119	Plus Screw (M4*L8)			○	8	
H2-5-38	03101600UH80	X-FRAME HOLDER				2	
H2-5-39	16104CL-H001	Belt Catcher Plate(Y)				4	

H2-5


This exploded view diagram illustrates the assembly of the H2-5 unit. The components are labeled with part numbers and their assembly sequence is indicated by numbers in circles. The diagram shows the following parts and their assembly order:

- Part 1:** H2-5-1 (Main frame)
- Part 2:** H2-5-2 (Screw)
- Part 3:** H2-5-3 (Screw)
- Part 4:** H2-5-4 (Screw)
- Part 5:** H2-5-5 (Screw)
- Part 6:** H2-5-6 (Screw)
- Part 7:** H2-5-7 (Screw)
- Part 8:** H2-5-8 (Screw)
- Part 9:** H2-5-9 (Screw)
- Part 10:** H2-5-10 (Screw)
- Part 11:** H2-5-11 (Screw)
- Part 12:** H2-5-12 (Screw)
- Part 13:** H2-5-13 (Screw)
- Part 14:** H2-5-14 (Screw)
- Part 15:** H2-5-15 (Screw)
- Part 16:** H2-5-16 (Screw)
- Part 17:** H2-5-17 (Screw)
- Part 18:** H2-5-18 (Screw)
- Part 19:** H2-5-19 (Screw)
- Part 20:** H2-5-20 (Screw)
- Part 21:** H2-5-21 (Screw)
- Part 22:** H2-5-22 (Screw)
- Part 23:** H2-5-23 (Screw)
- Part 24:** H2-5-24 (Screw)
- Part 25:** H2-5-25 (Screw)
- Part 26:** H2-5-26 (Screw)
- Part 27:** H2-5-27 (Screw)
- Part 28:** H2-5-28 (Screw)
- Part 29:** H2-5-29 (Screw)
- Part 30:** H2-5-30 (Screw)
- Part 31:** H2-5-31 (Screw)
- Part 32:** H2-5-32 (Screw)
- Part 33:** H2-5-33 (Screw)
- Part 34:** H2-5-34 (Screw)
- Part 35:** H2-5-35 (Screw)
- Part 36:** H2-5-36 (Screw)
- Part 37:** H2-5-37 (Screw)
- Part 38:** H2-5-38 (Screw)
- Part 39:** H2-5-39 (Screw)
- Part 40:** H2-5-40 (Screw)
- Part 41:** H2-5-41 (Screw)
- Part 42:** H2-5-42 (Screw)
- Part 43:** H2-5-43 (Screw)
- Part 44:** H2-5-44 (Screw)
- Part 45:** H2-5-45 (Screw)
- Part 46:** H2-5-46 (Screw)
- Part 47:** H2-5-47 (Screw)
- Part 48:** H2-5-48 (Screw)
- Part 49:** H2-5-49 (Screw)
- Part 50:** H2-5-50 (Screw)
- Part 51:** H2-5-51 (Screw)
- Part 52:** H2-5-52 (Screw)
- Part 53:** H2-5-53 (Screw)
- Part 54:** H2-5-54 (Screw)
- Part 55:** H2-5-55 (Screw)
- Part 56:** H2-5-56 (Screw)
- Part 57:** H2-5-57 (Screw)
- Part 58:** H2-5-58 (Screw)
- Part 59:** H2-5-59 (Screw)
- Part 60:** H2-5-60 (Screw)

Note

H2

 H2-6

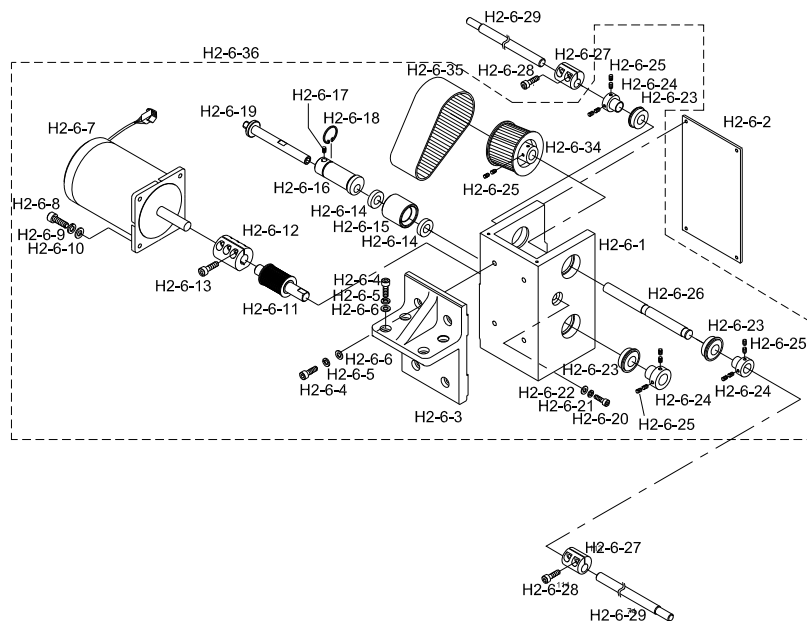

Note

Ref.No	Part No.	Part Name	Application date	Interchangeability	Hardware	Q'ty	Remarks
H2-6-1	GP-007511-00	Y-Driving Box	Feb,05,05 ~	X		1	
H2-6-2	GP-005374-00	Y-Driving Box CoverA	Nov,02,04 ~	X		1	
H2-6-3	GP-007513-00	Y-Driving Box Bracket	Feb,05,05 ~	X		1	
H2-6-4	03003SC-4113	Hex. Socket Bolt "B" (M8*L35)			○	8	
H2-6-5	15095SW-3115	Spring Washer (@8)			○	8	
H2-6-6	04029SW-A001	Stud Bolt Washer(S) (@8)			○	8	
H2-6-7	16059MT-E131	Y Motor (103H89222-5212)				1	
H2-6-8	14046SC-7113	Hex.Socket Bolt (M6*L30)			○	4	
H2-6-9	16014SW-4115	Spring Washer (@6)			○	4	
H2-6-10	08057SW-1111	Washer (@6)			○	4	
H2-6-11	GP-044367-00	Y-Driving Timing Pulley	Dec,02,08 ~	X		1	
	GP-044367-01		Jul,05,10 ~	△		1	
H2-6-12	GP-005380-00	Coupling	Nov,02,04 ~	X		1	
H2-6-13	14061AF-4517	Hex. Socket Bolt (M8*L8)			○	2	
H2-6-14	03200400I000	Roller Bearing				2	
H2-6-15	GP-005379-00	Tension Adjusting Roller	Nov,02,04 ~	X		1	
H2-6-16	GP-005378-00	Idler Bush	Nov,02,04 ~	X		1	
H2-6-17	14060AF-4517	Hex. Socket Bolt (M6*L6)			○	1	
H2-6-18	03200700I000	C-Ring			○	1	
H2-6-19	GP-007512-00	Idler Shaft	Feb,05,05 ~	X		1	
	GP-007512-01		Des,18,08 ~	△		1	
H2-6-20	14002SC-7113	HEX.SOCKET BOLT (M6*L15)			○	5	
H2-6-21	16014SW-4115	Spring Washer (@6)			○	5	
H2-6-22	08057SW-1111	Washer				5	
H2-6-23	01029BR-A001	Bearing(6004zz)			○	3	
H2-6-24	14058CW-A001	Bearing Stopper Collar				3	
H2-6-25	04012AF-A001	Screw(15/64-28)			○	8	
H2-6-26	GP-007516-00	Y-Driving Shaft "B"	Feb,05,05 ~	X		2	
	GP-004159-00		Aug,24,04 ~	X		2	
	GP-004159-01		Apr,27,05 ~	△		2	
H2-6-27	03005100U000	Coupling "A"				4	
H2-6-28	03016SC-4113	Hex. Socket Bolt (M5*L15)			○	8	
H2-6-29	ST-000010-00	Y-Driving Shaft "A" L=1049	Des,18,08 ~	X		2	
	ST-000010-01		Sep,01,09 ~	△		2	
H2-6-34	03200200B000	Lower Shaft Timing Pulley				1	

H2

H2-6


This exploded view diagram illustrates the assembly of the H2-6 engine. The components are labeled with part numbers and leader lines. The main assembly is shown in a perspective view, with various sub-assemblies and individual parts shown in an exploded state. The parts are labeled as follows:

- H2-6-1: Main engine block
- H2-6-2: Side cover plate
- H2-6-3: Base plate
- H2-6-4: Bolt
- H2-6-5: Nut
- H2-6-6: Bolt
- H2-6-7: Spark plug
- H2-6-8: Spark plug
- H2-6-9: Spark plug
- H2-6-10: Spark plug
- H2-6-11: Bolt
- H2-6-12: Bolt
- H2-6-13: Bolt
- H2-6-14: Bolt
- H2-6-15: Bolt
- H2-6-16: Bolt
- H2-6-17: Bolt
- H2-6-18: Bolt
- H2-6-19: Bolt
- H2-6-20: Bolt
- H2-6-21: Bolt
- H2-6-22: Bolt
- H2-6-23: Bolt
- H2-6-24: Bolt
- H2-6-25: Bolt
- H2-6-26: Bolt
- H2-6-27: Bolt
- H2-6-28: Bolt
- H2-6-29: Bolt
- H2-6-30: Bolt
- H2-6-31: Bolt
- H2-6-32: Bolt
- H2-6-33: Bolt
- H2-6-34: Bolt
- H2-6-35: Bolt
- H2-6-36: Bolt
- H2-6-37: Bolt
- H2-6-38: Bolt
- H2-6-39: Bolt
- H2-6-40: Bolt
- H2-6-41: Bolt
- H2-6-42: Bolt
- H2-6-43: Bolt
- H2-6-44: Bolt
- H2-6-45: Bolt
- H2-6-46: Bolt
- H2-6-47: Bolt
- H2-6-48: Bolt
- H2-6-49: Bolt
- H2-6-50: Bolt
- H2-6-51: Bolt
- H2-6-52: Bolt
- H2-6-53: Bolt
- H2-6-54: Bolt
- H2-6-55: Bolt
- H2-6-56: Bolt
- H2-6-57: Bolt
- H2-6-58: Bolt
- H2-6-59: Bolt
- H2-6-60: Bolt
- H2-6-61: Bolt
- H2-6-62: Bolt
- H2-6-63: Bolt
- H2-6-64: Bolt
- H2-6-65: Bolt
- H2-6-66: Bolt
- H2-6-67: Bolt
- H2-6-68: Bolt
- H2-6-69: Bolt
- H2-6-70: Bolt
- H2-6-71: Bolt
- H2-6-72: Bolt
- H2-6-73: Bolt
- H2-6-74: Bolt
- H2-6-75: Bolt
- H2-6-76: Bolt
- H2-6-77: Bolt
- H2-6-78: Bolt
- H2-6-79: Bolt
- H2-6-80: Bolt
- H2-6-81: Bolt
- H2-6-82: Bolt
- H2-6-83: Bolt
- H2-6-84: Bolt
- H2-6-85: Bolt
- H2-6-86: Bolt
- H2-6-87: Bolt
- H2-6-88: Bolt
- H2-6-89: Bolt
- H2-6-90: Bolt
- H2-6-91: Bolt
- H2-6-92: Bolt
- H2-6-93: Bolt
- H2-6-94: Bolt
- H2-6-95: Bolt
- H2-6-96: Bolt
- H2-6-97: Bolt
- H2-6-98: Bolt
- H2-6-99: Bolt
- H2-6-100: Bolt


Note

H2

 X-Y Drive (UH1206-45)

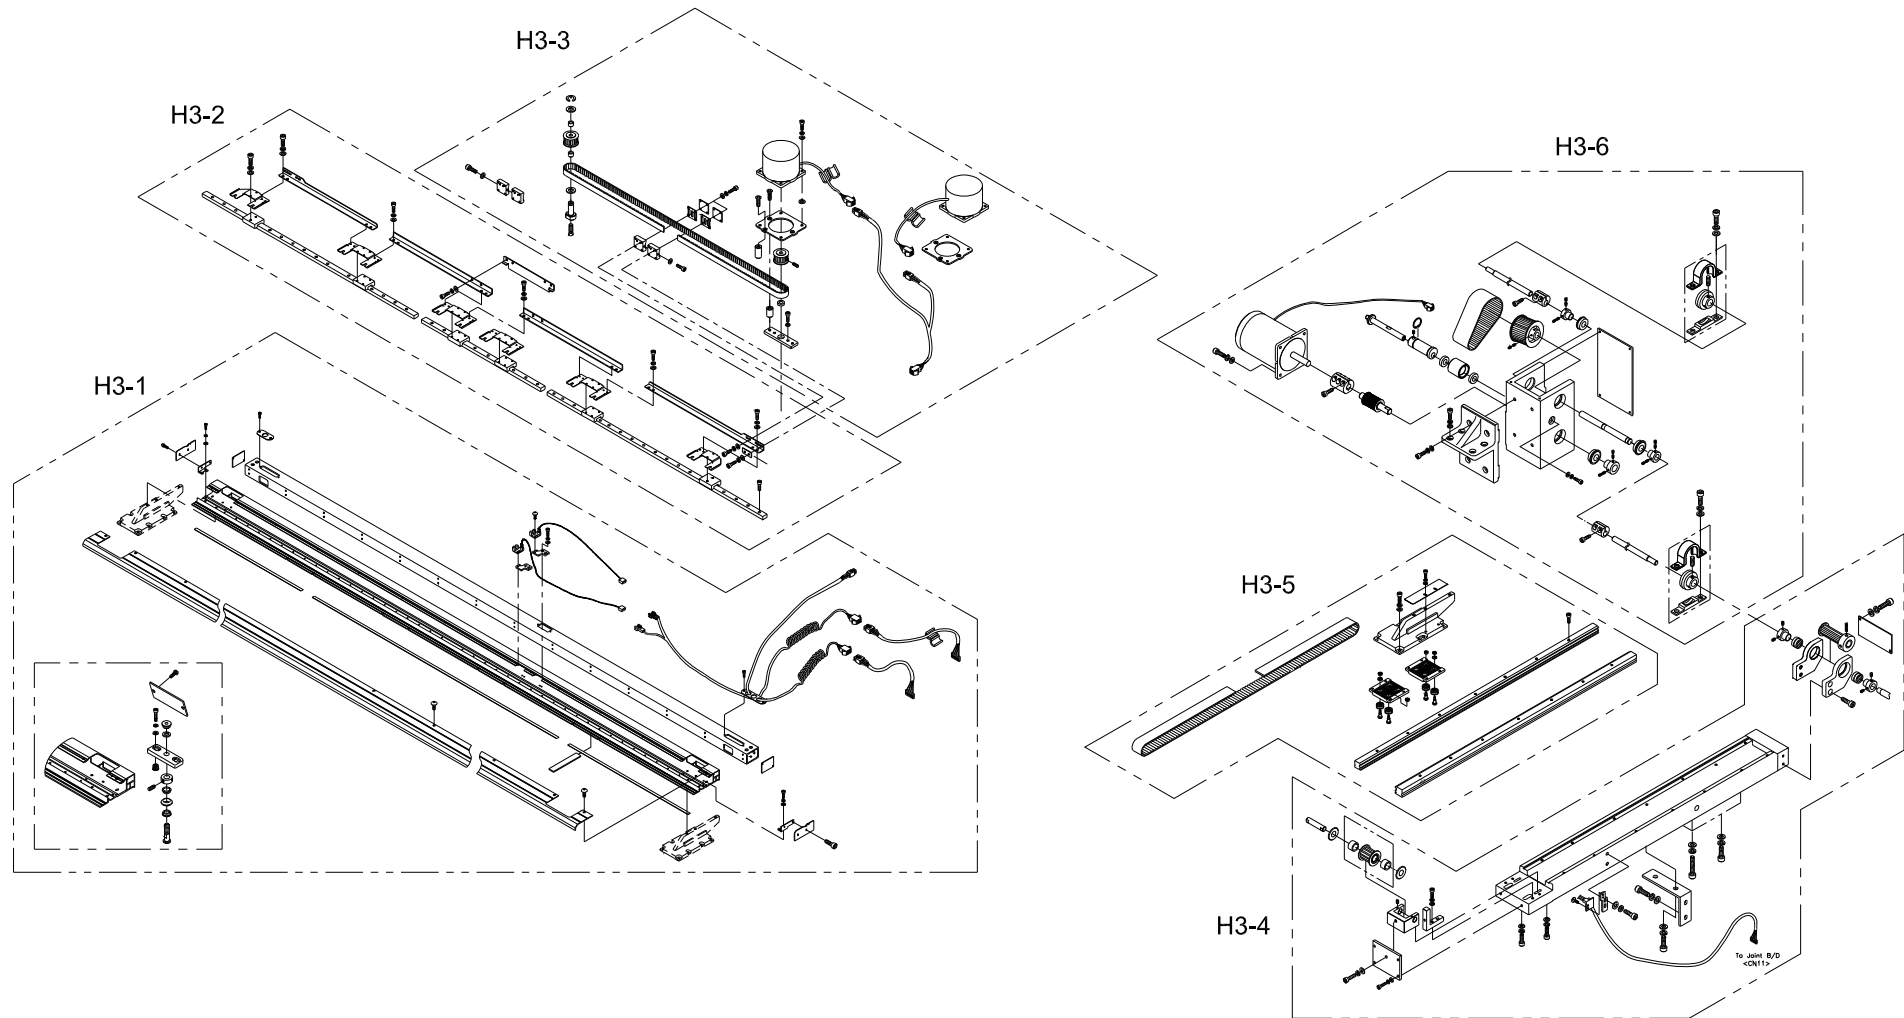

H3-1

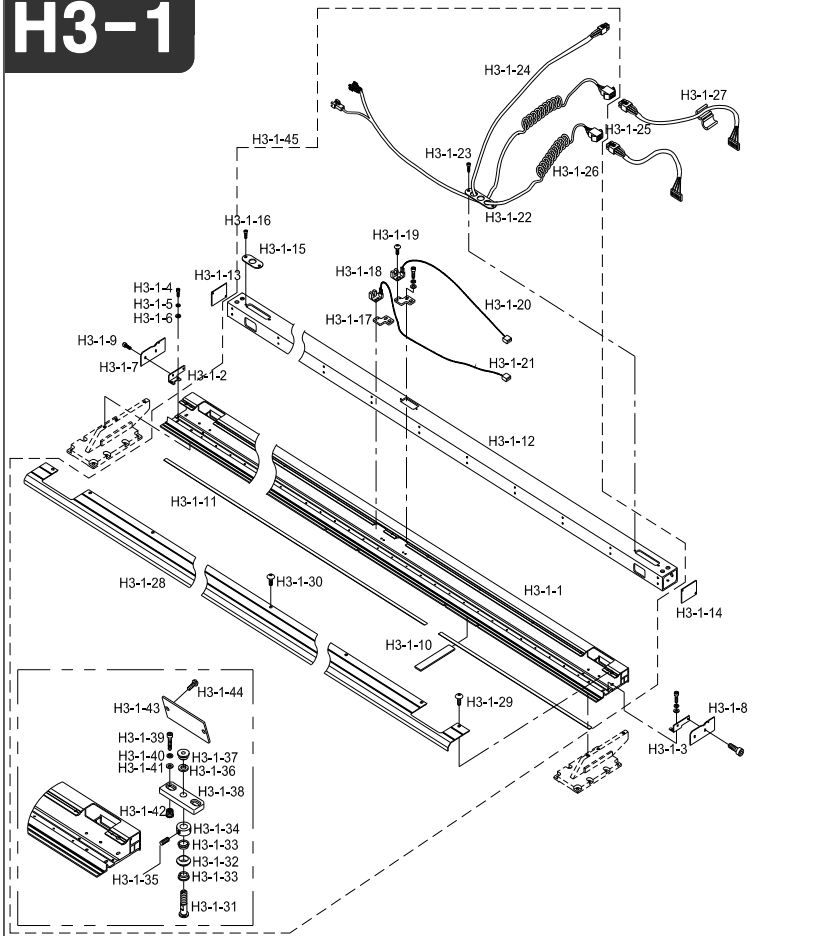 

Note

Ref.No	Part No.	Part Name	Application date	Interchangeability	Hardware	Q'ty	Remarks
H3-1-1	GP-005120-00	X-LM GUIDE FRAME L2935	Oct,07,04 ~	X		1	
	GP-005120-01		Jun,02,05 ~	△			
H3-1-2	GP-005104-00	X-FRAME SIDE COVER HOLDER (L)	Oct,07,04 ~	X		1	
H3-1-3	GP-005105-00	X-FRAME SIDE COVER HOLDER (R)	Oct,07,04 ~	X		1	
H3-1-4	02023SC-7113	Hex. Socket Bolt (M4*L8)			○	8	
H3-1-5	02028SW-9115	Spring Washer (@4)			○	8	
H3-1-6	05009SW-1111	Washer (@4-L)			○	8	
H3-1-7	GP-005106-00	X-AXIS FRAME SIDE COVER (L)	Oct,07,04 ~	X		1	
H3-1-8	GP-005107-00	X-AXIS FRAME SIDE COVER (R)	Oct,07,04 ~	X		1	
H3-1-9	15042SC-3123	Truss Screw (M4*L6)			○	4	
H3-1-10	15062SF-T121	Felt				8	
H3-1-11	03200700UH00	Tubular Frame Rail Plate				1	
H3-1-12	GP-005121-00	X-FRAME SUPPORT BAR L2931	Oct,07,04 ~	X		1	
	GP-005121-01		May,18,05 ~	△			
H3-1-13	GP-005108-00	X-FRAME SUPPORT BAR COVER(L)	Oct,07,04 ~	X		1	
H3-1-14	GP-005109-00	X-FRAME SUPPORT BAR COVER(R)	Oct,07,04 ~	X		1	
H3-1-15	15082PR-W121	FIXING PLATE FOR BUSHING				1	
H3-1-16	02023SC-7113	HEX.SOCKET BOLT (M4*L8)			○	4	
H3-1-17	15067PR-UK01	Sensor Plate				2	
H3-1-18	15043EL-UK01	X-Positioning Sensor				2	
H3-1-19	06010AF-8118	Plus Screw(M3*L4)			○	4	
H3-1-20	25052EL-UK01	Last-Sensor (Black) 4Ht-52				1	
H3-1-21	25053EL-UK01	Last-Sensor (White) 4Ht-53				1	
H3-1-22	15087PR-UK02	Cable Plate For Bushing				1	
H3-1-23	02023SC-7113	HEX.SOCKET BOLT (M4*L8)			○	2	
H3-1-24	25009EL-UK06	Cable (25-09)				1	
H3-1-25	25038EL-UK06	Cable (25-38)				1	
H3-1-26	25041EL-UK01	X Original In (4Ht-41)				1	
H3-1-27	15045EL-UK01	Bid (L)				1	
H3-1-28	03201300UH00	X-Cover (L=2931)				1	
H3-1-29	15042SC-3123	Truss Screw (M4*L6)			○	12	
H3-1-30	18153SC-3123	Plus Screw (M4*L10)			○	2	
H3-1-31	SC-001612-00	Roller Stud Bolt				4	
H3-1-32	15130AF-A001	Roller Guide				4	
H3-1-33	15106BR-A001	Flange Bearing (1280Zz)			○	4	
H3-1-34	15107CW-UK01	Roller Collar				4	
H3-1-35	03022SC-4517	Hex. Socket Set Screw (M4*L5)			○	8	
H3-1-36	18048SW-3115	Spring Washer (5@)			○	4	
H3-1-37	04032SN-A001	Hex. Nut (M8-No2)			○	2	

H3

H3-1

This exploded view diagram illustrates the assembly of the H3-1 car stereo unit. The main components shown include:

- Front Panel (H3-1-1):** The main faceplate of the unit.
- Mounting Bracket (H3-1-2):** A bracket that secures the unit to the dashboard.
- Antenna (H3-1-3):** A telescopic antenna for radio reception.
- Wiring Harness (H3-1-4):** A bundle of wires for connecting the unit to the vehicle's electrical system.
- Speaker Cables (H3-1-5, H3-1-6):** Cables for connecting the unit to the speakers.
- Speaker (H3-1-7):** A circular speaker for audio output.
- Antenna Mount (H3-1-8):** A mount for the antenna.
- Antenna Cable (H3-1-9):** A cable for the antenna.
- Antenna Mount (H3-1-10):** A mount for the antenna.
- Antenna Cable (H3-1-11):** A cable for the antenna.
- Antenna Mount (H3-1-12):** A mount for the antenna.
- Antenna Cable (H3-1-13):** A cable for the antenna.
- Antenna Mount (H3-1-14):** A mount for the antenna.
- Antenna Cable (H3-1-15):** A cable for the antenna.
- Antenna Mount (H3-1-16):** A mount for the antenna.
- Antenna Cable (H3-1-17):** A cable for the antenna.
- Antenna Mount (H3-1-18):** A mount for the antenna.
- Antenna Cable (H3-1-19):** A cable for the antenna.
- Antenna Mount (H3-1-20):** A mount for the antenna.
- Antenna Cable (H3-1-21):** A cable for the antenna.
- Antenna Mount (H3-1-22):** A mount for the antenna.
- Antenna Cable (H3-1-23):** A cable for the antenna.
- Antenna Mount (H3-1-24):** A mount for the antenna.
- Antenna Cable (H3-1-25):** A cable for the antenna.
- Antenna Mount (H3-1-26):** A mount for the antenna.
- Antenna Cable (H3-1-27):** A cable for the antenna.

The diagram uses dashed lines to indicate the assembly path and alignment of the components. The H3-1 unit is shown in the center, with various parts like the antenna, speaker, and wiring harness positioned around it to show their relative positions and how they connect.

Note

H3

H3-2


The diagram illustrates the assembly of the H3-2 unit, showing the following components and their assembly sequence:

- Base Assembly:** H3-2-1 (Main base), H3-2-2 (Support bracket), H3-2-3 (Screw), H3-2-4 (Bracket), H3-2-5 (Bracket), H3-2-6 (Bracket), H3-2-7 (Screw), H3-2-8 (Screw), H3-2-9 (Screw), H3-2-10 (Bracket), H3-2-11 (Bracket), H3-2-12 (Bracket), H3-2-13 (Screw), H3-2-14 (Screw), H3-2-15 (Screw), H3-2-16 (Bracket), H3-2-17 (Screw), H3-2-18 (Screw), H3-2-19 (Screw), H3-2-20 (Bracket), H3-2-21 (Bracket), H3-2-22 (Bracket), H3-2-23 (Bracket), H3-2-24 (Bracket), H3-2-25 (Bracket), H3-2-26 (Bracket), H3-2-27 (Bracket), H3-2-28 (Bracket), H3-2-29 (Bracket), H3-2-30 (Bracket), H3-2-31 (Bracket), H3-2-32 (Bracket), H3-2-33 (Bracket), H3-2-34 (Bracket), H3-2-35 (Bracket), H3-2-36 (Bracket), H3-2-37 (Bracket), H3-2-38 (Bracket), H3-2-39 (Bracket), H3-2-40 (Bracket), H3-2-41 (Bracket), H3-2-42 (Bracket), H3-2-43 (Bracket), H3-2-44 (Bracket), H3-2-45 (Bracket), H3-2-46 (Bracket), H3-2-47 (Bracket), H3-2-48 (Bracket), H3-2-49 (Bracket), H3-2-50 (Bracket), H3-2-51 (Bracket), H3-2-52 (Bracket), H3-2-53 (Bracket), H3-2-54 (Bracket), H3-2-55 (Bracket), H3-2-56 (Bracket), H3-2-57 (Bracket), H3-2-58 (Bracket), H3-2-59 (Bracket), H3-2-60 (Bracket), H3-2-61 (Bracket), H3-2-62 (Bracket), H3-2-63 (Bracket), H3-2-64 (Bracket), H3-2-65 (Bracket), H3-2-66 (Bracket), H3-2-67 (Bracket), H3-2-68 (Bracket), H3-2-69 (Bracket), H3-2-70 (Bracket), H3-2-71 (Bracket), H3-2-72 (Bracket), H3-2-73 (Bracket), H3-2-74 (Bracket), H3-2-75 (Bracket), H3-2-76 (Bracket), H3-2-77 (Bracket), H3-2-78 (Bracket), H3-2-79 (Bracket), H3-2-80 (Bracket), H3-2-81 (Bracket), H3-2-82 (Bracket), H3-2-83 (Bracket), H3-2-84 (Bracket), H3-2-85 (Bracket), H3-2-86 (Bracket), H3-2-87 (Bracket), H3-2-88 (Bracket), H3-2-89 (Bracket), H3-2-90 (Bracket), H3-2-91 (Bracket), H3-2-92 (Bracket), H3-2-93 (Bracket), H3-2-94 (Bracket), H3-2-95 (Bracket), H3-2-96 (Bracket), H3-2-97 (Bracket), H3-2-98 (Bracket), H3-2-99 (Bracket), H3-2-100 (Bracket).

Note

H3

 H3-3

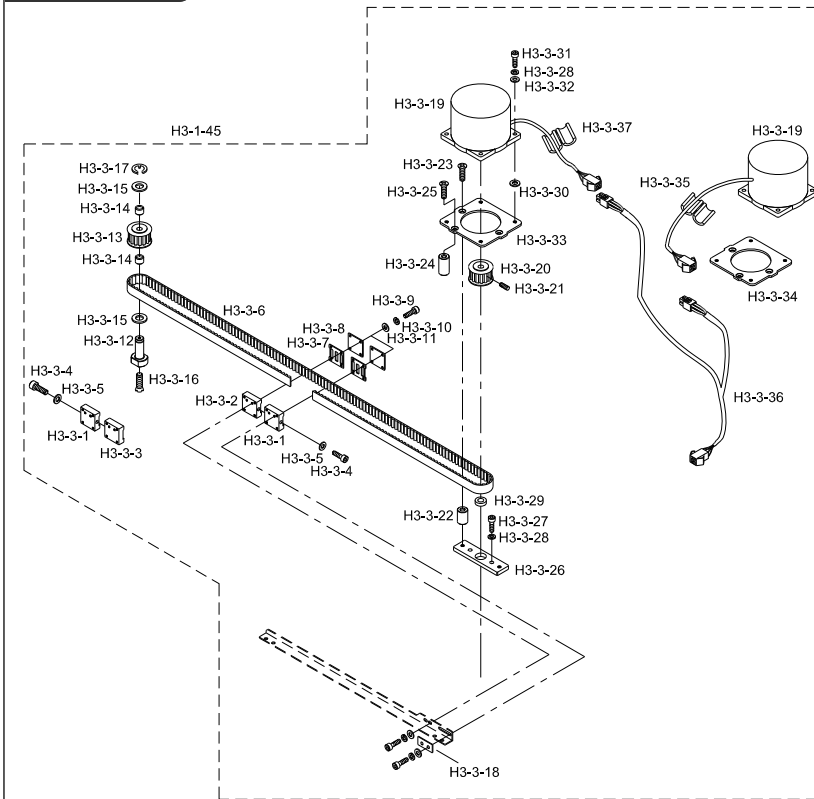


Note

Ref.No	Part No.	Part Name	Application date	Interchangeability	Hardware	Q'ty	Remarks
H3-3-1	14045AD-UK01	Belt Bracket (B)				2	
H3-3-2	14049AD-UK01	Belt Bracket (C)				1	
H3-3-3	14048AD-UK01	Belt Bracket (A)				1	
H3-3-4	15034SC-4113	Hex. Socket Boit (M4*L45)			○	2	
H3-3-5	05009SW-1111	Washer (@4-L)			○	2	
H3-3-6	03201100UH00	X-Timing Belt (L=1260)				2	
H3-3-7	14051PR-UK01	Fixing Plate				4	
H3-3-8	14052PR-UK01	Fixing Plate Holder				4	
H3-3-9	03071SC-A001	Hex.Scoket Bolt (M3*L15)			○	16	
H3-3-10	11019SW-9115	Spring Washer (3@)			○	16	
H3-3-11	08011SW-1111	Spring Washer (@3-S)			○	16	
H3-3-12	03106000U000	Timing Pulley Driving Pin				2	
H3-3-13	12017PU-T121	Timing Pulley "A"				2	
H3-3-14	12018BR-T121	Needle Bearing Hk1010(Ina)			○	4	
H3-3-15	12019BR-T121	Fiber Washer R-Tw1020				4	
H3-3-16	15048SC-4119	Plus Screw (M5*L12)			○	2	
H3-3-17	08044SR-4013	E-Ring (@8)			○	2	
H3-3-18	14020PR-UK01	Space				2	
H3-3-19	15076AF-UK01	X-Motor				2	
H3-3-20	14063PU-UK01	Timing Pulley "B"				2	
H3-3-21	04014SC-4517	Hex.Socket Set Screw(M5*L5)			○	4	
H3-3-22	14065AD-UK01	Motor Fixing Shaft (A)				4	
H3-3-23	15053SC-4119	Plus Screw (M5*L30)			○	4	
H3-3-24	14067AD-UK01	Motor Fixing Shaft (B)				2	
H3-3-25	15055SC-4119	Plus Screw (M5*L35)			○	2	
H3-3-26	14069AD-UK01	Motor Block				2	
H3-3-27	08076SC-7113	Hex. Socket Bolt (M5*L12)			○	20	
H3-3-28	18048SW-3115	Spring Washer (@5)			○	20	
H3-3-29	14071BR-UK01	Bearing Bc616Zz			○	2	
H3-3-30	15061PR-UK01	Motor Space (@5*@11*2T)				8	
H3-3-31	08076SC-7113	Hex. Socket Bolt (M5*L12)			○	8	
H3-3-32	16018SW-1111	Washer (@5)			○	8	
H3-3-33	14074PR-UK01	Motor Base (L)				1	
H3-3-34	14075PR-UK01	Motor Base (R)				1	
H3-3-35	15044EL-T121	Bid (S)				2	
H3-3-36	02101000UH60	Cable (25-10)				1	
H3-3-37	15045EL-UK01	Bid (L)				1	

H3

 H3-4

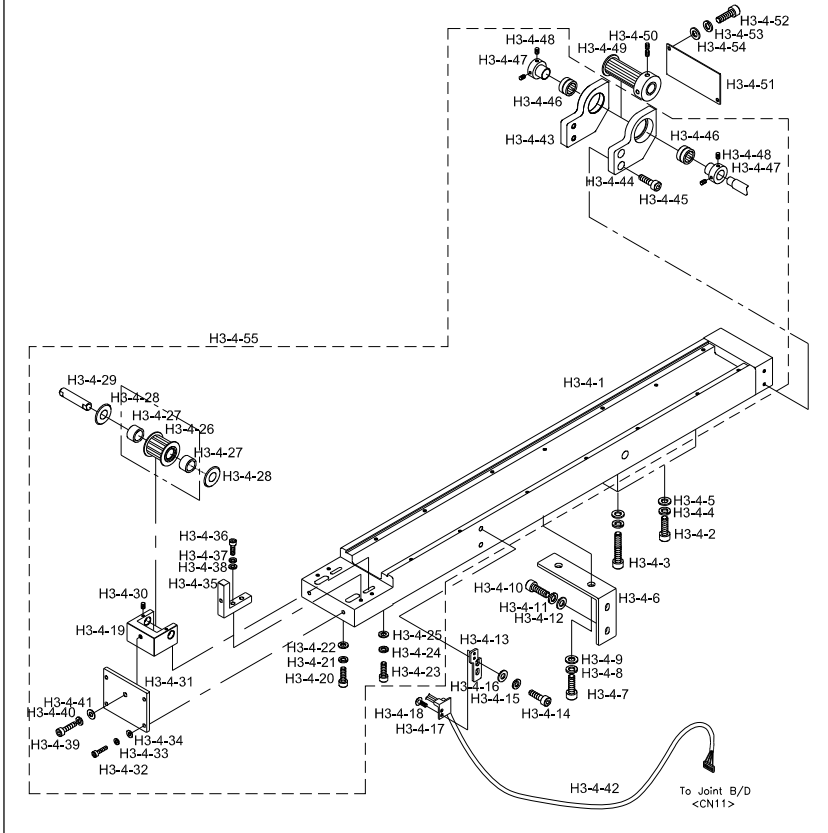

Note

Ref.No	Part No.	Part Name	Application date	Interchangeability	Hardware	Q'ty	Remarks
H3-4-1	03100200UH01	Y-Lm Guide Frame (L650)				2	
H3-4-2	14027SC-4113	Hex.Socket Bolt (M8*L30)				4	
H3-4-3	03003SC-4113	Hex. Socket Bolt "B"(M8*L35)			○	4	
H3-4-4	15095SW-3115	Spring Washer (@8)			○	8	
H3-4-5	04029SW-A001	Stud Bolt Washer(S) (@8)			○	8	
H3-4-6	16074PR-UK06	Y-Lm Support Fixing Plate				2	
H3-4-7	14002SC-7113	Hex.Socket Bolt (M6*L15)			○	4	
H3-4-8	16014SW-4115	Spring Washer (@6)			○	4	
H3-4-9	08057SW-1111	Washer (@6)			○	4	
H3-4-10	03016SC-4113	Hex. Socket Bolt (M5*L15)			○	4	
H3-4-11	18048SW-3115	Spring Washer (@5)			○	4	
H3-4-12	16018SW-1111	Washer (@5)			○	4	
H3-4-13	03101300UH00	Sensor Bracket				1	
H3-4-14	02015SC-7113	Hex.Socket Bolt(M4*L10)			○	2	
H3-4-15	18014SW-3115	Spring Washer (@4-No2)			○	2	
H3-4-16	18015SW-3111	Washer (4@)			○	2	
H3-4-17	10-003A-SC53	Positioning Sensor				1	
H3-4-18	08006SC-8118	Plus Screw (M3*L5)			○	2	
H3-4-19	03100500UH00	Y-Tension Adjusting Bracket				2	
H3-4-20	08062SC-7113	Hex. Socket Bolt (M5*L20)			○	4	
H3-4-21	18048SW-3115	Spring Washer (5@)			○	4	
H3-4-22	18049SW-3111	Washer (@5)			○	4	
H3-4-23	05008SC-4113	Hex.Socket Bolt (M4*L16)			○	2	
H3-4-24	18014SW-3115	Spring Washer (@4-No2)			○	2	
H3-4-25	18015SW-3111	Washer (4@)			○	2	
H3-4-26	04500100U000	TIMING PULLEY(16-S5M-32F)				2	
H3-4-27	15042BR-A001	Needle Bearing (1210Zz)			○	4	
H3-4-28	15046RB-A001	Driving Pin Washer (Tw1225)				4	
H3-4-29	16100CW-UK06	Timing Pulley Shaft (Y)				2	
H3-4-30	08007SC-4517	Hex. Socket Set Screw (M3*L5)			○	4	
H3-4-31	03100600UH00	Tension Adjusting Plate				2	
H3-4-32	07016SC-7113	Hex.Socket Bolt (M4*L12)			○	8	
H3-4-33	02028SW-9115	Spring Washer (@4)			○	8	
H3-4-34	05009SW-1111	Washer (@4-L)			○	8	
H3-4-35	03100700UH00	Fixed Block				4	
H3-4-36	07016SC-7113	Hex.Socket Bolt (M4*L12)			○	4	
H3-4-37	18014SW-3115	Spring Washer (@4-No2)			○	4	

H3

H3-4

The diagram illustrates the assembly of the H3-4 unit, showing the main body and various sub-assemblies. The components are labeled with part numbers and their assembly order is indicated by numbers in circles.

Main Body Components:

- H3-4-1 (Main body)
- H3-4-2 (Screw)
- H3-4-3 (Bracket)
- H3-4-4 (Screw)
- H3-4-5 (Screw)
- H3-4-6 (Bracket)
- H3-4-7 (Screw)
- H3-4-8 (Screw)
- H3-4-9 (Screw)
- H3-4-10 (Screw)
- H3-4-11 (Screw)
- H3-4-12 (Screw)
- H3-4-13 (Screw)
- H3-4-14 (Screw)
- H3-4-15 (Screw)
- H3-4-16 (Screw)
- H3-4-17 (Screw)
- H3-4-18 (Screw)
- H3-4-19 (Screw)
- H3-4-20 (Screw)
- H3-4-21 (Screw)
- H3-4-22 (Screw)
- H3-4-23 (Screw)
- H3-4-24 (Screw)
- H3-4-25 (Screw)
- H3-4-26 (Screw)
- H3-4-27 (Screw)
- H3-4-28 (Screw)
- H3-4-29 (Screw)
- H3-4-30 (Screw)
- H3-4-31 (Screw)
- H3-4-32 (Screw)
- H3-4-33 (Screw)
- H3-4-34 (Screw)
- H3-4-35 (Screw)
- H3-4-36 (Screw)
- H3-4-37 (Screw)
- H3-4-38 (Screw)
- H3-4-39 (Screw)
- H3-4-40 (Screw)
- H3-4-41 (Screw)
- H3-4-42 (Screw)
- H3-4-43 (Screw)
- H3-4-44 (Screw)
- H3-4-45 (Screw)
- H3-4-46 (Screw)
- H3-4-47 (Screw)
- H3-4-48 (Screw)
- H3-4-49 (Screw)
- H3-4-50 (Screw)
- H3-4-51 (Screw)
- H3-4-52 (Screw)
- H3-4-53 (Screw)
- H3-4-54 (Screw)

Assembly Order:

- 1
- 2
- 3
- 4
- 5
- 6
- 7
- 8
- 9
- 10
- 11
- 12
- 13
- 14
- 15
- 16
- 17
- 18
- 19
- 20
- 21
- 22
- 23
- 24
- 25
- 26
- 27
- 28
- 29
- 30
- 31
- 32
- 33
- 34
- 35
- 36
- 37
- 38
- 39
- 40
- 41
- 42
- 43
- 44
- 45
- 46
- 47
- 48
- 49
- 50
- 51
- 52
- 53
- 54

Assembly Instructions:

- 1. Assemble the main body (H3-4-1) with the screws (H3-4-2, H3-4-3, H3-4-4, H3-4-5, H3-4-6, H3-4-7, H3-4-8, H3-4-9, H3-4-10, H3-4-11, H3-4-12, H3-4-13, H3-4-14, H3-4-15, H3-4-16, H3-4-17, H3-4-18, H3-4-19, H3-4-20, H3-4-21, H3-4-22, H3-4-23, H3-4-24, H3-4-25, H3-4-26, H3-4-27, H3-4-28, H3-4-29, H3-4-30, H3-4-31, H3-4-32, H3-4-33, H3-4-34, H3-4-35, H3-4-36, H3-4-37, H3-4-38, H3-4-39, H3-4-40, H3-4-41, H3-4-42, H3-4-43, H3-4-44, H3-4-45, H3-4-46, H3-4-47, H3-4-48, H3-4-49, H3-4-50, H3-4-51, H3-4-52, H3-4-53, H3-4-54).
- 2. Assemble the sub-assemblies (H3-4-43, H3-4-44, H3-4-45, H3-4-46, H3-4-47, H3-4-48, H3-4-49, H3-4-50, H3-4-51, H3-4-52, H3-4-53, H3-4-54) onto the main body.
- 3. Connect the cable (H3-4-42) to the joint B/D <CN11>.

Note

H3


H3-5

The diagram illustrates the assembly of the H3-5 component. The main assembly is shown in the upper left, with parts H3-5-1 through H3-5-10 labeled. H3-5-1 is the base plate, H3-5-2 is a long rail, H3-5-3 is a bracket, H3-5-4 is a screw, H3-5-5 is a washer, H3-5-6 is a nut, H3-5-7 is a plate, H3-5-8 is a screw, H3-5-9 is a washer, and H3-5-10 is a nut. The main assembly is shown in the upper left, with parts H3-5-1 through H3-5-10 labeled. H3-5-1 is the base plate, H3-5-2 is a long rail, H3-5-3 is a bracket, H3-5-4 is a screw, H3-5-5 is a washer, H3-5-6 is a nut, H3-5-7 is a plate, H3-5-8 is a screw, H3-5-9 is a washer, and H3-5-10 is a nut. The main assembly is shown in the upper left, with parts H3-5-1 through H3-5-10 labeled. H3-5-1 is the base plate, H3-5-2 is a long rail, H3-5-3 is a bracket, H3-5-4 is a screw, H3-5-5 is a washer, H3-5-6 is a nut, H3-5-7 is a plate, H3-5-8 is a screw, H3-5-9 is a washer, and H3-5-10 is a nut.

Note

H3

 H3-6

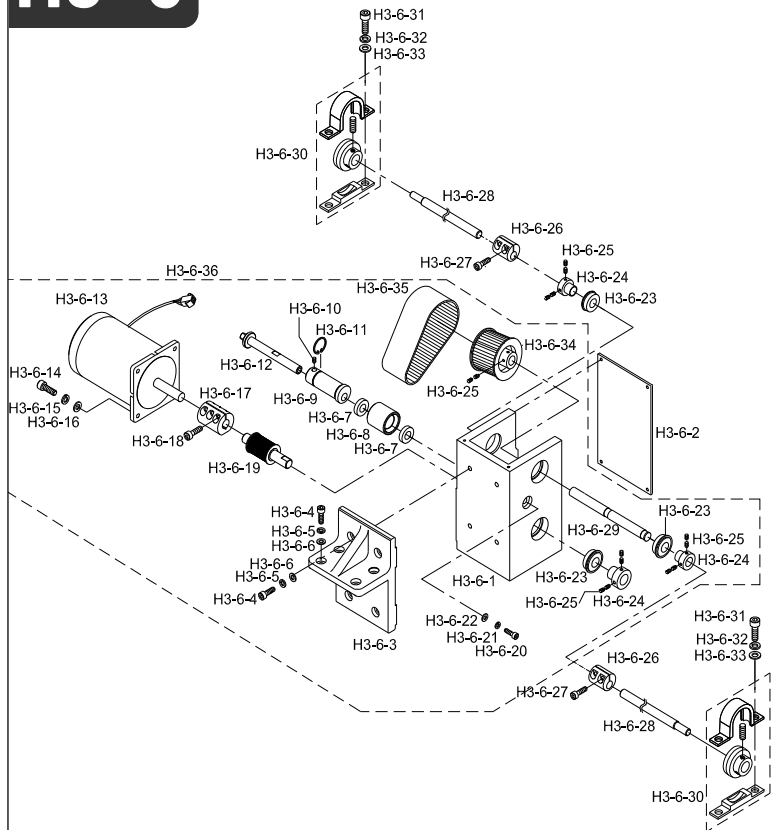


Note


Ref.No	Part No.	Part Name	Application date	Interchangeability	Hardware	Q'ty	Remarks
H3-6-1	GP-007511-00	Y-Driving Box	Feb,05,05 ~	X		1	
H3-6-2	GP-005374-00	Y-Driving Box CoverA	Nov,02,04 ~	X		2	
H3-6-3	GP-007513-00	Y-Driving Box Bracket	Feb,05,05 ~	X		2	
H3-6-4	03003SC-4113	Hex. Socket Bolt "B" (M8*L35)				20	
H3-6-5	15095SW-3115	Spring Washer (@8)				36	
H3-6-6	04029SW-A001	Stud Bolt Washer(S) (@8)				36	
H3-6-7	03200400I000	Roller Bearing				2	
H3-6-8	GP-005379-00	Tension Adjusting Roller	Nov,02,04 ~	X		1	
H3-6-9	GP-005378-00	Idler Bush	Nov,02,04 ~	X		1	
H3-6-10	14060AF-4517	Hex. Socket Bolt (M6*L6)				1	
H3-6-11	03200700I000	C-Ring				1	
H3-6-12	GP-007512-00	Idler Shaft	Feb,05,05 ~	X		1	
	GP-007512-01		Des,18,08 ~	△			
H3-6-13	16059MT-E131	Y Motor (103H89222-5212)				1	
H3-6-14	14046SC-7113	Hex.Socket Bolt (M6*L30)				4	
H3-6-15	16014SW-4115	Spring Washer (@6)				4	
H3-6-16	08057SW-1111	Washer (@6)				4	
H3-6-17	GP-005380-00	Coupling	Nov,02,04 ~	X		1	
H3-6-18	14061AF-4517	Hex. Socket Bolt (M8*L8)				2	
H3-6-19	GP-044367-00	Y-Driving Timing Pulley	Dec,02,08 ~	X		1	
	GP-044367-01		Jul,05,10 ~	△		1	
H3-6-20	14002SC-7113	Hex. Socket Bolt (M6*L15)				1	
H3-6-21	16014SW-4115	Spring Washer (@6)				5	
H3-6-22	08057SW-1111	Washer				5	
H3-6-23	01029BR-A001	Bearing(6004zz)				3	
H3-6-24	14058CW-A001	Bearing Stopper Collar				3	
H3-6-25	04012AF-A001	Screw(15/64-28)				8	
H3-6-26	03005100U000	Coupling "A"				4	
H3-6-27	03016SC-4113	Hex. Socket Bolt (M5*L15)				8	
H3-6-28	ST-000010-00	Y-Driving Shaft "A" L=1049	Des,18,08 ~	X		2	
	ST-000010-01		Sep,01,09 ~	△			
H3-6-29	GP-007516-00	Y-Driving Shaft "B"	Feb,05,05 ~	X		2	
	GP-004159-00	Y-Driving Shaft	Aug,24,04 ~	X		2	
	GP-004159-01		Apr,27,05 ~	△			
H3-6-30	16078BR-UK01	Pillow Block Set				1	
H3-6-31	14002SC-7113	HEX.SOCKET BOLT (M6*L15)				2	
H3-6-32	16014SW-4115	Spring Washer (@6)				2	
H3-6-33	08057SW-1111	Washer (@6)				2	
H3-6-34	03200200B000	Lower Shaft Timing Pulley				1	
H3-6-35	BE-000023-00	Y-Driving Timing Belt	Nov,02,04 ~	X		1	
H3-6-36	AS-015304-00	Y-Driving Timing Pulley Box Assy	Dec,02,08 ~	X		1	
	AS-015304-01		Feb,02,09 ~	△			
	AS-015304-02		Aug,31,09 ~	△			

H3

 SETTING

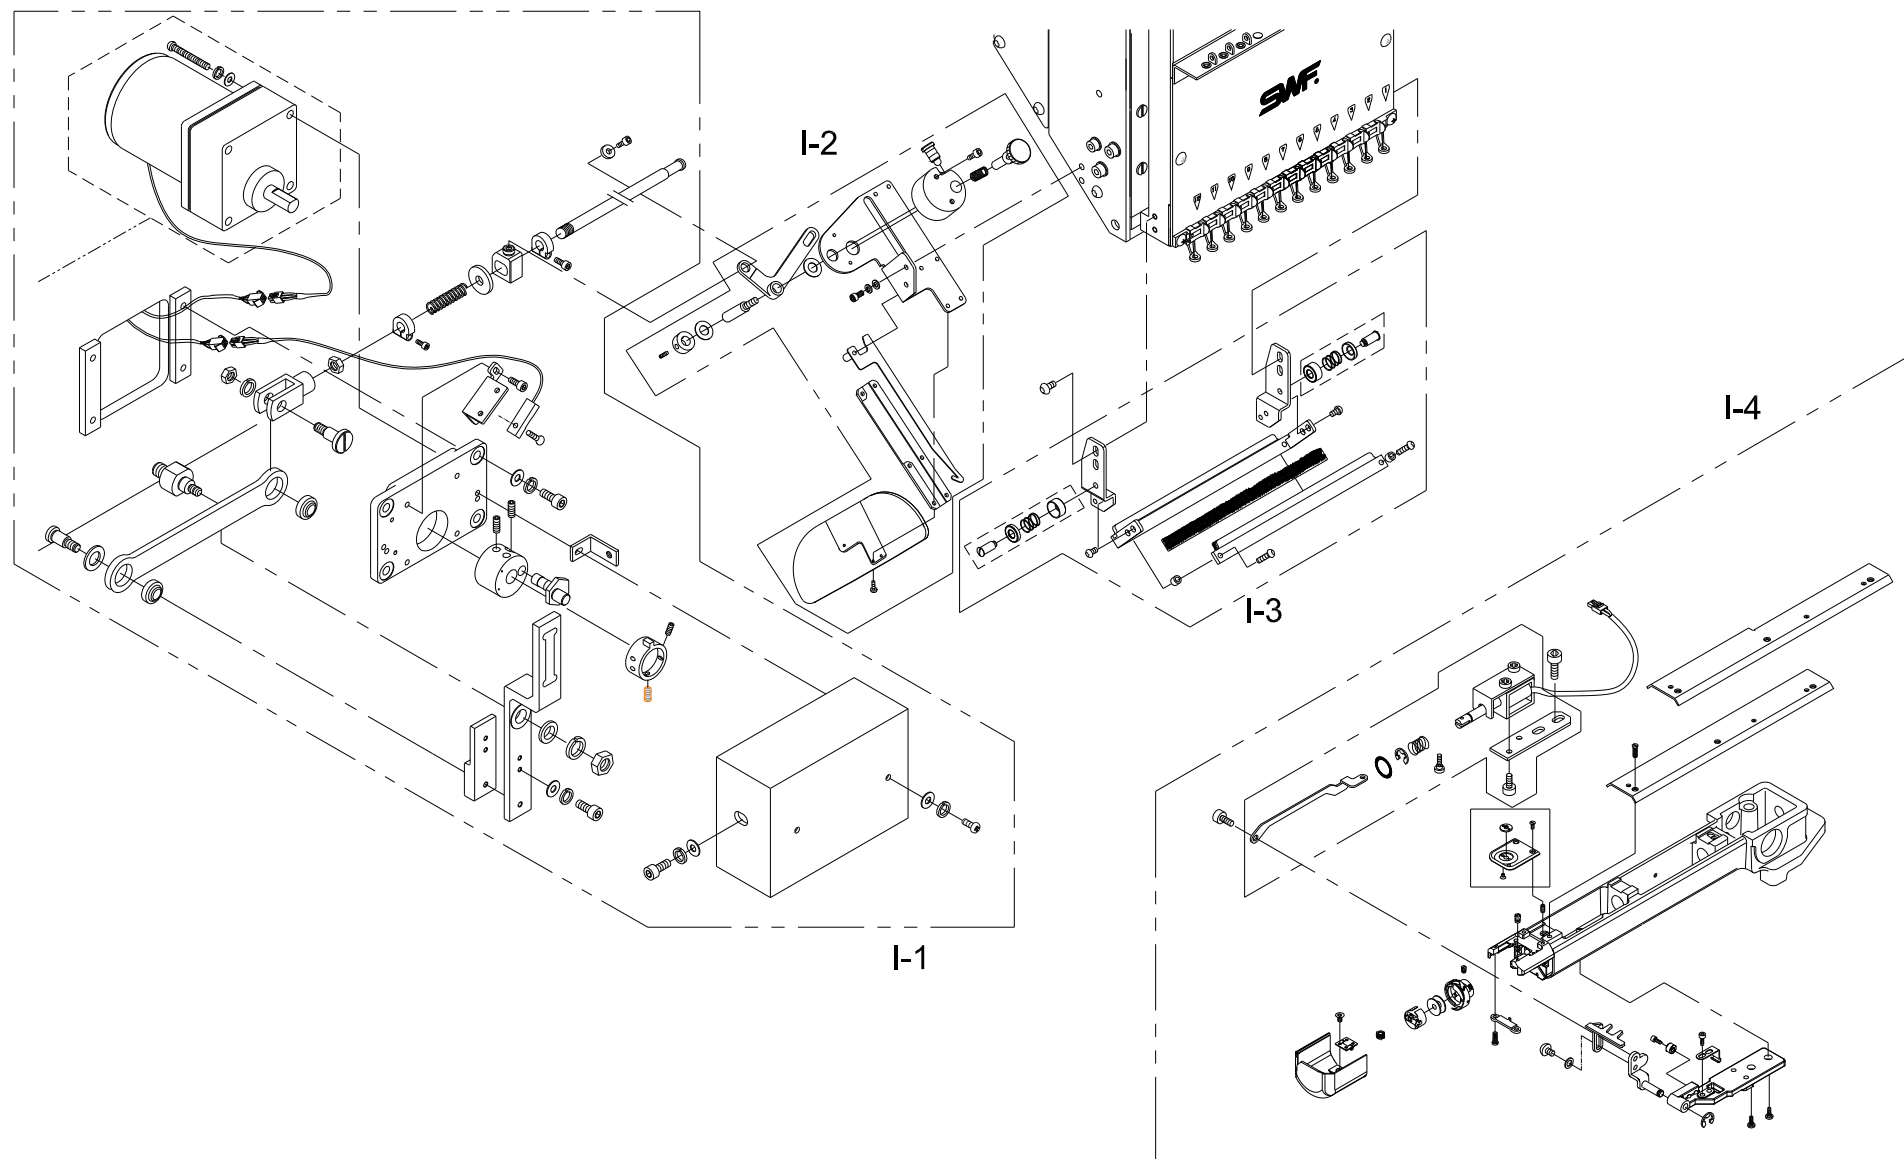

I-1

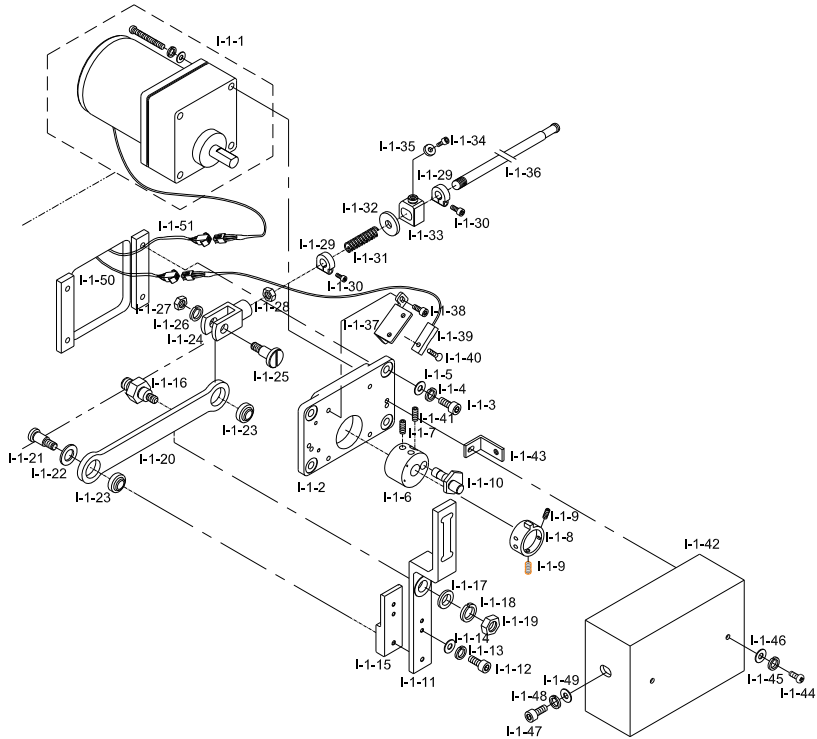 

Note

Ref.No	Part No.	Part Name	Application date	Interchangeability	Hardware	Q'ty	Remarks
I-1-1	EP-000141-00	Upper Thread Hook Motor Unit	Mar,22,06 ~	X		1	
I-1-2	GP-015086-00	MOTOR BASE	Feb,09,06 ~ Jul.08.10	X		1	
	GP-015086-01		Jul.08.10 ~	△			
I-1-3	06025MC-7113	Hex.Socket Bolt (M6*L25)			○	4	
I-1-4	16014SW-4115	Spring Washer (@6)			○	4	
I-1-5	08057SW-1111	Washer (@6)			○	4	
I-1-6	03003300H000	Cam Shaft Fixing Block				1	
I-1-7	05008MC-4517	Hex.Socket Bolt (M5*L8)			○	2	
I-1-8	GP-005184-00	SENSOR SENSING ADJUSTING RING	Oct,14,04 ~	X		1	
	GP-005184-01		May,19,05 ~	△			
I-1-9	04014SC-4517	Hex.Socket Set Screw (M5*L5)			○	2	
I-1-10	03003500H000	Motor Driving Cam Shaft				1	
I-1-11	03003910H000	Upper Thread Driving Plate				1	
I-1-12	18047SC-7113	Hex/ Socket Bolt (M5*L15)			○	2	
I-1-13	18048SW-3115	Spring Washer (5@)			○	2	
I-1-14	18049SW-3111	Washer (@5)			○	2	
I-1-15	03004100H000	Driving Plate Block				1	
I-1-16	SC-001729-00	Stud Bolt For Driving Plate	Jun.03.09 ~ Apr.20.10	X		1	
	SC-001729-01		Apr.20.10 ~ Jul.08.10	△			
	SC-001729-02		Jul.08.10 ~	△			
I-1-17	WS-000549-00	Stud Bolt Washer	Feb.20.09 ~ Jun.24.09	X		1	
	WS-000549-01		Jun.24.09 ~	△			
I-1-18	15095SW-3115	Spring Washer (@8)			○	1	
I-1-19	04032SN-A001	Hex. Nut (M8-No2)			○	1	
I-1-20	GP-044787-00	MOTOR DRIVING CONNECT PLATE	Jan,13,09 ~	X		1	
I-1-21	03008300H000	Connecting Plate Stud Screw A				1	
I-1-22	03004500H000	Connecting Plate Pin Washer				1	
I-1-23	03004400H000	Motor Driving Connect Bearing				2	
I-1-24	03004800H000	Connecting Plate Knuckle				1	
I-1-25	SC-001605-00	Connecting Plate Stud Screw	Jan,13,09 ~	X		1	
I-1-26	16014SW-4115	SPRING WASHER (@6)			○	1	
I-1-27	13042SN-1111	Hex.Nut (M6*T5-R)			○	1	
I-1-28	04032SN-A001	Hex. Nut (M8-No2)			○	1	
I-1-29	03002610H000	Return Spring Stopper				8	
I-1-30	05008SC-4113	Hex.Socket Bolt (M4*L16)			○	8	
I-1-31	03002700H000	Return Spring				4	
I-1-32	03002800H000	Return Spring Stopper Washer				4	
I-1-33	03003000H000	Return Spring Fix Pin				4	
I-1-34	02015SC-7113	Hex.Socket Bolt (M4*L10)			○	4	
I-1-35	03002900H000	Return Spring Fix Pin Washer				4	
I-1-36	03007000UK20	Upper Thread Driving Shaft (UK1202)				1	
I-1-37	03007000UK40	Upper Thread Driving Shaft (UK1204)				1	

This diagram illustrates the exploded view of the I-1-1 assembly. The components are labeled with part numbers and assembly sequence numbers. The assembly process is indicated by dashed lines and arrows, showing the sequence of parts to be installed. Key components include the main housing (I-1-1), the motor (I-1-2), the control unit (I-1-3), and the base (I-1-4). The diagram also shows the installation of various fasteners, including screws (I-1-5, I-1-6, I-1-7, I-1-8, I-1-9, I-1-10, I-1-11, I-1-12, I-1-13, I-1-14, I-1-15, I-1-16, I-1-17, I-1-18, I-1-19, I-1-20, I-1-21, I-1-22, I-1-23, I-1-24, I-1-25, I-1-26, I-1-27, I-1-28, I-1-29, I-1-30, I-1-31, I-1-32, I-1-33, I-1-34, I-1-35, I-1-36, I-1-37, I-1-38, I-1-39, I-1-40, I-1-41, I-1-42, I-1-43, I-1-44, I-1-45, I-1-46, I-1-47, I-1-48, I-1-49, I-1-50, I-1-51) and nuts (I-1-1, I-1-2, I-1-3, I-1-4, I-1-5, I-1-6, I-1-7, I-1-8, I-1-9, I-1-10, I-1-11, I-1-12, I-1-13, I-1-14, I-1-15, I-1-16, I-1-17, I-1-18, I-1-19, I-1-20, I-1-21, I-1-22, I-1-23, I-1-24, I-1-25, I-1-26, I-1-27, I-1-28, I-1-29, I-1-30, I-1-31, I-1-32, I-1-33, I-1-34, I-1-35, I-1-36, I-1-37, I-1-38, I-1-39, I-1-40, I-1-41, I-1-42, I-1-43, I-1-44, I-1-45, I-1-46, I-1-47, I-1-48, I-1-49, I-1-50, I-1-51). The diagram also shows the installation of the motor (I-1-2) and the control unit (I-1-3) into the main housing (I-1-1). The base (I-1-4) is shown at the bottom, with various fasteners (I-1-15, I-1-16, I-1-17, I-1-18, I-1-19, I-1-20, I-1-21, I-1-22, I-1-23, I-1-24, I-1-25, I-1-26, I-1-27, I-1-28, I-1-29, I-1-30, I-1-31, I-1-32, I-1-33, I-1-34, I-1-35, I-1-36, I-1-37, I-1-38, I-1-39, I-1-40, I-1-41, I-1-42, I-1-43, I-1-44, I-1-45, I-1-46, I-1-47, I-1-48, I-1-49, I-1-50, I-1-51) used to secure it. The diagram also shows the installation of the motor (I-1-2) and the control unit (I-1-3) into the main housing (I-1-1). The base (I-1-4) is shown at the bottom, with various fasteners (I-1-15, I-1-16, I-1-17, I-1-18, I-1-19, I-1-20, I-1-21, I-1-22, I-1-23, I-1-24, I-1-25, I-1-26, I-1-27, I-1-28, I-1-29, I-1-30, I-1-31, I-1-32, I-1-33, I-1-34, I-1-35, I-1-36, I-1-37, I-1-38, I-1-39, I-1-40, I-1-41, I-1-42, I-1-43, I-1-44, I-1-45, I-1-46, I-1-47, I-1-48, I-1-49, I-1-50, I-1-51) used to secure it.

I-2

This diagram illustrates the assembly of the I-2 component, showing the relationship between various parts and their assembly sequence. The parts are labeled as follows:

- I-2-1: Main housing or base plate.
- I-2-2: Small cylindrical component, likely a pin or bush.
- I-2-3: Small cylindrical component, likely a pin or bush.
- I-2-4: Small cylindrical component, likely a pin or bush.
- I-2-5: Large cylindrical component, likely a bearing or bush.
- I-2-6: Small cylindrical component, likely a pin or bush.
- I-2-7: Small cylindrical component, likely a pin or bush.
- I-2-8: Small cylindrical component, likely a pin or bush.
- I-2-9: Small cylindrical component, likely a pin or bush.
- I-2-10: Small cylindrical component, likely a pin or bush.
- I-2-11: Small cylindrical component, likely a pin or bush.
- I-2-12: Small cylindrical component, likely a pin or bush.
- I-2-13: Small cylindrical component, likely a pin or bush.
- I-2-14: Small cylindrical component, likely a pin or bush.
- I-2-15: Small cylindrical component, likely a pin or bush.
- I-2-16: Small cylindrical component, likely a pin or bush.
- I-2-17: Small cylindrical component, likely a pin or bush.
- I-2-18: Small cylindrical component, likely a pin or bush.

The diagram shows the assembly of the I-2 component, including the main housing (I-2-1) and various internal components (I-2-2 through I-2-18). The assembly is shown in an exploded view, indicating the sequence of assembly.


Note

The technical drawing illustrates the SMF 1000 system. The top part shows a perspective view of the main assembly, which consists of a long, multi-segmented track mounted on a wall. The track is labeled 'SMF.' and features a series of numbered callouts (1 through 10) indicating specific components or adjustment points. Below this, a detailed view of the lower components is shown, including a bracket (I-3-2) and a track (I-3-5). Various screws and bolts are labeled with part numbers: I-3-1, I-3-4, I-3-6, I-3-7, I-3-8, I-3-9, I-3-10, and I-3-11. The drawing uses dashed lines to indicate the assembly path and the relationship between the different parts.

Note



 I-4

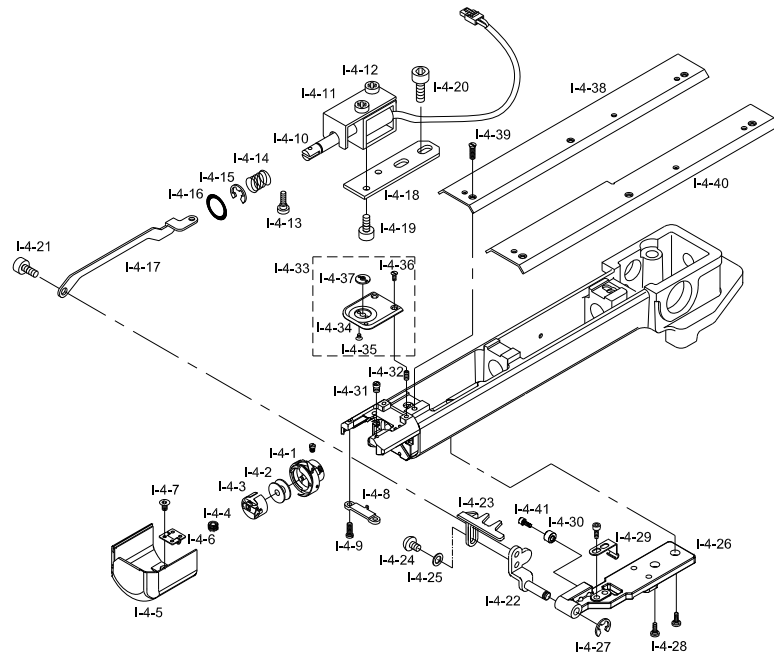

Note

Ref.No	Part No.	Part Name	Application date	Interchangeability	Hardware	Q'ty	Remarks
I-4-1	HK-000002-00	Rotary Hook Set	Oct,16,09 ~	X		4	
	HK-000009-00	Hook Set (Large Hook)				4	
I-4-2	04035AF-A001	Bobbin				4	
	BB-000001-00	Bobbin (Large Hook)	Dec,12,08 ~			4	
	BB-000001-01	Bobbin (Large Hook)	Apr,07,09 ~			4	
	BB-000001-02	Bobbin (Large Hook)	Apr,27,09 ~			4	
I-4-3	04034AF-A001	Bobbin Case Set				4	
I-4-4	GP-005361-00	Hook Cover Insert	Nov,01,04 ~	X		8	
I-4-5	GP-005360-00	Hook Cover	Nov,01,04 ~	X		4	
	GP-005360-01	Hook Cover	Oct,20,05 ~	△			
	GP-005360-02	Hook Cover	May,25,06 ~	△			
	GP-052507-00	Hook Cover (Large Hook)					
I-4-6	HG-000001-00	Hook Cover Hinge	Nov,01,04 ~	X		4	
I-4-7	08014AF-A001	Plus Screw (M3*L8)			○	8	
I-4-8	GP-005358-00	Rotary Hook Support	Nov,01,04 ~	X		4	
	GP-005358-01		Jul,13,05 ~	△			
I-4-9	02011SC-3125	Rotary Hook Support Screw				8	
I-4-10	10009EL-T121	Picker Sol.				4	
I-4-11	01-012A-AT10	Picker Sol. Cover				4	
I-4-12	28021SC-3123	Truss Screw (M3*L4)			○	8	
I-4-13	10021SC-A001	Sol. Stud Screw				4	
I-4-14	10011SP-A001	Sol. Spring				4	
I-4-15	13044SR-4013	E-Ring (@4)			○	4	
I-4-16	10012RB-A001	Cushion Washer				4	
I-4-17	GP-005370-00	Connecting Plate	Nov,02,04 ~	X		4	
	GP-052406-00	Connecting Plate (Large Hook)				4	
I-4-18	01-013A-AT10	Picker Sol. Base				4	
I-4-19	06010AF-8118	Plus Screw(M3*L4)			○	8	
I-4-20	02015SC-7113	Hex.Socket Bolt(M4*L10)			○	8	
I-4-21	08012CW-T121	Connecting Plate Stud Screw				4	
I-4-22	AS-001429-00	Picker Base Ass'Y	Nov,01,04 ~	X		4	
	AS-001429-01	Picker Base Ass'Y	May,30,06 ~	△			
	AS-001429-02	Picker Base Ass'Y	Des,04,08 ~	△			
	AS-018368-00	Picker Base Ass'Y (Large Hook)					
I-4-23	GP-005368-00	Picker	Nov,01,04 ~	X		4	
	GP-052407-00	Picker (Large Hook)				4	
I-4-24	07018SC-8118	Plus Screw (M3*L8)			○	8	
I-4-25	WS-000085-00	Washer for Picker Base	Des,28,04 ~	X		8	


I-4

This exploded view diagram illustrates the assembly of a mechanical component, likely a door or panel. The parts are numbered as follows:


- I-4-1:** A small circular component, possibly a pin or washer.
- I-4-2:** A small circular component, possibly a pin or washer.
- I-4-3:** A small circular component, possibly a pin or washer.
- I-4-4:** A small circular component, possibly a pin or washer.
- I-4-5:** A U-shaped bracket or support.
- I-4-6:** A small circular component, possibly a pin or washer.
- I-4-7:** A small circular component, possibly a pin or washer.
- I-4-8:** A small circular component, possibly a pin or washer.
- I-4-9:** A small circular component, possibly a pin or washer.
- I-4-10:** A small circular component, possibly a pin or washer.
- I-4-11:** A small circular component, possibly a pin or washer.
- I-4-12:** A small circular component, possibly a pin or washer.
- I-4-13:** A small circular component, possibly a pin or washer.
- I-4-14:** A small circular component, possibly a pin or washer.
- I-4-15:** A small circular component, possibly a pin or washer.
- I-4-16:** A small circular component, possibly a pin or washer.
- I-4-17:** A long, thin, curved component, possibly a hinge or lever.
- I-4-18:** A small circular component, possibly a pin or washer.
- I-4-19:** A small circular component, possibly a pin or washer.
- I-4-20:** A small circular component, possibly a pin or washer.
- I-4-21:** A small circular component, possibly a pin or washer.
- I-4-22:** A small circular component, possibly a pin or washer.
- I-4-23:** A small circular component, possibly a pin or washer.
- I-4-24:** A small circular component, possibly a pin or washer.
- I-4-25:** A small circular component, possibly a pin or washer.
- I-4-26:** A small circular component, possibly a pin or washer.
- I-4-27:** A small circular component, possibly a pin or washer.
- I-4-28:** A small circular component, possibly a pin or washer.
- I-4-29:** A small circular component, possibly a pin or washer.
- I-4-30:** A small circular component, possibly a pin or washer.
- I-4-31:** A small circular component, possibly a pin or washer.
- I-4-32:** A small circular component, possibly a pin or washer.
- I-4-33:** A small circular component, possibly a pin or washer.
- I-4-34:** A small circular component, possibly a pin or washer.
- I-4-35:** A small circular component, possibly a pin or washer.
- I-4-36:** A small circular component, possibly a pin or washer.
- I-4-37:** A small circular component, possibly a pin or washer.
- I-4-38:** A long, thin, rectangular component, possibly a hinge or lever.
- I-4-39:** A small circular component, possibly a pin or washer.
- I-4-40:** A long, thin, rectangular component, possibly a hinge or lever.

Note

 SPOOL

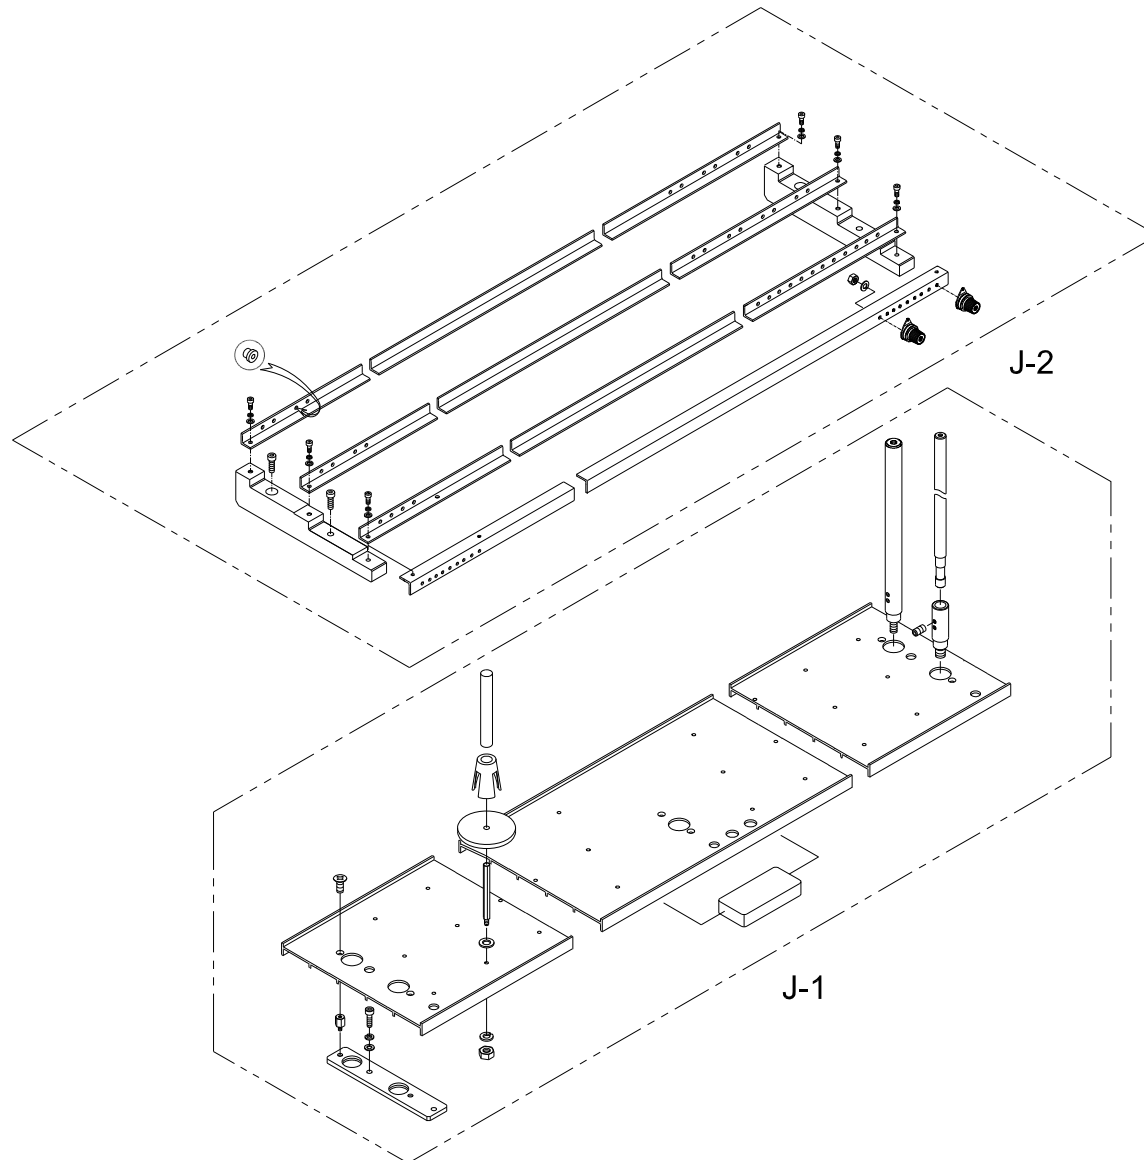


J-1

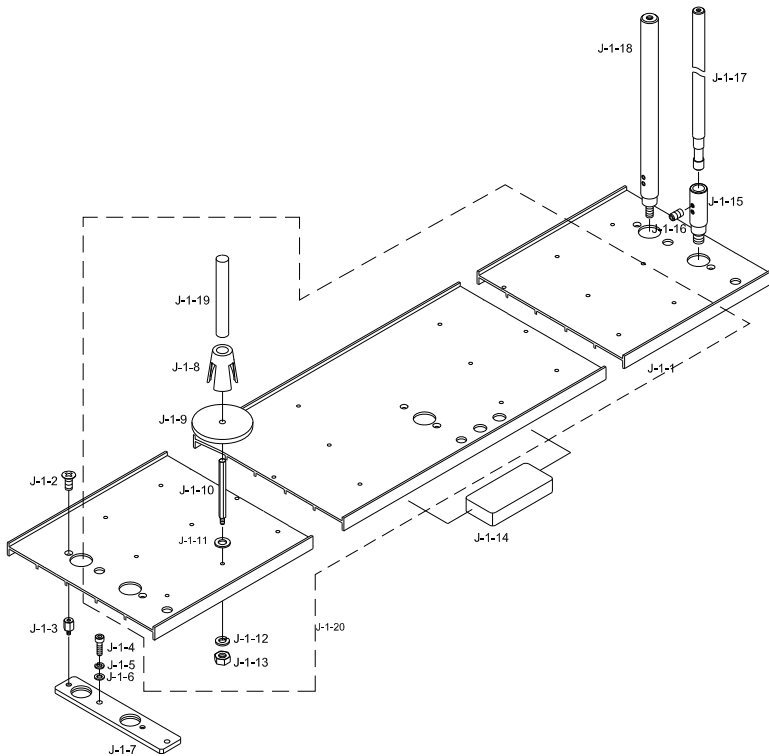 

Note

Ref.No	Part No.	Part Name	Application date	Interchangeability	Hardware	Q'ty	Remarks
J-1-1	12001AD-UK02	Spool Plate (L=950) (UK1202)				1	
	12001AD-UK12	Spool Plate (L=1080) (UK1502)				1	
	11000102UK00	Spool Plate(L=2080) (UK604)				1	
	GP-054455-00	Spool Plate(L=2080) (UK1204)				1	
	11001AD-UK14	Spool Plate(L=2080) (UK1504)				1	
	05100102UK00	Spool Plate (L=3020) (UK606)				1	
	05100103UK00	Spool Plate (L=2950) (UK906)				1	
	12001AD-UK06	Spool Plate (L=2950) (UK1206)				1	
	12001AD-UK16	Spool Plate (L=2950) (UK1506)				1	
	05100104UH00	Spool Plate L=2480 (UH1206C)				1	
	05100105UH00	Spool Plate L=2480 (UH1506C)				1	
	05100104UH08	SPOOL PLATE L=3280 (UH1208)				1	
	05100105UH80	SPOOL PLATE L=3280 (UH1508)				1	
J-1-2	02002SC-7119	Plus Screw (M4*L8)			○	8	
J-1-3	11005CW-UK01	Spool Plate Fixing Bolt M6*L21			○	8	
	03016SC-4113	Hex. Socket Bolt (M5*L15)			○	8	
J-1-5	18048SW-3115	Spring Washer (@5)			○	8	
J-1-6	18049SW-3111	Washer (@5)			○	8	
J-1-7	11006PR-UK01	Spool Plate Base				4	
J-1-8	12012PM-A001	Spool Holder				48	
J-1-9	12052SF-A001	Spool Sponge				48	
J-1-10	GP-054029-00	Spool Post				48	
J-1-11	18049SW-3111	Washer (@5)			○	48	
J-1-12	18048SW-3115	Spring Washer (@5)			○	48	
J-1-13	12010SN-1211	Hex.Nut (M5)				48	
J-1-14	12033RB-UK01	Cushion Rubber				1	
J-1-15	12014SC-A001	Spool Stand Bolt				5	
J-1-16	04014SC-4517	Hex.Socket Set Screw(M5*L5)			○	10	
J-1-17	12015SF-A001	Spool Stand (L=330) (6,12C)				5	
	01001500T000	Spool Stand (L=380) (15C)					
J-1-18	01001504U000	Spool Stand L=345 (UK604) (UK1204)				4	
	01001505U000	Spool Stand L=395 (UK1204) (UK1504)					
	01001504U000	Spool Stand L=345 (UH1206C) (UH1506C)					
	01001505U000	Spool Stand L=395 (UH1506C)					
J-1-19	10000100A000	Thread Guide L=200				8	
J-1-20	AS-001333-00	Spool Plate Assy	Oct,08,04 ~	X		1	

 J-2

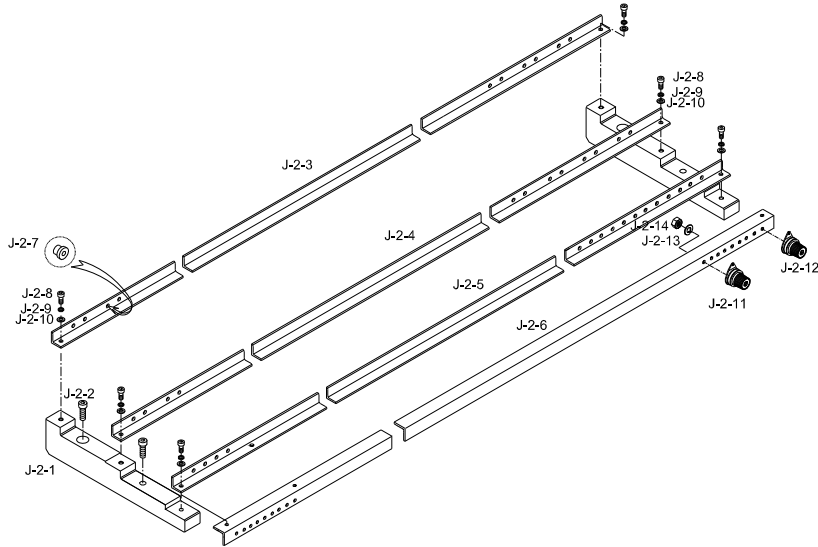

Note

Ref.No	Part No.	Part Name	Application date	Interchangeability	Hardware	Q'ty	Remarks
J-2-1	10600100H000	Thread Angle Frame				5	
J-2-2	03016SC-4113	Hex. Socket Bolt (M5*L15)			○	5	
J-2-3	12019AD-UK02	Angle "A" L=890 (UK1202)				1	
	12019AD-UK12	Angle "A" L=1020 (UK1502)				1	
	05200304UK24	Angle "A" L=2020 (UK604)				1	
	GP-054451-00	Angle "A" L=2020 (UK1204)				1	
	11022AD-UK14	Angle "A" L=2020 (UK1504)				1	
	05200102UK00	Angle (A) L=3020 (UK606)				1	
	05200103UK00	Angle (A) L=3020 (UK906)				1	
	12019AD-UK06	Angle (A) L=3020 (UK1206)				1	
	12019AD-UK16	Angle (A) L=3020 (UK1506)				1	
	05200104UH00	Angle "A" L=2420 (UH1206C)				1	
	05200105UH00	Angle "A" L=2420 (UH1506C)				1	
	05200104UH08	Angle "A" L=3220 (UH1208)				1	
	05200105UH80	Angle "A" L=3220 (UH1508)				1	
J-2-4	12020AD-UK02	Angle "B" L=890 (UK1202)				1	
	12020AD-UK12	Angle "B" L=1020 (UK1502)				1	
	05200404UK24	Angle "B" L=2020 (UK604)				1	
	GP-054452-00	Angle "B" L=2020 (UK1204)				1	
	11023AD-UK14	Angle "B" L=2020 (UK1504)				1	
	05200202UK00	Angle (B) L=3020 (UK606)				1	
	05200203UK00	Angle (B) L=3020 (UK906)				1	
	12020AD-UK06	Angle (B) L=3020 (UK1206)				1	
	12020AD-UK16	Angle (B) L=3020 (UK1506)				1	
	05200204UH00	Angle "B" L=2420 (UH1206C)				1	
	05200205UH00	Angle "B" L=2420 (UH1506C)				1	
	05200204UH08	Angle "B" L=3220 (UH1208)				1	
	05200205UH80	Angle "B" L=3220 (UH1508)				1	
J-2-5	05200104UK20	Angle "C" L=890 (UK1202)				1	
	05200105UK20	Angle "C" L=1020 (UK1502)				1	
	05200104UK24	Angle "C" L=2020 (UK604)				1	
	GP-054453-00	Angle "C" L=2020 (UK1204)				1	
	05200105UK40	Angle "C" L=2020 (UK1504)				1	
	05200104UK60	Angle "C" (L=3020) (UK606)				1	
	05200303UK00	Angle "C" (L=3020) (UK906)				1	
	05200105UK60	Angle "C" (L=3020) (UK1206)				1	
	05200312UK00	Angle "C" (L=3020) (UK1506)				1	

J-2

This exploded view diagram illustrates the assembly of the J-2 system. The components are labeled as follows:


- J-2-1**: The main base plate or frame.
- J-2-2**: A vertical support or bracket.
- J-2-3**: A long horizontal rail or track.
- J-2-4**: A shorter horizontal rail or track.
- J-2-5**: A horizontal rail or track.
- J-2-6**: A horizontal rail or track.
- J-2-7**: A circular component, likely a cap or end plug.
- J-2-8**: A small vertical pin or screw.
- J-2-9**: A small vertical pin or screw.
- J-2-10**: A small vertical pin or screw.
- J-2-11**: A small vertical pin or screw.
- J-2-12**: A small vertical pin or screw.
- J-2-13**: A small vertical pin or screw.
- J-2-14**: A small vertical pin or screw.

The diagram shows the relative positions and orientations of these parts, with dashed lines indicating the assembly path. The components are arranged in a way that suggests they are part of a larger, complex structure.

Note

J

 Table (UK1204)

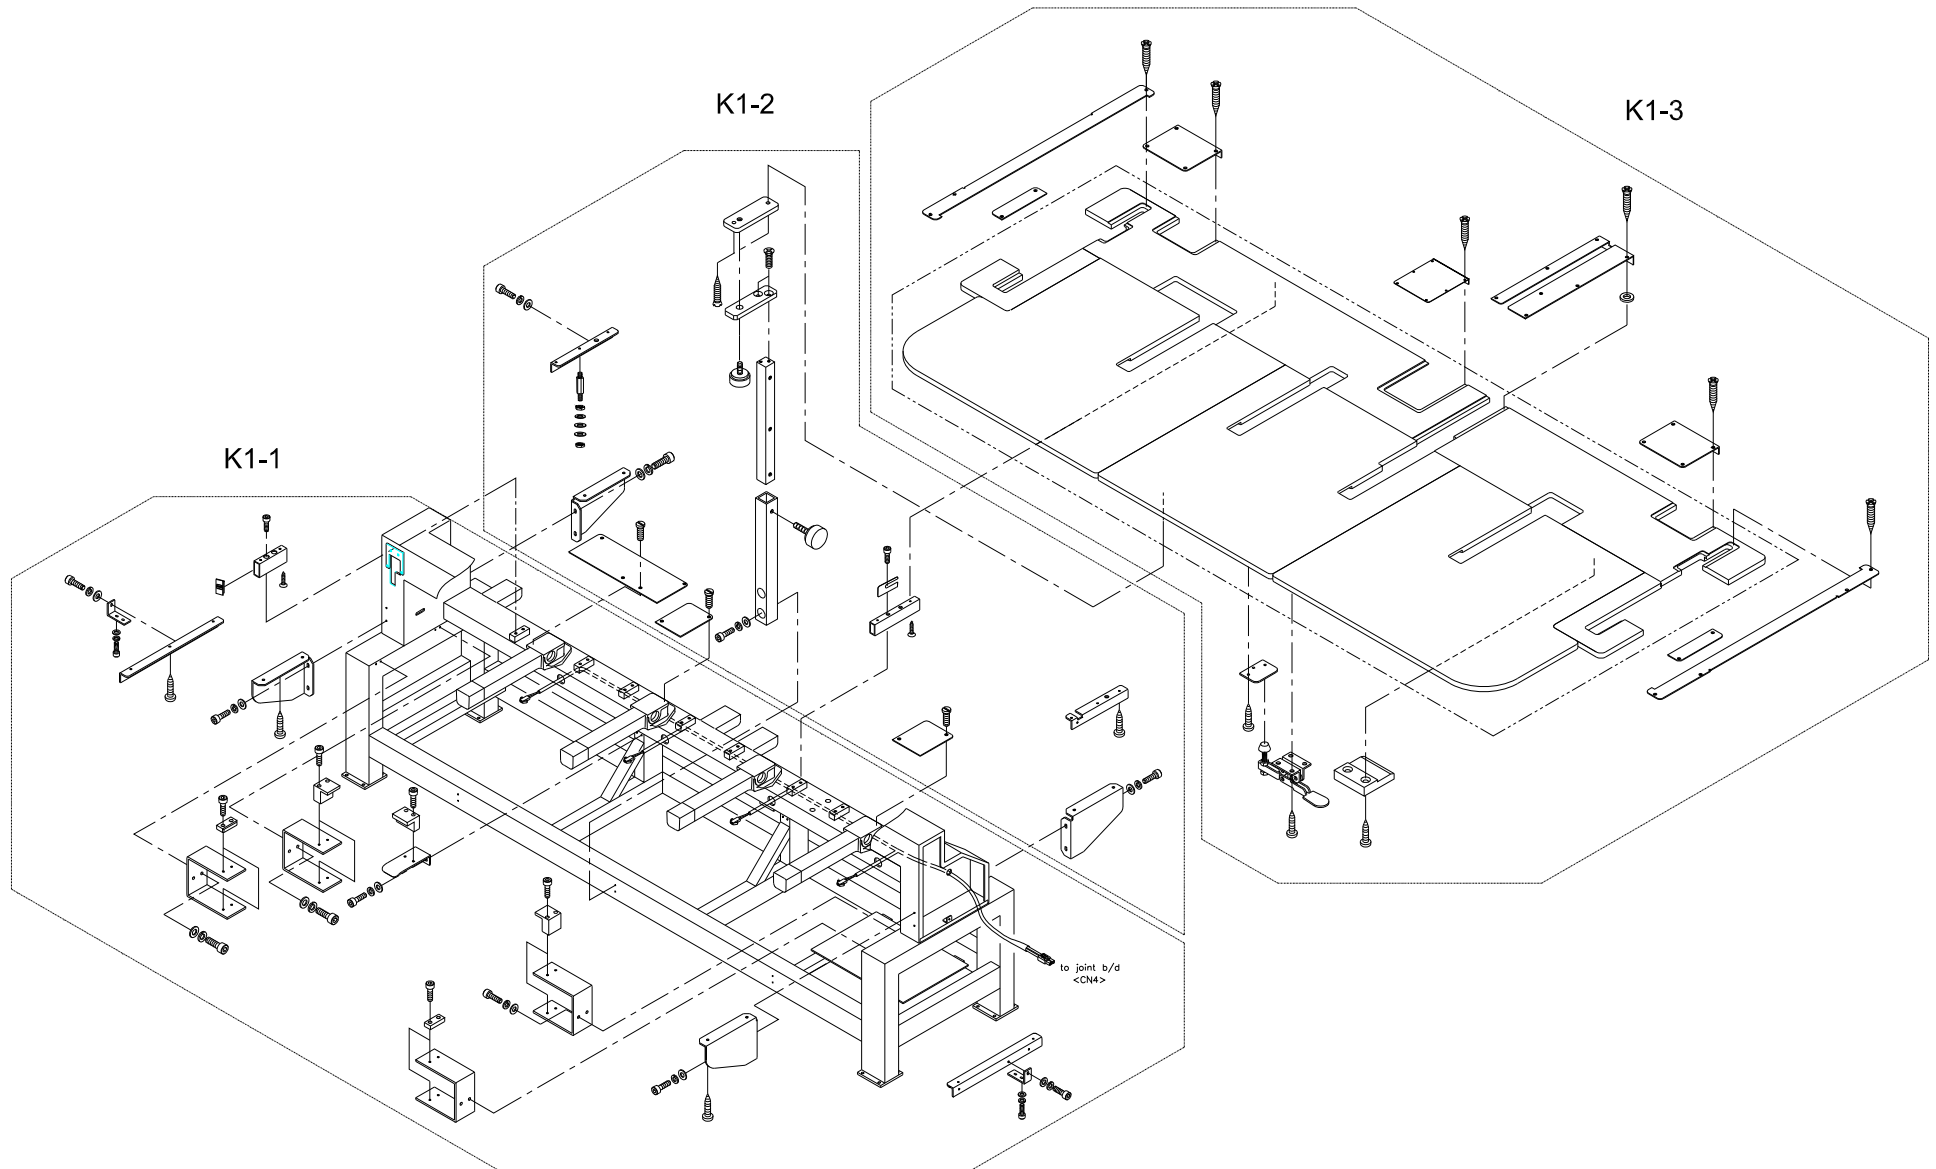

K1

[illegible]

K1-2

Assembly diagram for the K1-2 system, showing the installation of various components onto a base structure. The diagram includes a large 'K1-2' label in the top left corner. Components are labeled with part numbers: K1-2-1 through K1-2-31. The assembly process is shown in a 3D perspective view, with dashed lines indicating the placement of parts. A cable is shown connecting the assembly to a joint labeled 'to joint b/d <CN4>'.

Note

K1

This exploded view diagram illustrates the assembly of the K1-3-10 unit. The main components and their assembly points are labeled as follows:


- K1-3-1**: The main rectangular base plate.
- K1-3-2**: A long horizontal support rail.
- K1-3-3**: A curved support rail.
- K1-3-4**: A small rectangular plate.
- K1-3-5**: A long horizontal support rail.
- K1-3-6**: A small rectangular plate.
- K1-3-7**: A small rectangular plate.
- K1-3-8**: A long horizontal support rail.
- K1-3-9**: A long horizontal support rail.
- K1-3-10**: A small rectangular plate.
- K1-3-11**: A screw used for securing various plates and rails.
- K1-3-12**: A small circular component.
- K1-3-13**: A small rectangular plate.
- K1-3-14**: A small rectangular plate.
- K1-3-15**: A small rectangular plate.
- K1-3-16**: A small rectangular plate.
- K1-3-17**: A small rectangular plate.
- K1-3-18**: A small rectangular plate.
- K1-3-19**: A small rectangular plate.

The diagram shows the relative positions and assembly sequence of these components, with dashed lines indicating the alignment and path of the screws (K1-3-11) used to secure them.

Note

K1

 Table (UK1206)

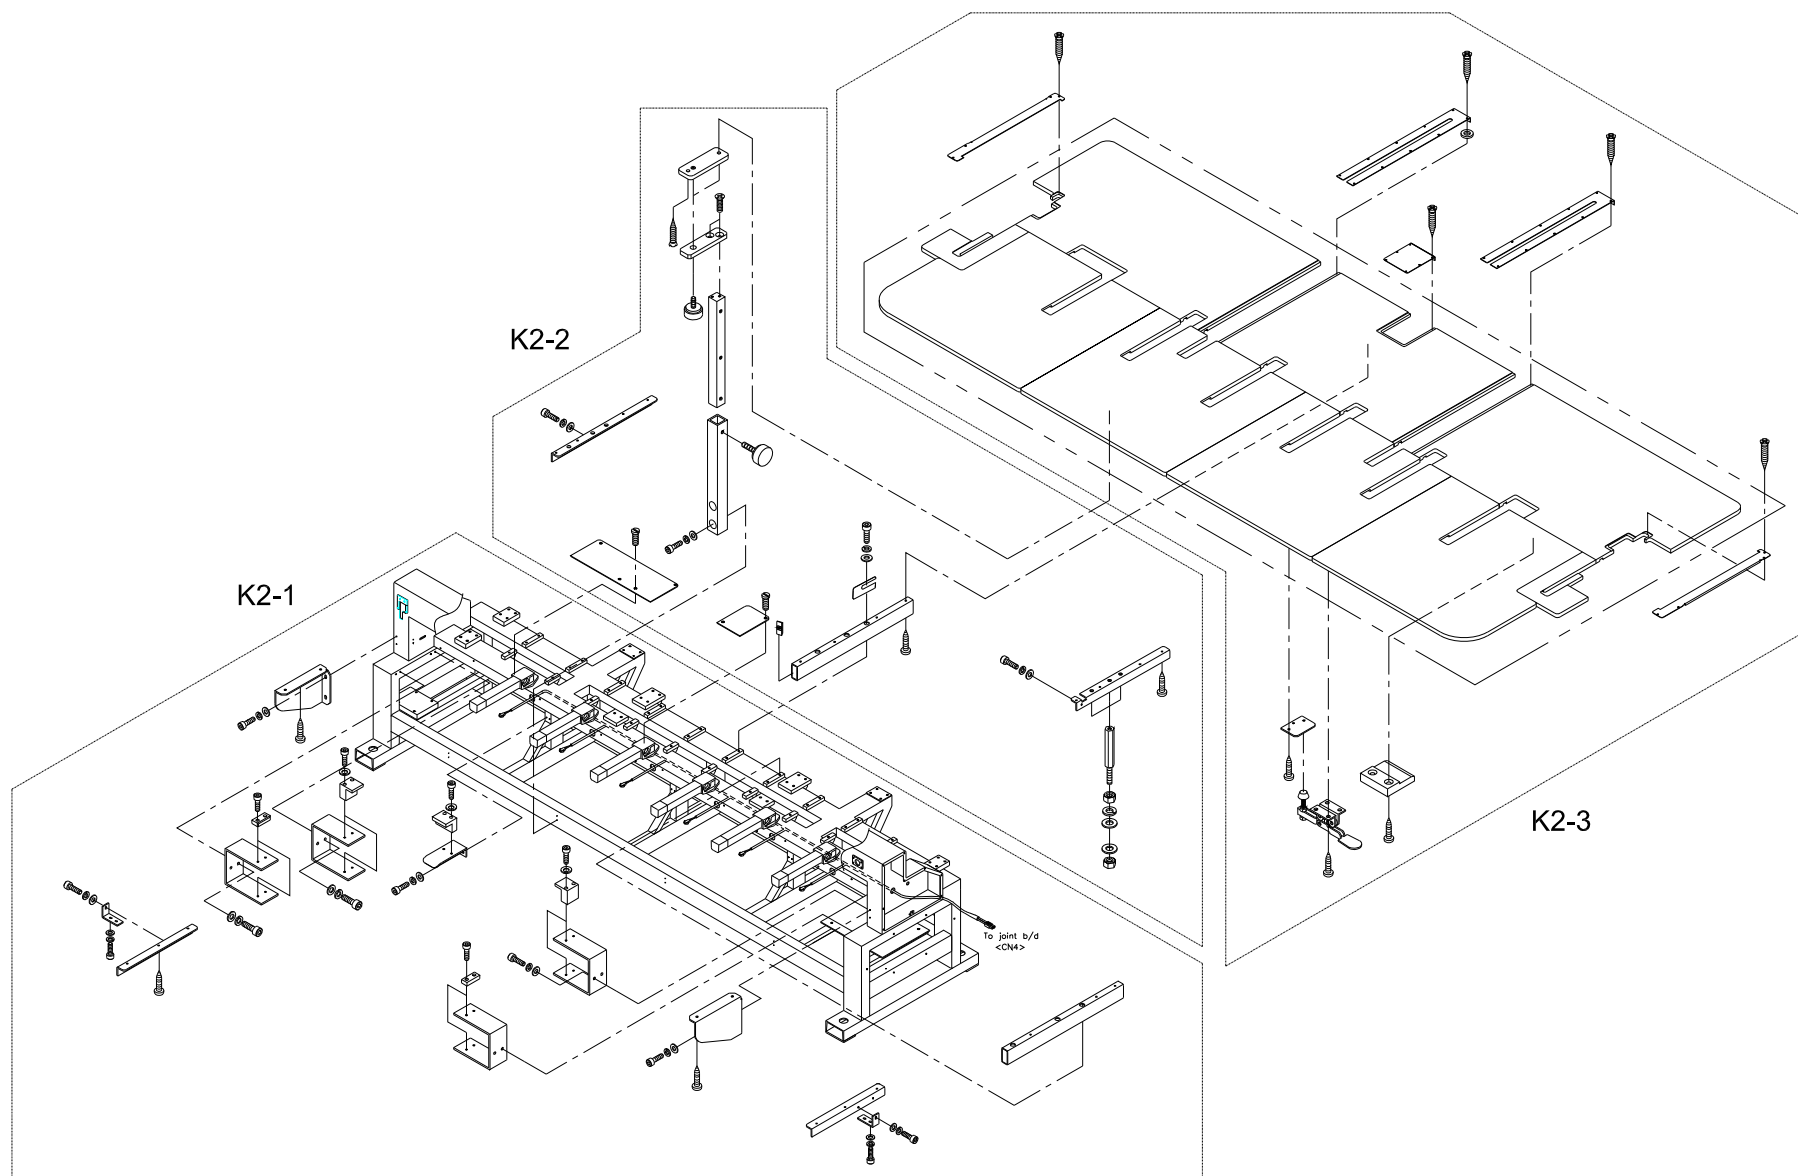

K2-1

This diagram illustrates the exploded view of the K2-1 machine frame assembly. The main frame is shown in the center, with various components and sub-assemblies positioned around it, connected by dashed lines indicating their assembly paths. The components are labeled with part numbers:

- Top Left:** K2-1-3, K2-1-4, K2-1-5, K2-1-17, K2-1-6.
- Left Side:** K2-1-1, K2-1-5, K2-1-4, K2-1-3, K2-1-12, K2-1-13, K2-1-11, K2-1-7, K2-1-10, K2-1-9, K2-1-14, K2-1-15, K2-1-5, K2-1-4, K2-1-3, K2-1-8, K2-1-1.
- Bottom Left:** K2-1-10, K2-1-8, K2-1-5, K2-1-4, K2-1-3, K2-1-6.
- Bottom Center:** K2-1-10, K2-1-8, K2-1-5, K2-1-4, K2-1-3, K2-1-6.
- Bottom Right:** K2-1-10, K2-1-8, K2-1-5, K2-1-4, K2-1-3, K2-1-6.
- Right Side:** K2-1-18, K2-1-19, K2-1-17, K2-1-5, K2-1-4, K2-1-3.

Assembly instructions are provided for the right side of the frame:

- For the joint b/d <CN4>: K2-1-19, K2-1-17, K2-1-5, K2-1-4, K2-1-3.
- For the joint b/d <CN4>: K2-1-19, K2-1-17, K2-1-5, K2-1-4, K2-1-3.

Note

K2

K2-2

Exploded view diagram of the K2-2 assembly, showing various components and their assembly sequence. The diagram includes a main assembly view at the bottom and a detailed exploded view of the upper structure. Components are labeled with part numbers: K2-2-1 through K2-2-31. The exploded view shows a vertical assembly of plates and brackets, with a horizontal beam assembly to the right. The main assembly view shows the lower structure with various components already installed.

Key components and assembly points shown:

- Vertical Assembly (Left):**
 - K2-2-21, K2-2-23, K2-2-24, K2-2-22, K2-2-28, K2-2-25, K2-2-27, K2-2-26, K2-2-3, K2-2-2, K2-2-31, K2-2-30, K2-2-29, K2-2-1, K2-2-5.
- Horizontal Beam Assembly (Right):**
 - K2-2-8, K2-2-9, K2-2-10, K2-2-7, K2-2-4, K2-2-6, K2-2-18, K2-2-19, K2-2-20, K2-2-11, K2-2-6, K2-2-13, K2-2-14, K2-2-15, K2-2-16, K2-2-17, K2-2-14.
- Main Assembly View (Bottom):**
 - To joint b/d <CN4>

Note

[illegible]

101

K2-3

This exploded view diagram illustrates the assembly of the K2-3 kitchen unit. The main components are labeled as follows:


- K2-3-1**: Main cabinet body.
- K2-3-2**: Internal divider panel.
- K2-3-3**: Lower cabinet panel.
- K2-3-4**: Upper cabinet panel.
- K2-3-5**: Top panel.
- K2-3-6**: Side panel.
- K2-3-7**: Back panel.
- K2-3-8**: Top left corner bracket.
- K2-3-9**: Top right corner bracket.
- K2-3-10**: Top center bracket.
- K2-3-11**: Top left side panel.
- K2-3-12**: Top right side panel.
- K2-3-13**: Top center side panel.
- K2-3-14**: Top center side panel (right side).
- K2-3-15**: Screws for top panels.
- K2-3-16**: Lower cabinet panel bracket.
- K2-3-17**: Lower cabinet panel bracket (right side).
- K2-3-18**: Lower cabinet panel bracket (left side).
- K2-3-19**: Lower cabinet panel bracket (right side).
- K2-3-20**: Lower cabinet panel bracket (left side).

The diagram shows the relative positions and assembly order of these components, with dashed lines indicating the alignment and path of screws.

Note

K2

 Table (UK1506-45)

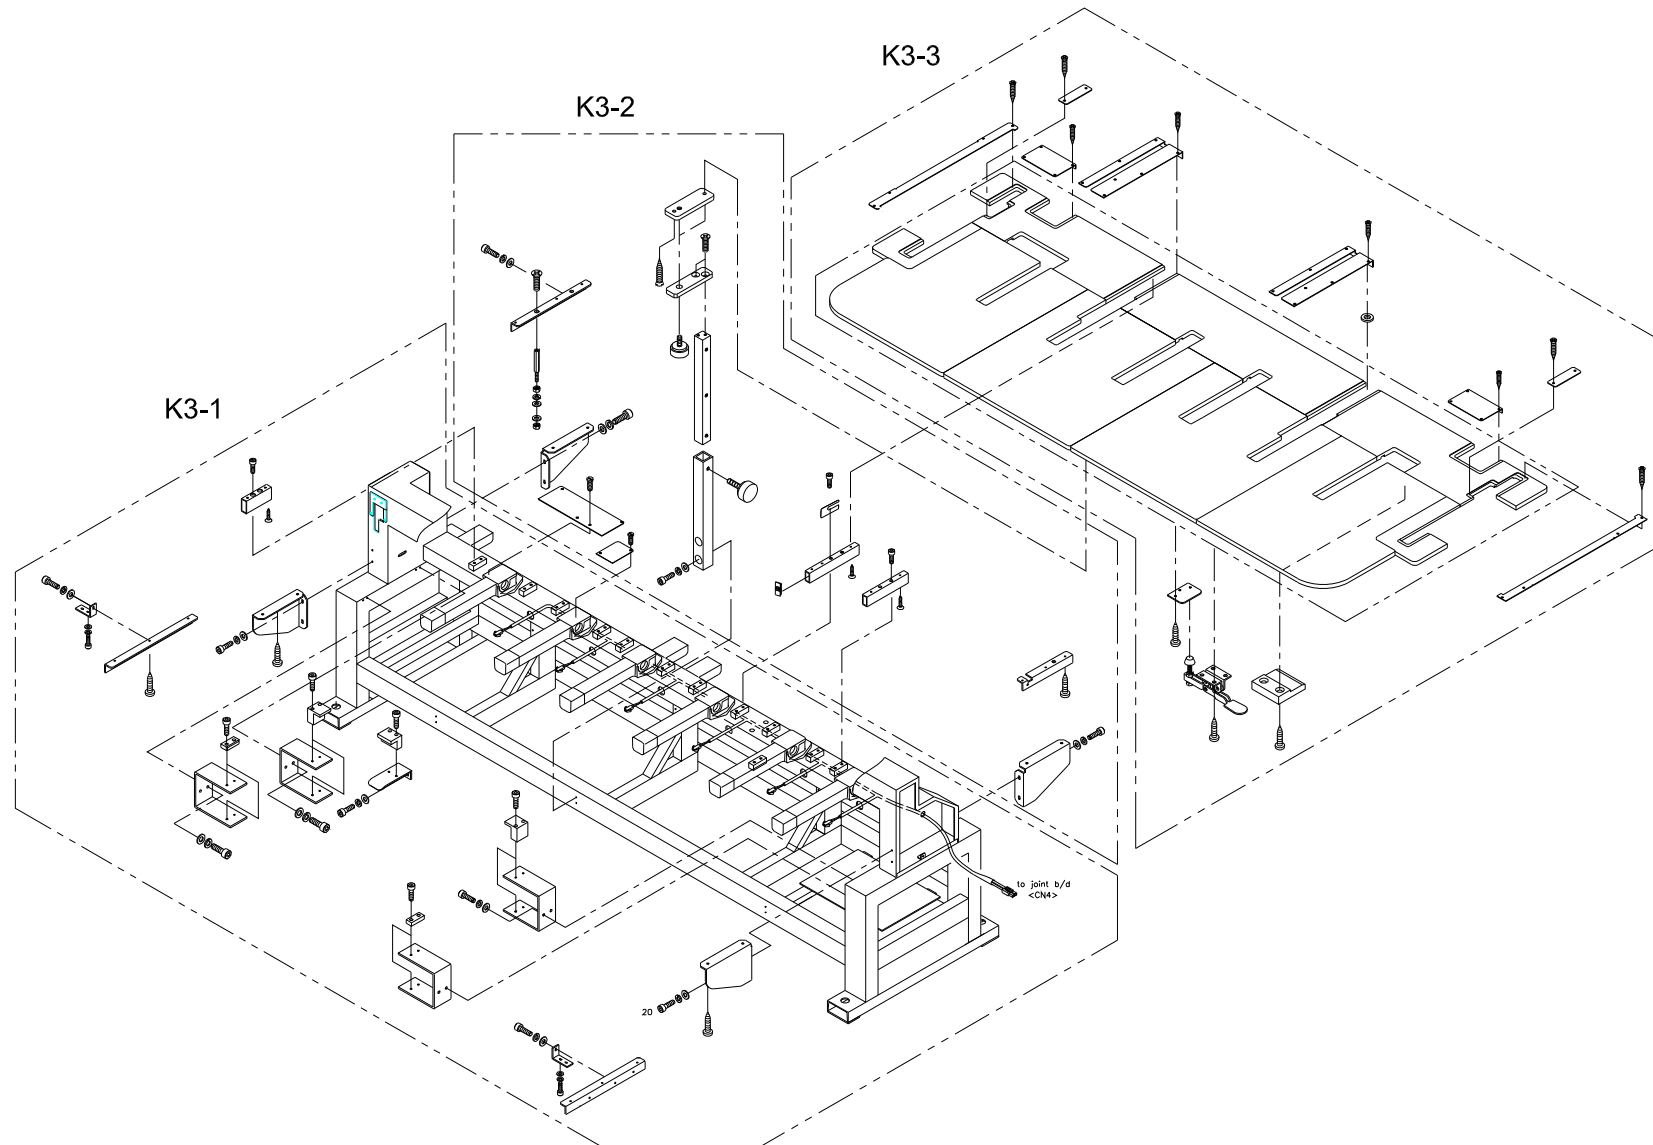


K3-1

Note

K3

 K3-2

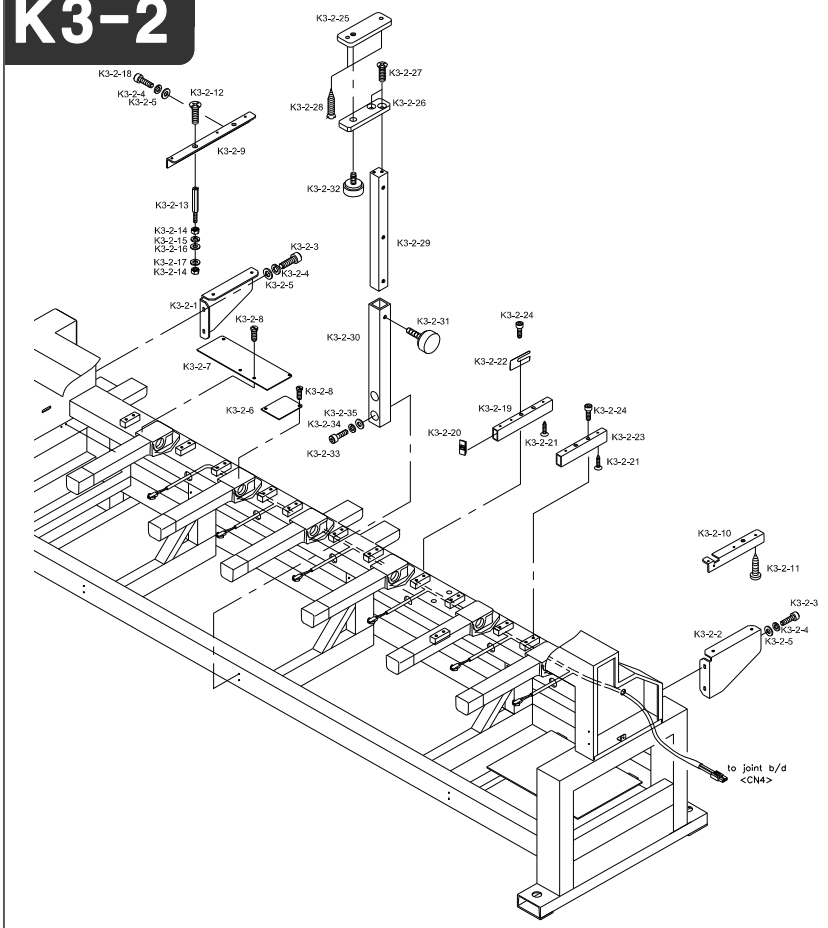

Note

Ref.No	Part No.	Part Name	Application date	Interchangeability	Hardware	Q'ty	Remarks
K3-2-1	16020PR-UK01	Front Table Support (L)				1	
K3-2-2	16025PR-UK01	Front Table Support (R)				1	
K3-2-3	08076SC-7113	Hex. Socket Bolt (M5*L12)			○	21	
K3-2-4	18048SW-3115	Spring Washer (@5)			○	21	
K3-2-5	16018SW-1111	Washer (@5)			○	25	
K3-2-6	16016PR-UK01	Gear Cover				2	
K3-2-7	16018PR-UK01	Mes Cam Driving Box Cover				1	
K3-2-8	02030SC-T121	Bed Cover Screw(9/64" 40)				10	
K3-2-9	05000920UH01	TABLE SUPPORT ANGLE (A)L250				1	
K3-2-10	05001120UH01	TABLE SUPPORT ANGLE (D)L250				1	
K3-2-11	16009SC-8330	Tapping Screw (M6*L20)			○	6	
K3-2-12	04054SC-8119	Plus Screw(M6*L15)			○	1	
K3-2-13	05001600U000	Table Support Stud				4	
K3-2-14	04032SN-A001	Hex. Nut (M8-No2)			○	4	
K3-2-15	15095SW-3115	Spring Washer (@8)			○	2	
K3-2-16	04029SW-A001	Stud Bolt Washer(S) (@8)			○	2	
K3-2-17	04030SW-A001	Stud Bolt Washer(L) (@8)			○	2	
K3-2-18	08062SC-7113	Hex. Socket Bolt (M5*L20)			○	6	
K3-2-19	GP-008797-00	Table Support Angle (C)L197.5	Apr,26,05 ~	X		8	
	GP-008797-01		Aug,11,06 ~	△			
K3-2-20	GP-003757-00	TABLE SUPPORT END CAP	Aug,19,04 ~	X		20	
K3-2-21	16009SC-8330	Tapping Screw (M6*L20)			○	18	
K3-2-22	05001700U000	Table Support Plate				46	
K3-2-23	05001100UK40	Table Support Angle (B) L160				1	
K3-2-24	14002SC-7113	Hex.Socket Bolt (M6*L15)			○	18	
K3-2-25	16061PR-UK01	Table Support Plate (A)				4	
K3-2-26	16058AD-UK01	Table Support Plate (B)				4	
K3-2-27	08101SC-8329	Tapping Screw (M3*L16)			○	20	
K3-2-28	15089SC-7119	C.S Screw (M4*L12)				8	
K3-2-29	05001300U000	Table Support L=263				4	
K3-2-30	GP-008798-00	Table Support Guide	Apr,26,05 ~	X		4	
K3-2-31	17062SC-UK01	Table Support Stopper Screw				2	
K3-2-32	17063SC-UK01	Table Support Stopper Screw				2	
K3-2-33	02015SC-7113	Hex.Socket Bolt(M4*L10)			○	24	
K3-2-34	02028SW-9115	Spring Washer (@4)			○	8	
K3-2-35	05009SW-1111	Washer (@4-L)				8	

K3

K3-3


This exploded view diagram illustrates the assembly of the K3-3 kitchen cabinet. The components are labeled with part numbers and arrows indicating their assembly sequence:

- K3-3-1**: Main cabinet body panel.
- K3-3-2**: Bottom panel.
- K3-3-3**: Middle panel.
- K3-3-4**: Right side panel.
- K3-3-5**: Top panel.
- K3-3-6**: Right side panel (inner).
- K3-3-7**: Top panel (inner).
- K3-3-8**: Right side panel (inner).
- K3-3-9**: Middle panel (inner).
- K3-3-10**: Top panel (inner).
- K3-3-11**: Right side panel (inner).
- K3-3-12**: Right side panel (inner).
- K3-3-13**: Middle panel (inner).
- K3-3-14**: Top panel (inner).
- K3-3-15**: Right side panel (inner).
- K3-3-16**: Right side panel (inner).
- K3-3-17**: Right side panel (inner).
- K3-3-18**: Right side panel (inner).
- K3-3-19**: Bottom panel (inner).
- K3-3-20**: Bottom panel (inner).
- K3-3-21**: Bottom panel (inner).
- K3-3-22**: Bottom panel (inner).
- K3-3-23**: Bottom panel (inner).

Note

K3

 Cable

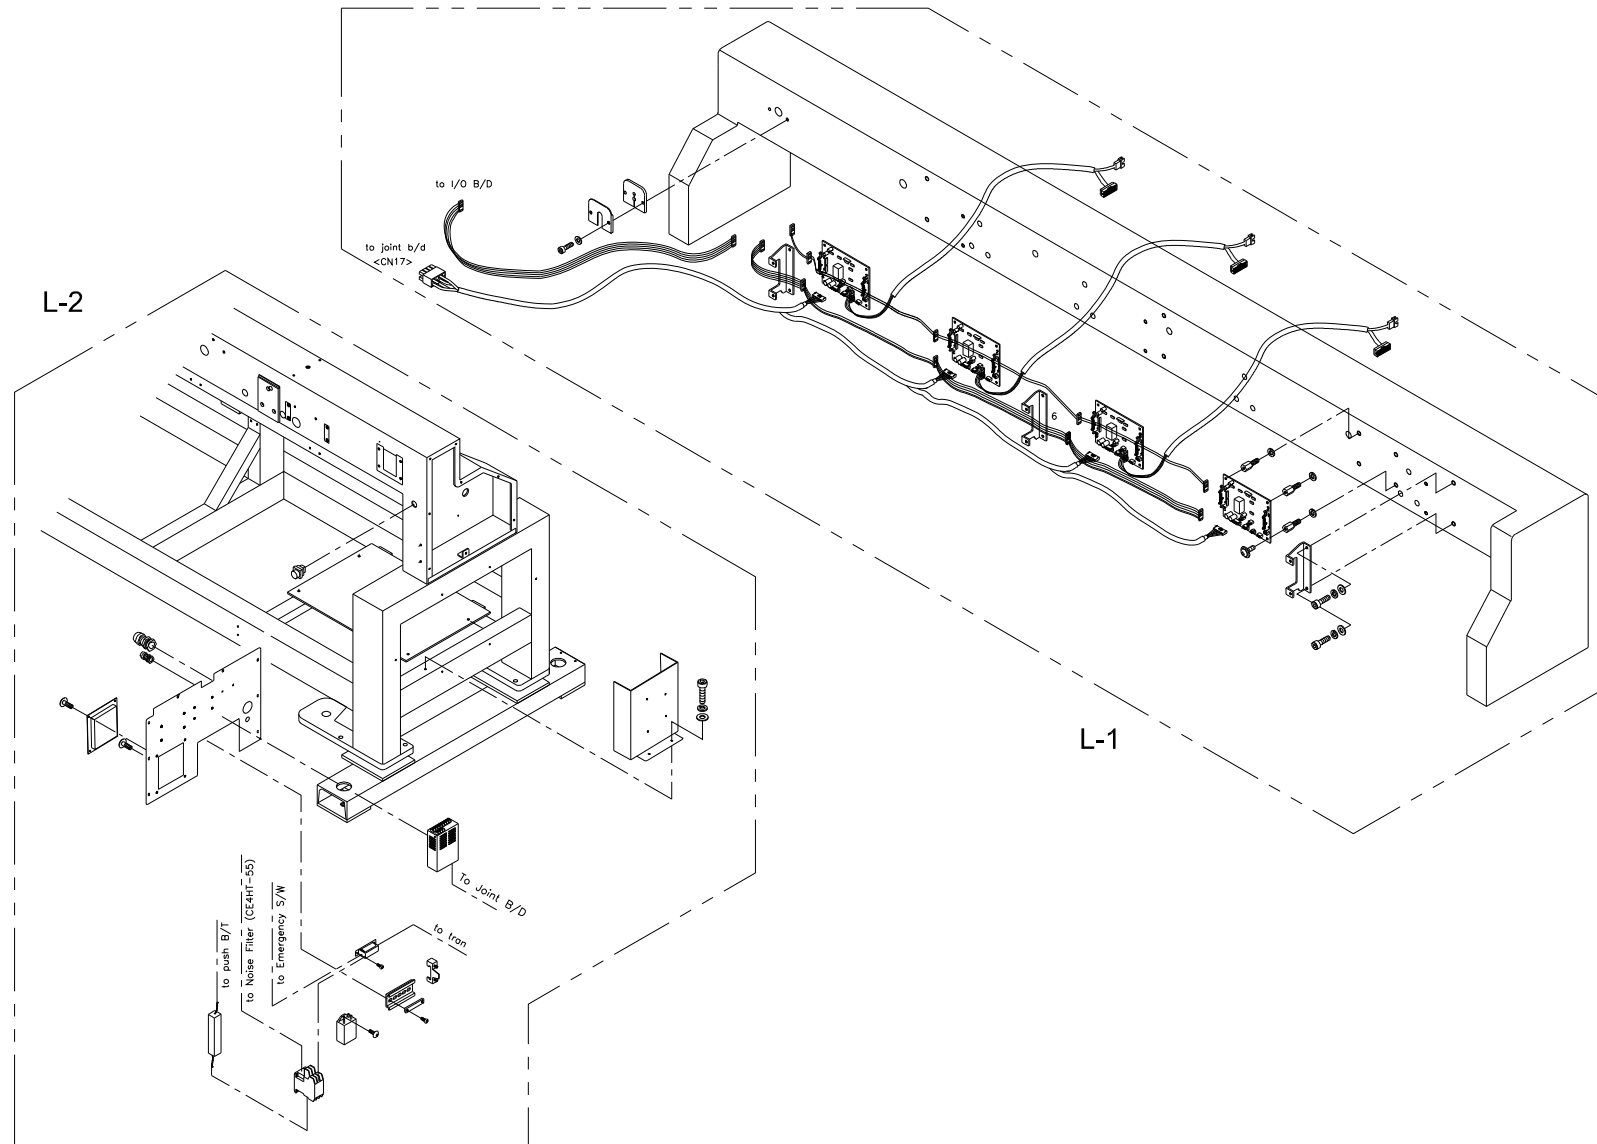

Note



L-2

This diagram illustrates the assembly of the L-2 unit. The main components shown are:

- L-2-1**: The main chassis or housing.
- L-2-2**: A small component, possibly a connector or plug.
- L-2-3**: A component with multiple pins, likely a connector or interface board.
- L-2-4**: A component with multiple pins, likely a connector or interface board.
- L-2-5**: A component with multiple pins, likely a connector or interface board.
- L-2-6**: A component with multiple pins, likely a connector or interface board.
- L-2-7**: A component with multiple pins, likely a connector or interface board.
- L-2-8**: A component with multiple pins, likely a connector or interface board.
- L-2-9**: A component with multiple pins, likely a connector or interface board.
- L-2-10**: A component with multiple pins, likely a connector or interface board.
- L-2-11**: A component with multiple pins, likely a connector or interface board.
- L-2-12**: A component with multiple pins, likely a connector or interface board.
- L-2-13**: A component with multiple pins, likely a connector or interface board.
- L-2-14**: A component with multiple pins, likely a connector or interface board.
- L-2-15**: A component with multiple pins, likely a connector or interface board.
- L-2-16**: A component with multiple pins, likely a connector or interface board.
- L-2-17**: A component with multiple pins, likely a connector or interface board.

 
Connections are indicated by dashed lines and labels:

- L-2-11** to **L-2-12**
- L-2-12** to **L-2-13**
- L-2-13** to **L-2-14**
- L-2-14** to **L-2-15**
- L-2-15** to **L-2-16**
- L-2-16** to **L-2-17**
- L-2-17** to **L-2-18**
- L-2-18** to **L-2-19**
- L-2-19** to **L-2-20**
- L-2-20** to **L-2-21**
- L-2-21** to **L-2-22**
- L-2-22** to **L-2-23**
- L-2-23** to **L-2-24**
- L-2-24** to **L-2-25**
- L-2-25** to **L-2-26**
- L-2-26** to **L-2-27**
- L-2-27** to **L-2-28**
- L-2-28** to **L-2-29**
- L-2-29** to **L-2-30**
- L-2-30** to **L-2-31**
- L-2-31** to **L-2-32**
- L-2-32** to **L-2-33**
- L-2-33** to **L-2-34**
- L-2-34** to **L-2-35**
- L-2-35** to **L-2-36**
- L-2-36** to **L-2-37**
- L-2-37** to **L-2-38**
- L-2-38** to **L-2-39**
- L-2-39** to **L-2-40**
- L-2-40** to **L-2-41**
- L-2-41** to **L-2-42**
- L-2-42** to **L-2-43**
- L-2-43** to **L-2-44**
- L-2-44** to **L-2-45**
- L-2-45** to **L-2-46**
- L-2-46** to **L-2-47**
- L-2-47** to **L-2-48**
- L-2-48** to **L-2-49**
- L-2-49** to **L-2-50**
- L-2-50** to **L-2-51**
- L-2-51** to **L-2-52**
- L-2-52** to **L-2-53**
- L-2-53** to **L-2-54**
- L-2-54** to **L-2-55**
- L-2-55** to **L-2-56**
- L-2-56** to **L-2-57**
- L-2-57** to **L-2-58**
- L-2-58** to **L-2-59**
- L-2-59** to **L-2-60**
- L-2-60** to **L-2-61**
- L-2-61** to **L-2-62**
- L-2-62** to **L-2-63**
- L-2-63** to **L-2-64**
- L-2-64** to **L-2-65**
- L-2-65** to **L-2-66**
- L-2-66** to **L-2-67**
- L-2-67** to **L-2-68**
- L-2-68** to **L-2-69**
- L-2-69** to **L-2-70**
- L-2-70** to **L-2-71**
- L-2-71** to **L-2-72**
- L-2-72** to **L-2-73**
- L-2-73** to **L-2-74**
- L-2-74** to **L-2-75**
- L-2-75** to **L-2-76**
- L-2-76** to **L-2-77**
- L-2-77** to **L-2-78**
- L-2-78** to **L-2-79**
- L-2-79** to **L-2-80**
- L-2-80** to **L-2-81**
- L-2-81** to **L-2-82**
- L-2-82** to **L-2-83**
- L-2-83** to **L-2-84**
- L-2-84** to **L-2-85**
- L-2-85** to **L-2-86**
- L-2-86** to **L-2-87**
- L-2-87** to **L-2-88**
- L-2-88** to **L-2-89**
- L-2-89** to **L-2-90**
- L-2-90** to **L-2-91**
- L-2-91** to **L-2-92**
- L-2-92** to **L-2-93**
- L-2-93** to **L-2-94**
- L-2-94** to **L-2-95**
- L-2-95** to **L-2-96**
- L-2-96** to **L-2-97**
- L-2-97** to **L-2-98**
- L-2-98** to **L-2-99**
- L-2-99** to **L-2-100**


Note



CON Box & OP Box

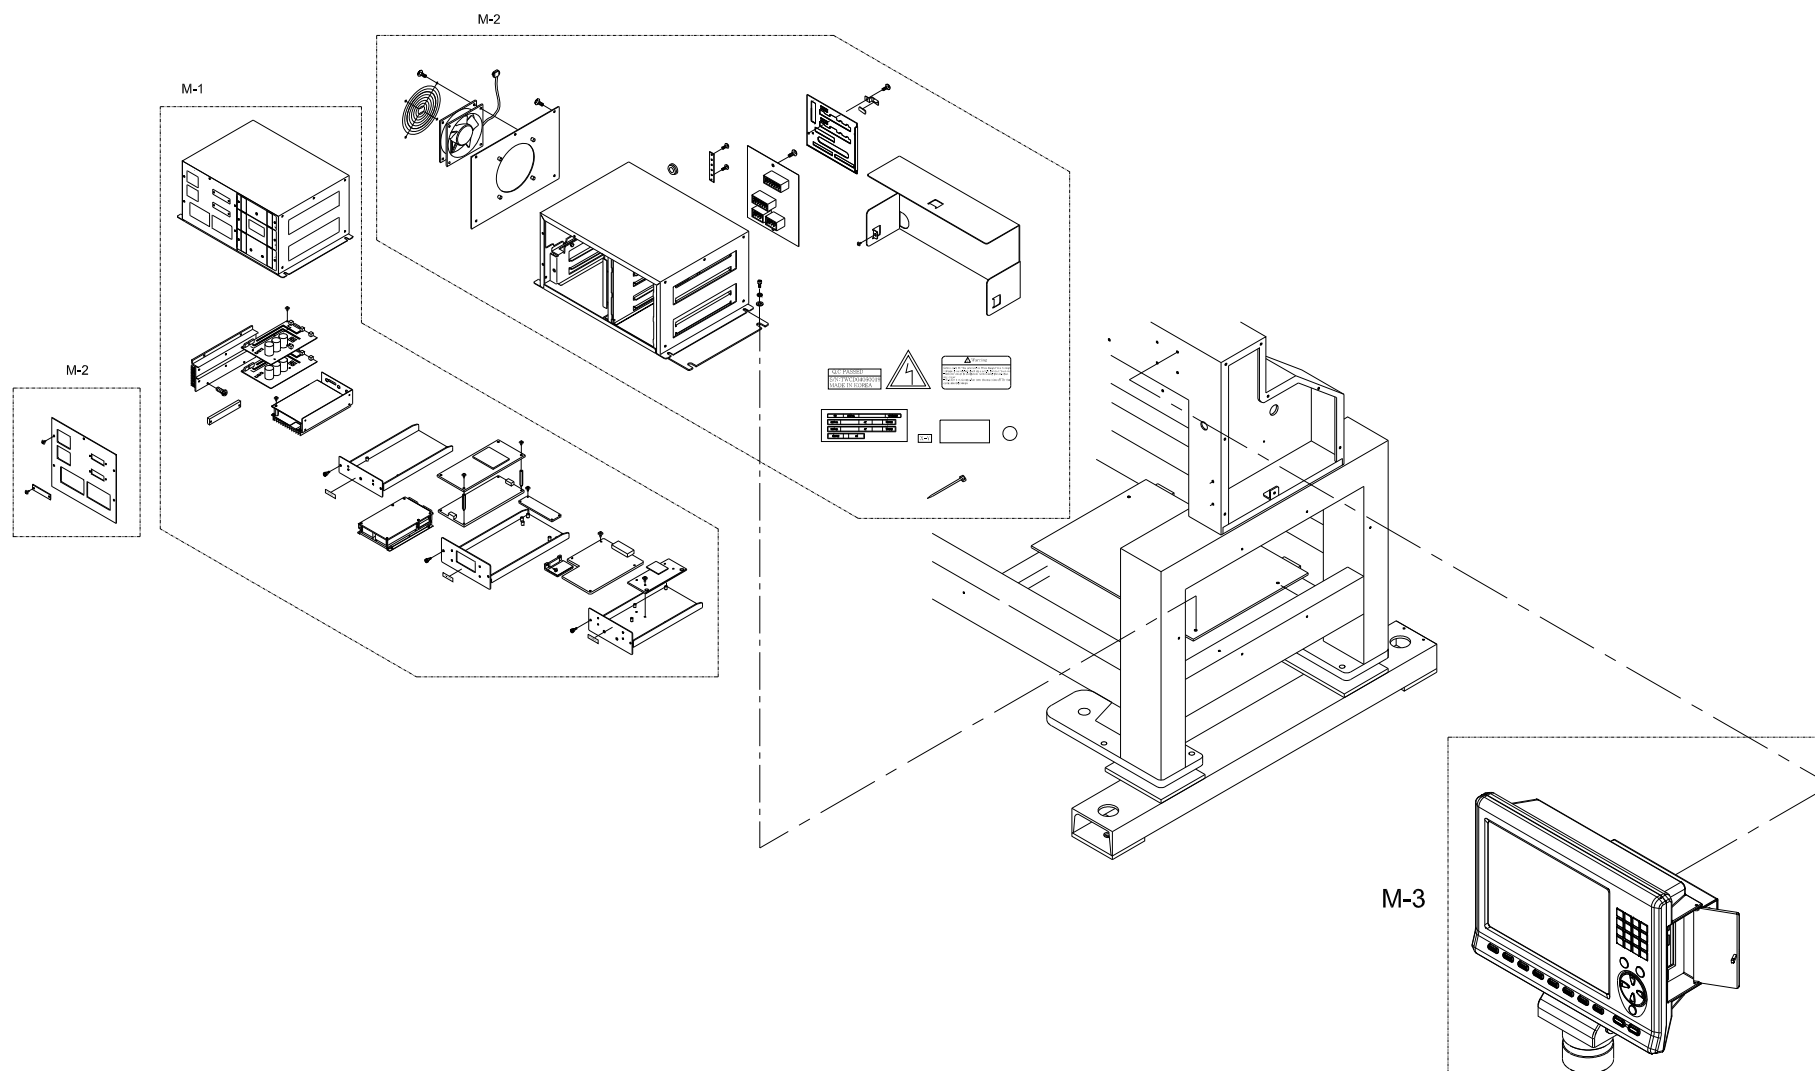


M-1

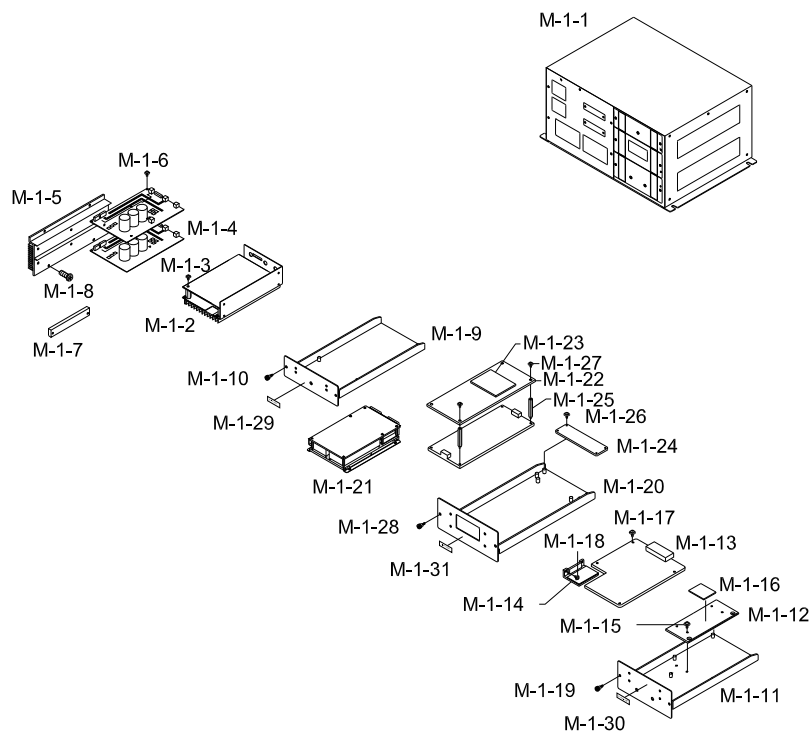 

Note


Ref.No	Part No.	Part Name	Application date	Interchangeability	Hardware	Q'ty	Remarks
M-1-1	SWF-00000731	Control Box Assy(110V/3.5A)				1	
	SWF-00000732	Control Box Assy(220V/3.5A)					
M-1-2	BD-000311-00	Main Drive (ASSY)(220V)//BD-000312-00(110V)	Des,06,05 ~	X		1	
	BD-000311-01		Feb,24,06 ~	△			
	BD-000311-02		May,09,06 ~	△			
	BD-000311-03		Nov,30,06 ~	△			
	BD-000311-04		Des,20,06 ~	△			
	BD-000311-05		Aug,20,07 ~	△			
	BD-000311-06		Mar,11,08 ~	△			
	BD-000311-07		Apr,14,10 ~	△			
	BD-000311-08		Apr,20,11 ~	△			
	BD-000311-09		Nov,16,11 ~	△			
	BD-000311-10		Dec,01,11 ~	△			
M-1-3	07-004S-SM5S	Main Drive Assy Screw (set) (M4xL10)			○	2	
M-1-4	BD-000044-00	X-Y Driver Board(220V)//BD-000146-00(110V)	Jun,24,04 ~	X		2	
	BD-000044-01		Jul,25,06 ~	△			
	BD-000044-02		Aug,31,06 ~	△			
	BD-000044-03		Mar,15,07 ~	△			
	BD-000044-04		Jun,18,09 ~	△			
	BD-000044-05		Nov,09,09 ~				
	BD-000044-06		May,17,10 ~				
	BD-000044-07		Dec,21,10 ~				
	BD-000044-08		Jun,09,11 ~				
M-1-5	GP-015921-00	Driver Radiator	Feb,28,06 ~	X		1	
M-1-6	05008AF-4113	X-Y Driver Board Screw (set) (M4xL16)			○	6	
M-1-7	05-002S-SW70	PCB Guide (TRCG-3300)				4	
M-1-8	07-004S-SM5S	Driver Radiator Screw(set) (M4xL10)			○	4	
M-1-9	GP-016008-00	IO MC Bracket	Mar,02,06 ~	X		1	
	GP-016008-01		Jun,19,06 ~	△			
M-1-10	SC-000406-00	IO MC Bracket Screw(캠터브)	Aug,18,05 ~	X		2	
M-1-11	GP-016007-00	DDC Bracket	Mar,02,06 ~	X		1	
	GP-016007-01		Jun,19,06 ~	△			
M-1-12	GP-017703-00	DDC Radiator	May,15,06 ~	X		1	
	GP-017703-01		Jun,19,06 ~	△			
M-1-13	BD-000803-00	DDC Board	Oct,06,08 ~	X		1	
	BD-000803-01		Apr,14,10 ~	△			

 M-1

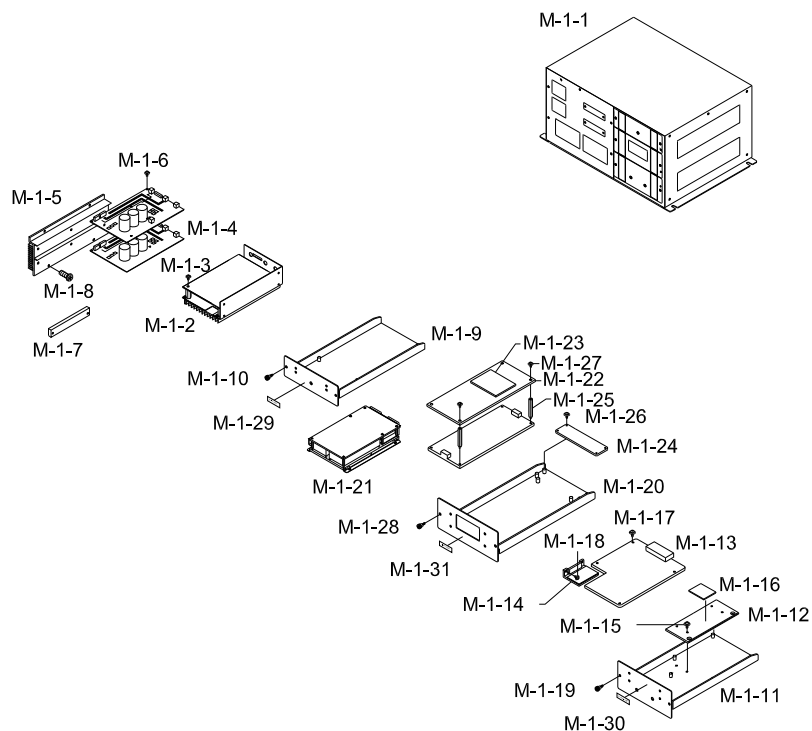[illegible]

M

 M-2

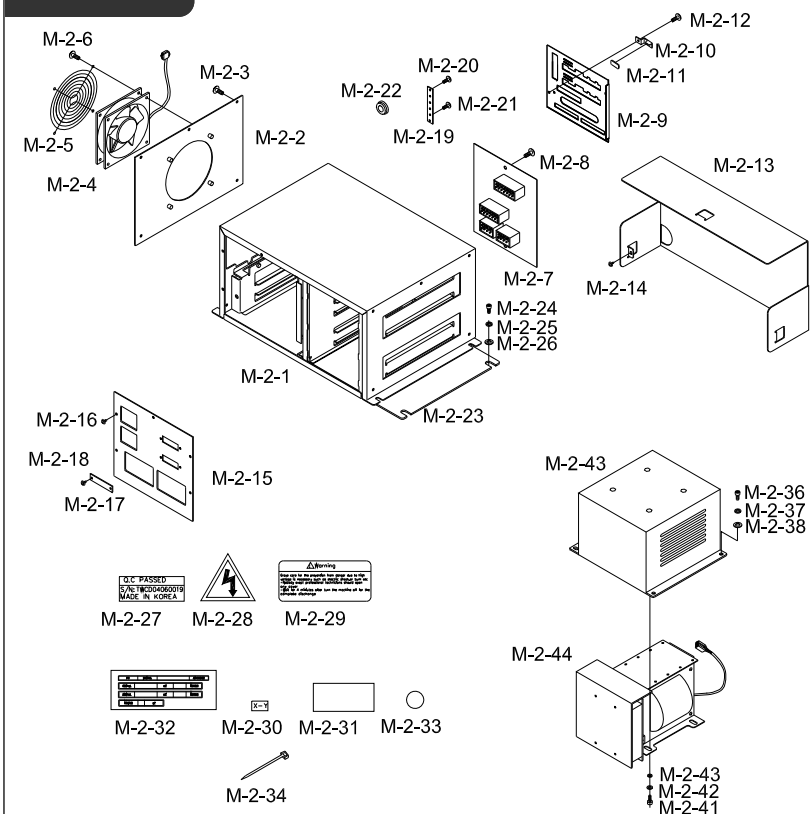


Note

Ref.No	Part No.	Part Name	Application date	Interchangeability	Hardware	Q'ty	Remarks
M-2-1	GP-016016-00	Control Box	Mar,02,06 ~	X		1	
	GP-016016-01		Jun,23,06 ~	△			
	GP-016016-02		Sep,01,06 ~	△			
	GP-016016-03		Feb,02,07 ~	△			
	GP-016016-04		May,11,07 ~	△			
M-2-2	GP-016015-00	Side Cover	Mar,02,06 ~	X		1	
M-2-3	10-003M-PT01	Side Cover Screw (M4xL8)			○	5	
M-2-4	01-002A-AT01	COOLING FAN				1	
M-2-5	01-002B-AU12	FAN Cover				1	
M-2-6	01-002M-AU12	FAN Screw (M4xL35)			○	4	
M-2-7	BD-000389-00	Back plane Board	Feb,24,06 ~	X		1	
	BD-000389-01		Jul,12,06 ~	△			
	BD-000389-02		Sep,18,08 ~	△			
	BD-000389-03		Des,01,08 ~	△			
M-2-8	07-004S-SM5S	Back plane Board Screw (Set) (M4xL10)			○	1	
M-2-9	GP-016012-00	Connector PCB Cover		X		1	
	GP-016012-01			△			
	GP-016012-02			△			
	GP-016012-03			△			
M-2-10	GP-029667-00	Encoder Fixed Bracket	Apr,30,07 ~	X		1	
M-2-11	GP-030369-00	Sponge	May,15,07 ~	X		1	
M-2-12	07-004S-SM5S	Connector PCB Cover Screw (set)				4	
M-2-13	GP-016014,00	Harness Cover	Mar,02,06 ~	X		1	
M-2-14	07-004S-SM5S	Harness Cover Screw (set)				3	
M-2-15	GP-016011-00	Front Cover (L)	Mar,02,06 ~	X		1	
M-2-16	10-003M-PT01	Front Cover(L) Screw (M4xL8)			○	5	
M-2-17	02-001B-SW67	Switch Cover				2	
M-2-18	13054SC-3123	Switch Cover Screw (set) (M3xL8)			○	4	
M-2-19	10-005A-DU33	Earth Plate				1	
M-2-20	07-004S-SM5S	Earth Plate Screw(set) (M4xL10)			○	2	
M-2-21	01-037S-2070	Earth Screw (M4xL8)			○	4	
M-2-22	09-025R-SC53	Rubber Din Cap				1	
M-2-23	GP-017171,00	Rubber	Apr,17,06 ~	X		2	
M-2-24	18047SC-7113	Control Box Screw (M5xL15)			○	8	
M-2-25	16019SW-4115	Control Box Spring Washer				8	
M-2-26	16018SW-1111	Control Box Washer				8	
M-2-27	09-023C-SC53	QC Passed Sticker				1	
M-2-28	04-003S-AU10	Warning Sticker				1	

Note



 M-3

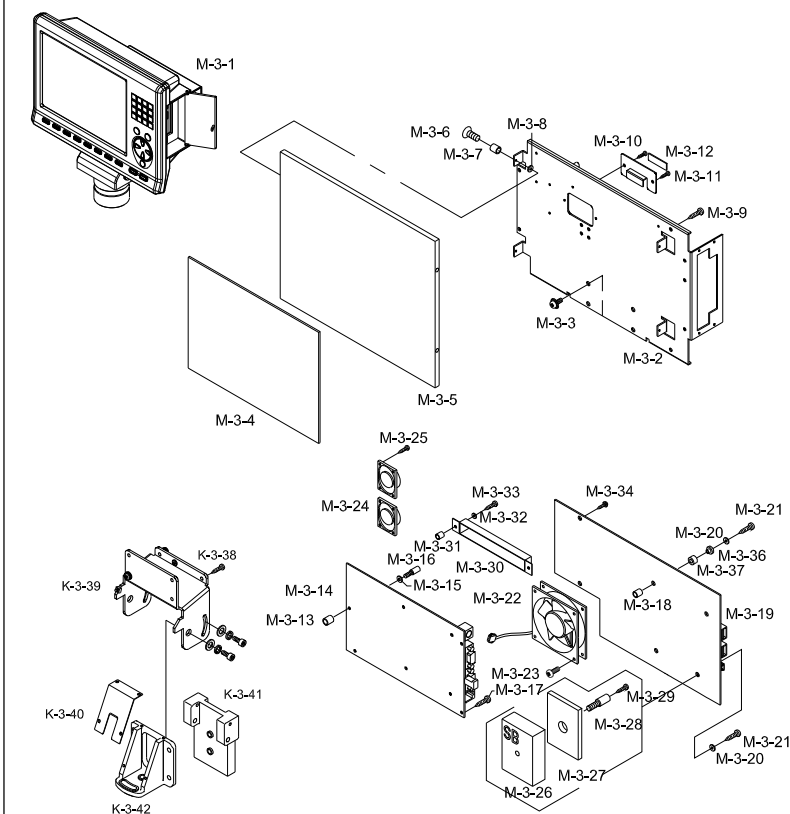


Note


Ref.No	Part No.	Part Name	Application date	Interchangeability	Hardware	Q'ty	Remarks
M-3-1	SWF-00000734	Operation Box Ass'y		X		1	
M-3-2	GP-014345-03	Base Plate				1	
	07-004S-SM5S	Screw for Fixing Bracket for				4	
M-3-4	GP-014350-03	LCD Cover				1	
M-3-5	20-006A-SW70	LCD				1	
M-3-6	SC-000629-00	Screw for LCD (M2xL8)				4	
M-3-7	GP-019021-00	Insulation Bush(A)				4	
	GP-019022-00	Insulation Bush(B)				4	
M-3-9	SC-000460-00	Screw for Base Plate				4	
M-3-10	01-002B-OT10	Pressing Plate for LCD				1	
M-3-11	20-002B-SW70	Connecting Pressing Plate				2	
M-3-12	10-028S-SC53	Screw for Pressing Plate				2	
M-3-13	GP-014361-00	Insulation Bush(A)				6	
M-3-14	BD-000806-04	CPU Board				1	
M-3-15	GP-014362-00	Insulation Bush(B)				6	
M-3-16	GP-014341-03	CPU Board Fixing Stud				4	
M-3-17	07-005S-SM5S	CPU Board Screw (SET)				2	
M-3-18	GP-014361-00	Insulation Bush(A)				6	
M-3-19	BD-000364-22	IO Board				1	
M-3-20	GP-014362-00	Insulation Bush(B) (Polyacetal)				13	
M-3-21	07-005S-SM5S	IO Board Fixing Screw (SET)				4	
M-3-22	EP-000030-00	FAN				1	
M-3-23	SC-000392-00	FAN Fixing Screw				3	
M-3-23	GP-043287-00	Speaker				2	
M-3-25	10-028S-SC53	Speaker Fixing Screw				4	
M-3-26	GP-017235-00	SB DDC Radiator				1	
M-3-27	EP-000548-00	SB DDC Radiator Sheet				1	
M-3-28	GP-010656-00	Fixing Stud for SB DDC Radiator				1	
M-3-29	10-028S-SC53	Fixing Screw for SB DDC Radiator(SET)				1	
M-3-30	BD-000916-00	Inverter				1	
M-3-31	10-001C-AT10	Insulation Bush(A)				2	
M-3-32	01-102B-OT10	Insulation Bush(B)				2	
M-3-33	10-028S-SC53	Inverter Fixing Plate				2	
M-3-34	10-002S-SW66	IO Board 접지나사 (SET)				2	
M-3-36	01-102B-OT10	Insulation Bush(B) (Male)				2	
M-3-37	10-001C-AT10	Insulation Bush(C)				2	
M-3-38	10-003M-PT01	Fixing Screw (M4xL8)				2	
M-3-39	GP-014343-00	Fixing Bracket for OP				1	
M-3-40	GP-024895-00	Operation Box Holder Cover				1	
M-3-41	GP-024895-00	Operation Box Holder Cover				1	
M-3-42	GP-024894-00	Hinge Block				1	

LAMP & SWITCH

 
N-1

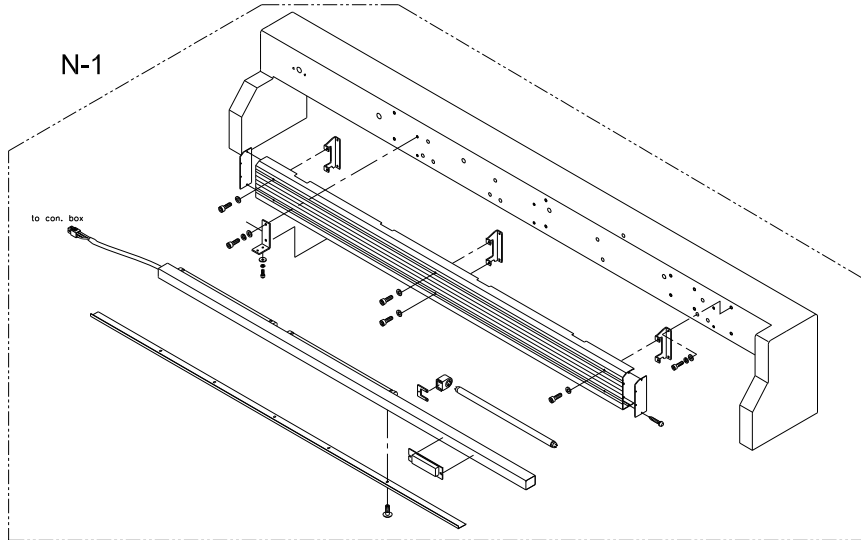


N-4

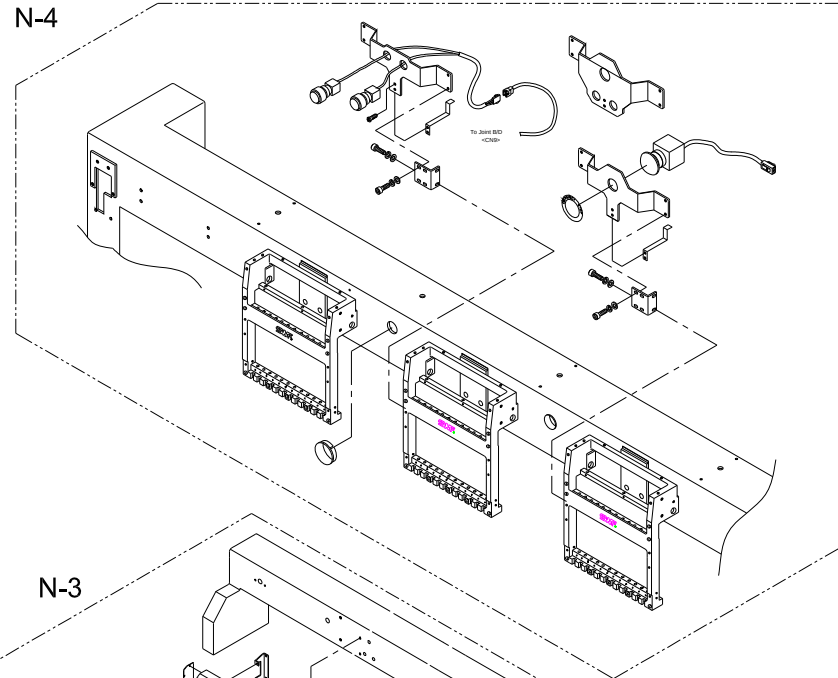 

N-2

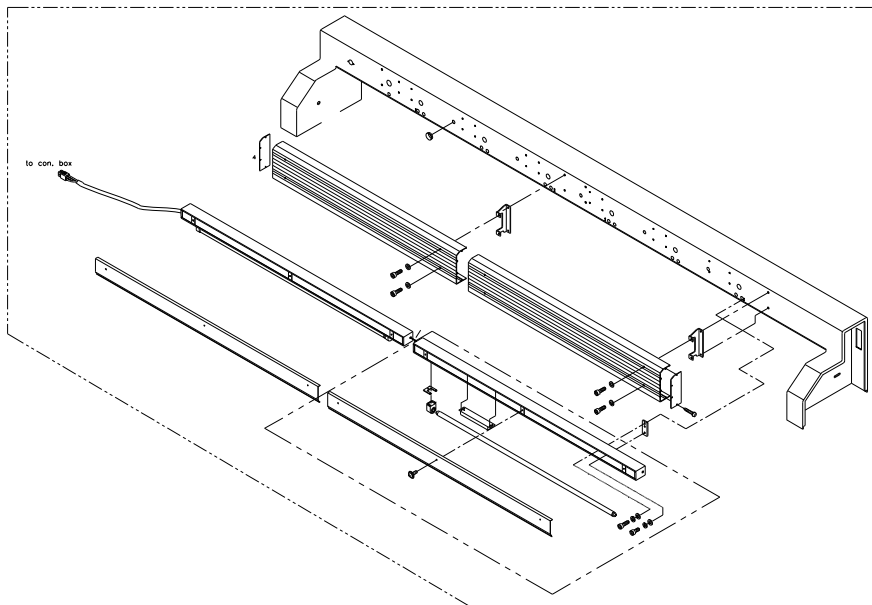 

N-3

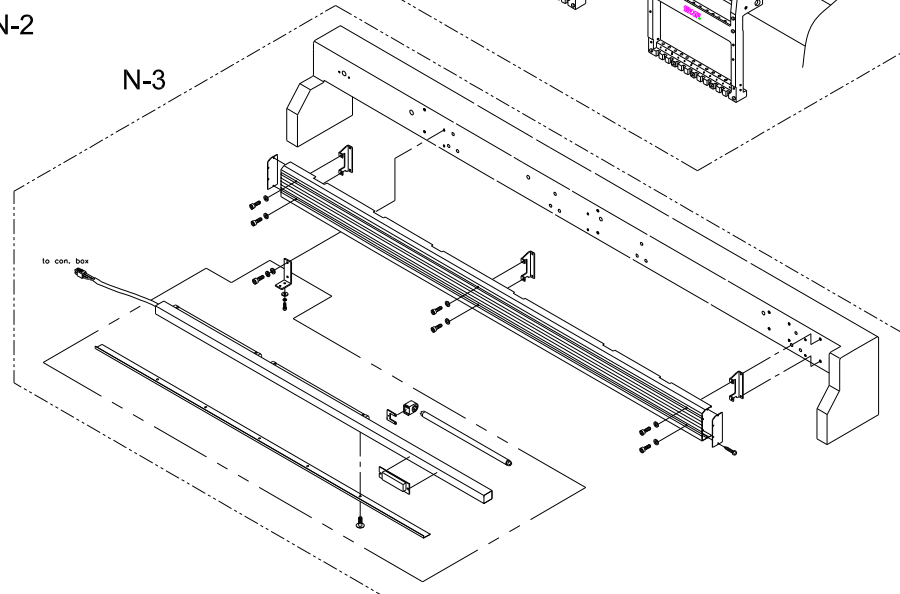 

N-1

This exploded view diagram illustrates the assembly of the N-1 cable tray system. The components are labeled with part numbers and their assembly sequence:

- N-1-1**: Main cable tray body.
- N-1-2**: End cap or support bracket.
- N-1-3**: Fasteners or screws.
- N-1-4**: Support bracket or hanger.
- N-1-5**: Fasteners or screws.
- N-1-6**: Fasteners or screws.
- N-1-7**: Fasteners or screws.
- N-1-8**: Fasteners or screws.
- N-1-9**: Fasteners or screws.
- N-1-10**: Fasteners or screws.
- N-1-11**: Fasteners or screws.
- N-1-12**: Fasteners or screws.
- N-1-13**: Support bracket or hanger.
- N-1-14**: Support bracket or hanger.
- N-1-15**: Fasteners or screws.
- N-1-16**: Fasteners or screws.
- N-1-17**: Fasteners or screws.
- N-1-18**: Fasteners or screws.
- N-1-19**: Fasteners or screws.
- N-1-20**: Cable or conduit, labeled "to con. box".

The diagram shows the cable tray being assembled onto a support structure, with various brackets and fasteners used to secure it. Dashed lines indicate the assembly path and the final position of the components.

Note

N

This exploded view diagram illustrates the assembly of the N-2000 series lighting fixture. The components are labeled as follows:

- N-2-1:** Main fixture body.
- N-2-2:** Mounting bracket.
- N-2-3:** Mounting bracket.
- N-2-4:** Mounting bracket.
- N-2-5:** Mounting bracket.
- N-2-6:** Mounting bracket.
- N-2-7:** Mounting bracket.
- N-2-8:** Mounting bracket.
- N-2-9:** Mounting bracket.
- N-2-10:** Mounting bracket.
- N-2-11:** Mounting bracket.
- N-2-12:** Mounting bracket.
- N-2-13:** Mounting bracket.
- N-2-14:** Mounting bracket.
- N-2-15:** Mounting bracket.
- N-2-16:** Mounting bracket.
- N-2-17:** Mounting bracket.
- N-2-18:** Mounting bracket.
- N-2-19:** Mounting bracket.
- N-2-20:** Mounting bracket.
- N-2-21:** Mounting bracket.

The diagram shows the assembly sequence, with components N-2-1 through N-2-19 being installed into the main fixture body (N-2-1). Component N-2-20 is shown being installed into the main fixture body. Component N-2-21 is shown being installed into the main fixture body. The diagram also shows the connection of the main fixture body to the control box (N-2-21).

Note

[illegible]

N-3

This exploded view diagram illustrates the assembly of the N-3 component. The main structure consists of a long horizontal rail (N-3-1) and a base plate (N-3-6). Various sub-components are shown in their relative positions for assembly:

- Top Rail Assembly:** Includes N-3-4 (top bracket), N-3-3 (top rail), N-3-2 (top rail pins), N-3-10 (top rail pins), N-3-11 (top rail bracket), N-3-12 (top rail pins), N-3-13 (top rail pins), N-3-14 (top rail pins), N-3-15 (top rail pins), N-3-16 (top rail pins), N-3-17 (top rail pins), N-3-18 (top rail pins), N-3-19 (top rail pins), N-3-20 (top rail pins), N-3-21 (top rail pins), and N-3-22 (top rail pins).
- Bottom Rail Assembly:** Includes N-3-5 (bottom bracket), N-3-3 (bottom rail), N-3-2 (bottom rail pins), N-3-4 (bottom rail pins), N-3-5 (bottom rail pins), N-3-6 (bottom rail pins), N-3-7 (bottom rail pins), N-3-8 (bottom rail pins), N-3-9 (bottom rail pins), N-3-10 (bottom rail pins), N-3-11 (bottom rail pins), N-3-12 (bottom rail pins), N-3-13 (bottom rail pins), N-3-14 (bottom rail pins), N-3-15 (bottom rail pins), N-3-16 (bottom rail pins), N-3-17 (bottom rail pins), N-3-18 (bottom rail pins), N-3-19 (bottom rail pins), N-3-20 (bottom rail pins), N-3-21 (bottom rail pins), and N-3-22 (bottom rail pins).
- Other Components:** N-3-1 (main rail), N-3-2 (rail pins), N-3-3 (rail pins), N-3-4 (rail pins), N-3-5 (rail pins), N-3-6 (rail pins), N-3-7 (rail pins), N-3-8 (rail pins), N-3-9 (rail pins), N-3-10 (rail pins), N-3-11 (rail pins), N-3-12 (rail pins), N-3-13 (rail pins), N-3-14 (rail pins), N-3-15 (rail pins), N-3-16 (rail pins), N-3-17 (rail pins), N-3-18 (rail pins), N-3-19 (rail pins), N-3-20 (rail pins), N-3-21 (rail pins), and N-3-22 (rail pins).

The diagram uses dashed lines to indicate the alignment and assembly path of the components. A note "to con. box" is present near the top left corner.

Note

N

N-4

This exploded view diagram illustrates the assembly of the N-4 unit. The components are labeled as follows:

- N-4-1**: Main mounting bracket.
- N-4-2**: Mounting plate with a circular cutout.
- N-4-3**: L-shaped mounting bracket.
- N-4-4**: Cable connector.
- N-4-5**: Cable connector.
- N-4-6**: Small mounting plate.
- N-4-7**: Small mounting plate.
- N-4-8**: Mounting plate with a circular cutout.
- N-4-9**: Mounting plate with a circular cutout.
- N-4-10**: Mounting plate with a circular cutout.
- N-4-11**: Mounting plate with a circular cutout.
- N-4-12**: Mounting plate with a circular cutout.
- N-4-13**: Mounting plate with a circular cutout.
- N-4-14**: Mounting plate with a circular cutout.
- N-4-15**: Mounting plate with a circular cutout.
- N-4-16**: Cable connector.
- N-4-17**: Cable connector.


The diagram shows the assembly sequence for the N-4 unit, including the main mounting bracket (N-4-1), the mounting plate (N-4-2), and the cable connectors (N-4-4, N-4-5, N-4-6, N-4-7, N-4-16, N-4-17). The assembly is shown in an exploded view, indicating the relative positions of the components.

To Joint B/D
<CNS>

Note

N

 Bobbin Winder

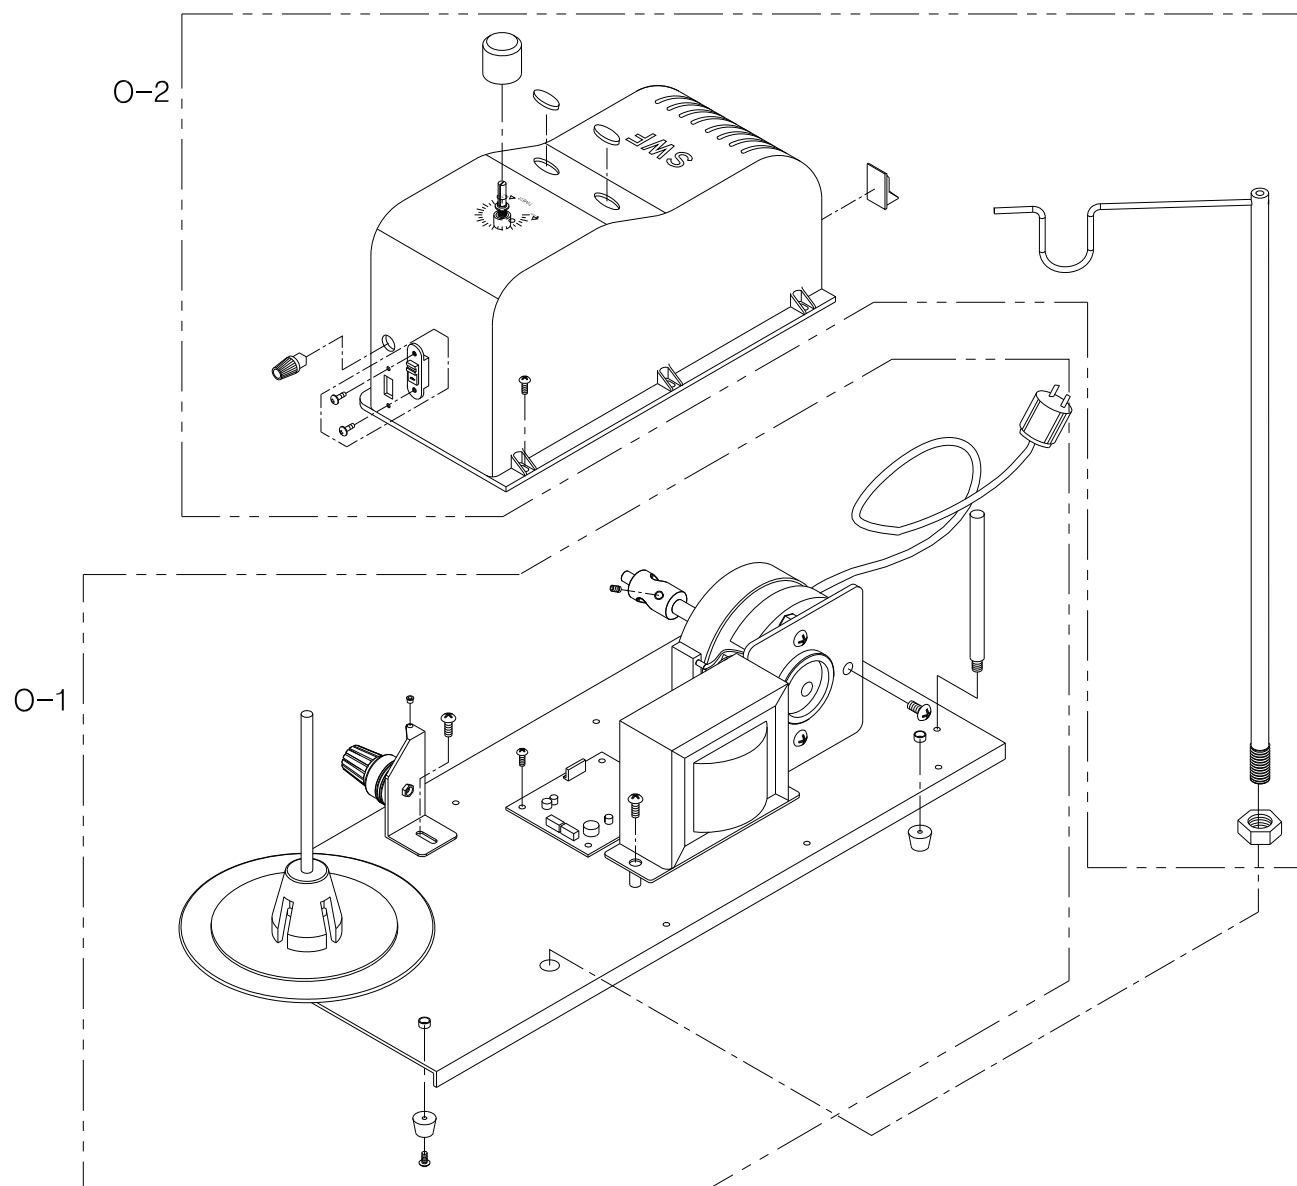

0-1

This diagram illustrates the assembly of a mechanical device, likely a pump or motor, with various components labeled with part numbers. The main assembly is mounted on a base plate (0-1-1). Key components include a motor unit (0-1-6) with a fan (0-1-13) and a pump head (0-1-4). A drive shaft (0-1-2) is connected to the pump head via a coupling (0-1-5). A control valve (0-1-11) is mounted on the side. A cable (0-1-17) is connected to the motor unit. The assembly is secured with various screws (0-1-9, 0-1-10, 0-1-12, 0-1-15, 0-1-16, 0-1-18, 0-1-19) and a nut (0-1-7). A small electronic control unit (0-1-8) is also shown. The diagram is a technical drawing showing the exploded view of the assembly.

Note





O-2

This diagram illustrates the assembly of a mechanical device, likely a pump or motor, with various components labeled O-2-1 through O-2-11. The main body is a rectangular housing with a curved top and a base. The top surface features a circular opening with a central bolt (O-2-6) and a surrounding flange (O-2-7). A curved duct (O-2-10) is attached to the top. The base is mounted on a long, thin support (O-2-1) with two mounting brackets (O-2-2). A vertical rod (O-2-11) is attached to the side of the housing (O-2-3) and extends downwards, ending in a hex nut. A small, rectangular component (O-2-5) is mounted on the side of the housing, with a bolt (O-2-4) and a nut (O-2-5) securing it. A small, circular component (O-2-8) is located near the top of the housing. A small, rectangular component (O-2-9) is located near the top of the housing. A small, rectangular component (O-2-10) is located near the top of the housing.

Note



  COVER

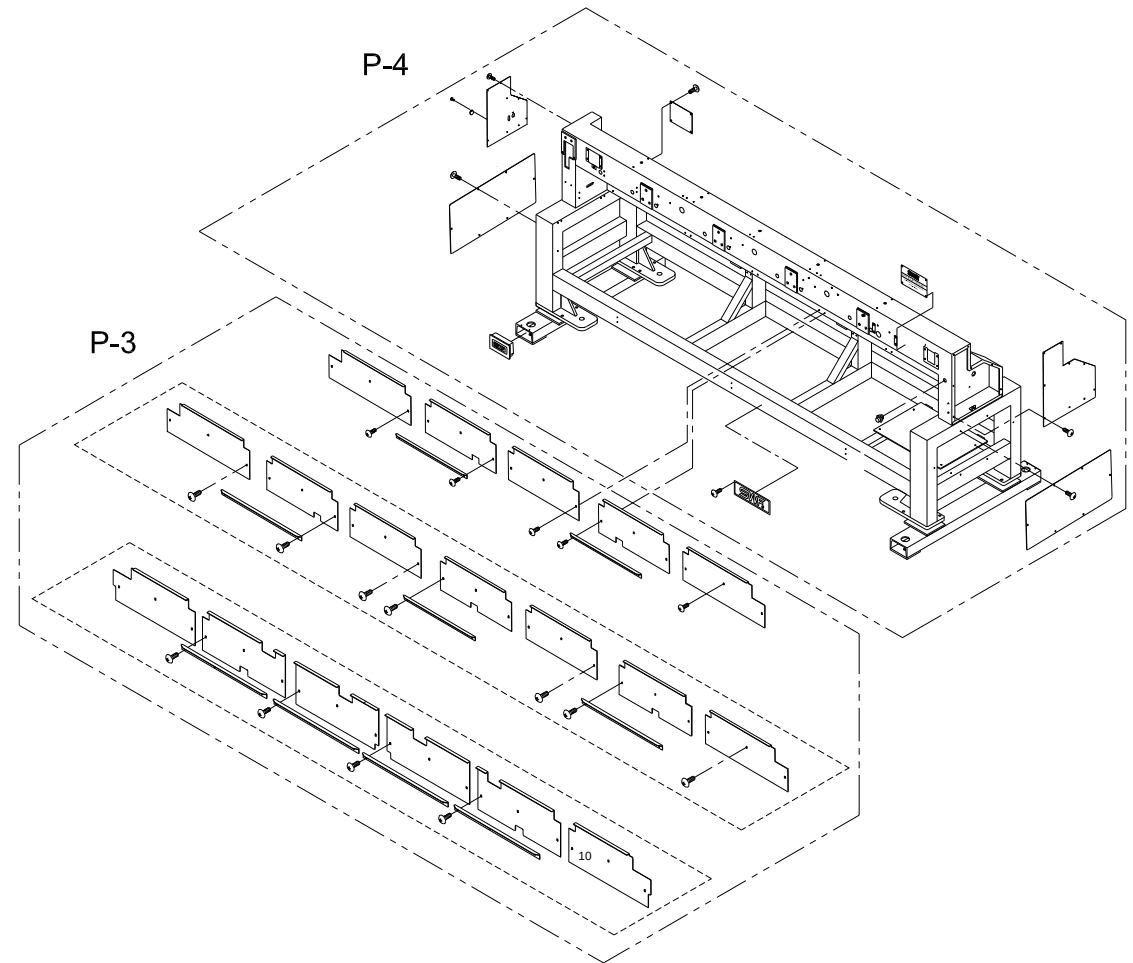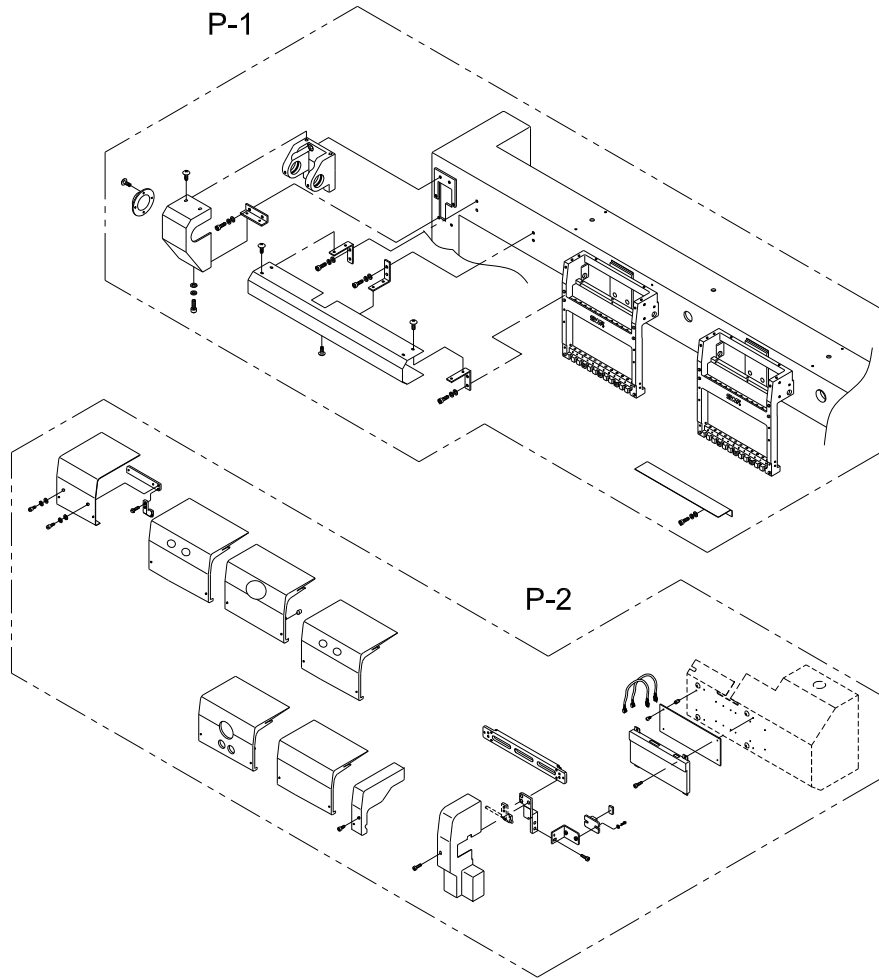

P-1

This exploded view diagram illustrates the assembly of the P-1 unit. The main components shown are:


- P-1-1:** A long horizontal base plate.
- P-1-2:** A small screw used to secure the base plate.
- P-1-3:** A small screw used to secure the base plate.
- P-1-4:** A small screw used to secure the base plate.
- P-1-5:** A vertical support plate.
- P-1-6:** A small bracket or plate.
- P-1-7:** A small bracket or plate.
- P-1-8:** A small screw.
- P-1-9:** A small screw.
- P-1-10:** A small screw.
- P-1-11:** A vertical support plate.
- P-1-12:** A small screw.
- P-1-13:** A small screw.
- P-1-14:** A small screw.
- P-1-15:** A small screw.
- P-1-16:** A small screw.
- P-1-17:** A small screw.

The diagram shows the relative positions and assembly sequence of these parts, with dashed lines indicating the alignment and path of assembly.

Note

P

 P-2

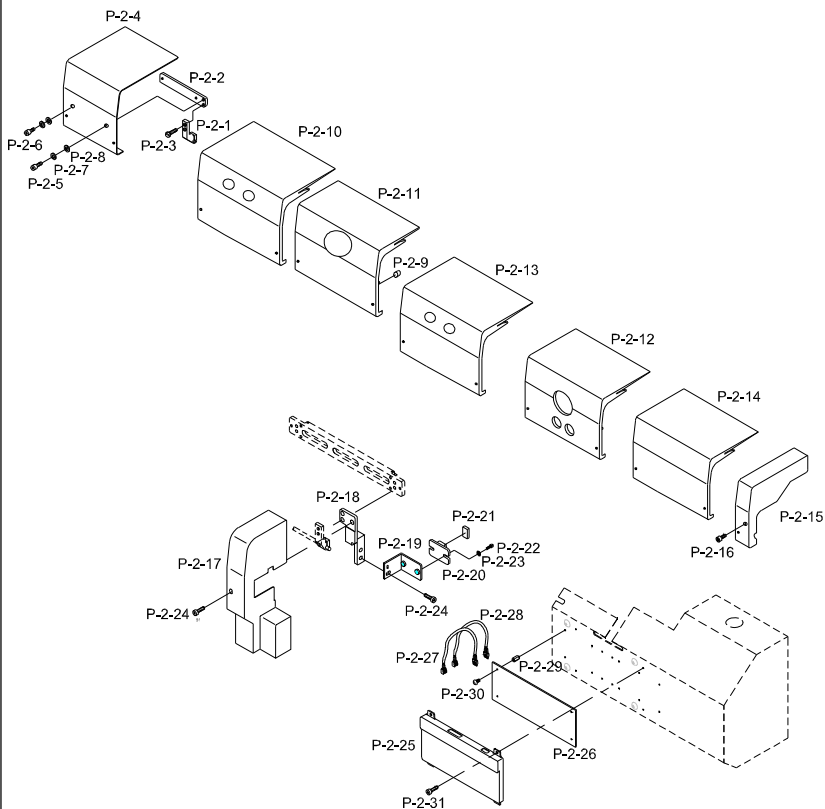

Note

Ref.No	Part No.	Part Name	Application date	Interchangeability	Hardware	Q'ty	Remarks
P-2-1	GP-011945-00	Color Change Bracket "B"	Sep,14,05 ~	X		39	
P-2-2	09000200H000	Top Shaft Cover (L) Bracket				1	
P-2-3	13048SC-A001	Bracket "A" Screw				2	
P-2-4	01001400UK00	Top Shaft Cover (L)				1	
P-2-5	02015SC-7113	Hex.Socket Bolt(M4*L10)			O	1	
P-2-6	02023SC-7113	HEX. SOCKET BOLT (M4*L8)			O	1	
P-2-7	18014SW-3115	SPRING WASHER (@4-NO2)			O	2	
P-2-8	18015SW-3111	WASHER (4@)			O	2	
P-2-9	02023ET-A001	Top Shaft Cover Magnet				6	
P-2-10	09000102UK00	Top Shaft Cover "A" (6C)				1	
	09000103UK00	Top Shaft Cover "A" (9C)				1	
	09000104UK00	Top Shaft Cover "A" (12C)				1	
	02001PM-UK14	Top Shaft Cover "A" (15C)				1	
	09000104UH00	Top Shaft Cover "A" (L191) (UH1206C)				1	
	09000105UH00	Top Shaft Cover "A" (L146) (UH1506C)				1	
P-2-11	09000202UK00	Top Shaft Cover "B" (6C)				2	
	09000203UK00	Top Shaft Cover "B" (9C)				2	
	09000204UK00	Top Shaft Cover "B" (12C)				2	
	02005PM-UK14	Top Shaft Cover "B" (15C)				2	
	09000204UH00	Top Shaft Cover "B" (L191) (UH1206C)				2	
	09000205UH00	Top Shaft Cover "B" (L146) (UH1506C)				2	
	09000205UH00	Top Shaft Cover "B" (UH1508)				2	
	09000104UK20	Top Shaft Cover (L=291) (UK1202)				1	
P-2-13	09000302UK00	Top Shaft Cover "C" (UK606)				2	
	09000303UK00	Top Shaft Cover "C" (UK906)				2	
	09000304UK00	Top Shaft Cover "C" (UK1206)				2	
	02036PM-UK14	Top Shaft Cover Uk1504-45 (UK1506)				2	
	09000304UH00	Top Shaft Cover "C" (L191) (UH1206C)				2	
	09000305UH00	Top Shaft Cover "C" (L146) (UH1506C)				2	
P-2-14	09000305UH00	TOP SHAFT COVER "C" (L146) (UH1508)				2	
P-2-15	AS-001504-00	TOP SHAFT COVER(R)SET	Nov,18,04 ~	X		1	
	AS-001504-01		Apr,04,07 ~	△			
P-2-16	02014SC-7113	Hex. Socket Bolt (M4*L5)			O	1	
P-2-17	AS-015267-00	Upper Shaft Cover (R) Ass'y	Nov,18,08 ~	X		1	
	AS-015267-01		Des,17,08 ~	△			
	AS-015267-02		Des,26,08 ~	△			
	AS-015267-03		Jan,05,09 ~	△			
P-2-18	GP-044170-00	Upper Shaft Cover(R) Bracket	Nov,18,08 ~	X		1	
P-2-19	GP-044171-00	Upper Shaft Cover(R) Bracket	Nov,18,08 ~	X		1	

This exploded view diagram illustrates the assembly of the P-2 system. The components are labeled as follows:

- P-2-4**: Main housing unit.
- P-2-1**: Small rectangular component.
- P-2-2**: Small rectangular component.
- P-2-3**: Small rectangular component.
- P-2-5**: Small rectangular component.
- P-2-6**: Small rectangular component.
- P-2-7**: Small rectangular component.
- P-2-8**: Small rectangular component.
- P-2-10**: Large rectangular component.
- P-2-11**: Large rectangular component.
- P-2-9**: Small rectangular component.
- P-2-13**: Large rectangular component.
- P-2-12**: Large rectangular component.
- P-2-14**: Large rectangular component.
- P-2-15**: Small rectangular component.
- P-2-16**: Small rectangular component.
- P-2-17**: Large rectangular component.
- P-2-18**: Small rectangular component.
- P-2-19**: Small rectangular component.
- P-2-20**: Small rectangular component.
- P-2-21**: Small rectangular component.
- P-2-22**: Small rectangular component.
- P-2-23**: Small rectangular component.
- P-2-24**: Small rectangular component.
- P-2-25**: Small rectangular component.
- P-2-26**: Small rectangular component.
- P-2-27**: Small rectangular component.
- P-2-28**: Small rectangular component.
- P-2-29**: Small rectangular component.
- P-2-30**: Small rectangular component.
- P-2-31**: Small rectangular component.

P

[illegible]

P-3

This exploded view diagram illustrates the assembly of the P-3 system. The components are numbered 1 through 22. The assembly is organized into three main sections, each enclosed in a dashed-line box. The top section contains components 1 through 11, the middle section contains 12 through 16, and the bottom section contains 17 through 22. Arrows indicate the assembly sequence and the placement of each part. Key components include various panels (e.g., 1, 2, 3, 4, 5, 9, 10, 11, 12, 13, 14, 15, 17, 18, 19, 20, 21, 22), rails (e.g., 6, 7, 8, 16), and fasteners (e.g., 15, 16, 23, 24). The diagram shows how these parts interlock to form a complete assembly.

Note


P

Exploded view diagram of the P4 assembly. The diagram shows the main frame and various components being installed. Key components and their assembly points are labeled:

- P-4-1**: Top panel component.
- P-4-2**: Right side panel component.
- P-4-3**: Small rectangular component, shown in two locations.
- P-4-4**: Small rectangular component.
- P-4-5**: Small rectangular component.
- P-4-6**: Small rectangular component with a label.
- P-4-7**: Small rectangular component.
- P-4-8**: Large rectangular component, shown in two locations.
- P-4-9**: Small rectangular component, shown in two locations.
- P-4-10**: Small rectangular component.
- P-4-11**, **P-4-12**, **P-4-13**: Small rectangular components.
- P-4-14**: Small rectangular component.
- P-4-15**, **P-4-16**, **P-4-17**, **P-4-18**: Small rectangular components.

P

 Tubular Frame

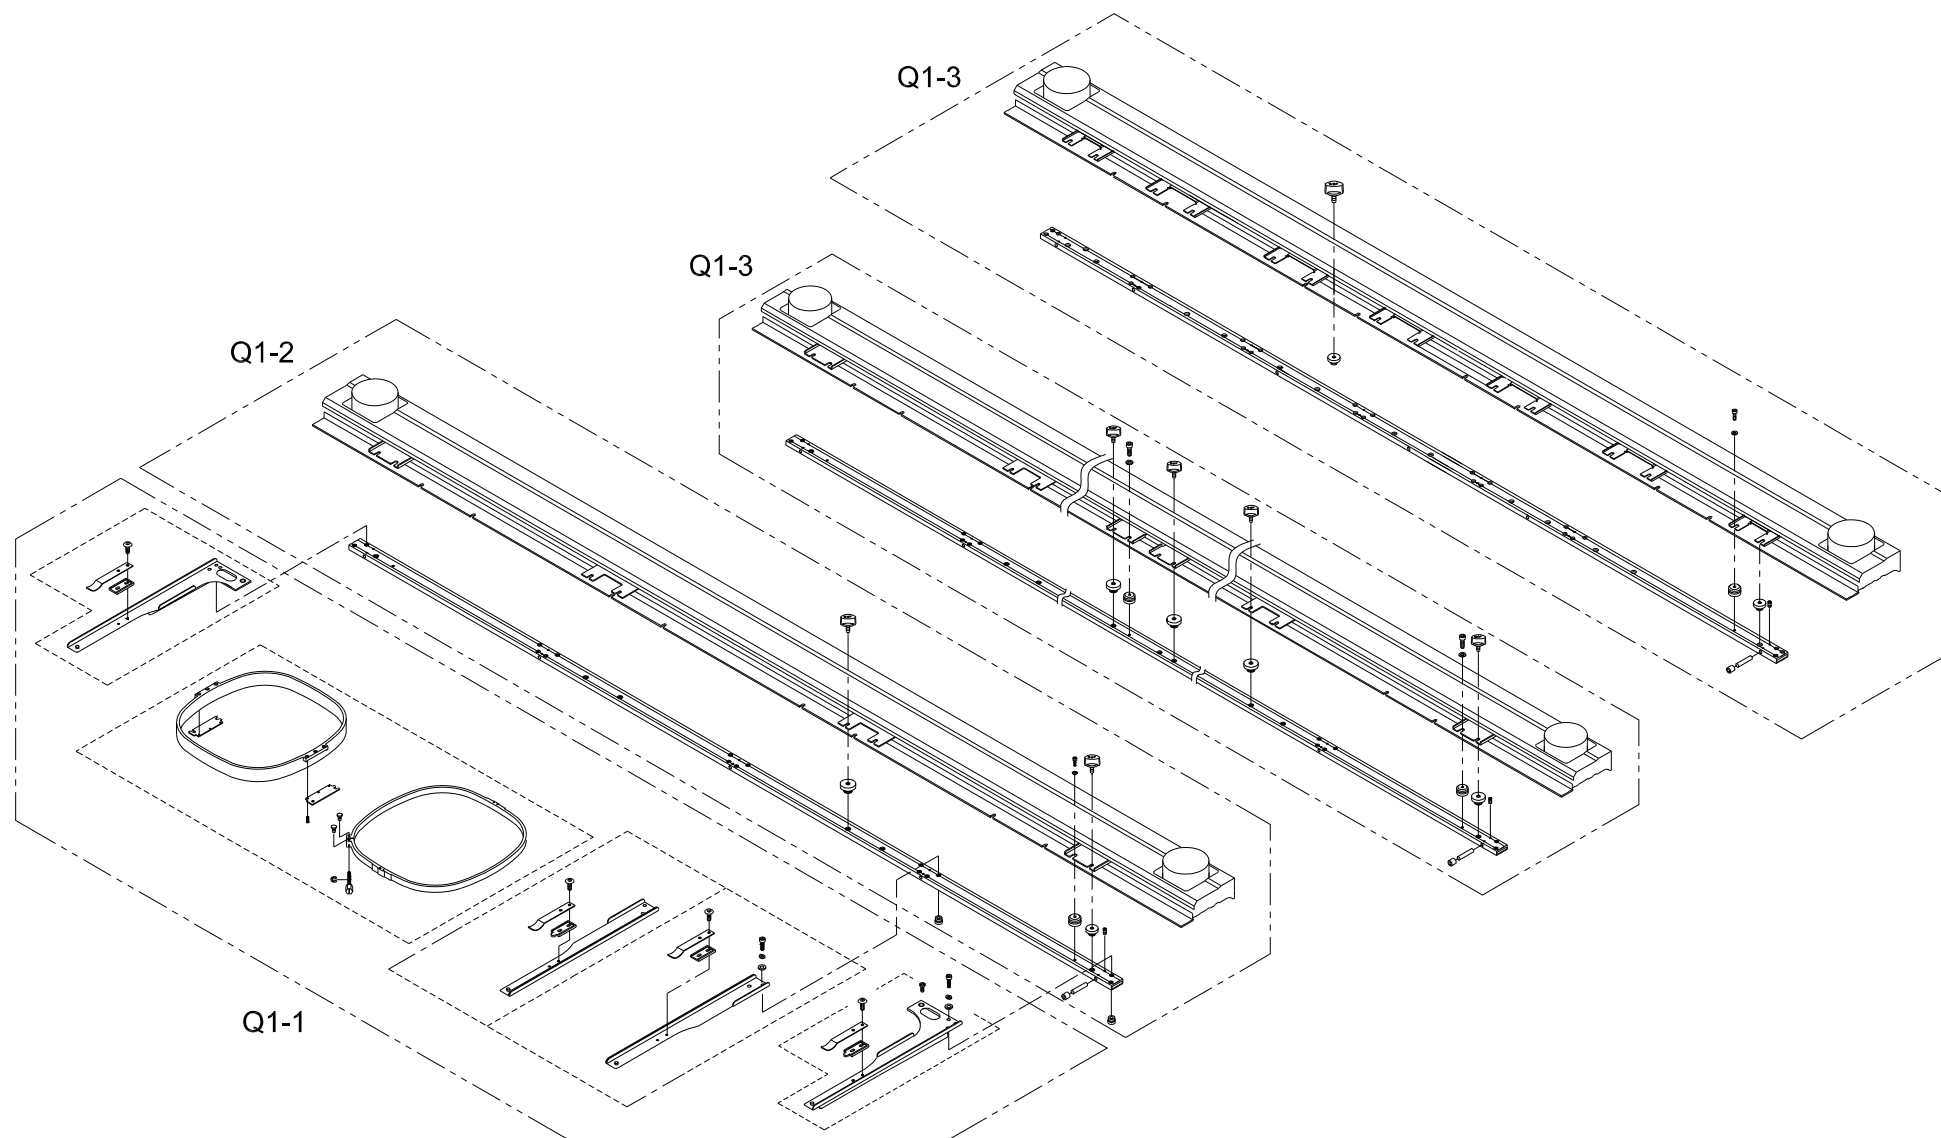

Q1-1

This exploded view diagram illustrates the assembly of the Q1-1 unit. The components are organized into several sub-assemblies, each enclosed in a dashed rectangular box:

- Top Left Sub-assembly:** Includes parts Q1-1-11, Q1-1-4, Q1-1-3, and Q1-1-7.
- Central Sub-assembly:** Features a large oval component Q1-1-20, a smaller oval component Q1-1-21, and several connecting parts: Q1-1-17, Q1-1-18, Q1-1-19, Q1-1-23, Q1-1-24, Q1-1-25, Q1-1-16, and Q1-1-22.
- Bottom Left Sub-assembly:** Contains parts Q1-1-14, Q1-1-15, Q1-1-11, Q1-1-4, and Q1-1-3.
- Bottom Right Sub-assembly:** Includes parts Q1-1-11, Q1-1-3, Q1-1-13, Q1-1-12, Q1-1-8, Q1-1-9, Q1-1-10, Q1-1-1, Q1-1-4, Q1-1-5, Q1-1-6, and Q1-1-13.

The main assembly structure is represented by a long, horizontal rail or track. Various components are shown being attached to this rail using screws and brackets. The diagram uses standard engineering notation, with dashed lines indicating the assembly path and alignment of the parts.

Note

Q1

Q1-2

This diagram illustrates the exploded view of the Q1-2 assembly. The main components are the upper and lower rails, which are connected by a series of pins and washers. The assembly is shown in a perspective view, with the upper rail at the top and the lower rail at the bottom. A white curved line indicates the path of a cable or hose. The components are labeled with part numbers: Q1-2-1 (lower rail), Q1-2-2 (pin), Q1-2-3 (washer), Q1-2-4 (pin), Q1-2-5 (washer), Q1-2-6 (pin), Q1-2-7 (washer), Q1-2-8 (pin), Q1-2-9 (washer), and Q1-2-10 (pin). The diagram shows the relative positions of these components and how they fit together to form the complete assembly.

Note

Q1

Q1-3

This diagram illustrates the exploded view of the Q1-3 assembly. The main components are shown in a perspective view, with various parts labeled with callouts and leader lines. The callouts include:

- Q1-3-1: A long, thin metal rail or track.
- Q1-3-2: A small, cylindrical component, likely a pin or bush.
- Q1-3-3: A small, cylindrical component, likely a pin or bush.
- Q1-3-4: A small, cylindrical component, likely a pin or bush.
- Q1-3-5: A small, cylindrical component, likely a pin or bush.
- Q1-3-6: A small, cylindrical component, likely a pin or bush.
- Q1-3-7: A small, cylindrical component, likely a pin or bush.
- Q1-3-8: A small, cylindrical component, likely a pin or bush.
- Q1-3-9: A small, cylindrical component, likely a pin or bush.

The diagram shows the assembly of these components into a larger structure, which appears to be a metal frame or support. The components are shown in their relative positions, with leader lines indicating their assembly points.

Note


Q1

This diagram illustrates the exploded view of the Q1-4-1 assembly. The main component, Q1-4-1, is a long, narrow metal rail with multiple slots and mounting points. A curved metal bracket is shown attached to the left end of the rail. A cylindrical component, Q1-4-2, is shown being inserted into a hole in the rail. A small, rectangular component, Q1-4-9, is shown being inserted into a slot on the rail. A small, rectangular component, Q1-4-4, is shown being inserted into a slot on the rail. A small, rectangular component, Q1-4-5, is shown being inserted into a slot on the rail. A small, rectangular component, Q1-4-3, is shown being inserted into a slot on the rail. A small, rectangular component, Q1-4-8, is shown being inserted into a slot on the rail. A small, rectangular component, Q1-4-6, is shown being inserted into a slot on the rail. A small, rectangular component, Q1-4-7, is shown being inserted into a slot on the rail.

Note

Q1

 Border Frame

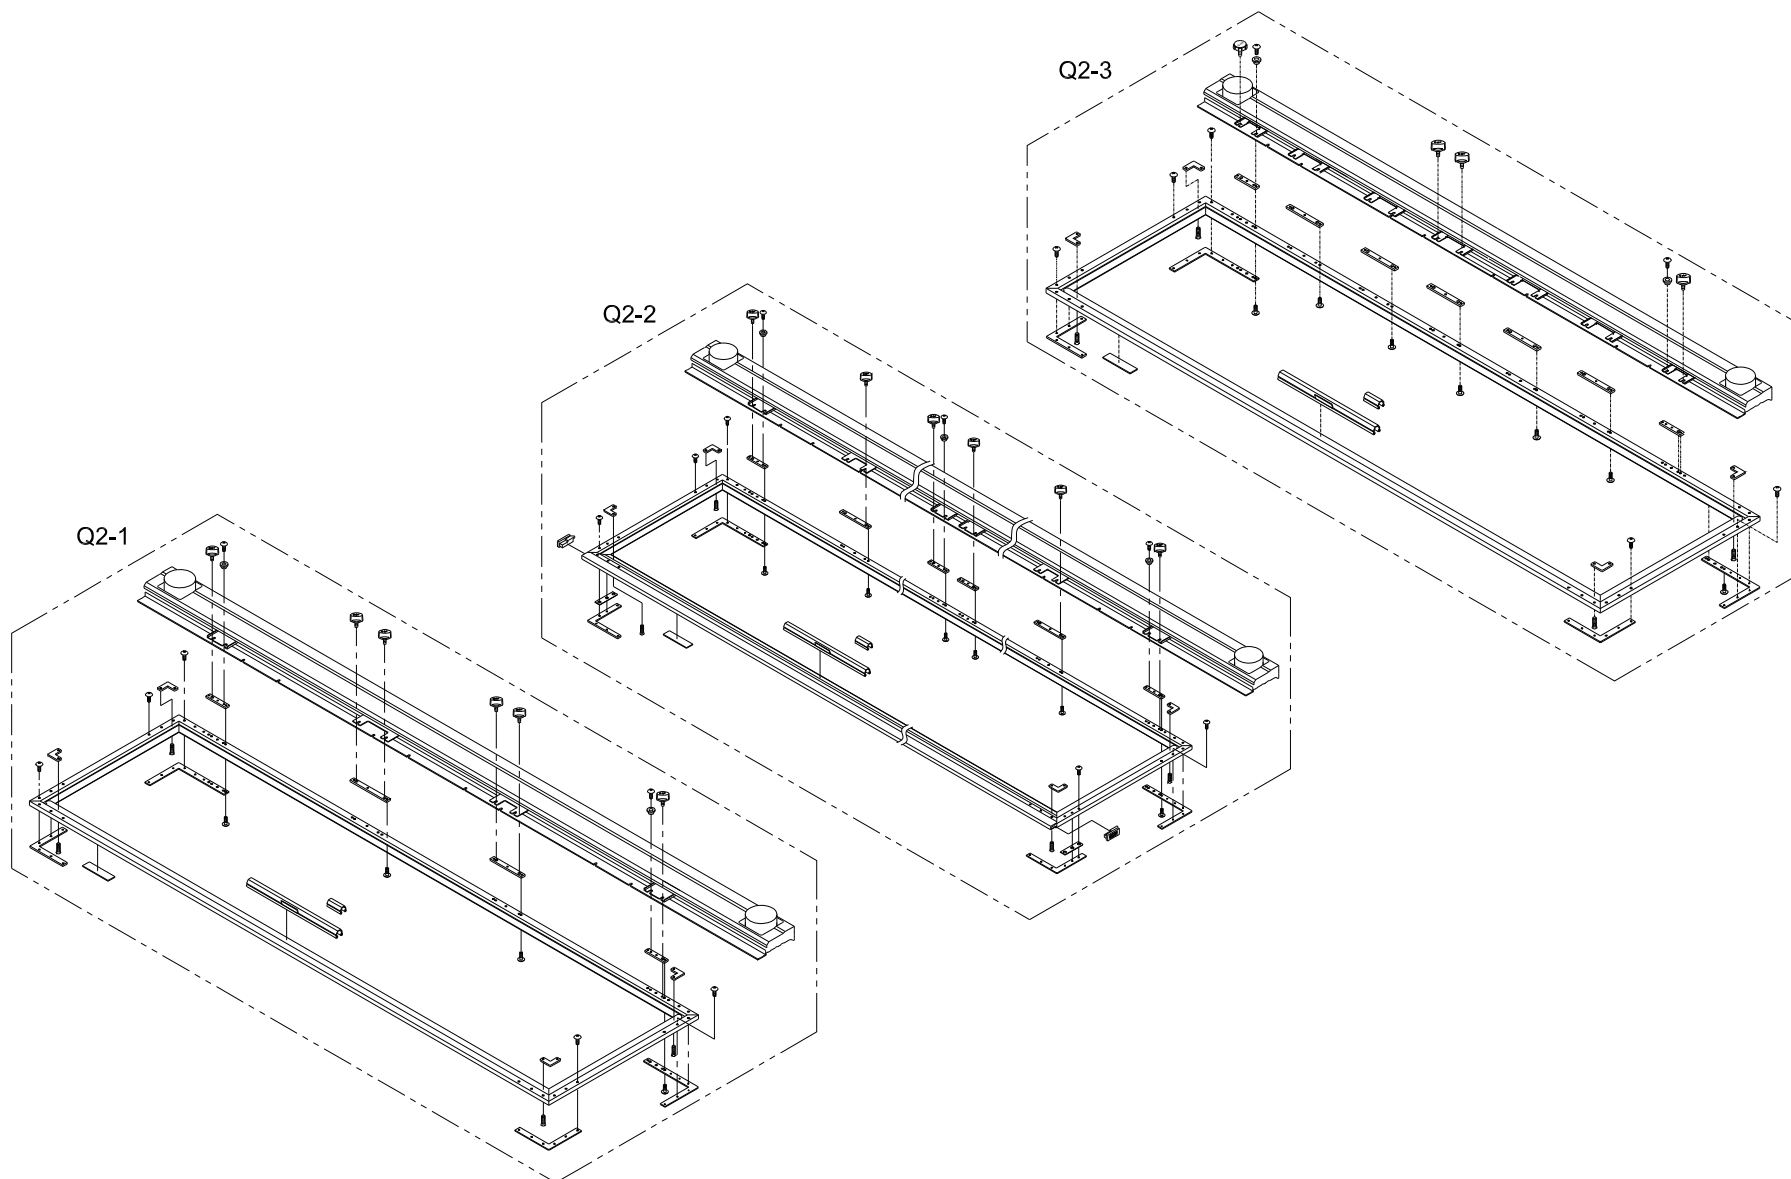

This diagram illustrates the exploded view of the Q2-1-13 assembly. The components are labeled as follows:

- Q2-1-13 (Main assembly)
- Q2-1-1 (Longitudinal beam)
- Q2-1-2 (Longitudinal beam)
- Q2-1-3 (Transverse beam)
- Q2-1-4 (Transverse beam)
- Q2-1-5 (Bracket)
- Q2-1-6 (Bracket)
- Q2-1-7 (Bracket)
- Q2-1-8 (Bracket)
- Q2-1-9 (Bracket)
- Q2-1-10 (Bracket)
- Q2-1-11 (Bracket)
- Q2-1-12 (Bracket)
- Q2-1-14 (Bracket)
- Q2-1-15 (Bracket)
- Q2-1-16 (Bracket)
- Q2-1-17 (Bracket)
- Q2-1-18 (Bracket)
- Q2-1-19 (Bracket)

Q2

Note

Q2

This diagram illustrates the exploded view of the Q3-2-17, 18, 19 assembly. The main components are labeled as follows:

- Q3-2-1**: The central horizontal rail assembly.
- Q3-2-2**: The left vertical rail assembly.
- Q3-2-3**: The right vertical rail assembly.
- Q3-2-4**: Corner brackets for the left and right rails.
- Q3-2-5**: Screws for the corner brackets.
- Q3-2-6**: L-shaped brackets for the left and right rails.
- Q3-2-7**: Screws for the L-shaped brackets.
- Q3-2-8**: Screws for the corner brackets.
- Q3-2-9**: Screws for the L-shaped brackets.
- Q3-2-10**: A small rectangular plate for the left rail.
- Q3-2-11**: A small rectangular plate for the right rail.
- Q3-2-12**: Small rectangular plates for the central rail.
- Q3-2-13**: Screws for the central rail.
- Q3-2-14**: Screws for the right rail.
- Q3-2-15**: Screws for the right rail.
- Q3-2-16**: Screws for the right rail.
- Q3-2-17, 18, 19**: The main assembly unit, which is a long, narrow, rectangular frame with a central rail.

The diagram shows the assembly points for each component, with dashed lines indicating the alignment and position of the parts. The components are arranged in a way that shows how they fit together to form the final assembly.

Note

Q2

R. Index

Part No.	Part Name	Page	Ref.No
01000200UK00	Body Front Cover (A)	128	P-3-1
01000204UK40	Surface Cover "B" (UK1204)	125	P-1-1
01000210UH60	Top Shaft L2698 (UH1506C)	38	E-3-18
01000210UH80	Top Shaft A L=2076 (UH1508)	38	E-3-18
01000214UK00	SURFACE COVER "B" (UK1206)	125	P-1-1
01000220UH80	TOP SHAFT B L=1479 (UH1508)	38	E-3-21
01000300UK00	Body Front Cover (B)	128	P-3-2
01000300UK60	Body Front Cover (B)	128	P-3-10
01000400UK00	Body Front Cover (C)	128	P-3-3
01000400UK00	Body Front Cover (C)	128	P-3-11
01000500UK00	Body Front Cover (D)	128	P-3-4
01000500UK60	Body Front Cover (D)	128	P-3-12
01000600UK00	Body Front Cover (E)	128	P-3-5
01000600UK00	Body Front Cover (E)	128	P-3-13
01000710UK00	TOP SHAFT COVER (UK1204)	125	P-1-5
01000710UK60	TOP SHAFT COVER (UK1206)	125	P-1-5
01001000UK00	Top Shaft Pulley Cover	125	P-1-11
01001100H000	Ball Bearing (6005Zz)	18	B-5-2
01001100H000	Ball Bearing (6005Zz)	25	C-5-9
01001100H000	Ball Bearing (6005Zz)	38	E-3-9
01001100H000	Bearing(6004zz)	62	H1-6-14
01001100UK00	Top Shaft Pulley Cover B	125	P-1-16
01001400UK00	Top Shaft Cover (L)	126	P-2-4
01001500T000	Spool Stand (L=380) (15C)	92	J-1-17
01001500UK60	Body Front Cover (F)	128	P-3-14
01001504U000	Spool Stand L=345 (UK604)(UK1204)	92	J-1-18
01001504U000	Spool Stand L=345 (UH1206C)(UH1506C)	92	J-1-18
01001505U000	Spool Stand L=395 (UK1204)(UK1504)	92	J-1-18
01001505U000	Spool Stand L=395 (UH1506C)	92	J-1-18
01-002A-AT01	COOLING FAN	113	M-2-4
01-002B-AU12	FAN Cover	113	M-2-5
01-002B-OT10	Pressing Plate for LCD	115	M-3-10
01-002M-AU12	FAN Screw (M4xL35)	113	M-2-6
01007SW-1111	Washer (10@)	101	K2-2-10
01008SW-9115	SPRING WASHER(@10)	12	A-2-5
01-012A-AT10	Picker Sol. Cover	89	I-4-11
01-013A-AT10	Picker Sol. Base	89	I-4-18
01022RB-UK01	Body Base Cover	129	P-4-10
01029BR-A001	Ball Bearing (6004Zz)	36	E-1-9
01029BR-A001	Needle Bearing (6002Z)	60	H1-4-46
01029BR-A001	Needle Bearing (6002Z)	70	H2-4-49
01029BR-A001	Needle Bearing (6002Z)	72	H2-5-49
01029BR-A001	Bearing(6004zz)	73	H2-6-23
01029BR-A001	Bearing(6004zz)	83	H3-6-23
01-037S-2070	Earth Screw (M4xL8)	113	M-2-21
01101700U000	Low Shaft Gear	12	A-2-17
01102000B000	Bearing Bushing	37	E-2-3
01-102B-OT10	Insulation Bush (B)	115	M-3-32
01-102B-OT10	Insulation Bush (B) (Male)	115	M-3-36
01300105U000	Take-Up Guide Rail (L) (15C)	21	C-1-3

Part No.	Part Name	Page	Ref.No
01300200H000	Oil Pump Adapter	28	C-8-5
01300205U000	Take-Up Guide Rail (M) (15C)	21	C-1-3
01300300H000	Oil Pump Hose Insert	26	C-6-6
01300300H000	Oil Pump Hose Insert	26	C-6-17
01300300H000	Oil Pump Hose Insert	27	C-7-7
01300300H000	Oil Pump Hose Insert	27	C-7-16
01300300H000	Oil Pump Hose Insert	28	C-8-6
01300300H000	Oil Pump Hose Insert	28	C-8-16
01300400H000	Oil Pump Compression Sleeve	26	C-6-7
01300400H000	Oil Pump Compression Sleeve	26	C-6-18
01300400H000	Oil Pump Compression Sleeve	27	C-7-8
01300400H000	Oil Pump Compression Sleeve	27	C-7-17
01300400H000	Oil Pump Compression Sleeve	28	C-8-7
01300400H000	Oil Pump Compression Sleeve	28	C-8-17
01300500H000	Oil Pump Compression Bushing	26	C-6-8
01300500H000	Oil Pump Compression Bushing	26	C-6-19
01300500H000	Oil Pump Compression Bushing	27	C-7-9
01300500H000	Oil Pump Compression Bushing	27	C-7-18
01300500H000	Oil Pump Compression Bushing	28	C-8-8
01300500H000	Oil Pump Compression Bushing	28	C-8-18
01300600H000	Oil Pump Hose (@4)	28	C-8-9
01300900H000	Mos Metering Valve	26	C-6-14
01300900H000	Mos Metering Valve	27	C-7-2
01301000H000	Valve Junction Connect Hose	27	C-7-3
01301100H000	Bed Oil Supply Hose "A"	27	C-7-10
01301200H000	Bed Oil Supply Hose "B"	27	C-7-11
01301300H000	Bed Oil Compression Sleeve	26	C-6-20
01301400H000	Bed Oil Compression Bushing	26	C-6-21
01301400H000	Bed Oil Compression Bushing	27	C-7-12
01301600H000	Hook Oil Supply Nipple	15	B-2-10
01301600H000	Hook Oil Supply Nipple	26	C-6-33
01301900H000	Close Plug (M8*1.0)	26	C-6-31
01301900H000	Close Plug (M8*1.0)	27	C-7-22
01302000H000	Mos Metering Valve (Mos-1)	26	C-6-15
01302210H000	Stop Valve (1/8)	28	C-8-12
01302400H000	Stop Valve Adapter Hose (@4)	26	C-6-9
01302400H000	Stop Valve Adapter Hose (@4)	27	C-7-14
01302400H000	Stop Valve Adapter Hose (@4)	28	C-8-19
01302600H000	Stop Valve Adapter	27	C-7-13
01302600H000	Stop Valve Adapter	28	C-8-15
01302700H000	Mos Metering Valve Junction	27	C-7-1
01302700U000	Mos Metering Valve Junction	26	C-6-10
01302800HD00	Mos Valve Junction Hose @4	26	C-6-16
01302900H000	Needle Bar Supply Hose	26	C-6-22
01303110H000	Elbow Tube End (E*0.3*2.4)	26	C-6-28
01303200H000	Take-Up Lever Oil Supply Hose	26	C-6-32
01303300H000	Needle Bar Driving Shaft Hose	26	C-6-34
01303500H000	Needle Bar Pin Supply Hose	28	C-8-20
01303600H000	Needle Bar Oil Hose Holder	26	C-6-23
01303700H000	TENSION PLATE PIN	45	F-2-22

Part No.	Part Name	Page	Ref.No
01303800H000	Hose	26	C-6-5
01303800H000	Hose	27	C-7-19
01303800U000	Cover Rubber Cap	24	C-4-11
01303900H000	Oil Distribution Junction	26	C-6-1
01303900H000	Oil Distribution Junction	27	C-7-15
01400105U000	Take-Up Guide Rail (R) (15C)	21	C-1-3
02-0000-EMB1	Head On/Off S/W Board 9C,15C	52	G-2-15
02000100T000	Magnetic Switch Set	108	L-1-16
02000100UH80	Low Shaft A 1650 (UH1508)	37	E-2-9
02000110UH60	Low Shaft L2303 (UH1506C)	37	E-2-9
02000200UH80	Low Shaft B 1448 (UH1508)	37	E-2-17
02000300UH60	MES DRIVING SHAFT L2020 (UH1506C)	30	D-1-18
02000300UH80	Mes Driving Shaft "A" L1443 (UH1508)	30	D-1-18
02000400B000	CABLE COVER HOLDER	109	L-2-1
02000400T000	Cable Grand (Dac1-11)	108	L-1-7
02000400UH80	MES DRIVING SHAFT "B" L1377 (UH1508)	30	D-1-22
02000600T000	Cable Grand (Dapg-36)	108	L-1-8
02000700T000	Push B/T Switch	108	L-1-5
02000800T000	Emergency Switch Set	120	N-4-13
02000910T000	Magnetic S/W Fixed Bracket	108	L-1-12
02001200T000	Resister 5/20W (Ce)	108	L-1-17
02001300T000	Bracket Stopper (Ce)	108	L-1-13
02001500U000	Jump Smpls (Mrk0R4-H)	108	L-1-14
02-001B-SW67	Switch Cover	113	M-2-17
02001PM-UK14	Top Shaft Cover "A" (15C)	126	P-2-10
02002SC-7119	Plus Screw (M4*L8)	23	C-3-2
02002SC-7119	Plus Screw (M4*L8)	51	G-1-3
02002SC-7119	Plus Screw (M4*L8)	71	H2-5-37
02002SC-7119	Plus Screw (M4*L8)	92	J-1-2
02002SC-7119	Plus Screw (M4*L8)	129	P-4-7
02002SC-7119	Plus Screw (M4*L8)	131	Q1-1-12
02004BR-T121	Hook Shaft Bearing Washer	12	A-2-9
02004SC-4113	Screw (M4XL8)	16	B-3-12
02005PM-UK14	Top Shaft Cover "B" (15C)	126	P-2-11
02006PR-UK01	Cover PLate (R) 9C	53	G-3-3
02006PR-UK14	COVER PLATE (R) 15C	53	G-3-3
02008LA-UK12	Switch Base	120	N-4-3
02008SC-4122	Needle Plate Bracket Screw	90	I-4-32
02009PI-T121	Spring Pin	33	D-4-3
02009PR-UK01	Cover PLate (L) (12C)	53	G-3-5
02009PR-UK02	Cover Plate (L) Uk1202-45	53	G-3-5
02009PR-UK12	Cover Plate Uk1502-45	53	G-3-5
02009PR-UK14	Cover PLate (L) (15C)	53	G-3-5
02009SC-A001	Side Cover Screw	22	C-2-14
02009SC-A001	Side Cover Screw	88	I-3-3
02010AF-3123	Truss Screw (M4*L8)	118	N-2-15
02010SC-3123	Truss Screw (M4*L8)	24	C-4-10
02010SC-3123	Truss Screw (M4*L8)	52	G-2-11
02010SC-3123	Truss Screw (M4*L8)	108	L-1-4
02010SC-3123	Truss Screw (M4*L8)	108	L-1-10

R. Index

Part No.	Part Name	Page	Ref.No
02010SC-3123	Truss Screw (M4*L8)	119	N-3-15
02010SC-3123	Truss Screw (M4*L8)	129	P-4-14
02010SC-3123	Truss Screw (M4*L8)	136	Q2-1-13
02010SC-3123	Truss Screw (M4*L8)	137	Q2-2-20
02010SC-A001	SCREW (9/64,N40,L8)	14	B-1-11
02010SC-A001	Take-Up Driving Lever "A"	15	B-2-1
02010SC-A001	SCREW (9/64,N40,L8)	17	B-4-24
02010SC-A001	SCREW (9/64,N40,L8)	19	B-6-11
02011SC-3125	Rotary Hook Support Screw	89	I-4-9
02014SC-7113	Hex. Socket Bolt (M4*L5)	30	D-1-3
02014SC-7113	Hex.Socket Bolt (M4*L5)	49	F-5-11
02014SC-7113	Hex. Socket Bolt (M4*L5)	126	P-2-16
02014SC-7113	Hex.Socket Bolt (M4*L5)	127	P-2-24
02015SC-7113	Hex.Socket Bolt (M4*L10)	30	D-1-17
02015SC-7113	Hex.Socket Bolt (M4*L10)	30	D-1-21
02015SC-7113	Hex.Socket Bolt (M4*L10)	30	D-1-27
02015SC-7113	Hex.Socket Bolt (M4*L10)	33	D-4-21
02015SC-7113	HEX.SOCKET BOLT (M4*L10)	36	E-1-20
02015SC-7113	Hex.Socket Bolt (M4*L8)	45	F-2-18
02015SC-7113	Hex.Socket Bolt (M4*L10)	57	H1-2-4
02015SC-7113	HEX.SOCKET BOLT (M4*L10)	58	H1-3-13
02015SC-7113	Hex.Socket Bolt (M4*L10)	59	H1-4-14
02015SC-7113	HEX.SOCKET BOLT (M4*L10)	61	H1-5-5
02015SC-7113	HEX.SOCKET BOLT (M4*L10)	65	H2-1-7
02015SC-7113	Hex.Socket Bolt (M4*L10)	69	H2-4-17
02015SC-7113	Hex.Socket Bolt (M4*L10)	70	H2-4-59
02015SC-7113	Hex.Socket Bolt (M4*L10)	78	H3-2-7
02015SC-7113	Hex.Socket Bolt (M4*L10)	80	H3-4-14
02015SC-7113	Hex.Socket Bolt (M4*L10)	85	I-1-34
02015SC-7113	Hex.Socket Bolt (M4*L10)	89	I-4-20
02015SC-7113	Hex.Socket Bolt (M4*L10)	94	J-2-9
02015SC-7113	Hex.Socket Bolt (M4*L10)	96	K1-1-10
02015SC-7113	Hex.Socket Bolt (M4*L10)	97	K1-2-14
02015SC-7113	Hex.Socket Bolt (M4*L10)	97	K1-2-26
02015SC-7113	Hex.Socket Bolt (M4*L10)	100	K2-1-10
02015SC-7113	Hex.Socket Bolt (M4*L10)	101	K2-2-29
02015SC-7113	Hex.Socket Bolt (M4*L10)	105	K3-2-33
02015SC-7113	Hex.Socket Bolt (M4*L10)	108	L-1-24
02015SC-7113	Hex.Socket Bolt (M4*L10)	125	P-1-2
02015SC-7113	Hex.Socket Bolt (M4*L10)	126	P-2-5
02015SC-7113	Hex.Socket Bolt (M4*L10)	131	Q1-1-8
02017PM-A001	Cable Ring	118	N-2-7
02017PM-A001	Cable Ring	120	N-4-15
02019BM-T121	Needle Plate Set(Cap)	90	I-4-33
02019PR-T121	Needle Plate(Cap)	90	I-4-34
02023ET-A001	Top Shaft Cover Magnet	126	P-2-9
02023SC-7113	Hex. Socket Bolt (M4*L8)	16	B-3-7
02023SC-7113	Hex. Socket Bolt (M4*L8)	23	C-3-10
02023SC-7113	Hex. Socket Bolt (M4*L8)	23	C-3-17
02023SC-7113	Hex. Socket Bolt (M4*L8)	26	C-6-30

Part No.	Part Name	Page	Ref.No
02023SC-7113	Hex. Socket Bolt (M4*L8)	28	C-8-11
02023SC-7113	Hex. Socket Bolt (M4*L8) (UK1204,UH1506C)	34	D-5-2
02023SC-7113	Hex. Socket Bolt (M4*L8)	34	D-5-12
02023SC-7113	Hex. Socket Bolt (M4*L8)	37	E-2-20
02023SC-7113	Hex.Socket Bolt (M4*L5)	45	F-2-21
02023SC-7113	Hex.Socket Bolt (M4*L8)	52	G-2-8
02023SC-7113	Hex. Socket Bolt (M4*L8)	53	G-3-2
02023SC-7113	HEX.SOCKET BOLT (M4*L8)	55	H1-1-13
02023SC-7113	Hex. Socket Bolt (M4*L8)	55	H1-1-21
02023SC-7113	HEX.SOCKET BOLT (M4*L8)	55	H1-1-30
02023SC-7113	Hex. Socket Bolt (M4*L8)	57	H1-2-10
02023SC-7113	Hex. Socket Bolt (M4*L8)	58	H1-3-7
02023SC-7113	Hex.Socket Bolt (M4*L8)	65	H2-1-16
02023SC-7113	Hex. Socket Bolt (M4*L8)	65	H2-1-26
02023SC-7113	Hex.Socket Bolt (M4*L8)	65	H2-1-35
02023SC-7113	Hex. Socket Bolt (M4*L8)	67	H2-2-16
02023SC-7113	Hex. Socket Bolt (M4*L8)	68	H2-3-13
02023SC-7113	Hex. Socket Bolt (M4*L8)	70	H2-4-55
02023SC-7113	Hex. Socket Bolt (M4*L8)	76	H3-1-4
02023SC-7113	HEX.SOCKET BOLT (M4*L8)	76	H3-1-16
02023SC-7113	HEX.SOCKET BOLT (M4*L8)	76	H3-1-23
02023SC-7113	Hex.Socket Bolt (M4*L8)	77	H3-1-39
02023SC-7113	Hex. Socket Bolt (M4*L8)	78	H3-2-13
02023SC-7113	Hex. Socket Bolt (M4*L8)	78	H3-2-17
02023SC-7113	Hex. Socket Bolt (M4*L8)	86	I-1-44
02023SC-7113	Hex.Socket Bolt (M4*L8)	86	I-1-47
02023SC-7113	Hex.Socket Bolt (M4*L8)	87	I-2-2
02023SC-7113	HEX.SOCKET BOLT (M4*L8)	125	P-1-13
02023SC-7113	HEX. SOCKET BOLT (M4*L8)	126	P-2-6
02024LA-UK14	S/B Switch Base	120	N-4-1
02025PR-UK02	Top Shaft Cover (C) Bracket L	125	P-1-7
02026EL-UK01	Start Switch Set	120	N-4-5
02026SC-A001	Stand	122	O-1-17
02027EL-UK01	S/B Switch Set	120	N-4-4
02028LA-UK14	Emergency Switch Base	120	N-4-2
02028SW-9115	SPRING WASHER (@4)	36	E-1-21
02028SW-9115	Spring Washer (@4)	37	E-2-21
02028SW-9115	Spring Washer (@4)	48	F-4-5
02028SW-9115	Spring Washer (@4)	59	H1-4-32
02028SW-9115	Spring Washer (@4)	61	H1-5-15
02028SW-9115	Spring Washer (@4)	65	H2-1-8
02028SW-9115	Spring Washer (@4)	67	H2-2-17
02028SW-9115	Spring Washer (@4)	68	H2-3-14
02028SW-9115	Spring Washer (@4)	69	H2-4-18
02028SW-9115	Spring Washer (@4)	69	H2-4-30
02028SW-9115	Spring Washer (@4)	70	H2-4-56
02028SW-9115	Spring Washer (@4)	70	H2-4-69
02028SW-9115	Spring Washer (@4)	71	H2-5-29
02028SW-9115	Spring Washer (@4)	72	H2-5-42
02028SW-9115	Spring Washer (@4)	72	H2-5-58

Part No.	Part Name	Page	Ref.No
02028SW-9115	Spring Washer (@4)	76	H3-1-5
02028SW-9115	Spring Washer (@4)	78	H3-2-8
02028SW-9115	Spring Washer (@4)	78	H3-2-14
02028SW-9115	Spring Washer (@4)	78	H3-2-18
02028SW-9115	Spring Washer (@4)	80	H3-4-33
02028SW-9115	Spring Washer (@4)	82	H3-5-14
02028SW-9115	Spring Washer (@4)	94	J-2-10
02028SW-9115	Spring Washer (@4)	97	K1-2-27
02028SW-9115	Spring Washer (@4)	101	K2-2-30
02028SW-9115	Spring Washer (@4)	105	K3-2-34
02028SW-9115	Spring Washer (@4)	108	L-1-25
02028SW-9115	Spring Washer (@4)	125	P-1-3
02029SN-9311	Hex. Nut (M4-No2)	33	D-4-16
02030SC-T121	Bed Cover Screw(9/64" 40)	90	I-4-39
02030SC-T121	Bed Cover Screw(9/64" 40)	97	K1-2-8
02030SC-T121	Bed Cover Screw(9/64" 40)	101	K2-2-3
02030SC-T121	Bed Cover Screw(9/64" 40)	105	K3-2-8
02030SC-T121	Bed Cover Screw(9/64" 40)	106	K3-3-18
02030SW-B001	Washer (5@)	18	B-5-4
02031PR-UK02	Pulley Cover Bracket	125	P-1-6
02031SC-7113	Hex. Socket Screw(M5*L10)	18	B-5-3
02031SC-7113	Hex. Socket Screw(M5*L10)	32	D-3-2
02031SC-7113	Hex. Socket Screw(M5*L10)	32	D-3-14
02031SC-7113	Hex. Socket Screw(M5*L10)	117	N-1-2
02031SC-7113	Hex. Socket Screw(M5*L10)	118	N-2-2
02031SC-7113	Hex. Socket Screw(M5*L10)	118	N-2-10
02031SC-7113	Hex. Socket Screw(M5*L10)	119	N-3-2
02031SC-7113	Hex. Socket Screw(M5*L10)	125	P-1-8
02036PM-UK14	Top Shaft Cover Uk1504-45 (UK1506)	126	P-2-13
02036SN-1211	Hex. Nut (M20-No2)	11	A-1-3
02044SC-3123	Truss Screw (M5*L8)	40	E-5-21
02044SC-3123	Truss Screw (M5*L8)	108	L-1-2
02044SC-3123	Truss Screw (M5*L8)	128	P-3-6
02044SC-3123	Truss Screw (M5*L8)	128	P-3-8
02044SC-3123	Truss Screw (M5*L8)	128	P-3-15
02044SC-3123	Truss Screw (M5*L8)	128	P-3-23
02044SC-3123	Truss Screw (M5*L8)	129	P-4-3
02044SC-3123	Truss Screw (M5*L8)	129	P-4-5
02044SC-3123	Truss Screw (M5*L8)	129	P-4-9
02044SC-3123	Truss Screw (M5*L8)	136	Q2-1-6
02044SC-3123	Truss Screw (M5*L8)	137	Q2-2-7
02044SC-3123	Truss Screw (M5*L8)	138	Q2-3-5
02044SC-3123	Truss Screw (M5*L8)	138	Q2-3-7
02053PR-UK01	Cable Clamp	109	L-2-10
02054PR-A001	Main Motor Pulley Cover	129	P-4-4
02054RB-UK01	Clamp Rubber	109	L-2-9
02057AD-A102	Board Cover L=1599	118	N-2-1
02062PR-UI12	Cable Holder	120	N-4-6
02063SW-1111	Washer(@4)	78	H3-2-9
02065SC-3328	Tapping Screw (M3*L10)	117	N-1-12

R. Index

Part No.	Part Name	Page	Ref.No
02065SC-3328	Tapping Screw (M3*L10)	118	N-2-5
02065SC-3328	Tapping Screw (M3*L10)	119	N-3-5
02088PR-UK01	Power Switch Cover	108	L-1-3
02093AD-UK06	Board Cover "A"	118	N-2-6
02097ET-B001	Model Name Plate (UK1204)	129	P-4-11
02097ET-B001	Model Name Plate (UK1206)	129	P-4-12
02097ET-B001	Model Name Plate (15C) (UH1506C)	129	P-4-13
02100300U000	Hook Shaft	12	A-2-14
02100400U000	Mes Driving Lever	33	D-4-20
02101000UH60	Cable (25-10)	79	H3-3-36
02101300U000	CABLE (SH-13-2)	65	H2-1-22
02101300U040	Cable (Sh-13-1)	55	H1-1-18
02101800B000	Plate Led S/W Board Cable	52	G-2-14
02101ET-UK01	Brand Mark	129	P-4-6
02102100UH60	Cable (25-21)	104	K3-1-29
02102200U000	Plate To B/B Cable	52	G-2-13
02102600UH80	CABLE (SH-26-4) (UH1508)	32	D-3-17
02103000UH80	Cable (Sh-30-4) (UH1508)	120	N-4-17
02103903H000	Wheel Earth 6,9,12C	53	G-3-9
02103ET-UK01	Emergency Switch Sticker	120	N-4-12
02104400UH80	CABLE (SH-44-5) (UH1508)	32	D-3-18
02105000E040	Cable(Ce4Ht-50)	117	N-1-20
02105000E040	Cable(Ce4Ht-50)	118	N-2-21
02105600U040	I/O S/W - Magnetic Contactor	108	L-1-18
02105610U040	Sh-56-2	109	L-2-14
02105700U020	I/O Switch Connect Cable	108	L-1-6
02105700U040	Cable (Sh-57-2)	109	L-2-13
02105800E040	Magnetic - Emt24 Trans	108	L-1-20
02105700UH60	Cable (Sh-57-3)	119	N-3-21
02105900E040	Emt24 Trans Output - Emergen	108	L-1-19
02105900U000	Sh-59	109	L-2-16
02106000U040	Cable (Sh-60-2)	109	L-2-15
02106300U000	Sh-63	108	L-1-15
02106400U000	Emergency S/W Cable	120	N-4-14
02106500U040	Sh-65-2	40	E-5-5
02106600U020	Sh-66-1 (UK1202)	86	I-1-50
02106600U040	Sh-66-2 (UK1204)	86	I-1-50
02106600U060	Sh-66-4 (UK1206)	86	I-1-50
02106600UH60	Sh-66-3 (UH1506C)	86	I-1-50
02106600UH80	SH-66-5 (UH1508)	86	I-1-51
02106700U020	Sh-67-1 (UK1202)	86	I-1-51
02106700U040	Sh-67-2 (UK1204)	86	I-1-51
02106700U060	Sh-67-4 (UK1206)	86	I-1-51
02106700UH60	Sh-67-3 (UH1506C)	86	I-1-51
02106800UH80	SH-68-5 (UH1508)	86	I-1-51
03-0000-EMB1	Head On/Off S/W Board 6C,12C	52	G-2-15
03000100UH00	Roller Plate Cover	77	H3-1-43
03000100UK20	Top Shaft (L1298) (UK1202)	38	E-3-18
03000100UK40	Top Shaft (L2298) (UK1204)	38	E-3-18
03000100UK60	Top Shaft "A" (@20, L1505.5) (UK1206)	38	E-3-18

Part No.	Part Name	Page	Ref.No
03000110H000	Cam Tightening Collar (@20)	18	B-5-5
03000200UK20	Low Shaft (L=804) (UK1202)	37	E-2-9
03000200UK40	Low Shaft (UK1204)	37	E-2-9
03000200UK60	Top Shaft "B" (@20, L1800) (UK1206)	38	E-3-21
03000300UK60	Low Shaft B (@15, L1385) (UK1206)	37	E-2-17
03000700TH00	Thread Lever Connect Link	30	D-1-14
03000900U000	Tension Adjusting Block	40	E-5-13
03001100U000	Mes Driving Lever Shaft "A"	33	D-4-14
03001200U000	Mes Driving Lever Shaft "B" (UK1202, UK1204, UH1506C)	33	D-4-17
03002610H000	Return Spring Stopper	85	I-1-29
03002700H000	Return Spring	85	I-1-31
03002800H000	Return Spring Stopper Washer	85	I-1-32
03002900H000	Return Spring Fix Pin Washer	85	I-1-35
03003000H000	Return Spring Fix Pin	85	I-1-33
03003300H000	Cam Shaft Fixing Block	85	I-1-6
03003500H000	Motor Driving Cam Shaft	85	I-1-10
03003910H000	Upper Thread Driving Plate	85	I-1-11
03003SC-4113	Hex. Socket Bolt	14	B-1-2
03003SC-4113	Hex. Socket Bolt	19	B-6-2
03003SC-4113	Hex. Socket Bolt "B"(M8*L35)	59	H1-4-3
03003SC-4113	Hex. Socket Bolt "B"(M8*L35)	62	H1-6-4
03003SC-4113	Hex. Socket Bolt "B"(M8*L35)	73	H2-6-4
03003SC-4113	Hex. Socket Bolt "B"(M8*L35)	80	H3-4-3
03003SC-4113	Hex. Socket Bolt "B"(M8*L35)	83	H3-6-4
03004100H000	Driving Plate Block	85	I-1-15
03004200U000	Timing Pulley Pin (Y)	69	H2-4-26
03004400H000	Motor Driving Connect Bearing	85	I-1-23
03004500H000	Connecting Plate Pin Washer	85	I-1-22
03004800H000	Connecting Plate Knuckle	85	I-1-24
03005100U000	Coupling "A"	60	H1-4-56
03005100U000	Coupling "A"	73	H2-6-27
03005100U000	Coupling "A"	83	H3-6-26
03005210H000	Collar "A"	25	C-5-10
03005210H000	Collar "A"	38	E-3-10
03005MC-3123	TRUSS SCREW (M3*L5)	87	I-2-18
03006720HDK0	Coupling @20 (UK1206, UH1508)	38	E-3-19
03006MC-8118	PLUS SCREW (M3*L6)	55	H1-1-37
03006MC-8118	PLUS SCREW (M3*L6)	65	H2-1-12
03007000UH60	Upper Thread Driving Shaft (UH1506C)	86	I-1-36
03007000UK20	Upper Thread Driving Shaft (UK1202)	85	I-1-36
03007000UK40	Upper Thread Driving Shaft (UK1204)	85	I-1-37
03007000UK60	Upper Thread Driving Shaft (UK1206)	86	I-1-36
03007SC-A001	Cam Base Screw	16	B-3-2
03008000H000	Ball Bearing 6800	17	B-4-20
03008100K000	Needle Bar Drive Bearing Bush	17	B-4-21
03008300H000	Connecting Plate Stud Screw A	85	I-1-21
03008300I000	Arm Guard Plate(L) Bracket	22	C-2-13
03008400H000	Top Shaft Bracket "C"	25	C-5-1
03008500H000	Top Shaft Bearing Case "B"	25	C-5-5
03008600H000	Motor Cover Fixing Bracket	86	I-1-43

Part No.	Part Name	Page	Ref.No
03008700H000	Balunce Cam	18	B-5-7
03008800H000	Balunce Cam Bracket	18	B-5-8
03010800UH00	TOP SHAFT PULLEY	38	E-3-16
03010800UH80	MAIN MOTOR PULLEY	40	E-5-7
03010SR-4013	C-Ring (@47)	38	E-3-8
03012100U000	Low Shaft Support Bracket	36	E-1-2
03012210U000	INDICATOR	36	E-1-19
03013EL-T121	Encoder	24	C-4-1
03016SC-4113	Hex. Socket Bolt (M5*L15)	18	B-5-6
03016SC-4113	Hex. Socket Bolt (M5*L15)	25	C-5-6
03016SC-4113	Hex. Socket Bolt (M5*L15)	27	C-7-4
03016SC-4113	Hex. Socket Bolt (M5*L15)	60	H1-4-57
03016SC-4113	Hex. Socket Bolt (M5*L15)	62	H1-6-20
03016SC-4113	Hex. Socket Bolt (M5*L15)	72	H2-5-53
03016SC-4113	Hex. Socket Bolt (M5*L15)	73	H2-6-28
03016SC-4113	Hex. Socket Bolt (M5*L15)	80	H3-4-10
03016SC-4113	Hex. Socket Bolt (M5*L15)	83	H3-6-27
03016SC-4113	Hex. Socket Bolt (M5*L15)	92	J-1-3
03016SC-4113	Hex. Socket Bolt (M5*L15)	93	J-2-2
03016SC-4113	HEX. SOCKET BOLT(M5*L15)	100	K2-1-3
03016SC-4113	HEX. SOCKET BOLT(M5*L15)	101	K2-2-18
03016SC-4113	Hex. Socket Bolt (M5*L15)	118	N-2-9
03020SC-A001	Drive Pin Screw 11/64,N40,L8	17	B-4-16
03020SC-A001	Drive Pin Screw 11/64,N40,L8	17	B-4-19
03020SC-A001	Drive Pin Screw 11/64,N40,L8	48	F-4-8
03022SC-4517	Hex.Socket Set Screw(M4*L5)	15	B-2-8
03022SC-4517	Hex. Socket Set Screw(M4*L5)	33	D-4-12
03022SC-4517	Hex. Socket Set Screw(M4*L5)	37	E-2-26
03022SC-4517	Hex. Socket Set Screw(M4*L5)	42	F-1-7
03022SC-4517	Hex. Socket Set Screw(M4*L5)	56	H1-1-45
03022SC-4517	Hex. Socket Set Screw(M4*L5)	76	H3-1-35
03022SC-4517	Hex. Socket Set Screw(M4*L5)	132	Q1-2-8
03022SC-4517	Hex. Socket Set Screw(M4*L5)	133	Q1-3-8
03022SC-4517	Hex. Socket Set Screw(M4*L5)	134	Q1-4-8
03025SW-1211	Washer (@6)	26	C-6-4
03025SW-1211	Washer (@6)	26	C-6-13
03025SW-1211	Washer (@6)	28	C-8-4
03026SW-9115	Spring Washer (@6)	26	C-6-3
03026SW-9115	Spring Washer (@6)	26	C-6-12
03026SW-9115	Spring Washer (@6)	28	C-8-3
03026SW-9115	Spring Washer (@6)	38	E-3-6
03031SN-A001	Pin. Nut (11/64-N=40)	23	C-3-12
03031SN-A001	Pin. Nut (11/64,N=40)	51	G-1-4
03031SN-A001	Pin. Nut (11/64,N=40)	94	J-2-15
03033CW-A001	Driver Pin	17	B-4-12
03034SW-A001	Reciprocator Washer	17	B-4-3
03042SF-T121	FELT "A"	17	B-4-22
03045SP-B001	Jump Spring	17	B-4-6
03046CW-B001	Jump Spring Guide	17	B-4-7
03047PM-CT01	Stopper-A'ssy	17	B-4-10

R. Index

Part No.	Part Name	Page	Ref.No
03048SW-A001	Reciprocator Washer	17	B-4-8
03050SC-4517	Hex. Socket Set Screw (M3*L3)	33	D-4-26
03056CL-B001	Head Rail Holder	14	B-1-7
03056CL-B001	Head Rail Holder	19	B-6-7
03057SC-A001	Head Rail Holder Screw	14	B-1-8
03057SC-A001	Head Rail Holder Screw	19	B-6-8
03062ET-A001	Cable Fastener	14	B-1-10
03062ET-A001	Cable Fastener	19	B-6-10
03065SC-A001	Guard Plate Screw	22	C-2-3
03068LM-BB00	Lm Guide Block Set (12C)	21	C-1-1
03068LM-H003	Lm Guide Block Set (15C)	21	C-1-1
03069LM-B002	Lm Guide Block Set (9C)	21	C-1-1
03070LM-BE00	Lm Guide Block Set (6C)	21	C-1-1
03071SC-7113	Hex. Socket Bolt (M3*L10)	32	D-3-8
03071SC-7113	HEX. SOCKET BOLT (M3*L10)	55	H1-1-4
03071SC-7113	HEX. SOCKET BOLT (M3*L10)	65	H2-1-2
03071SC-7113	HEX. SOCKET BOLT (M3*L10)	67	H2-2-3
03071SC-7113	HEX. SOCKET BOLT (M3*L10)	68	H2-3-9
03071SC-A001	Hex.Scket Bolt (M3*L15)	21	C-1-2
03071SC-A001	Hex.Scket Bolt (M3*L15)	69	H2-4-3
03071SC-A001	Hex.Scket Bolt (M3*L15)	71	H2-5-7
03071SC-A001	Hex.Scket Bolt (M3*L15)	79	H3-3-9
03100100UH01	Cam Roller Guide Rail (L590)	61	H1-5-1
03100100UH01	Y-Lm Guide Ass'Y	69	H2-4-2
03100100UH01	Y-Lm Guide Ass'Y	71	H2-5-6
03100100UH01	Cam Roller Guide Rail (L590)	82	H3-5-1
03100200UH01	Y-Lm Guide Frame (L650)	59	H1-4-1
03100200UH01	Y-Lm Guide Frame (L650)	80	H3-4-1
03100300UH80	Bracket For Y-Sensing	71	H2-5-32
03100400UH01	Y-Driving Timing Belt (L1250)	61	H1-5-3
03100400UH01	Y-Driving Timing Belt (L1250)	82	H3-5-18
03100400UH80	X-Drive Connecting Plate	71	H2-5-36
03100500UH00	Y-Tension Adjusting Bracket	59	H1-4-23
03100500UH00	Y-Tension Adjusting Bracket	69	H2-4-22
03100500UH00	Y-Tension Adjusting Bracket	71	H2-5-13
03100500UH00	Y-Tension Adjusting Bracket	80	H3-4-19
03100600UH00	Tension Adjusting Plate	59	H1-4-30
03100600UH00	Tension Adjusting Plate	69	H2-4-28
03100600UH00	Tension Adjusting Plate	80	H3-4-31
03100600UK40	INDEX SHAFT	37	E-2-8
03100700H000	MAIN DRIVING BELT 290J*10R	38	E-3-17
03100700UH00	Fixed Block	59	H1-4-38
03100700UH00	Fixed Block	70	H2-4-41
03100700UH00	Fixed Block	71	H2-5-17
03100700UH00	Fixed Block	80	H3-4-35
03100900UH00	Y-Bearing Bracket (L)	60	H1-4-43
03100900UH00	Y-Bearing Bracket(L)	70	H2-4-46
03100900UH00	Y-Bearing Bracket(L)	72	H2-5-46
03100900UH00	Y-Bearing Bracket (L)	81	H3-4-43
03100900UH80	Tension Adjusting Plate (B)	71	H2-5-27

Part No.	Part Name	Page	Ref.No
03101000UH00	Y-Bearing Bracket (R)	60	H1-4-44
03101000UH00	Y-Bearing Bracket(R)	70	H2-4-47
03101000UH00	Y-Bearing Bracket(R)	72	H2-5-47
03101000UH00	Y-Bearing Bracket (R)	81	H3-4-44
03101300UH00	Sensor Bracket	59	H1-4-13
03101300UH00	Sensor Bracket	69	H2-4-16
03101300UH00	Sensor Bracket	80	H3-4-13
03101300UH80	UPPER SHAFT SUPPORT BRACKET	38	E-3-1
03101400U000	Upper Shaft Support Cover	38	E-3-12
03101400UH00	Plate For Y-Sensing	61	H1-5-8
03101400UH00	Sensing Plate (Y)	70	H2-4-62
03101400UH00	Plate For Y-Sensing	82	H3-5-7
03101600UH80	X-FRAME HOLDER	71	H2-5-38
03106000U000	Timing Pulley Driving Pin	58	H1-3-36
03106000U000	Timing Pulley Driving Pin	68	H2-3-36
03106000U000	Timing Pulley Driving Pin	79	H3-3-12
03200100UH00	Rail Guide (UK1204,UH1506C)	34	D-5-1
03200200B000	Lower Shaft Timing Pulley	62	H1-6-34
03200200B000	Lower Shaft Timing Pulley	71	H2-5-11
03200200B000	Lower Shaft Timing Pulley	73	H2-6-34
03200200B000	Lower Shaft Timing Pulley	83	H3-6-34
03200200UH00	Rail Guide Cover Stud	34	D-5-10
03200300UH00	Rail Guide Cover	34	D-5-11
03200400I000	Roller Bearing	62	H1-6-25
03200400I000	Roller Bearing	73	H2-6-14
03200400I000	Roller Bearing	83	H3-6-7
03200500UH00	X-Axis L/M Guide "A"	78	H3-2-1
03200500UK40	X-Axis L/M Guide 1160L	57	H1-2-1
03200500UK40	X-AXIS L/M GUIDE (1160L)	67	H2-2-1
03200500UK60	X-AXIS L/M GUIDE (760L)	67	H2-2-2
03200600UH00	X-Axis L/M "B"	78	H3-2-2
03200600UK60	TUBULAR FRAME RAIL PLATE (L3630)	65	H2-1-4
03200700I000	C-Ring	62	H1-6-29
03200700I000	C-Ring	73	H2-6-18
03200700I000	C-Ring	83	H3-6-11
03200700UH00	Tubular Frame Rail Plate	76	H3-1-11
03200700UK40	Tubular Frame Rail Plate	55	H1-1-31
03200700UK60	CONNECTING PLATE "A"	67	H2-2-8
03200800UH00	L/M Block Connecting Plate (L)	78	H3-2-10
03200800UK40	L/M Block Connecting Plate (L)	57	H1-2-9
03200800UK40	L/M BLOCK CONNECTING PLATE (L)	67	H2-2-13
03200800UK60	CONNECTING PLATE FOR LM BLOCK (L119)	67	H2-2-12
03200900UH00	L/M Block Connecting Plate (R)	78	H3-2-11
03200900UK40	L/M Block Connecting Plate (R)	57	H1-2-13
03200900UK40	L/M BLOCK CONNECTING PLATE (R)	67	H2-2-15
03200900UK60	CONNECTING PLATE (A) (L714.5)	67	H2-2-14
03201000UH00	L/M Block Connecting Plate	78	H3-2-12
03201000UK40	L/M Block Connecting Plate	57	H1-2-14
03201100UH00	X-Timing Belt (L=1260)	79	H3-3-6
03201200UH00	X-Moving Sensor Plate	78	H3-2-16

Part No.	Part Name	Page	Ref.No
03201300UH00	X-Cover (L=2931)	76	H3-1-28
03201300UK40	X-Cover (L=2635)	55	H1-1-33
03201600UH00	X-Positioning Sensor	55	H1-1-8
03201700UH00	X-Positioning Sensor	55	H1-1-7
03201800UH00	Felt (190*30*1.5T)	55	H1-1-32
03201900UH00	X-Frame Screw Bush	56	H1-1-40
03201900UH00	X-Frame Screw Bush	77	H3-1-42
03300604U000	Take-Up Guide Rail L=329 (12C)	21	C-1-3
03301000B000	TAKE-UP LEVER PIN	15	B-2-9
03301200A000	Bushing	15	B-2-11
03302100A000	Pin Collar	15	B-2-7
03302500I000	Arm Top Cover	21	C-1-5
03302600I000	Arm Bearing Guide Plate	14	B-1-5
03302600I000	Arm Bearing Guide Plate	19	B-6-5
03302900H000	NEEDLE CASE (KT-42469)	16	B-3-3
03303100H000	Bearing Case A @20	18	B-5-1
03303800I000	Arm Guard Plate(R)	22	C-2-2
03304100I000	Thread Holding Lever Ass'y	22	C-2-4
03304200I000	Lever Spring	22	C-2-5
03304300I000	Lever Spring Bush.	22	C-2-6
03304400I000	Thread Holding Push Plate	22	C-2-7
03304900H000	Jump Clutch Lever Stopper	23	C-3-23
03313200I000	NEEDLE BAR DRIVE LEVER(SET)	17	B-4-1
03410100I000	Jump Motor Base	23	C-3-3
03410300H000	Jump Crank Stopper	23	C-3-7
03410800I000	Jump Return Spring	23	C-3-13
03410900H000	Jump Driving Clutch	23	C-3-16
03411000H000	Jump Clutch Pin	23	C-3-18
03411100I000	Jump Clutch Base	23	C-3-19
03411200I000	Jump Driving Clutch Lever	23	C-3-26
03411300H000	Stud for Jump Clutch Lever	23	C-3-27
03411400H000	Stud for Jump Crank Stopper	23	C-3-8
03500110H000	Upper Thread Catcher Base	87	I-2-1
03500210H000	Upper Thread Hook Base Cover	87	I-2-16
03500330H000	Upper Thread Hook	87	I-2-15
03500500H000	Upper Catcher Driving Lever	87	I-2-10
03500600H000	Driving Lever Pin	87	I-2-11
03500700H000	Driving Lever Pin Collar	87	I-2-12
03500800H000	Driving Lever Pin Washer	87	I-2-14
03500900H000	Clutch Block	87	I-2-5
03501000H000	Clutch Stud Screw	87	I-2-6
03501100H000	Clutch Spring	87	I-2-7
03501200H000	Clutch Dial	87	I-2-8
03600100I000	Needle Bar Driving Shaft Driver	17	B-4-9
03704900A000	Cam Shaft Collar	31	D-2-9
03704900A000	Cam Shaft Collar	37	E-2-13
03707300A000	Solenoid Collar	12	A-2-7
038A0000I000	Take-Up Driving Lever A,B Assy	15	B-2-12
03900000UH00	Mes Cam Driving Box Assy	30	D-1-29
04000104uk00	Switch Base Holder	120	N-4-8

R. Index

Part No.	Part Name	Page	Ref.No
04-001S-AU10	X.Y Sticker	114	M-2-30
04-002S-AU10	Current Setting Sticker	114	M-2-31
04-003S-AU10	Warning Sticker	113	M-2-28
04004AF-A001	Needle Plate Screw	90	I-4-36
04-004S-AU10	Warning Sticker	114	M-2-29
04006MC-9123	TRUSS SCREW(M4*L6) SUS	48	F-4-12
04007SC-A001	Cushion Cover Screw(M3*L2.3)	90	I-4-35
04010MC-7113	Hex.Scoket Bolt (M4*L10)	23	C-3-24
04010MC-7113	Hex.Socket Bolt (M4*L10)	30	D-1-13
04010MC-7113	Hex.Socket Bolt (M4*L10)	51	G-1-12
04012AF-A001	Hook Shaft Bush Screw	12	A-2-16
04012AF-A001	Hook Shaft Bush Screw	31	D-2-13
04012AF-A001	Hook Shaft Bush Screw	37	E-2-2
04012AF-A001	Hook Shaft Bush Screw	46	F-3-15
04012AF-A001	Hook Shaft Bush Screw	60	H1-4-48
04012AF-A001	Screw(15/64-28)	62	H1-6-16
04012AF-A001	Hook Shaft Bush Screw	70	H2-4-51
04012AF-A001	Hook Shaft Bush Screw	72	H2-5-51
04012AF-A001	Screw(15/64-28)	73	H2-6-25
04012AF-A001	Hook Shaft Bush Screw	81	H3-4-48
04012AF-A001	Screw(15/64-28)	83	H3-6-25
04013PR-B001	WASHER (3.2T,@10)	12	A-2-3
04014PR-B001	WASHER (2T,@10)	12	A-2-4
04014SC-4517	Hex. Socket Set Screw(M4*L5)	31	D-2-2
04014SC-4517	Hex.Socket Set Screw(M5*L5)	40	E-5-8
04014SC-4517	Hex.Socket Set Screw(M5*L5)	46	F-3-6
04014SC-4517	Hex.Socket Set Screw(M5*L5)	58	H1-3-17
04014SC-4517	Hex.Socket Set Screw(M5*L5)	60	H1-4-50
04014SC-4517	Hex.Socket Set Screw(M5*L5)	68	H2-3-17
04014SC-4517	Hex.Socket Set Screw(M5*L5)	70	H2-4-53
04014SC-4517	Hex.Socket Set Screw(M5*L5)	79	H3-3-21
04014SC-4517	Hex.Socket Set Screw(M5*L5)	81	H3-4-50
04014SC-4517	Hex.Socket Set Screw(M5*L5)	85	I-1-9
04014SC-4517	Hex.Socket Set Screw(M5*L5)	86	I-1-41
04014SC-4517	Hex.Socket Set Screw(M5*L5)	87	I-2-13
04014SC-4517	Hex.Socket Set Screw(M5*L5)	92	J-1-16
04016AF-A001	Cam Collar Screw	12	A-2-20
04016AF-A001	Cam Collar Screw	31	D-2-10
04016AF-A001	Cam Collar Screw	37	E-2-14
04016MC-4113	CAM ROLLER GUIDE FIXED SCREW	61	H1-5-2
04016MC-4113	CAM ROLLER GUIDE FIXED SCREW	82	H3-5-2
04017GA-UK01	Low Shaft Gear (UH1508)	12	A-2-17
04019CW-T121	Pin Stud Screw	15	B-2-4
04019GA-UK01	Hook Shaft Gear	12	A-2-15
04020AF-T121	Roller for Take-Up Lever B	15	B-2-5
04021BR-T121	Needle Bearing (KT367N IKO)	15	B-2-6
04026BR-A001	Ball Bearing 6003Z	12	A-2-18
04026BR-A001	Ball Bearing 6003Z	37	E-2-5
04026SC-T121	Needle Plate Pin	90	I-4-31
04027BR-A001	Needle Bearing (Hmk1515)	31	D-2-7

Part No.	Part Name	Page	Ref.No
04027BR-A001	Needle Bearing (Hmk1515)	37	E-2-10
04028SC-UK01	STUD BOLT (M10*P1.25*L69)	12	A-2-2
04029SW-A001	Stud Bolt Washer(S) (@8)	14	B-1-4
04029SW-A001	Stud Bolt Washer(S) (@8)	19	B-6-4
04029SW-A001	Stud Bolt Washer(S) (@8)	25	C-5-4
04029SW-A001	Stud Bolt Washer(S) (@8)	31	D-2-17
04029SW-A001	Stud Bolt Washer(S) (@8) (UK1204,UH1506C)	34	D-5-8
04029SW-A001	STUD BOLT WASHER(S) (@8)	36	E-1-17
04029SW-A001	Stud Bolt Washer(S) (@8)	59	H1-4-5
04029SW-A001	Stud Bolt Washer(S) (@8)	62	H1-6-6
04029SW-A001	Stud Bolt Washer(S) (@8)	69	H2-4-7
04029SW-A001	Stud Bolt Washer(S) (@8)	71	H2-5-4
04029SW-A001	Stud Bolt Washer(S) (@8)	73	H2-6-6
04029SW-A001	Stud Bolt Washer(S) (@8)	80	H3-4-5
04029SW-A001	Stud Bolt Washer(S) (@8)	83	H3-6-6
04029SW-A001	Stud Bolt Washer(S) (@8)	101	K2-2-17
04029SW-A001	Stud Bolt Washer(S) (@8)	105	K3-2-16
04030MC-4113	HEX.SOCKET BOLT(M4*L30)	100	K2-1-12
04030SW-A001	Stud Bolt Washer(L) (@8)	31	D-2-16
04030SW-A001	Stud Bolt Washer(L) (@8) (UK1204,UH1506C)	34	D-5-9
04030SW-A001	Stud Bolt Washer(L) (@8)	97	K1-2-17
04030SW-A001	Stud Bolt Washer(L) (@8)	101	K2-2-16
04030SW-A001	Stud Bolt Washer(L) (@8)	105	K3-2-17
04032SN-A001	Hex. Nut (M8-No2)	31	D-2-15
04032SN-A001	Hex. Nut (M8-No2) (UK1204,UH1506C)	34	D-5-6
04032SN-A001	Hex. Nut (M8-No2)	56	H1-1-47
04032SN-A001	Hex. Nut (M8-No2)	76	H3-1-37
04032SN-A001	Hex. Nut (M8-No2)	85	I-1-19
04032SN-A001	Hex. Nut (M8-No2)	85	I-1-28
04032SN-A001	Hex. Nut (M8-No2)	97	K1-2-15
04032SN-A001	Hex. Nut (M8-No2)	101	K2-2-14
04032SN-A001	Hex. Nut (M8-No2)	105	K3-2-14
04032SN-UK01	HEX. NUT (M10*P1.25)	12	A-2-6
04034AF-A001	Bobbin Case Set	89	I-4-3
04035AF-A001	Bobbin	89	I-4-2
04037SC-A001	Picker Bracket Screw(R)	33	D-4-2
04039PR-A001	Bearing Cover	37	E-2-6
04054SC-8119	Plus Screw(M6*L15)	105	K3-2-12
04500100U000	TIMING PULLEY(16-S5M-32F)	59	H1-4-19
04500100U000	Timing Pulley "A"	69	H2-4-24
04500100U000	TIMING PULLEY(16-S5M-32F)	71	H2-5-10
04500100U000	TIMING PULLEY(16-S5M-32F)	80	H3-4-26
05000004U000	Color Change Roller Base Assy	47	F-3-30
05000100UH80	Table Connecting Cover	102	K2-3-13
05000103UK00	Color Change Shaft (6C)	45	F-2-25
05000103UK00	Color Change Shaft (UK604)	46	F-3-24
05000210T000	Transformer (Emt25V) 1A/25.5V	108	L-1-11
05000210UH61	Fixed Table "B"	106	K3-3-6
05000500UK40	Table "A"	98	K1-3-1
05000600UK60	Table "A"	102	K2-3-1

Part No.	Part Name	Page	Ref.No
05000700UK40	Table "C"	98	K1-3-3
05000700UK60	Table "B"	102	K2-3-2
05000900UK60	Table "C"	102	K2-3-3
05000920UH01	TABLE SUPPORT ANGLE (A)L250	97	K1-2-11
05000920UH01	TABLE SUPPORT ANGLE (A)L250	105	K3-2-9
05001000UK60	Table "D"	102	K2-3-4
05001100UK40	Table Support Angle (B) L160	105	K3-2-23
05001120UH01	TABLE SUPPORT ANGLE (D)L250	97	K1-2-12
05001120UH01	TABLE SUPPORT ANGLE (D)L250	105	K3-2-10
05001300U000	Table Support L=263	97	K1-2-22
05001300U000	Table Support L=263	101	K2-2-25
05001300U000	Table Support L=263	105	K3-2-29
05001400UH00	Belt Cover	98	K1-3-10
05001400UH00	Belt Cover	106	K3-3-15
05001500UK40	Angle Support	96	K1-1-26
05001500UK40	Angle Support	100	K2-1-17
05001500UK40	ANGLE SUPPORT	104	K3-1-9
05001600U000	Table Support Stud	97	K1-2-13
05001600U000	Table Support Stud	105	K3-2-13
05001700U000	Table Support Plate	97	K1-2-32
05001700U000	Table Support Plate	101	K2-2-7
05001700U000	Table Support Plate	105	K3-2-22
05-002S-SW70	PCB Guide (TRCG-3300)	111	M-1-7
05007SC-7113	Hex.Scoket Bolt (M3*L5)	22	C-2-10
05007SC-7113	Hex. Socket Bolt (M3*L5)	26	C-6-24
05007SC-7113	Hex. Socket Bolt (M3*L5)	26	C-6-26
05008100UK40	Table Fixing Block	96	K1-1-11
05008100UK40	Table Fixing Block	100	K2-1-11
05008100UK40	Table Fixing Block	104	K3-1-19
05008AF-4113	X-Y Driver Board Screw (set) (M4xL16)	111	M-1-6
05008MC-4517	Hex.Socket Bolt(M5*L8)	85	I-1-7
05008SC-4113	Hex.Socket Bolt (M4*L16)	42	F-1-2
05008SC-4113	Hex.Socket Bolt (M4*L16)	46	F-3-2
05008SC-4113	Hex.Socket Bolt (M4*L16)	48	F-4-4
05008SC-4113	Hex.Socket Bolt (M4*L16)	80	H3-4-23
05008SC-4113	Hex.Socket Bolt (M4*L16)	85	I-1-30
05009SW-1111	Washer (@4-L)	37	E-2-22
05009SW-1111	Washer (@4-L)	48	F-4-6
05009SW-1111	Washer (@4-L)	51	G-1-15
05009SW-1111	Washer (@4-L)	55	H1-1-23
05009SW-1111	Washer (@4-L)	59	H1-4-33
05009SW-1111	Washer (@4-L)	65	H2-1-9
05009SW-1111	Washer (@4-L)	65	H2-1-28
05009SW-1111	Washer (@4-L)	67	H2-2-18
05009SW-1111	Washer (@4-L)	68	H2-3-5
05009SW-1111	Washer (@4-L)	68	H2-3-15
05009SW-1111	Washer (@4-L)	69	H2-4-19
05009SW-1111	Washer (@4-L)	69	H2-4-31
05009SW-1111	Washer (@4-L)	70	H2-4-57
05009SW-1111	Washer (@4-L)	71	H2-5-30

R. Index

Part No.	Part Name	Page	Ref.No
05009SW-1111	Washer (@4-L)	72	H2-5-59
05009SW-1111	Washer (@4-L)	76	H3-1-6
05009SW-1111	Washer (@4-L)	78	H3-2-15
05009SW-1111	Washer (@4-L)	78	H3-2-19
05009SW-1111	Washer (@4-L)	79	H3-3-5
05009SW-1111	Washer (@4-L)	80	H3-4-34
05009SW-1111	Washer (@4-L)	97	K1-2-28
05009SW-1111	Washer (@4-L)	101	K2-2-31
05009SW-1111	Washer (@4-L)	105	K3-2-35
05009SW-1111	Washer (@4-L)	108	L-1-26
05009SW-1111	Washer (@4-L)	125	P-1-4
05009SW-1111	Washer (@4-L)	132	Q1-2-5
05009SW-1111	Washer (@4-L)	133	Q1-3-5
05009SW-1111	Washer (@4-L)	134	Q1-4-5
05010100U000	TABLE SUPPORTER (A1) L=628	101	K2-2-12
05010200U000	TABLE SUPPORTER (A2) L=402	100	K2-1-15
05010300U000	TABLE SUPPORTER (B1) L=628	101	K2-2-11
05010400U000	TABLE SUPPORTER (B2) L=402	100	K2-1-16
05014SC-7113	Hex. Socket Bolt (M4*L25)	28	C-8-13
05014SC-7113	Hex. Socket Bolt (M4*L25)	96	K1-1-12
05014SC-7113	Hex. Socket Bolt (M4*L25)	104	K3-1-20
05015CW-A001	Head Base Pin(@5*L15)	42	F-1-6
05016SN-1211	Hex.Nut (M4)	52	G-2-12
05019SC-A001	Needle Bar Cover Screw (M5*L6)	42	F-1-9
05021PM-H001	Presser Foot Spring Guide	43	F-1-17
05021SF-A001	FELT	42	F-1-10
05022SW-A001	SPRING SHOE WASHER	43	F-1-28
05023RB-A001	Needle Bar Cushion Rubber "A"	42	F-1-11
05024RB-A001	Needle Bar Cushion Rubber "B"	42	F-1-12
05026SC-4113	Stopper Screw (9/64-11.5)	43	F-1-14
05026SC-H001	Presser Foot Bolt	43	F-1-21
05027PR-H001	PRESSER FOOT HOLDER WASHER	43	F-1-27
05028SC-4113	Holder Screw (9/64-L8)	43	F-1-16
05031AF-A001	PRESSER FOOT GUIDE BUSH	43	F-1-29
05036CW-A001	Needle Fixed Holder Set	43	F-1-24
05037DB-A001	Needle (Db-K5, #11)	43	F-1-26
05041SC-A001	Guide Rail Screw	21	C-1-4
05041SC-A001	Bolt (9/64 n=40)	45	F-2-24
05045MC-7113	HEX.SOCKET BOLT (M5*L45)	27	C-7-6
05062SC-A001	Bolt (9/64" n=40)	14	B-1-6
05062SC-A001	Bolt (9/64" n=40)	19	B-6-6
05070SC-3123	HEAD FACE PLATE (U) SCREW	45	F-2-10
05070SC-3123	Truss Bolt 9/64 n=40	45	F-2-12
05100102UK00	Spool Plate (L=3020) (UK606)	92	J-1-1
05100103UK00	Spool Plate (L=2950) (UK906)	92	J-1-1
05100104UH00	Spool Plate L=2480 (UH1206C)	92	J-1-1
05100104UH08	SPOOL PLATE L=3280 (UH1208)	92	J-1-1
05100105UH00	Spool Plate L=2480 (UH1506C)	92	J-1-1
05100105UH80	SPOOL PLATE L=3280 (UH1508)	92	J-1-1
05200102UK00	Angle (A) L=3020 (UK606)	93	J-2-3

Part No.	Part Name	Page	Ref.No
05200103UK00	Angle (A) L=3020 (UK906)	93	J-2-3
05200104UH00	Angle "A" L=2420 (UH1206C)	93	J-2-3
05200104UH08	Angle "A" L=3220 (UH1208)	93	J-2-3
05200104UK20	Angle "C" L=890 (UK1202)	93	J-2-5
05200104UK24	Angle "C" L=2020 (UK604)	93	J-2-5
05200104UK60	Angle "C" (L=3020) (UK606)	93	J-2-5
05200105UH00	Angle "A" L=2420 (UH1506C)	93	J-2-3
05200105UH80	Angle "A" L=3220 (UH1508)	93	J-2-3
05200105UK20	Angle "C" L=1020 (UK1502)	93	J-2-5
05200105UK40	Angle "C" L=2020 (UK1504)	93	J-2-5
05200105UK60	Angle "C" (L=3020) (UK1206)	93	J-2-5
05200202UK00	Angle (B) L=3020 (UK606)	93	J-2-4
05200203UK00	Angle (B) L=3020 (UK906)	93	J-2-4
05200204UH00	Angle "B" L=2420 (UH1206C)	93	J-2-4
05200204UH08	Angle "B" L=3220 (UH1208)	93	J-2-4
05200205UH00	Angle "B" L=2420 (UH1506C)	93	J-2-4
05200205UH80	Angle "B" L=3220 (UH1508)	93	J-2-4
05200214UK20	Angle "D" L=890 (UK1202)	94	J-2-6
05200214UK24	Angle "D" L=2020 (UK604)	94	J-2-6
05200214UK60	Angle "D" (L=3020) (UK606)	94	J-2-6
05200215UK20	Angle "D" L=1020 (UK1502)	94	J-2-6
05200215UK40	Angle "D" L=2020 (UK1504)	94	J-2-6
05200215UK60	Angle "D" (L=3020) (UK1206)	94	J-2-6
05200303UK00	Angle "C" (L=3020) (UK906)	93	J-2-5
05200304UH08	Angle "C" L=3220 (UH1208)	94	J-2-5
05200304UK24	Angle "A" L=2020 (UK604)	93	J-2-3
05200305UH80	Angle "C" L=3220 (UH1508)	94	J-2-5
05200312UK00	Angle "C" (L=3020) (UK1506)	93	J-2-5
05200314UH00	Angle "C" (L=2420) (UH1206C)	94	J-2-5
05200315UH00	Angle "C" L=2420 (UH1506C)	94	J-2-5
05200403UK00	Angle "D" (L=3020) (UK906)	94	J-2-6
05200404UK24	Angle "B" L=2020 (UK604)	93	J-2-4
05200412UK00	Angle "D" (L=3020) (UK1506)	94	J-2-6
05200414UH00	Angle "D" (L=2420) (UH1208)	94	J-2-6
05200415UH00	Angle "D" (L=2420) (UH1508)	94	J-2-6
05363SC-A001	Needle Fixed Screw (A/S)	43	F-1-25
05452CM-A001	EYELET "A"	51	G-1-13
05452CM-A001	Thread Guide Bushing	122	O-1-12
06000102UK60	Color Change Shaft "A" (UK606,UK906)	46	F-3-24
06000104UH60	Color Change Shaft (@6*L2237) (UH1206C)	45	F-2-25
06000105UH60	Color Change Shaft (@6*L2282) (UH1506C)	45	F-2-25
06000202UK60	Color Change Shaft "B" (UK606)	46	F-3-28
06000305UH80	Upper Thread Driving Shaft (UH1508)	86	I-1-36
06003SW-2111	Spring Washer (@4)	16	B-3-8
06003SW-2111	Washer (@4)	16	B-3-9
06003SW-2111	Washer (@4)	23	C-3-6
06003SW-2111	Washer (@4)	42	F-1-3
06003SW-2111	Washer (@4)	52	G-2-9

Part No.	Part Name	Page	Ref.No
06003SW-2111	Washer (@4)	94	J-2-11
06010AF-8118	Plus Screw(M3*L4)	76	H3-1-19
06010AF-8118	Plus Screw(M3*L4)	89	I-4-19
06010SC-8118	Plus Screw (M3*L4)	88	I-3-10
06011SW-2111	Washer (@3)	22	C-2-11
06011SW-2111	Washer (@3)	23	C-3-15
06011SW-2111	Washer (@3)	23	C-3-22
06011SW-2111	Washer (@3)	23	C-3-25
06011SW-2111	Hex. Socket Bolt(M3xL6)	24	C-4-2
06011SW-2111	Washer (@3)	26	C-6-27
06011SW-2111	Washer (@3)	49	F-5-13
06011SW-2111	WASHER (@3)	60	H1-4-54
06011SW-2111	Washer (@3)	127	P-2-23
06025MC-7113	HEX.SOCKET BOLT(M6*L25)	36	E-1-6
06025MC-7113	Hex.Socket Bolt(M6*L25)	85	I-1-3
06040SC-8118	Plus Screw (M3 X L4)	49	F-5-9
06040SC-8118	Plus Screw (M3 X L4)	127	P-2-30
07000100U000	Main Switch Box	108	L-1-23
07-004S-SM5S	Main Drive Assy Screw (set) (M4xL10)	111	M-1-3
07-004S-SM5S	Driver Radiator Screw(set) (M4xL10)	111	M-1-8
07-004S-SM5S	Back plane Board Screw (Set) (M4xL10)	113	M-2-8
07-004S-SM5S	Connector PCB Cover Screw (set)	113	M-2-12
07-004S-SM5S	Harness Cover Screw(set)	113	M-2-14
07-004S-SM5S	Earth Plate Screw(set) (M4xL10)	113	M-2-20
07-004S-SM5S	Screw for Fixing Bracket for	115	M-3-2
07005BM-B002	Take-Up Lever Set	45	F-2-13
07-005S-SM5S	SMPS Radiator Screw(set)	112	M-1-27
07-005S-SM5S	CPU Board Screw (SET)	115	M-3-17
07-005S-SM5S	IO Board Fixing Screw (SET)	115	M-3-21
07006LA-UK01	Mes Connecting Link	33	D-4-13
07009SC-4517	Hex. Socket Bolt(M5*L6)	45	F-2-17
07015PR-UK01	Solenoid Plate	32	D-3-1
07016SC-7113	Hex.Socket Bolt(M4*L12)	15	B-2-3
07016SC-7113	Hex.Socket Bolt (M4*L10)	23	C-3-4
07016SC-7113	HEX.SOCKET BOLT (M4*L12)	55	H1-1-9
07016SC-7113	HEX.SOCKET BOLT (M4*L12)	58	H1-3-37
07016SC-7113	Hex.Socket Bolt (M4*L12)	59	H1-4-31
07016SC-7113	Hex.Socket Bolt (M4*L12)	69	H2-4-29
07016SC-7113	Hex.Socket Bolt (M4*L12)	71	H2-5-28
07016SC-7113	Hex.Socket Bolt (M4*L12)	72	H2-5-57
07016SC-7113	Hex.Socket Bolt (M4*L12)	80	H3-4-32
07016SC-7113	Hex.Socket Bolt (M4*L12)	80	H3-4-36
07016SC-7113	Hex.Socket Bolt (M4*L12)	82	H3-5-4
07017CL-UK01	Solenoid Crank	32	D-3-7
07018SC-8118	Plus Screw (M3*L8)	33	D-4-25
07018SC-8118	Plus Screw (M3*L8)	88	I-3-9
07018SC-8118	Plus Screw (M3*L8)	89	I-4-24
07021MP-T121	Lever Shaft Bush	33	D-4-19
07023CW-T121	Lever Pin "A"	33	D-4-15
07024BR-UK01	Fiber Washer(R-Tw0805)	30	D-1-5

R. Index

Part No.	Part Name	Page	Ref.No
07025CW-UK01	Lever Shaft (@8*L70)	30	D-1-4
07026AD-A002	Take-Up Guide Rail L=250 (9C)	21	C-1-3
07026CW-UK01	Roller Shaft	30	D-1-11
07027AD-AE00	TAKE-UP GUIDE RAIL (6C)	21	C-1-3
07028CL-UK01	Mes Driving Lever	30	D-1-6
07028PR-T121	Moving Mes	33	D-4-9
07029CL-UK01	Mes Driving Crank	30	D-1-7
07030AF-UK01	Roller	30	D-1-10
07032CL-T121	Fixed Mes	33	D-4-23
07033PR-T121	Under Thread Presser	33	D-4-24
07034CM-UK01	Mes Cam	31	D-2-3
07035SC-7113	Hex.Socket Bolt (M3*L6)	22	C-2-8
07035SC-7113	Washer(@3)	24	C-4-4
07035SC-7113	Bracket Screw (M3*L6)	60	H1-4-52
07035SC-7113	Bracket Screw (M3*L6)	81	H3-4-52
07035SC-7113	BRACKET SCREW (M3*L6)	86	I-1-38
07038CW-UK01	Mes Cam Shaft	31	D-2-8
07041GA-UK01	Gear "A"	31	D-2-11
07043GA-UK01	Gear "B"	31	D-2-12
08000110UH61	Table "A"	106	K3-3-1
08000410UH61	Table "D"	106	K3-3-4
08000803I000	TENSION PLATE COVER (9C)	53	G-3-6
08000804I000	TENSION PLATE COVER (12C)	53	G-3-6
08000805I000	TENSION PLATE COVER (15C)	53	G-3-6
08003202B000	Cover PLate (R) 6C	53	G-3-3
08003204B000	COVER PLATE (R) 12C	53	G-3-3
08003302B000	Cover PLate (L) (6C)	53	G-3-5
08006SC-8118	Plus Screw (M3*L5)	23	C-3-14
08006SC-8118	Plus Screw (M3*L5)	46	F-3-10
08006SC-8118	Plus Screw (M3*L5)	59	H1-4-18
08006SC-8118	Plus Screw (M3*L5)	69	H2-4-21
08006SC-8118	Plus Screw (M3*L5)	80	H3-4-18
08007SC-4517	Hex. Socket Set Screw (M3*L5)	59	H1-4-34
08007SC-4517	Hex. Socket Set Screw (M3*L5)	69	H2-4-27
08007SC-4517	Hex. Socket Set Screw (M3*L5)	71	H2-5-31
08007SC-4517	Hex. Socket Set Screw (M3*L5)	80	H3-4-30
08011SC-8118	Screw (M2*L4)	52	G-2-6
08011SW-1111	Spring Washer(@3)	24	C-4-3
08011SW-1111	Spring Washer (@3-S)	61	H1-5-11
08011SW-1111	Spring Washer (@3-S)	67	H2-2-11
08011SW-1111	Spring Washer (@3-S)	68	H2-3-11
08011SW-1111	Spring Washer (@3-S)	70	H2-4-65
08011SW-1111	Spring Washer (@3-S)	79	H3-3-11
08011SW-1111	Spring Washer (@3-S)	81	H3-4-54
08011SW-1111	Spring Washer (@3-S)	82	H3-5-10
08012CW-T121	Connecting Plate Stud Screw	89	I-4-21
08014AF-A001	Plus Screw (M3*L8)	89	I-4-7
08014SC-A001	Plus Screw (M3*L8)	33	D-4-10
08021PM-UK01	Lever Stopper	30	D-1-26
08022RB-T121	O-Ring (@10)	30	D-1-8

Part No.	Part Name	Page	Ref.No
08023CL-UK01	Mes Shaft Cramp	30	D-1-16
08023CW-A001	Mes Shaft Cramp	30	D-1-20
08025CW-UK01	Box Stud Bolt	31	D-2-14
08027BR-A001	Thrust Bearing (Ntb 1528)	31	D-2-6
08027BR-A001	Thrust Bearing (Ntb 1528)	37	E-2-12
08028BR-A001	Thrust Washer (As 1528)	31	D-2-5
08028BR-A001	Thrust Washer (As 1528)	37	E-2-11
08034CW-UK01	Lever Connecting Pin	30	D-1-12
08041SW-1111	WASHER (@8-S)	38	E-3-4
08041SW-1111	Washer (@8-S)	39	E-4-7
08041SW-1111	WASHER (@8-S)	59	H1-4-12
08042MP-UK01	Mes Cam Shaft Bush	31	D-2-1
08044SR-4013	E-Ring (@8)	58	H1-3-35
08044SR-4013	E-Ring (@8)	68	H2-3-39
08044SR-4013	E-Ring (@8)	79	H3-3-17
08048AF-T121	Solenoid Crank Roller	32	D-3-9
08050SN-T121	Hex. Nut	32	D-3-11
08053PR-A001	Lever Washer	37	E-2-19
08057SW-1111	Washer (@6)	36	E-1-5
08057SW-1111	WASHER (@6)	38	E-3-7
08057SW-1111	Washer (@6)	39	E-4-13
08057SW-1111	Washer (@6)	40	E-5-12
08057SW-1111	Washer (@6)	40	E-5-15
08057SW-1111	Washer (@6)	62	H1-6-10
08057SW-1111	Washer	62	H1-6-33
08057SW-1111	Washer (@6)	69	H2-4-12
08057SW-1111	Washer (@6)	69	H2-4-37
08057SW-1111	Washer (@6)	71	H2-5-23
08057SW-1111	Washer (@6)	73	H2-6-10
08057SW-1111	Washer	73	H2-6-22
08057SW-1111	Washer (@6)	80	H3-4-9
08057SW-1111	Washer (@6)	83	H3-6-16
08057SW-1111	Washer	83	H3-6-22
08057SW-1111	Washer (@6)	83	H3-6-33
08057SW-1111	Washer (@6)	85	I-1-5
08057SW-1111	Washer (@6)	117	N-1-7
08057SW-1111	Washer (@6)	119	N-3-9
08057SW-1111	Washer (@6)	120	N-4-11
08058SN-1311	Hex. Nut (M6-No3)	40	E-5-16
08062SC-7113	HEX. SOCKET BOLT (M5*L20)	40	E-5-2
08062SC-7113	Hex. Socket Bolt (M5*L20)	40	E-5-17
08062SC-7113	Hex. Socket Bolt (M5*L20)	59	H1-4-24
08062SC-7113	Hex. Socket Bolt (M5*L20)	80	H3-4-20
08062SC-7113	Hex. Socket Bolt (M5*L20)	96	K1-1-8
08062SC-7113	Hex. Socket Bolt (M5*L20)	104	K3-1-14
08062SC-7113	Hex. Socket Bolt (M5*L20)	105	K3-2-18
08068EL-UK01	Thread Trimming Solenoid Ass'y	32	D-3-5
08070PR-UK01	Sensor Bracket	32	D-3-13
08071RB-UK01	Thread Driver Box Rubber	30	D-1-9
08076SC-7113	Hex. Socket Bolt(M5xL15)	24	C-4-6

Part No.	Part Name	Page	Ref.No
08076SC-7113	Hex. Socket Bolt (M5*L12)	58	H1-3-23
08076SC-7113	HEX. SOCKET BOLT (M5*L12)	59	H1-4-7
08076SC-7113	Hex. Socket Bolt (M5*L12)	68	H2-3-23
08076SC-7113	Hex. Socket Bolt (M5*L12)	68	H2-3-30
08076SC-7113	HEX. SOCKET BOLT (M5*L12)	69	H2-4-13
08076SC-7113	Hex. Socket Bolt (M5*L12)	79	H3-3-27
08076SC-7113	Hex. Socket Bolt (M5*L12)	79	H3-3-31
08076SC-7113	Hex. Socket Bolt (M5*L12)	96	K1-1-3
08076SC-7113	Hex. Socket Bolt (M5*L12)	96	K1-1-14
08076SC-7113	Hex. Socket Bolt (M5*L12)	96	K1-1-23
08076SC-7113	Hex. Socket Bolt (M5*L12)	97	K1-2-3
08076SC-7113	HEX. SOCKET BOLT(M5*L12)	100	K2-1-8
08076SC-7113	Hex. Socket Bolt (M5*L12)	104	K3-1-3
08076SC-7113	Hex. Socket Bolt (M5*L12)	104	K3-1-10
08076SC-7113	Hex. Socket Bolt (M5*L12)	105	K3-2-3
08076SC-7113	Hex. Socket Bolt (M5*L12)	109	L-2-2
08076SC-7113	Hex. Socket Bolt (M5*L12)	114	M-2-41
08087SC-7113	Hex. Socket Bolt (M8*L25)	25	C-5-2
08087SC-7113	HEX. SOCKET BOLT (M8*L25)	38	E-3-2
08091SC-7113	Hex. Socket Bolt (M6*L20)	36	E-1-3
08091SC-7113	Hex. Socket Bolt (M6*L20) (UK1206,UH1508)	38	E-3-20
08091SC-7113	HEX. SOCKET BOLT (M6*L20)	40	E-5-10
08091SC-7113	Hex. Socket Bolt (M6*L20)	69	H2-4-35
08091SC-7113	Hex. Socket Bolt (M6*L20)	71	H2-5-21
08091SC-7113	Hex. Socket Bolt (M6*L20)	81	H3-4-45
08091SC-7113	Hex. Socket Bolt (M6*L20)	117	N-1-5
08091SC-7113	Hex. Socket Bolt (M6*L20)	119	N-3-7
08100100UH60	Tubular Frame L2404	134	Q1-4-1
08101SC-8329	Tapping Screw (M3*L16)	98	K1-3-11
08101SC-8329	Tapping Screw (M3*L16)	101	K2-2-24
08101SC-8329	Tapping Screw (M3*L16)	102	K2-3-15
08101SC-8329	Tapping Screw (M3*L16)	105	K3-2-27
08101SC-8329	Tapping Screw (M3*L16)	106	K3-3-14
08101SC-8329	Tapping Screw (M3*L16)	106	K3-3-16
08102300B000	Half Turn Sensor (Gp1S51V)	46	F-3-9
08102EL-A001	Zero Point Sensor Ass'Y	32	D-3-12
08103102C010	Color Change Roller Base (6C)	46	F-3-16
08113SC-A001	Collar Screw	12	A-2-8
08113SC-A001	COLLAR SCREW 11/64,N=40,L6	16	B-3-15
08113SC-A001	Collar Screw	46	F-3-8
08113SC-A001	Collar Screw	46	F-3-23
08113SC-A001	Collar Screw	48	F-4-2
08122CW-A001	MES PIN	33	D-4-8
08122CW-UK01	Lever Pin "B"(UK1202,UK1204,UH1506C)	33	D-4-18
08123CW-T121	MOVING MES CONNECTING LINK PIN	33	D-4-7
08200503A000	Take-Up Lever Shaft (9C)	45	F-2-14
08200800A000	Take-Up Lever Shaft Bush(R)	45	F-2-16
08201200H000	Presser Foot Cushion Rubber A	43	F-1-23
08202000A000	TENSION ADJUSTING PLATE HOLDER (6C,9C)	51	G-1-14
08202000I000	TENSION ADJUSTING PLATE HOLDER (12C)	51	G-1-14

R. Index

Part No.	Part Name	Page	Ref.No
08203000A000	Take-Up Lever Shaft Bush(L)	30	D-1-2
08203000A000	Take-Up Lever Shaft Bush(L)	45	F-2-15
08300100UH00	Square Frame "A" L=2544	138	Q2-3-1
08300100UK40	Rear Border Frame Sash L=2160	136	Q2-1-1
08300102I000	TENSION UNIT PLATE (6C)	51	G-1-1
08300103I000	TENSION UNIT PLATE (9C)	51	G-1-1
08300104I000	TENSION UNIT PLATE (12C)	51	G-1-1
08300105I000	TENSION UNIT PLATE (15C)	51	G-1-1
08300200UH00	Square Frame "B" L=2544	138	Q2-3-2
08300202I000	BOARD BASE (6C)	52	G-2-7
08300203I000	BOARD BASE (9C)	52	G-2-7
08300204I000	BOARD BASE (12C)	52	G-2-7
08300205I000	BOARD BASE (15C)	52	G-2-7
08300300UH00	Connect Plate (E)	138	Q2-3-6
08300302I000	CONNECTION PLATE (6C)	53	G-3-7
08300303I000	CONNECTING PLATE A (9C)	53	G-3-7
08300304I000	CONNECTION PLATE (12C)	53	G-3-7
08300305I000	CONNECTION PLATE "A" (15C)	53	G-3-7
08300400A000	Lamp Cover	52	G-2-16
08300403I000	CONNECTING PLATE B (9C)	53	G-3-7
08300405I000	CONNECTION PLATE "B" (15C)	53	G-3-7
08300702I000	ROLLER BASE (6C)	52	G-2-1
08300703I000	ROLLER BASE (9C)	52	G-2-1
08300704I000	ROLLER BASE (12C)	52	G-2-1
08300705I000	ROLLER BASE (15C)	52	G-2-1
08308300B000	THREAD DETECTING WHEEL STUD (6C)	52	G-2-4
08308300B000	THREAD DETECTING WHEEL STUD (12C)	52	G-2-4
08310000B000	TENSION ADJUSTING SET	51	G-1-6
08320000I000	SUB TENSION ADJUSTING SET	51	G-1-5
08500000I000	Wiper Assy	87	I-2-19
08600004B000	Upper Thread Presser Base Assy (12C)	88	I-3-11
09000100U000	Tubular Frame Fixing Screw	132	Q1-2-9
09000100U000	Tubular Frame Fixing Screw	133	Q1-3-9
09000100U000	Tubular Frame Fixing Screw	134	Q1-4-9
09000100U000	Tubular Frame Fixing Screw	136	Q2-1-9
09000100U000	Tubular Frame Fixing Screw	137	Q2-2-17
09000100U000	Tubular Frame Fixing Screw	138	Q2-3-16
09000102UK00	Top Shaft Cover "A" (6C)	126	P-2-10
09000103UK00	Top Shaft Cover "A" (9C)	126	P-2-10
09000104UH00	Top Shaft Cover "A" (L191) (UH1206C)	126	P-2-10
09000104UK00	Top Shaft Cover "A" (12C)	126	P-2-10
09000104UK20	Top Shaft Cover (L=291) (UK1202)	126	P-2-12
09000105UH00	Top Shaft Cover "A" (L146) (UH1506C)	126	P-2-10
09000200H000	Top Shaft Cover (L) Bracket	126	P-2-2
09000202UK00	Top Shaft Cover "B" (6C)	126	P-2-11
09000203UK00	Top Shaft Cover "B" (9C)	126	P-2-11
09000204UH00	Top Shaft Cover "B" (L191) (UH1206C)	126	P-2-11
09000204UK00	Top Shaft Cover "B" (12C)	126	P-2-11
09000205UH00	Top Shaft Cover "B" (L146) (UH1506C)	126	P-2-11
09000205UH00	Top Shaft Cover "B" (UH1508)	126	P-2-11

Part No.	Part Name	Page	Ref.No
09000302UK00	Top Shaft Cover "C" (UK606)	126	P-2-13
09000303UK00	Top Shaft Cover "C" (UK906)	126	P-2-13
09000304UH00	Top Shaft Cover "C" (L191) (UH1206C)	126	P-2-13
09000304UK00	Top Shaft Cover "C" (UK1206)	126	P-2-13
09000305UH00	Top Shaft Cover "C" (L146) (UH1506C)	126	P-2-13
09000305UH00	TOP SHAFT COVER "C" (L146) (UH1508)	126	P-2-14
09000415UH00	SURFACE COVER L287 (UH1506C)	125	P-1-1
09000505UH80	TOP SHAFT COVER D L=499.5 (UH1508)	125	P-1-5
09000515UH00	Top Shaft Cover D (UH1506C)	125	P-1-5
09000700B000	Ballast	118	N-2-16
09000700U000	Ballast (20W)	117	N-1-16
09000700U000	Ballast (20W)	119	N-3-16
09000720UH00	CABLE COVER L=2710	119	N-3-1
09000810UH00	Body Front Cover (A)	128	P-3-17
09000910UH00	Body Front Cover (B)	128	P-3-18
09001010UH00	Body Front Cover (C)	128	P-3-19
09001110UH00	Body Front Cover (D)	128	P-3-20
09001210UH00	Body Front Cover (E)	128	P-3-21
09001310UH00	Body Front Cover (F)	128	P-3-22
09005SC-3123	Truss Screw (M3*L6)	17	B-4-15
09005SC-3123	Truss Bolt (M3*L5)	45	F-2-9
09005SC-3123	Truss Screw (M3*L6)	51	G-1-8
09005SC-3123	Truss Screw (M3*L6)	51	G-1-10
09005SC-3123	Truss Screw (M3*L6)	52	G-2-17
09005SC-3123	Truss Screw (M3*L6)	53	G-3-8
09005SC-3123	Truss Screw (M3*L6)	125	P-1-17
09-012S-CE53	Earth Sticker	114	M-2-33
09018EL-UK01	Y-Positioning Sensor	59	H1-4-17
09018EL-UK01	Y-Positioning Sensor	69	H2-4-20
09-023C-SC53	QC Passed Sticker	113	M-2-27
09-025R-SC53	Rubber Din Cap	113	M-2-22
09026PR-AB00	Upper Thread Presser Base (12C)	88	I-3-5
09027ET-AB00	Velcro (12C)	88	I-3-6
09027ET-T151	Velcro (15C)	88	I-3-6
09029PR-AB00	Presser Base Cover	88	I-3-8
09029PR-T151	Presser Base Cover (15C)	88	I-3-8
09030PR-A002	Upper Thread Presser Base	88	I-3-5
09031ET-A002	Velcro	88	I-3-6
09033PR-A002	Presser Base Cover (9C)	88	I-3-8
09034PR-AE00	Upper Thread Presser Base (6C)	88	I-3-5
09035ET-AE00	Velcro (6C)	88	I-3-6
09037PR-AE00	Presser Base Cover (6C)	88	I-3-8
09038CW-A001	Thread Presser Space	88	I-3-7
09040PR-A001	Bracket (L)	88	I-3-1
09041PR-A001	Bracket (R)	88	I-3-2
09044PR-A001	Upper Thread Holder Disk Set	88	I-3-4
09052PR-T151	Upper Thread Presser Base (15C)	88	I-3-5
09100000U000	Attachment (R)	131	Q1-1-1
09100100U000	Attachment (R)	131	Q1-1-6
09100200U000	Fixed Clip Bracket Screw	131	Q1-1-11

Part No.	Part Name	Page	Ref.No
09100410U000	Attachment (Set-L)	131	Q1-1-14
09100510U000	Attachment (Set-R)	131	Q1-1-15
09200000U000	Attachment (L)	131	Q1-1-2
09200100U000	Attachment (L)	131	Q1-1-7
10000100A000	Thread Guide L=200	92	J-1-19
10000310A000	Washer T=0.3,0.5,0.8,1.2,1.6	98	K1-3-12
10000310A000	Washer T=0.3,0.5,0.8,1.2,1.6	102	K2-3-14
10000310A000	Washer T=0.3,0.5,0.8,1.2,1.6	106	K3-3-12
10-001C-AT10	Insulation Bush (A)	115	M-3-31
10-001C-AT10	Insulation Bush (C)	115	M-3-37
10-002S-SW66	IO Board 접지나사 (SET)	115	M-3-34
10-003A-SC53	Positioning Sensor	80	H3-4-17
10-003M-PT01	Side Cover Screw (M4xL8)	113	M-2-3
10-003M-PT01	Front Cover(L) Screw (M4xL8)	113	M-2-16
10-003M-PT01	Fixing Screw (M4xL8)	115	M-3-38
10-005A-DU33	Earth Plate	113	M-2-19
10009EL-A002	UPPER THREAD CATCHER SOL.	22	C-2-9
10009EL-T121	Picker Sol.	89	I-4-10
10010SC-8119	Plus Screw (M3*L5)	136	Q2-1-11
10010SC-8119	Plus Screw (M3*L5)	137	Q2-2-10
10010SC-8119	Plus Screw (M3*L5)	138	Q2-3-9
10011SC-8119	Plus Screw (M3*L6)	131	Q1-1-19
10011SP-A001	Sol. Spring	89	I-4-14
10012RB-A001	Cushion Washer	89	I-4-16
10021SC-A001	Sol. Stud Screw	89	I-4-13
10-027C-SC53	Magnet	49	F-5-15
10-027C-SC53	Magnet	127	P-2-21
10-028S-SC53	DDC Radiator Screw(set)	112	M-1-15
10-028S-SC53	DDC Board Screw(set)	112	M-1-17
10-028S-SC53	Wiper Motor Drive Screw(set) (M3xL7)	112	M-1-18
10-028S-SC53	UNIT Board Screw(set) (M3xL7)	112	M-1-26
10-028S-SC53	Screw for Pressing Plate	115	M-3-12
10-028S-SC53	Speaker Fixing Screw	115	M-3-25
10-028S-SC53	Fixing Screw for SB DDC Radiator (SET)	115	M-3-29
10-028S-SC53	Inverter Fixing Plate	115	M-3-33
10200100H000	Thread Guide Bush "A-1"	44	F-2-2
10200103B000	Head Face Plate (U) 9C	44	F-2-1
10600100H000	Thread Angle Frame	93	J-2-1
10600110B000	SUB TENSION ADJUSTING SET	94	J-2-12
10600210B000	SUB TENSION ADJUSTING SET (black)	94	J-2-13
10900003I000	Thread Holding Device A'ssy	45	F-2-11
11000100U000	LAMP BRACKET	117	N-1-4
11000100U000	LAMP BRACKET	119	N-3-10
11000102UK00	Spool Plate(L=2080) (UK604)	92	J-1-1
11001AD-UK14	Spool Plate(L=2080) (UK1504)	92	J-1-1
11005CW-UK01	Spool Plate Fixing Bolt M6*L21	92	J-1-3
11006PR-UK01	Spool Plate Base	92	J-1-7
11009PR-B001	Thread Breakage Detecting Plat	51	G-1-7
11009SC-A001	Stud Screw	53	G-3-12

R. Index

Part No.	Part Name	Page	Ref.No
11012PR-B001	Thread Guide	45	F-2-8
11012PR-B001	Thread Guide (New) (12C)	51	G-1-9
11014SN-1211	Hex.Nut (M3-No2)	32	D-3-6
11014SN-1211	Hex.Nut (M3-No2)	51	G-1-11
11019SW-9115	Spring Washer (3@)	23	C-3-21
11019SW-9115	Spring Washer (3@)	60	H1-4-53
11019SW-9115	Spring Washer (3@)	61	H1-5-10
11019SW-9115	Spring Washer (3@)	65	H2-1-3
11019SW-9115	Spring Washer (3@)	67	H2-2-4
11019SW-9115	Spring Washer (3@)	67	H2-2-10
11019SW-9115	Spring Washer (3@)	68	H2-3-10
11019SW-9115	Spring Washer (3@)	70	H2-4-64
11019SW-9115	Spring Washer (3@)	79	H3-3-10
11019SW-9115	Spring Washer (3@)	81	H3-4-53
11019SW-9115	Spring Washer (3@)	82	H3-5-9
11020PM-B001	TENSION ADJUSTING PLATE HOLDER (15C)	51	G-1-14
11022AD-UK14	Angle "A" L=2020 (UK1504)	93	J-2-3
11023AD-UK14	Angle "B" L=2020 (UK1504)	93	J-2-4
11029SC-4113	Hex. Socket Bolt (M4*L20)	51	G-1-16
11029SC-4113	HEX. SOCKET BOLT (M4*L20)	59	H1-4-27
11029SC-4113	HEX. SOCKET BOLT (M4*L20)	59	H1-4-39
11029SC-4113	Hex. Socket Bolt (M4*L20)	69	H2-4-38
11029SC-4113	Hex. Socket Bolt (M4*L20)	70	H2-4-42
11029SC-4113	Hex. Socket Bolt (M4*L20)	71	H2-5-14
11029SC-4113	Hex. Socket Bolt (M4*L20)	71	H2-5-18
11029SC-4113	Hex. Socket Bolt (M4*L20)	87	I-2-9
11029SC-4113	Hex. Socket Bolt (M4*L20)	132	Q1-2-4
11029SC-4113	Hex. Socket Bolt (M4*L20)	133	Q1-3-4
11029SC-4113	Hex. Socket Bolt (M4*L20)	134	Q1-4-4
11031PR-AB00	Cover Plate 12C	53	G-3-4
11032PR-T121	Cable Supporter 12C	53	G-3-1
11049SC-A001	Board Stud Bolt	109	L-2-6
11075PM-B001	Thread Sensor Roller(B1)Set (6C)	52	G-2-2
11075PM-B001	Thread Sensor Roller(B1)Set (12C)	52	G-2-2
11075PM-B001	Thread Sensor Roller(B1)Set (15C)	52	G-2-2
11076PM-B001	Thread Sensor Roller(B2)Set (15C)	52	G-2-3
11083CW-B001	THREAD DETECTING WHEEL STUD (9C)	52	G-2-4
11083CW-B001	THREAD DETECTING WHEEL STUD (15C)	52	G-2-4
11093EL-C001	Thread Sensing Board	109	L-2-5
11101200T000	Upper Dead Point Stopper	42	F-1-13
116410S-8118	Driver Screw 11/64-40,L10	90	I-4-28
12000200B000	CABLE COVER PLATE	117	N-1-11
12000200B000	CABLE COVER PLATE	118	N-2-4
12000200B000	CABLE COVER PLATE	119	N-3-4
12001900U000	Upper Thread Hook Motor Cover	86	I-1-42
12001AD-UK02	Spool Plate (L=950) (UK1202)	92	J-1-1
12001AD-UK06	Spool Plate (L=2950) (UK1206)	92	J-1-1

Part No.	Part Name	Page	Ref.No
12001AD-UK12	Spool Plate (L=1080) (UK1502)	92	J-1-1
12001AD-UK16	Spool Plate (L=2950) (UK1506)	92	J-1-1
12010SN-1211	Hex.Nut (M5)	46	F-3-19
12010SN-1211	Hex.Nut (M5)	61	H1-5-17
12010SN-1211	Hex.Nut (M5)	70	H2-4-71
12010SN-1211	Hex.Nut (M5)	72	H2-5-44
12010SN-1211	Hex.Nut (M5)	82	H3-5-16
12010SN-1211	Hex.Nut (M5)	92	J-1-13
12012PM-A001	Spool Holder	92	J-1-8
12012-PM-A001	Spool Holder	122	O-1-5
12014SC-A001	Spool Stand Bolt	92	J-1-15
12015SF-A001	Spool Stand (L=330) (6,12C)	92	J-1-17
12017PU-T121	Timing Pulley "A"	58	H1-3-33
12017PU-T121	Timing Pulley "A"	68	H2-3-35
12017PU-T121	Timing Pulley "A"	79	H3-3-13
12018BR-T121	Needle Bearing Hk1010(Ina)	58	H1-3-33
12018BR-T121	Needle Bearing Hk1010(Ina)	69	H2-4-23
12018BR-T121	Needle Bearing Hk1010(Ina)	79	H3-3-14
12019AD-UK02	Angle "A" L=890 (UK1202)	93	J-2-3
12019AD-UK06	Angle (A) L=3020 (UK1206)	93	J-2-3
12019AD-UK12	Angle "A" L=1020 (UK1502)	93	J-2-3
12019AD-UK16	Angle (A) L=3020 (UK1506)	93	J-2-3
12019BR-T121	Fiber Washer R-Tw1020	37	E-2-24
12019BR-T121	Fiber Washer R-Tw1020	58	H1-3-34
12019BR-T121	Fiber Washer R-Tw1020	68	H2-3-37
12019BR-T121	Fiber Washer R-Tw1020	69	H2-4-25
12019BR-T121	Fiber Washer R-Tw1020	79	H3-3-15
12020AD-UK02	Angle "B" L=890 (UK1202)	93	J-2-4
12020AD-UK06	Angle (B) L=3020 (UK1206)	93	J-2-4
12020AD-UK12	Angle "B" L=1020 (UK1502)	93	J-2-4
12020AD-UK16	Angle (B) L=3020 (UK1506)	93	J-2-4
12033RB-UK01	Cushion Rubber	92	J-1-14
12042PM-A001	Eyelet	94	J-2-8
12048BT-T121	X-Axis Timing Belt	58	H1-3-10
12048BT-T121	X-Axis Timing Belt	68	H2-3-6
12052SF-A001	Spool Sponge	92	J-1-9
12209100U000	Cap Guide	87	I-2-17
13001CA-UK06	Color Change Base	46	F-3-1
13003000T000	Mes Shaft Collar	33	D-4-11
13005CM-UK06	Color Change Cam	46	F-3-14
13007CW-UK06	Color Change Shaft	46	F-3-7
13010BR-T121	Washer(@12*@26*1T)	46	F-3-11
13010CW-UK06	Color Change Collar	46	F-3-13
13019PR-A001	Half Turm Film Washer (T1.0)	48	F-4-9
13020GA-UK06	Color Change Gear (L)	48	F-4-1
13020SC-A001	Hex.Socket Bolt (M3*L7)	49	F-5-10
13020SC-A001	Hex.Socket Bolt (M3*L7)	127	P-2-31
13021GA-UK06	Color Change Gear (R)	46	F-3-22
13022AD-UK06	Color Change Passivity Handle	48	F-4-7
13026BR-T121	Needle Bearing (6002Z)	39	E-4-9

Part No.	Part Name	Page	Ref.No
13026BR-T121	Needle Bearing (6002Z)	81	H3-4-46
13026CL-D104	Color Change Roller Base (9C)	46	F-3-16
13026CL-UK06	Color Change Roller Base (12C)	46	F-3-16
13026CL-UK16	Color Change Roller Base (15C)	46	F-3-16
13032AD-UK06	Color Change Film Set	46	F-3-5
13032GA-UK06	Index Shaft Gear Uk06	37	E-2-1
13036BR-UK01	Needle Bearing (63800Zz)	37	E-2-23
13036PR-A001	Magnet Holder	49	F-5-14
13036PR-A001	Magnet Holder	127	P-2-20
13038CW-UK01	Collar "C"	37	E-2-25
13041BR-UK01	Washer(12*@26*1T)	46	F-3-12
13041SH-UK01	Middle Shaft	37	E-2-18
13042SN-1111	Hex.Nut (M6*T5-R)	30	D-1-24
13042SN-1111	Hex.Nut (M6*T5-R)	39	E-4-3
13042SN-1111	Hex.Nut (M6*T5-R) (UK1206)	46	F-3-27
13042SN-1111	Hex.Nut (M6*T5-R)	85	I-1-27
13044SR-4013	E-Ring (@4)	89	I-4-15
13048SC-A001	Bracket "A" Screw	126	P-2-3
13053PR-UK01	Angle Plate Base	36	E-1-12
13054ET-UK01	Angle Disk	36	E-1-14
13054SC-3123	Truss Screw (M3 X L8)	45	F-2-6
13054SC-3123	Switch Cover Screw(set) (M3xL8)	113	M-2-18
13054SC-3123	Truss Screw (M3*L8)	122	O-1-19
13060ET-A005	Color Change Board Cover	49	F-5-4
13060ET-A005	Color Change Board Cover	127	P-2-25
13061SC-8119	Plus Screw (M3*L10)	36	E-1-13
13061SC-8119	Plus Screw (M3*L10)	86	I-1-40
13106PR-UK01	Idler Spacer	39	E-4-11
13107CW-UK01	Collar	36	E-1-10
13118CS-UK01	Idler Support Bracket	39	E-4-4
13120CW-UK01	IDLER SHAFT	39	E-4-10
13123CW-E121	Idelr Plate	39	E-4-1
14002SC-7113	Hex. Socket Bolt (M6*L15)	62	H1-6-31
14002SC-7113	Hex.Socket Bolt (M6*L15)	69	H2-4-10
14002SC-7113	HEX.SOCKET BOLT (M6*L15)	73	H2-6-20
14002SC-7113	Hex.Socket Bolt (M6*L15)	80	H3-4-7
14002SC-7113	Hex. Socket Bolt (M6*L15)	83	H3-6-20
14002SC-7113	HEX.SOCKET BOLT (M6*L15)	83	H3-6-31
14002SC-7113	Hex.Socket Bolt (M6*L15)	96	K1-1-19
14002SC-7113	Hex.Socket Bolt (M6*L15)	97	K1-2-31
14002SC-7113	Hex.Socket Bolt (M6*L15)	104	K3-1-23
14002SC-7113	Hex.Socket Bolt (M6*L15)	104	K3-1-28
14002SC-7113	Hex.Socket Bolt (M6*L15)	105	K3-2-24
14002SC-7113	Hex.Socket Bolt (M6*L15)	120	N-4-9
14005SC-4517	HEX.SOCKET SET SCREW (M8*L8)	31	D-2-4
14006SC-7113	Hex.Socket Set Screw (M8*L15)	36	E-1-15
14006SC-7113	HEX.SOCKET SET SCREW (M8*L15)	59	H1-4-10
14014PR-UK01	Bushing Plate	65	H2-1-15
14014SC-7113	Hex.Socket Set Screw (M5*L8)	117	N-1-8
14014SC-7113	Hex.Socket Set Screw (M5*L8)	119	N-3-11

R. Index

Part No.	Part Name	Page	Ref.No
14020PR-UK01	Space	58	H1-3-6
14020PR-UK01	Space	68	H2-3-12
14020PR-UK01	Space	79	H3-3-18
14027SC-4113	Hex.Socket Bolt (M8*L30)	39	E-4-5
14027SC-4113	Hex.Socket Bolt (M8*L30)	59	H1-4-2
14027SC-4113	Hex.Socket Bolt (M8*L30)	80	H3-4-2
14045AD-UK01	Belt Bracket (B)	58	H1-3-1
14045AD-UK01	Belt Bracket (B)	68	H2-3-1
14045AD-UK01	Belt Bracket (B)	79	H3-3-1
14046SC-7113	Hex.Socket Bolt (M6*L30)	26	C-6-2
14046SC-7113	Hex.Socket Bolt (M6*L30)	26	C-6-11
14046SC-7113	Hex.Socket Bolt (M6*L30)	28	C-8-2
14046SC-7113	HEX.SOCKET BOLT (M6*L30)	38	E-3-5
14046SC-7113	Hex.Socket Bolt (M6*L30)	62	H1-6-8
14046SC-7113	Hex.Socket Bolt (M6*L30)	73	H2-6-8
14046SC-7113	Hex.Socket Bolt (M6*L30)	83	H3-6-14
14048AD-UK01	Belt Bracket (A)	58	H1-3-3
14048AD-UK01	Belt Bracket (A)	68	H2-3-3
14048AD-UK01	Belt Bracket (A)	79	H3-3-3
14049AD-UK01	Belt Bracket (C)	58	H1-3-2
14049AD-UK01	Belt Bracket (C)	68	H2-3-2
14049AD-UK01	Belt Bracket (C)	79	H3-3-2
14051PR-UK01	Fixing Plate	58	H1-3-11
14051PR-UK01	Fixing Plate	68	H2-3-7
14051PR-UK01	Fixing Plate	79	H3-3-7
14052PR-UK01	Fixing Plate Holder	58	H1-3-12
14052PR-UK01	Fixing Plate Holder	68	H2-3-8
14052PR-UK01	Fixing Plate Holder	79	H3-3-8
14058CW-A001	Collar "A"	36	E-1-18
14058CW-A001	Bearing Collar	60	H1-4-47
14058CW-A001	Bearing Collar	70	H2-4-50
14058CW-A001	Bearing Collar	72	H2-5-50
14058CW-A001	Bearing Stopper Collar	73	H2-6-24
14058CW-A001	Bearing Collar	81	H3-4-47
14058CW-A001	Bearing Stopper Collar	83	H3-6-24
14060AF-4517	Hex.Socket Screw (M6*L6)	25	C-5-11
14060AF-4517	Hex.Socket Screw (M6*L6)	36	E-1-11
14060AF-4517	Hex.Socket Screw (M6*L6)	37	E-2-4
14060AF-4517	Hex.Socket Screw (M6*L6) (UK1206,UH1508)	37	E-2-16
14060AF-4517	Hex.Socket Screw (M6*L6)	38	E-3-11
14060AF-4517	HEX.SOCKET SCREW (M6*L6)	39	E-4-8
14060AF-4517	Hex. Socket Bolt (M6*L6)	62	H1-6-28
14060AF-4517	Hex.Socket Screw (M6*L6)	72	H2-5-55
14060AF-4517	Hex. Socket Bolt (M6*L6)	73	H2-6-17
14060AF-4517	Hex. Socket Bolt (M6*L6)	83	H3-6-10
14061AF-4517	Hex.Socket Screw (M8*L8)	36	E-1-8
14061AF-4517	Hex.Socket Screw (M8*L8)	38	E-3-15
14061AF-4517	Hex. Socket Bolt (M8*L8)	62	H1-6-12
14061AF-4517	Hex. Socket Bolt (M8*L8)	73	H2-6-13
14061AF-4517	Hex. Socket Bolt (M8*L8)	83	H3-6-18

Part No.	Part Name	Page	Ref.No
14063PU-UK01	Timing Pulley "B"	58	H1-3-16
14063PU-UK01	Timing Pulley "B"	68	H2-3-16
14063PU-UK01	Timing Pulley "B"	79	H3-3-20
14063SC-A001	Tension Control Bolt (M6*L40)	39	E-4-2
14063SC-A001	Tension Control Bolt (M6*L40)	40	E-5-14
14065AD-UK01	Motor Fixing Shaft (A)	58	H1-3-18
14065AD-UK01	Motor Fixing Shaft (A)	68	H2-3-18
14065AD-UK01	Motor Fixing Shaft (A)	79	H3-3-22
14067AD-UK01	Motor Fixing Shaft (B)	58	H1-3-20
14067AD-UK01	Motor Fixing Shaft (B)	68	H2-3-20
14067AD-UK01	Motor Fixing Shaft (B)	79	H3-3-24
14069AD-UK01	Motor Block	58	H1-3-22
14069AD-UK01	Motor Block	68	H2-3-22
14069AD-UK01	Motor Block	79	H3-3-26
14071BR-UK01	Bearing Bc616Zz	58	H1-3-25
14071BR-UK01	Bearing Bc616Zz	68	H2-3-25
14071BR-UK01	Bearing Bc616Zz	79	H3-3-29
14074PR-UK01	Motor Base (L)	58	H1-3-29
14074PR-UK01	Motor Base (L)	68	H2-3-27
14074PR-UK01	Motor Base (L)	79	H3-3-33
14075PR-UK01	Motor Base (R)	58	H1-3-30
14075PR-UK01	Motor Base (R)	68	H2-3-28
14075PR-UK01	Motor Base (R)	79	H3-3-34
14079CW-UK06	Lower Shaft Coupling (UK1206,UH1508)	37	E-2-15
15001BR-B001	Cam Roller Bearing	61	H1-5-18
15001BR-B001	Cam Roller Bearing	70	H2-4-72
15001BR-B001	Cam Roller Bearing	72	H2-5-45
15001BR-B001	Cam Roller Bearing	82	H3-5-17
15002CW-B001	Cam Roller Stud (A)	61	H1-5-13
15002CW-B001	Cam Roller Stud (A)	70	H2-4-67
15002CW-B001	Cam Roller Stud (A)	72	H2-5-40
15002CW-B001	Cam Roller Stud (A)	82	H3-5-12
15003CW-B001	Cam Roller Stud (B)	61	H1-5-16
15003CW-B001	Cam Roller Stud (B)	70	H2-4-70
15003CW-B001	Cam Roller Stud (B)	72	H2-5-43
15003CW-B001	Cam Roller Stud (B)	82	H3-5-15
15007PR-UK02	Connecting Plate(L)	57	H1-2-3
15007PR-UK02	CONNECTING PLATE(L)	67	H2-2-5
15007PR-UK02	Connecting Plate(L)	78	H3-2-4
15011PR-UK02	Connecting Plate(R)	57	H1-2-7
15011PR-UK02	CONNECTING PLATE(R)	67	H2-2-6
15011PR-UK02	Connecting Plate(R)	78	H3-2-5
15015PR-UK02	Connecting Plate	57	H1-2-8
15015PR-UK02	CONNECTING PLATE	67	H2-2-7
15015PR-UK02	Connecting Plate	78	H3-2-6
15017SC-4113	Hex. Socket Bolt (M8*L45)	69	H2-4-5
15017SC-4113	Hex. Socket Bolt (M8*L45)	71	H2-5-2
15020SC-4113	Hex.Socket Bolt (M8*L50)	69	H2-4-8
15020SC-4113	Hex.Socket Bolt (M8*L50)	71	H2-5-5
15-025M-1000	Cable tie	114	M-2-34

Part No.	Part Name	Page	Ref.No
15-027A-2070	SENSOR	86	I-1-39
15029AF-T121	Roller Set	46	F-3-17
15029SN-3211	Hex. Nut (M4-No2)	61	H1-5-14
15029SN-3211	Hex. Nut (M4-No2)	70	H2-4-68
15029SN-3211	Hex. Nut (M4-No2)	72	H2-5-41
15029SN-3211	Hex. Nut (M4-No2)	82	H3-5-13
15030SC-7113	Hex. Socket Bolt (M5*L30)	81	H3-4-39
15034SC-4113	Hex. Socket Boit (M4*L45)	58	H1-3-4
15034SC-4113	Hex. Socket Boit (M4*L45)	68	H2-3-4
15034SC-4113	Hex. Socket Boit (M4*L45)	79	H3-3-4
15042BR-A001	Needle Bearing (1210Zz)	59	H1-4-20
15042BR-A001	Needle Bearing (1210Zz)	71	H2-5-9
15042BR-A001	Needle Bearing (1210Zz)	80	H3-4-27
15042SC-3123	Truss Screw (M4*L6)	55	H1-1-26
15042SC-3123	Truss Screw (M4*L6)	55	H1-1-34
15042SC-3123	Truss Screw (M4*L6)	65	H2-1-31
15042SC-3123	Truss Screw (M4*L6)	65	H2-1-37
15042SC-3123	Truss Screw (M4*L6)	76	H3-1-9
15042SC-3123	Truss Screw (M4*L6)	76	H3-1-29
15042SC-3123	Truss Screw (M4*L6)	122	O-1-9
15042SC-3123	Truss Screw (M4*L6)	125	P-1-12
15042SC-3123	Truss Screw (M4*L6)	136	Q2-1-14
15042SC-3123	Truss Screw (M4*L6)	137	Q2-2-12
15042SC-3123	Truss Screw (M4*L6)	138	Q2-3-13
15043EL-UK01	X-Positioning Sensor	65	H2-1-11
15043EL-UK01	X-Positioning Sensor	76	H3-1-18
15044EL-T121	Bid (S)	58	H1-3-31
15044EL-T121	Bid (S)	68	H2-3-33
15044EL-T121	Bid (S)	79	H3-3-35
15044EL-UK01	X-Positioning Sensor	65	H2-1-10
15045EL-UK01	Bid (L)	55	H1-1-16
15045EL-UK01	Bid (L)	65	H2-1-23
15045EL-UK01	Bid (L)	76	H3-1-27
15045EL-UK01	Bid (L)	79	H3-3-37
15046ET-T121	Wire Holder	28	C-8-10
15046RB-A001	Driving Pin Washer (Tw1225)	59	H1-4-21
15046RB-A001	Driving Pin Washer (Tw1225)	80	H3-4-28
15048SC-4119	Plus Screw (M5*L12)	68	H2-3-38
15048SC-4119	Plus Screw (M5*L12)	79	H3-3-16
15053SC-4119	Plus Screw (M5*L30)	58	H1-3-19
15053SC-4119	Plus Screw (M5*L30)	68	H2-3-19
15053SC-4119	Plus Screw (M5*L30)	79	H3-3-23
15055SC-4119	Plus Screw (M5*L35)	58	H1-3-21
15055SC-4119	Plus Screw (M5*L35)	68	H2-3-21
15055SC-4119	Plus Screw (M5*L35)	79	H3-3-25
15061PR-UK01	Motor Space (@5*@11*2T)	58	H1-3-27
15061PR-UK01	Motor Space (@5*@11*2T)	68	H2-3-26
15061PR-UK01	Motor Space (@5*@11*2T)	79	H3-3-30
15062SF-T121	Felt	65	H2-1-5
15062SF-T121	Felt	76	H3-1-10

R. Index

Part No.	Part Name	Page	Ref.No
15067PR-UK01	Sensor Plate	55	H1-1-3
15067PR-UK01	Sensor Plate	65	H2-1-6
15067PR-UK01	Sensor Plate	76	H3-1-17
15071PR-UK01	Perception Plate	57	H1-2-15
15071PR-UK01	Perception Plate	67	H2-2-19
15076AF-UK01	X-Motor (103H8221-5044)	58	H1-3-26
15076AF-UK01	X-MOTOR (103H8221-5044)	68	H2-3-29
15076AF-UK01	X-Motor	79	H3-3-19
15082PR-W121	FIXING PLATE FOR BUSHING	55	H1-1-29
15082PR-W121	FIXING PLATE FOR BUSHING	65	H2-1-34
15082PR-W121	FIXING PLATE FOR BUSHING	76	H3-1-15
15087PR-UK02	Cable Plate For Bushing	55	H1-1-12
15087PR-UK02	Cable Plate For Bushing	76	H3-1-22
15089SC-7119	C.S Screw (M4*L10)	51	G-1-2
15089SC-7119	C.S Screw (M4*L12)	97	K1-2-20
15089SC-7119	C.S Screw (M4*L12)	101	K2-2-23
15089SC-7119	C.S Screw (M4*L12)	105	K3-2-28
15089SC-7119	C.S Screw (M4*L10)	120	N-4-7
15095SW-3115	Spring Washer (@8)	14	B-1-3
15095SW-3115	Spring Washer (@8)	19	B-6-3
15095SW-3115	Spring Washer (@8)	25	C-5-3
15095SW-3115	Spring Washer (@8)	31	D-2-18
15095SW-3115	Spring Washer (@8) (UK1204,UH1506C)	34	D-5-7
15095SW-3115	Spring Washer (@8)	36	E-1-16
15095SW-3115	SPRING WASHER (@8)	38	E-3-3
15095SW-3115	Spring Washer (@8)	39	E-4-6
15095SW-3115	Spring Washer (@8)	56	H1-1-46
15095SW-3115	Spring Washer (@8)	59	H1-4-4
15095SW-3115	SPRING WASHER (@8)	59	H1-4-11
15095SW-3115	Spring Washer (@8)	62	H1-6-5
15095SW-3115	Spring Washer (@8)	69	H2-4-6
15095SW-3115	Spring Washer (@8)	71	H2-5-3
15095SW-3115	Spring Washer (@8)	73	H2-6-5
15095SW-3115	Spring Washer (@8)	80	H3-4-4
15095SW-3115	Spring Washer (@8)	83	H3-6-5
15095SW-3115	Spring Washer (@8)	85	I-1-18
15095SW-3115	Spring Washer (@8)	97	K1-2-16
15095SW-3115	Spring Washer (@8)	101	K2-2-15
15095SW-3115	Spring Washer (@8)	105	K3-2-15
15100CL-UK01	Roller Fixed Plate	55	H1-1-36
15100CL-UK01	Roller Fixed Plate	77	H3-1-38
15106BR-A001	Flange Bearing (1280Zz)	56	H1-1-43
15106BR-A001	Flange Bearing (1280Zz)	76	H3-1-33
15107CW-UK01	Roller Collar	56	H1-1-44
15107CW-UK01	Roller Collar	76	H3-1-34
15130AF-A001	Roller Guide	56	H1-1-42
15130AF-A001	Roller Guide	76	H3-1-32
15159SR-4013	E-Ring (3@)	90	I-4-27
15159SR-4013	E-Ring (3@)	131	Q1-1-25
16000100U000	TABLE SUPPORT ANGLE (A1)	96	K1-1-21

Part No.	Part Name	Page	Ref.No
16000100U000	TABLE SUPPORT ANGLE (A1)	104	K3-1-7
16000200U000	TABLE SUPPORT ANGLE (D1)	96	K1-1-22
16000200U000	TABLE SUPPORT ANGLE (D1)	104	K3-1-8
16009SC-4113	Hex.Socket Bolt (M10*L25)	101	K2-2-8
16009SC-8330	Tapping Screw (M6*L20)	96	K1-1-6
16009SC-8330	Tapping Screw (M6*L20)	96	K1-1-18
16009SC-8330	Tapping Screw (M6*L20)	96	K1-1-27
16009SC-8330	Tapping Screw (M6*L20)	97	K1-2-6
16009SC-8330	Tapping Screw (M6*L20)	97	K1-2-30
16009SC-8330	Tapping Screw (M6*L20)	98	K1-3-16
16009SC-8330	Tapping Screw (M6*L20)	100	K2-1-6
16009SC-8330	Tapping Screw (M6*L20)	101	K2-2-6
16009SC-8330	Tapping Screw (M6*L20)	102	K2-3-18
16009SC-8330	Tapping Screw (M6*L20)	104	K3-1-6
16009SC-8330	Tapping Screw (M6*L20)	104	K3-1-22
16009SC-8330	Tapping Screw (M6*L20)	104	K3-1-25
16009SC-8330	Tapping Screw (M6*L20)	104	K3-1-27
16009SC-8330	Tapping Screw (M6*L20)	105	K3-2-11
16009SC-8330	Tapping Screw (M6*L20)	105	K3-2-21
16009SC-8330	Tapping Screw (M6*L20)	106	K3-3-20
16014SW-4115	Spring Washer (@6)	36	E-1-4
16014SW-4115	Spring Washer (@6)	40	E-5-11
16014SW-4115	Spring Washer (@6)	62	H1-6-9
16014SW-4115	Spring Washer (@6)	62	H1-6-32
16014SW-4115	Spring Washer (@6)	69	H2-4-11
16014SW-4115	Spring Washer (@6)	69	H2-4-36
16014SW-4115	Spring Washer (@6)	71	H2-5-22
16014SW-4115	Spring Washer (@6)	73	H2-6-9
16014SW-4115	Spring Washer (@6)	73	H2-6-21
16014SW-4115	Spring Washer (@6)	80	H3-4-8
16014SW-4115	Spring Washer (@6)	83	H3-5-15
16014SW-4115	Spring Washer (@6)	83	H3-6-21
16014SW-4115	Spring Washer (@6)	83	H3-6-32
16014SW-4115	Spring Washer (@6)	85	I-1-4
16014SW-4115	SPRING WASHER (@6)	85	I-1-26
16014SW-4115	Spring Washer (@6)	117	N-1-6
16014SW-4115	Spring Washer (@6)	119	N-3-8
16014SW-4115	Spring Washer (@6)	120	N-4-10
16016PR-UK01	GEAR COVER	97	K1-2-7
16016PR-UK01	Gear Cover	97	K1-2-9
16016PR-UK01	Gear Cover	101	K2-2-1
16016PR-UK01	Gear Cover	105	K3-2-6
16018PR-UK01	Mes Cam Driving Box Cover	97	K1-2-10
16018PR-UK01	Mes Cam Driving Box Cover	101	K2-2-2
16018PR-UK01	Mes Cam Driving Box Cover	105	K3-2-7
16018SW-1111	Spring Washer (@5)	24	C-4-7
16018SW-1111	WASHER (@5)	27	C-7-21
16018SW-1111	Washer (@5)	58	H1-3-28
16018SW-1111	Washer (@5)	59	H1-4-9
16018SW-1111	Washer (@5)	68	H2-3-32

Part No.	Part Name	Page	Ref.No
16018SW-1111	Washer (@5)	69	H2-4-15
16018SW-1111	Washer (@5)	69	H2-4-34
16018SW-1111	Washer (@5)	71	H2-5-26
16018SW-1111	Washer (@5)	79	H3-3-32
16018SW-1111	Washer (@5)	80	H3-4-12
16018SW-1111	Washer (@5)	96	K1-1-5
16018SW-1111	Washer (@5)	96	K1-1-16
16018SW-1111	Washer (@5)	96	K1-1-25
16018SW-1111	Washer (@5)	97	K1-2-5
16018SW-1111	Washer (@5)	100	K2-1-5
16018SW-1111	Washer (@5)	101	K2-2-20
16018SW-1111	Washer (@5)	104	K3-1-5
16018SW-1111	Washer (@5)	104	K3-1-12
16018SW-1111	Washer (@5)	104	K3-1-16
16018SW-1111	Washer (@5)	105	K3-2-5
16018SW-1111	Washer (@5)	109	L-2-4
16018SW-1111	Control Box Washer	113	M-2-26
16018SW-1111	Control Box Washer	114	M-2-38
16018SW-1111	Washer (@5)	118	N-2-12
16018SW-1111	Washer (@5)	125	P-1-10
16019BT-UK06	Y-Drive Timing Belt (25*AT5*1314)	69	H2-4-4
16019SW-4115	Control Box Spring Washer	113	M-2-25
16019SW-4115	Control Box Spring Washer	114	M-2-37
16020PR-UK01	Front Table Support (L)	96	K1-1-1
16020PR-UK01	Front Table Support (L)	97	K1-2-1
16020PR-UK01	Front Table Support (L)	100	K2-1-1
16020PR-UK01	Front Table Support (L)	104	K3-1-1
16020PR-UK01	Front Table Support (L)	105	K3-2-1
16021CW-A001	Table Support Stud (UK1204,UH1506C)	34	D-5-5
16021CW-A001	Table Support Stud	101	K2-2-13
16022AF-8119	Plus Screw(M6*L20) (UK1204,UH1506C)	34	D-5-4
16025PR-UK01	Front Table Support (R)	96	K1-1-2
16025PR-UK01	Front Table Support (R)	97	K1-2-2
16025PR-UK01	Front Table Support (R)	100	K2-1-2
16025PR-UK01	Front Table Support (R)	104	K3-1-2
16025PR-UK01	Front Table Support (R)	105	K3-2-2
16028SC-7113	HEX. SOCKET BOLT (M5*L25)	59	H1-4-35
16028SC-7113	Hex. Socket Bolt (M5*L25)	69	H2-4-32
16028SC-7113	Hex. Socket Bolt (M5*L25)	71	H2-5-24
16029SW-3115	Spring Washer (10@)	101	K2-2-9
16058AD-UK01	Table Support Plate (B)	97	K1-2-19
16058AD-UK01	Table Support Plate (B)	101	K2-2-22
16058AD-UK01	Table Support Plate (B)	105	K3-2-26
16059MT-E131	Y Motor (103H89222-5212)	62	H1-6-7
16059MT-E131	Y Motor (103H89222-5212)	73	H2-6-7
16059MT-E131	Y Motor (103H89222-5212)	83	H3-6-13
16059SC-7113	Hex.Socket Bolt (M6*L12)	39	E-4-12
16059SC-7113	HEX.SOCKET BOLT (M6*L12)	60	H1-4-45
16059SC-7113	Hex. Socket Bolt (M6*L12)	70	H2-4-48
16059SC-7113	Hex. Socket Bolt (M6*L12)	72	H2-5-48

R. Index

Part No.	Part Name	Page	Ref.No
16061PR-UK01	Table Support Plate (A)	97	K1-2-18
16061PR-UK01	Table Support Plate (A)	101	K2-2-21
16061PR-UK01	Table Support Plate (A)	105	K3-2-25
16063PM-UK01	Table Holding Block	98	K1-3-17
16063PM-UK01	Table Holding Block	102	K2-3-17
16063PM-UK01	Table Holding Block	106	K3-3-23
16065PR-UK01	Clamp Plate	98	K1-3-15
16065PR-UK01	Clamp Plate	102	K2-3-16
16065PR-UK01	Clamp Plate	106	K3-3-19
16067ET-UK01	Table Toggle Clamp	98	K1-3-18
16067ET-UK01	Table Toggle Clamp	102	K2-3-19
16067ET-UK01	Table Toggle Clamp	106	K3-3-21
16074PR-UK06	Y-Lm Support Fixing Plate	59	H1-4-6
16074PR-UK06	Y-Lm Support Fixing Plate	69	H2-4-9
16074PR-UK06	Y-Lm Support Fixing Plate	80	H3-4-6
16078BR-UK01	Pillow Block Set	83	H3-6-30
16093BT-UK06	Y-Drive Timing Belt "B" (L=1295)	71	H2-5-8
16100CW-UK06	Timing Pulley Shaft (Y)	59	H1-4-22
16100CW-UK06	Timing Pulley Shaft (Y)	71	H2-5-12
16100CW-UK06	Timing Pulley Shaft (Y)	80	H3-4-29
16104CL-H001	Belt Catcher Plate (Y)	61	H1-5-12
16104CL-H001	Belt Catcher Plate(Y)	70	H2-4-66
16104CL-H001	Belt Catcher Plate(Y)	71	H2-5-39
16104CL-H001	Belt Catcher Plate (Y)	82	H3-5-11
16122PR-UK06	Y-Lm Guide Support Cover (B)	72	H2-5-56
17012SC-8329	Hex. Socket Set Screw(M4*L16)	97	K1-2-21
17014PR-UK01	Tubular Holder "A"	131	Q1-1-18
17015PR-UK01	Tubular Holder "B"	131	Q1-1-20
17051SN-A001	Mes Priving Shaft Joint	30	D-1-23
17051SN-A001	Mes Priving Shaft Joint (UK1206)	46	F-3-26
17053SN-1111	Hex. Nut(L) (M6*T5-L)	30	D-1-25
17053SN-1111	Hex. Nut(L) (M6*T5-L) (UK1206)	46	F-3-25
17062SC-UK01	Table Support Stopper Screw	97	K1-2-24
17062SC-UK01	Table Support Stopper Screw	101	K2-2-28
17062SC-UK01	Table Support Stopper Screw	105	K3-2-31
17063SC-UK01	Table Support Stopper Screw	97	K1-2-25
17063SC-UK01	TABLE SUPPORT STOPPER SCREW	101	K2-2-27
17063SC-UK01	Table Support Stopper Screw	101	K2-2-28
17063SC-UK01	Table Support Stopper Screw	105	K3-2-32
17073PR-UK01	Table Support Angle "F"	96	K1-1-13
17073PR-UK01	Table Support Angle "F"	100	K2-1-14
17073PR-UK01	Table Support Angle "F"	104	K3-1-21
17077PR-UK01	Table Fixing Plate	96	K1-1-7
17077PR-UK01	Table Fixing Plate	104	K3-1-13
17077PR-UK06	Table Fixing Plate	100	K2-1-7
17085PM-UK01	Positioning Block	96	K1-1-9
17085PM-UK01	Positioning Block	100	K2-1-9
17085PM-UK01	Positioning Block	104	K3-1-17
17087CW-UK01	Table Support Angle	128	P-3-7
17087CW-UK01	Table Support Angle	128	P-3-16

Part No.	Part Name	Page	Ref.No
17087CW-UK01	Table Support Angle	128	P-3-24
17105AD-UK06	TABLE SUPPORT D	100	K2-1-18
18009EL-WH06	WHEEL SENSOR BOARD (6C)	52	G-2-10
18013AF-7113	Hex. Socket Bolt (M4*L10)	71	H2-5-33
18013AF-7113	Hex. Socket Bolt (M4*L10)	109	L-2-11
18014SW-3115	Spring Washer (@4)	23	C-3-5
18014SW-3115	Spring Washer (@4-No2)	32	D-3-10
18014SW-3115	Spring Washer (@4-No2)	34	D-5-13
18014SW-3115	Spring Washer (@4-No2)	46	F-3-3
18014SW-3115	Spring Washer (@4-No2)	55	H1-1-22
18014SW-3115	SPRING WASHER (@4-NO2)	55	H1-1-28
18014SW-3115	Spring Washer (@4-No2)	55	H1-1-38
18014SW-3115	Spring Washer (@4-No2)	57	H1-2-5
18014SW-3115	Spring Washer (@4-No2)	57	H1-2-11
18014SW-3115	Spring Washer (@4-No2)	58	H1-3-8
18014SW-3115	Spring Washer (@4-No2)	58	H1-3-14
18014SW-3115	Spring Washer (@4-No2)	59	H1-4-15
18014SW-3115	Spring Washer (@4-No2)	59	H1-4-28
18014SW-3115	Spring Washer (@4-No2)	59	H1-4-40
18014SW-3115	Spring Washer (@4-No2)	61	H1-5-6
18014SW-3115	Spring Washer (@4-No2)	65	H2-1-17
18014SW-3115	Spring Washer (@4-No2)	65	H2-1-27
18014SW-3115	SPRING WASHER (@4-NO2)	65	H2-1-33
18014SW-3115	Spring Washer (@4)	69	H2-4-39
18014SW-3115	Spring Washer (@4)	70	H2-4-43
18014SW-3115	Spring Washer (@4)	70	H2-4-60
18014SW-3115	Spring Washer (@4)	71	H2-5-15
18014SW-3115	Spring Washer (@4)	71	H2-5-19
18014SW-3115	Spring Washer (@4-No2)	71	H2-5-34
18014SW-3115	Spring Washer (@4-No2)	77	H3-1-40
18014SW-3115	Spring Washer (@4-No2)	80	H3-4-15
18014SW-3115	Spring Washer (@4-No2)	80	H3-4-24
18014SW-3115	Spring Washer (@4-No2)	80	H3-4-37
18014SW-3115	Spring Washer (@4-No2)	82	H3-5-5
18014SW-3115	SPRING WASHER (@4-NO2)	86	I-1-45
18014SW-3115	Spring Washer (@4-No2)	86	I-1-48
18014SW-3115	Spring Washer (@4-No2)	87	I-2-3
18014SW-3115	SPRING WASHER (@4-NO2)	125	P-1-14
18014SW-3115	SPRING WASHER (@4-NO2)	126	P-2-7
18014SW-3115	Spring Washer (@4-No2)	131	Q1-1-9
18015SW-3111	Washer (4@)	28	C-8-14
18015SW-3111	Washer (4@)	30	D-1-28
18015SW-3111	Washer (4@)	34	D-5-14
18015SW-3111	Washer (4@)	36	E-1-22
18015SW-3111	Washer (4@)	46	F-3-4
18015SW-3111	WASHER (4@)	55	H1-1-27
18015SW-3111	Washer (4@)	55	H1-1-39
18015SW-3111	Washer (4@)	57	H1-2-6
18015SW-3111	Washer (4@)	57	H1-2-12
18015SW-3111	Washer (4@)	58	H1-3-5

Part No.	Part Name	Page	Ref.No
18015SW-3111	Washer (4@)	58	H1-3-9
18015SW-3111	Washer (4@)	58	H1-3-15
18015SW-3111	Washer (4@)	59	H1-4-16
18015SW-3111	Washer (4@)	59	H1-4-29
18015SW-3111	Washer (4@)	60	H1-4-41
18015SW-3111	Washer (4@)	61	H1-5-7
18015SW-3111	Washer (4@)	65	H2-1-18
18015SW-3111	WASHER (4@)	65	H2-1-32
18015SW-3111	Washer (@4)	70	H2-4-40
18015SW-3111	Washer (@4)	70	H2-4-44
18015SW-3111	Washer (@4)	70	H2-4-61
18015SW-3111	Washer (@4)	71	H2-5-16
18015SW-3111	Washer (@4)	71	H2-5-20
18015SW-3111	Washer (4@)	71	H2-5-35
18015SW-3111	Washer (4@)	77	H3-1-41
18015SW-3111	Washer (4@)	80	H3-4-16
18015SW-3111	Washer (4@)	80	H3-4-25
18015SW-3111	Washer (4@)	81	H3-4-38
18015SW-3111	Washer (4@)	82	H3-5-6
18015SW-3111	WASHER (4@)	86	I-1-46
18015SW-3111	Washer (4@)	86	I-1-49
18015SW-3111	Washer (4@)	87	I-2-4
18015SW-3111	WASHER(4@)	100	K2-1-13
18015SW-3111	WASHER (4@)	125	P-1-15
18015SW-3111	WASHER (4@)	126	P-2-8
18015SW-3111	Washer (4@)	131	Q1-1-10
18025PM-UK01	Location Block	136	Q2-1-15
18025PM-UK01	Location Block	137	Q2-2-15
18025PM-UK01	Location Block	138	Q2-3-14
18033PR-UK01	Oil Tube Guide	26	C-6-29
18033SC-3123	Truss Screw (M5*L6)	21	C-1-6
18039SF-UK01	Felt	12	A-2-13
18047SC-7113	Hex. Socket Bolt (M5*L15)	18	B-5-9
18047SC-7113	Hex/ Socket Bolt (M5*L15)	46	F-3-20
18047SC-7113	Hex/ Socket Bolt (M5*L15)	85	I-1-12
18047SC-7113	Control Box Screw (M5xL15)	113	M-2-24
18047SC-7113	Control Box Screw	114	M-2-36
18048SW-3115	Washer(@5)	24	C-4-8
18048SW-3115	Spring Washer (5@)	25	C-5-7
18048SW-3115	SPRING WASHER (@5)	27	C-7-20
18048SW-3115	Spring Washer (5@)	32	D-3-3
18048SW-3115	Spring Washer (5@)	32	D-3-15
18048SW-3115	Spring Washer (5@)	40	E-5-3
18048SW-3115	Spring Washer (5@)	40	E-5-18
18048SW-3115	Spring Washer (@5)	46	F-3-18
18048SW-3115	Spring Washer (@5)	58	H1-3-24
18048SW-3115	Spring Washer (@5)	59	H1-4-8
18048SW-3115	Spring Washer (5@)	59	H1-4-25
18048SW-3115	Spring Washer (5@)	59	H1-4-36
18048SW-3115	Spring Washer (@5)	68	H2-3-24

R. Index

Part No.	Part Name	Page	Ref.No
18048SW-3115	Spring Washer (@5)	68	H2-3-31
18048SW-3115	Spring Washer (@5)	69	H2-4-14
18048SW-3115	Spring Washer (@5)	69	H2-4-33
18048SW-3115	Spring Washer (@5)	71	H2-5-25
18048SW-3115	Spring Washer (5@)	76	H3-1-36
18048SW-3115	Spring Washer (@5)	79	H3-3-28
18048SW-3115	Spring Washer (@5)	80	H3-4-11
18048SW-3115	Spring Washer (5@)	80	H3-4-21
18048SW-3115	Spring Washer (5@)	81	H3-4-40
18048SW-3115	Spring Washer (5@)	85	I-1-13
18048SW-3115	Spring Washer (@5)	92	J-1-5
18048SW-3115	Spring Washer (@5)	92	J-1-12
18048SW-3115	Spring Washer (@5)	94	J-2-14
18048SW-3115	Spring Washer (@5)	96	K1-1-4
18048SW-3115	Spring Washer (@5)	96	K1-1-15
18048SW-3115	Spring Washer (@5)	96	K1-1-24
18048SW-3115	Spring Washer (@5)	97	K1-2-4
18048SW-3115	Spring Washer (@5)	100	K2-1-4
18048SW-3115	Spring Washer (@5)	101	K2-2-19
18048SW-3115	Spring Washer (@5)	104	K3-1-4
18048SW-3115	Spring Washer (@5)	104	K3-1-11
18048SW-3115	Spring Washer (@5)	104	K3-1-15
18048SW-3115	Spring Washer (@5)	105	K3-2-4
18048SW-3115	Spring Washer (@5)	109	L-2-3
18048SW-3115	Spring Washer (@5)	109	L-2-7
18048SW-3115	Spring Washer (5@)	114	M-2-41
18048SW-3115	Spring Washer (@5)	117	N-1-9
18048SW-3115	Spring Washer (@5)	118	N-2-11
18048SW-3115	Spring Washer (@5)	119	N-3-12
18048SW-3115	Spring Washer (@5)	125	P-1-9
18049SW-3111	Washer (@5)	25	C-5-8
18049SW-3111	Washer (@5)	27	C-7-5
18049SW-3111	Washer (@5)	32	D-3-4
18049SW-3111	Washer (@5)	32	D-3-16
18049SW-3111	Washer (@5)	40	E-5-4
18049SW-3111	Washer (@5)	40	E-5-19
18049SW-3111	Washer (@5)	59	H1-4-26
18049SW-3111	Washer (@5)	59	H1-4-37
18049SW-3111	Washer (@5)	80	H3-4-22
18049SW-3111	Washer (@5)	81	H3-4-41
18049SW-3111	Washer (@5)	85	I-1-14
18049SW-3111	Washer (@5)	92	J-1-6
18049SW-3111	Washer (@5)	92	J-1-11
18049SW-3111	Washer (@5)	109	L-2-12
18049SW-3111	Washer (@5)	114	M-2-42
18049SW-3111	Washer (@5)	117	N-1-3
18049SW-3111	Washer (@5)	118	N-2-3
18049SW-3111	Washer (@5)	119	N-3-3
18084PR-A001	Embroidery Frame Clip L,300	136	Q2-1-17
18084PR-A001	Embroidery Frame Clip L,300	137	Q2-2-18

Part No.	Part Name	Page	Ref.No
18084PR-A001	Embroidery Frame Clip L,300	138	Q2-3-17
18085PR-A001	Embroidery Frame Clip	136	Q2-1-17
18085PR-A001	Embroidery Frame Clip	137	Q2-2-18
18085PR-A001	Embroidery Frame Clip	138	Q2-3-18
18085PR-T121	Embroidery Frame Clip L,220	136	Q2-1-17
18085PR-T121	Embroidery Frame Clip L,220	137	Q2-2-18
18085PR-T121	Embroidery Frame Clip L,220	138	Q2-3-19
18086PR-B001	Frame Clip Support	136	Q2-1-18
18086PR-B001	Frame Clip Support	137	Q2-2-19
18086PR-B001	Frame Clip Support	138	Q2-3-20
18153SC-3123	Plus Screw (M4*L10)	55	H1-1-35
18153SC-3123	Plus Screw (M4*L10)	66	H2-1-38
18153SC-3123	Plus Screw (M4*L10)	76	H3-1-30
18153SC-3123	Truss Screw (M4*L12)	122	O-1-7
18153SC-3123	Truss Screw (M4*L12)	123	O-2-2
18153SC-3123	Plus Screw (M4*L10)	136	Q2-1-16
18153SC-3123	Plus Screw (M4*L10)	137	Q2-2-16
18153SC-3123	Plus Screw (M4*L10)	138	Q2-3-15
18154SC-9134	PLUS SCREW (M3*L8)	109	L-2-8
19002SC-1330	Tapping Screw (4*L16-No1)	98	K1-3-19
19002SC-1330	Tapping Screw (4*L16-No1)	102	K2-3-20
19002SC-1330	Tapping Screw (4*L16-No1)	106	K3-3-22
20001PR-A001	Lamp Ass'Y Connector	118	N-2-13
20-002B-SW70	Connecting Pressing Plate	115	M-3-11
20-006A-SW70	LCD	115	M-3-5
20009EL-B001	LAMP (32W)	118	N-2-19
20009EL-WH09	WHEEL SENSOR BOARD (9C)	52	G-2-10
20009EL-WH12	WHEEL SENSOR BOARD (12C)	52	G-2-10
20009EL-WH15	WHEEL SENSOR BOARD (15C)	52	G-2-10
20009PR-A001	Reflecting	118	N-2-14
20014ET-A001	Lamp Socket	117	N-1-18
20014ET-A001	Lamp Socket	118	N-2-17
20014ET-A001	Lamp Socket	119	N-3-17
20014SC-9124	Hex. Socket Screw(M4*L8)	117	N-1-15
20038PR-T121	WASHER (@8)	117	N-1-10
20038PR-T121	Washer (@8)	119	N-3-13
20042SC-9134	PLUS SCREW (M4*L6)	108	L-1-22
21002SC-8119	PLUS SCREW (M3*L8)	37	E-2-7
22001AD-UK06	Tubular Frame L=3000	133	Q1-3-1
22002CW-UK01	Screw Bush "A"	132	Q1-2-2
22002CW-UK01	Screw Bush "A"	133	Q1-3-2
22002CW-UK01	Screw Bush "A"	134	Q1-4-2
22003CW-UK01	Location Block	132	Q1-2-3
22003CW-UK01	Location Block	133	Q1-3-3
22003CW-UK01	Location Block	134	Q1-4-3
22003PM-T121	Clip Bracket (L)	131	Q1-1-3
22004PM-T121	Clip Bracket (R)	131	Q1-1-5
22005PR-T121	Clip	131	Q1-1-4
22006SC-7113	Hex.Scoket Bolt (M3*L8)	23	C-3-20
22006SC-7113	HEX. SOCKET BOLT (M3*L8)	38	E-3-13

Part No.	Part Name	Page	Ref.No
22006SC-7113	Hex.Socket Bolt (M3*L8)	49	F-5-12
22006SC-7113	Hex. Socket Bolt (M3*L8)	57	H1-2-2
22006SC-7113	Hex. Socket Bolt (M3*L8)	61	H1-5-9
22006SC-7113	Hex. Socket Bolt (M3*L8)	67	H2-2-9
22006SC-7113	Hex. Socket Bolt (M3*L8)	70	H2-4-63
22006SC-7113	Hex. Socket Bolt (M3*L8)	77	H3-1-44
22006SC-7113	Hex. Socket Bolt (M3*L8)	78	H3-2-3
22006SC-7113	Hex. Socket Bolt (M3*L8)	82	H3-5-8
22006SC-7113	Hex.Socket Bolt (M3*L8)	127	P-2-22
22007BR-UK01	Bearing Pin	132	Q1-2-6
22007BR-UK01	Bearing Pin	133	Q1-3-6
22007BR-UK01	Bearing Pin	134	Q1-4-6
22009BR-UK01	Needle Bearing (Taf51010)	132	Q1-2-7
22009BR-UK01	Needle Bearing (Taf51010)	133	Q1-3-7
22009BR-UK01	Needle Bearing (Taf51010)	134	Q1-4-7
22038BM-UK01	Tubular Set	131	Q1-1-16
22038PM-UK01	Tubular (Inner) 45*44	131	Q1-1-17
22043PM-UK01	Tubular (Outer) 45*44	131	Q1-1-21
22044CW-UK01	Adjusting Bolt	131	Q1-1-22
22045CW-UK01	Adjusting Bolt Guide	131	Q1-1-23
22046CW-UK01	Adjusting Nut	131	Q1-1-24
23003SH-UK06	Low Shaft "A" @15 L=1418 (UK1206)	37	E-2-9
23004SH-UK01	Mes Driving Shaft (UK1204)	30	D-1-18
23004SH-UK02	Mes Driving Shaft @6L520 (UK1202)	30	D-1-18
23006SH-UK06	Mes Driving Shaft "A" L=1255 (UK1206)	30	D-1-18
23007SH-UK01	Color Change Shaft (12C)	45	F-2-25
23007SH-UK01	Color Change Shaft (UK1204)	46	F-3-24
23007SH-UK06	Mes Driving Shaft "B" L=1255 (UK1206)	30	D-1-22
23007SH-UK14	Color Change Shaft (15C)	45	F-2-25
23007SH-UK14	Color Change Shaft (UK1504)	46	F-3-24
23012SH-UK06	Color Change Shaft "A" (UK1206)	46	F-3-24
23012SH-UK16	Color Change Shaft "A" (UK1506)	46	F-3-24
23013SH-UK06	Color Change Shaft "B" (UK906)(UK1206)	46	F-3-28
23013SH-UK16	Color Change Shaft "B" (UK1506)	46	F-3-28
24001AD-UK06	Square Frame (A)	137	Q2-2-1
24004AD-UK06	Square Frame (B) L=3152	137	Q2-2-2
24004PR-UK01	Connecting Plate "F"	136	Q2-1-5
24004PR-UK01	Connecting Plate "F"	138	Q2-3-4
24004PR-UK02	Connecting Plate "E"	136	Q2-1-4
24004PR-UK02	Connecting Plate "E"	137	Q2-2-8
24005PR-UK06	Frame Space	137	Q2-2-6
24006AD-UK01	Front Border Frame Sash L=2143	136	Q2-1-2
24006AD-UK06	Square Frame (C) L=583	137	Q2-2-4
24007AD-UK01	Border Frame Sash L=575	136	Q2-1-3
24007AD-UK01	Border Frame Sash L=575	138	Q2-3-3
24007AD-UK06	Square Frame (D) L=583	137	Q2-2-3
24008PR-UK02	Square Frame Fixing Plate A	136	Q2-1-7
24008PR-UK02	SQUARE FRAME Fixing PLATE A	137	Q2-2-13
24008PR-UK02	Square Frame Fixing Plate A	138	Q2-3-11
24008PR-UK06	Connecting Plate (F)	137	Q2-2-5

R. Index

Part No.	Part Name	Page	Ref.No
24011PR-T121	Connecting Plate "C"	136	Q2-1-10
24011PR-T121	Connecting Plate "C"	137	Q2-2-9
24011PR-T121	Connecting Plate "C"	138	Q2-3-8
24011PR-UK02	Square Frame Fixing Plate B	136	Q2-1-8
24011PR-UK02	SQUARE FRAME Fixing PLATE B	137	Q2-2-14
24011PR-UK02	Square Frame Fixing Plate B	138	Q2-3-12
24016SF-T121	Felt	136	Q2-1-12
24016SF-T121	Felt	137	Q2-2-11
24016SF-T121	Felt	138	Q2-3-10
24026RB-UK06	Rubber Cap (L)	137	Q2-2-21
24027RB-UK06	Rubber Cap (R)	137	Q2-2-22
25009EL-UK06	Cable (25-09)	65	H2-1-19
25009EL-UK06	Cable (25-09)	76	H3-1-24
25010EL-UK06	Cable (25-10)	68	H2-3-34
25014EL-UK01	Cable (4Ht-14)	58	H1-3-32
25019EL-T121	Power Cable 2 (1Ht-19)	55	H1-1-14
25021EL-UK06	Cable (25-21)	100	K2-1-19
25022EL-UK01	To Adjusting Plate (4Ht-22)	109	L-2-17
25022EL-UK01	To Adjusting Plate (4Ht-22)	119	N-3-20
25023EL-UK06	Cable (25-23) (UK1206)	32	D-3-17
25025EL-UK01	Picker Sol. Connecting/ 4Ht-25	96	K1-1-28
25025EL-UK06	Cable (25-25) (UK1206)(UH1506C)	48	F-4-10
25026EL-UK02	Cable (25-26) 2Head (UK1202)	32	D-3-17
25027EL-UK01	Sol. Connecting Cable (4Ht-27) (UK1204)(UH1506C)	32	D-3-17
25027EL-UK06	Cable (25-27) (UK1206)	120	N-4-17
25028EL-UK06	Cable (25-28) (UK1206)	120	N-4-16
25028EL-UK06	Cable (25-28) (UH1508)	120	N-4-16
25029EL-UK01	C/C Motor Cable (2Ht-28) (UK1202)(UK1204)	48	F-4-10
25030EL-UK02	Cable (25-30) 2Head (UK1202)	120	N-4-17
25031EL-UK01	To Joint B/D Cable (4Ht-31) (UK1204)	120	N-4-17
25032EL-UK01	Start Stop Switch (4Ht-32) (UK1202)(UK1204)	120	N-4-16
25032EL-UK01	Start Stop Switch (4Ht-32) (UH1506C)	120	N-4-16
25033EL-UK06	Cable (25-33) (UK1206)(UH1506C)	46	F-3-29
25037EL-UK01	Half Turn Cable (2Ht-36) (UK1202)(UK1204)	46	F-3-29
25038EL-UK06	Cable (25-38)	55	H1-1-17
25038EL-UK06	Cable (25-38)	65	H2-1-20
25038EL-UK06	Cable (25-38)	76	H3-1-25
25039EL-UK02	Cable (25-39) 2Head (UK1202)	32	D-3-18
25039EL-UK06	Cable (25-39) (UK1206)	32	D-3-18
25041EL-UK01	X Original In (4Ht-41)	55	H1-1-15
25041EL-UK01	X Original In (4Ht-41)	65	H2-1-21
25041EL-UK01	X Original In (4Ht-41)	76	H3-1-26
25043EL-UK01	Sensor To Joint Con.(4Ht-43) (UK1204)	32	D-3-18
25045EL-UK01	Joint - Io B/D 40P	60	H1-4-42
25051EL-UK01	Emergency Switch Cable 4Ht-51 (UH1506C)	120	N-4-17
25052EL-UK01	LAST-SENSOR (BLACK) 4HT-52	55	H1-1-10
25052EL-UK01	Last-Sensor (Black) 4Ht-52	65	H2-1-13
25052EL-UK01	Last-Sensor (Black) 4Ht-52	76	H3-1-20
25053EL-UK01	LAST-SENSOR (WHITE) 4HT-53	55	H1-1-11
25053EL-UK01	Last-Sensor (White) 4Ht-53	65	H2-1-14

Part No.	Part Name	Page	Ref.No
25053EL-UK01	Last-Sensor (White) 4Ht-53	76	H3-1-21
25053EL-UK06	Cable (25-53)	118	N-2-20
25054EL-UK01	Cable (25-54)	70	H2-4-45
25054EL-UK01	Cable (25-54)	81	H3-4-42
25103ET-B001	Encoder Connector	24	C-4-12
25124EL-B001	Tension Plat Earth Cable 15C	53	G-3-10
25126EL-B001	Sensor Board To Wheel Earth	53	G-3-11
26006MC-8118	Stopper Screw (M2.6*L6)	17	B-4-11
28021SC-3123	Truss Screw (M3*L4)	89	I-4-12
32001bm-uk16	Lamp Mechanism	117	N-1-21
32001PR-UK01	Lamp Ass'Y	117	N-1-13
32003ET-T121	Wick	17	B-4-13
32003ET-T121	Wick	17	B-4-18
32020EL-UK01	Lamp	117	N-1-17
32020EL-UK01	PLUS SCREW (M3*L8)	119	N-3-19
32029PR-UK01	Reflecting Cover	119	N-3-14
32039PR-UK01	REFLECTING COVER	117	N-1-14
32047RB-T121	Oil Rubber Cap	33	D-4-22
AS-000476	TENSION UNIT PLATE Assy	51	G-1-17
AS-000483	Thread Guide (M) Set (6C)	44	F-2-3
AS-000484	Thread Guide (M) Set (9C)	44	F-2-3
AS-000485	Thread Guide (M) Set (12C)	44	F-2-3
AS-000486	Thread Guide (M) Set (15C)	44	F-2-3
AS-001328	X-Frame Assy(UH-6 Head)	77	H3-1-45
AS-001333	Spool Plate Assy	92	J-1-20
AS-001334	Angle Assy	94	J-2-16
AS-001429	Picker Base Ass'Y	89	I-4-22
AS-001504	TOP SHAFT COVER(R)SET	126	P-2-15
AS-001825	Lamp Ass'Y	119	N-3-6
AS-001838	Lamp Ass,Y "B"	118	N-2-8
AS-001965	Emergency Switch Assy	120	N-4-19
AS-001966	S/B Switch Assy	120	N-4-18
AS-002024	Needle Plate Bracket Assy	33	D-4-28
AS-002080	X-Frame Assy	56	H1-1-48
AS-002088	X-Frame Assy (6C)	66	H2-1-39
AS-002145	ARM SIDE COVER ASS'Y	17	B-4-23
AS-003951	Thread Control Device Ass'y	122	O-1-11
AS-004640	Color Change Motor Assy	47	F-3-31
AS-005278	Needle Bar Reciprocator A'ssy	17	B-4-4
AS-008638	UPPER THREAD HOLDING SET	22	C-2-1
AS-015249	Bed Assy (#1)	12	A-2-22
AS-015250	Bed Assy (#2)	12	A-2-23
AS-015267	Upper Shaft Cover (R) Ass'y	49	F-5-1
AS-015267	Upper Shaft Cover (R) Ass'y	126	P-2-17
AS-015304	Y-Driving Pulley Box Assy	74	H2-6-36
AS-015304	Y-Driving Timing Pulley Box Assy	83	H3-6-36
AS-015330	Y-Driving Pulley Box Assy	63	H1-6-36
AS-015430	Head Assy	43	F-1-31
AS-015503	Border Frame Assy	136	Q2-1-19
AS-015504	Square Frame Assy	138	Q2-3-21

Part No.	Part Name	Page	Ref.No
AS-015545	Square Frame Assy	137	Q2-2-23
AS-016060	Y-Frame Assy	60	H1-4-58
AS-016060	Y-Frame Assy	81	H3-4-55
AS-016065	Y-Frame Assy (Wide)	70	H2-4-73
AS-016066	Y-Frame Assy (Small)	72	H2-5-60
AS-016365	Table Support Angle Assy	97	K1-2-33
AS-018368	Picker Base Ass'Y (Large Hook)	89	I-4-22
BAM-PS0028	Jumping Assy	23	C-3-28
BB-000001	Bobbin (Large Hook)	89	I-4-2
BD-000044	X-Y Driver Board(220V)//BD-000146-00(110V)	111	M-1-4
BD-000311	Main Drive (ASSY)(220V)//BD-000312-00(110V)	111	M-1-2
BD-000364	IO Board	115	M-3-19
BD-000389	Back plane Board	113	M-2-7
BD-000392	UNIT Board	112	M-1-24
BD-000803	DDC Board	111	M-1-13
BD-000806	CPU Board	115	M-3-14
BD-000809	Needle Position Board	49	F-5-5
BD-000809	Needle Position Board (9 Color)	127	P-2-26
BD-000813	Needle Position Board	49	F-5-5
BD-000813	Needle Position Board (15 Color)	127	P-2-26
BD-000820	Needle Position Board	49	F-5-5
BD-000820	Needle Position Board (12 Color)	127	P-2-26
BD-000916	Inverter	115	M-3-30
BD-000821	Needle Position Board (6 Color)	127	P-2-26
BE-000023	Y-Driving Timing Belt	63	H1-6-35
BE-000023	Y-Driving Timing Belt	74	H2-6-35
BE-000023	Y-Driving Timing Belt	83	H3-6-35
BE-000319	Timing Belt (25XS5MXL1000)	36	E-1-1
BJP-PS0007	Jump Crank Roller Ass'y	23	C-3-11
BS-000096	Hook Shaft Front Bushing	12	A-2-11
BS-000105	Bearing Bushing	12	A-2-19
CA-001620	C/C Board TO N/P Board Cable	49	F-5-7
CA-001620	C/C Board TO N/P Board Cable	127	P-2-28
CA-001828	Encoder Cable (UH1204,UK1204)	40	E-5-6
CA-002977	Encoder Cable (UK1202)	40	E-5-6
CA-002978	Encoder Cable (UH1206)	40	E-5-6
CA-002979	Encoder Cable (UK1206)	40	E-5-6
CA-002980	Encoder Cable (UH1208)	40	E-5-6
CA-004803	Half turn sensor to N/P Board Cable	127	P-2-27
CA-008403	Half turn sensor to N/P Board Cable	49	F-5-6
CR-000001	HAMMER CASTER SET	11	A-1-4
CST-FD0024	Rubber for Body Leveling Plate	11	A-1-6
EA-000912	Transformer [1PHASE,2KVA]	114	M-2-44
EP-000029	SMPS	112	M-1-21
EP-000030	FAN	115	M-3-22
EP-000078	Transformer A'ssy	122	O-1-6
EP-000079	On / Off Switch	123	O-2-3
EP-000080	Push Switch (Start)	123	O-2-8
EP-000081	Push Switch (Stop)	123	O-2-9
EP-000082	Switch (Select)	123	O-2-5

R. Index

Part No.	Part Name	Page	Ref.No
EP-000083	VR	123	O-2-7
EP-000095	PCB (DW-BW01)	122	O-1-8
EP-000140	Color Change Motor	48	F-4-3
EP-000141	Upper Thread Hook Motor Unit	85	I-1-1
EP-000149	Wiper Motor Driver	112	M-1-14
EP-000548	SB DDC Radiator Sheet	115	M-3-27
GP-003757	TABLE SUPPORT END CAP	96	K1-1-20
GP-003757	TABLE SUPPORT END CAP	101	K2-2-5
GP-003757	TABLE SUPPORT END CAP	105	K3-2-20
GP-004159	Y-Driving Shaft	62	H1-6-17
GP-004159	Y-Driving Shaft	73	H2-6-26
GP-004159	Y-Driving Shaft	83	H3-6-29
GP-005021	X-Y Connecting Bracket	70	H2-4-58
GP-005104	X-FRAME SIDE COVER HOLDER (L)	55	H1-1-19
GP-005104	X-FRAME SIDE COVER HOLDER (L)	65	H2-1-24
GP-005104	X-FRAME SIDE COVER HOLDER (L)	76	H3-1-2
GP-005105	X-FRAME SIDE COVER HOLDER (R)	55	H1-1-20
GP-005105	X-FRAME SIDE COVER HOLDER (R)	65	H2-1-25
GP-005105	X-FRAME SIDE COVER HOLDER (R)	76	H3-1-3
GP-005106	X-AXIS FRAME SIDE COVER (L)	55	H1-1-24
GP-005106	X-AXIS FRAME SIDE COVER (L)	65	H2-1-29
GP-005106	X-AXIS FRAME SIDE COVER (L)	76	H3-1-7
GP-005107	X-AXIS FRAME SIDE COVER (R)	55	H1-1-25
GP-005107	X-AXIS FRAME SIDE COVER (R)	65	H2-1-30
GP-005107	X-AXIS FRAME SIDE COVER (R)	76	H3-1-8
GP-005108	X-FRAME SUPPORT BAR COVER(L)	76	H3-1-13
GP-005109	X-FRAME SUPPORT BAR COVER(R)	76	H3-1-14
GP-005120	X-LM GUIDE FRAME L2935	76	H3-1-1
GP-005121	X-FRAME SUPPORT BAR L2931	76	H3-1-12
GP-005179	THREAD BREAKAGE DETECTING WHEEL	52	G-2-5
GP-005184	SENSOR SENSING ADJUSTING RING	85	I-1-8
GP-005357	Needle Plate Bracket	33	D-4-1
GP-005358	Rotary Hook Support	89	I-4-8
GP-005359	Bed Cover	90	I-4-38
GP-005360	Hook Cover	89	I-4-5
GP-005361	Hook Cover Insert	89	I-4-4
GP-005362	Hook Cover Holder	90	I-4-29
GP-005366	Picker Bracket	90	I-4-26
GP-005368	Picker	89	I-4-23
LPC-FA0001	Picker Stopper	90	I-4-30
GP-005370	Connecting Plate	89	I-4-17
GP-005374	Y-Driving Box CoverA	62	H1-6-2
GP-005374	Y-Driving Box CoverA	73	H2-6-2
GP-005374	Y-Driving Box CoverA	83	H3-6-2
GP-005378	Idler Bush	62	H1-6-27
GP-005378	Idler Bush	73	H2-6-16
GP-005378	Idler Bush	83	H3-6-9
GP-005379	Tension Adjusting Roller	62	H1-6-26
GP-005379	Tension Adjusting Roller	73	H2-6-15
GP-005379	Tension Adjusting Roller	83	H3-6-8
GP-005380	Coupling	62	H1-6-11

Part No.	Part Name	Page	Ref.No
GP-005380	Coupling "A"	62	H1-6-19
GP-005380	Coupling	72	H2-5-52
GP-005380	Coupling	73	H2-6-12
GP-005380	Coupling	83	H3-6-17
GP-005614	BRACKER FOR X-Y CONNECTING	61	H1-5-4
GP-005614	BRACKER FOR X-Y CONNECTING	82	H3-5-3
GP-006252	Color Change Bushing	46	F-3-21
GP-006619	Rail Guide Bed Cover	90	I-4-40
GP-006638	Moving Mes Shaft	33	D-4-6
GP-006670	Bed Felt Cover A (UK1204,UH1506C)	33	D-4-27
GP-007194	Head Face Plate(L)	45	F-2-7
GP-007334	Head (15C)	42	F-1-1
GP-007356	Head (6C)	42	F-1-1
GP-007476	Noise Filter	108	L-1-21
GP-007511	Y-Driving Box	73	H2-6-1
GP-007511	Y-Driving Box	83	H3-6-1
GP-007512	Idler Shaft	62	H1-6-30
GP-007512	Idler Shaft	73	H2-6-19
GP-007512	Idler Shaft	83	H3-6-12
GP-007513	Y-Driving Box Bracket	62	H1-6-3
GP-007513	Y-Driving Box Bracket	73	H2-6-3
GP-007513	Y-Driving Box Bracket	83	H3-6-3
GP-007514	Y-Driving Box Cover B	98	K1-3-14
GP-007514	Y-Driving Box Cover B	102	K2-3-10
GP-007514	Y-Driving Box Cover B	106	K3-3-13
GP-007516	Y-Driving Shaft "B"	73	H2-6-26
GP-007516	Y-Driving Shaft "B"	83	H3-6-29
GP-008119	Fixed Table "A"	106	K3-3-5
GP-008121	Table "B"	106	K3-3-2
GP-008122	Table "C"	106	K3-3-3
GP-008125	Model Mark (C-UH1506C-45)	129	P-4-18
GP-008126	Rail Support Plate (UK1204,UH1506C)	34	D-5-3
GP-008127	Table Support Angle (B) L140	96	K1-1-17
GP-008127	Table Support Angle (B) L140	104	K3-1-26
GP-008128	Rail Guide Table Cover L352	98	K1-3-13
GP-008128	Rail Guide Table Cover L352	106	K3-3-17
GP-008129	Model Mark (C-UH1206C-45)	129	P-4-17
GP-008131	MODEL MARK (C-UK1204-45)	129	P-4-15
GP-008132	Table "B"	98	K1-3-2
GP-008149	X-FRAME (L3661)	65	H2-1-1
GP-008150	X-Frame Cover L=3639	65	H2-1-36
GP-008152	Model Mark (C-UK1206-45)	129	P-4-16
GP-008534	Stud Bolt	49	F-5-8
GP-008534	Stud Bolt	127	P-2-29
GP-008539	Needle Bar Guide Rail (6C)	45	F-2-23
GP-008797	Table Support Angle (C)L266.5	97	K1-2-29
GP-008797	Table Supporter (C)	101	K2-2-4
GP-008797	Table Support Angle (C)L197.5	104	K3-1-24
GP-008797	Table Support Angle (C)L197.5	105	K3-2-19
GP-008797	Table Support Angle (C)L266.5	97	K1-2-28
GP-008798	Table Support Guide	97	K1-2-23

Part No.	Part Name	Page	Ref.No
GP-008798	Table Support Guide	101	K2-2-26
GP-008798	Table Support Guide	104	K3-1-18
GP-008798	Table Support Guide	105	K3-2-30
GP-009003	Lamp Socket Fixed Plate	117	N-1-19
GP-009003	Lamp Socket Fixed Plate	118	N-2-18
GP-009003	LAMP Socket Fixed Plate	119	N-3-18
GP-009011	Body Side Cover	129	P-4-8
GP-009456	Arm Guard Plate(L)	22	C-2-12
GP-010074	Leveling Base	11	A-1-5
GP-010385	Needle Guide Plate(FLAT)	90	I-4-37
GP-010408	SCREW BUSH C	131	Q1-1-13
GP-010469	Tubular Frame	132	Q1-2-1
GP-010543	SMPS Fixing Stud (3-5-45)	112	M-1-25
GP-010656	Fixing Stud for SB DDC Radiator	115	M-3-28
GP-011303	Color Change Cover (UK1202)(UK1204)	48	F-4-11
GP-011445	Mes Cam Driving Box	30	D-1-1
GP-011777	Color Change Cover (UK1206)(UH1506C)	48	F-4-11
GP-011912	ARM SIDE COVER B	14	B-1-9
GP-011912	ARM SIDE COVER B	19	B-6-9
GP-011914	Take-Up Driving Lever "B"	15	B-2-2
GP-011931	Needle Bar Guide Rail (9C)	45	F-2-23
GP-011932	NEEDLE BAR DRIVING CAM	16	B-3-5
GP-011938	CAM BASE	16	B-3-1
GP-011943	ARM	14	B-1-1
GP-011943	ARM	19	B-6-1
GP-011944	Head Rail	42	F-1-4
GP-011945	Color Change Bracket "B"	45	F-2-19
GP-011945	Color Change Bracket "B"	126	P-2-1
GP-011947	Head (9C)	42	F-1-1
GP-012039	Body Front Cover (A)	128	P-3-9
GP-012048	NEEDLE BAR DRIVING SHAFT BUSH	17	B-4-14
GP-012118	SMPS Radiator Sheet	112	M-1-23
GP-012663	X-Frame Support Bar	55	H1-1-2
GP-012800	Needle Plate Guide(L)	33	D-4-4
GP-012801	Needle Plate Guide(R)	33	D-4-5
GP-012897	Motor Fixing	40	E-5-9
GP-012973	Main Motor Cover	40	E-5-20
GP-013117	Needle Bar Driving Shaft	17	B-4-17
GP-014076	X-LM GUIDE FRAME L2635	55	H1-1-1
GP-014095	Needle Bar Guide Rail (12C)	45	F-2-23
GP-014096	Head Rail (12C)	42	F-1-4
GP-014341	CPU Board Fixing Stud	115	M-3-16
GP-014343	Fixing Bracket for OP	115	M-3-39
GP-014345	Base Plate	115	M-3-2
GP-014346	Rubber For Support Base	122	O-1-18
GP-014350	LCD Cover	115	M-3-4
GP-014354	Bobbin Shaft	122	O-1-15
GP-014361	Insulation Bush (A)	115	M-3-13
GP-014361	Insulation Bush (A)	115	M-3-18
GP-014362	Insulation Bush (B) (Polyacetal)	115	M-3-20
GP-014363	Spool Support Base	122	O-1-3
GP-014365	Spool Support Base Sponge	122	O-1-4

R. Index

Part No.	Part Name	Page	Ref.No
GP-014366	Spool Post	122	O-1-2
GP-014368	Antenna Bar	123	O-2-11
GP-014369	Antenna Bar Hanger	123	O-2-10
GP-014370	Tension Control Holder	122	O-1-10
GP-014548	DDC Sticker	112	M-1-30
GP-014549	IO MC Sticker	112	M-1-29
GP-014550	SMPS Sticker	112	M-1-31
GP-014677	VR Knob	123	O-2-6
GP-014678	Fuse Holder	123	O-2-4
GP-014869	Cover	123	O-2-1
GP-014870	Base	122	O-1-1
GP-014871	Motor Bracket	122	O-1-14
GP-014937	Head (12C)	42	F-1-1
GP-014939	Cam Spacer	16	B-3-11
GP-015085	UPPER THREAD HOOK SENSOR BASE	86	I-1-37
GP-015086	MOTOR BASE	85	I-1-2
GP-015653	SMPS Radiator	112	M-1-22
GP-015654	DDC Radiator Sheet	112	M-1-16
GP-015850	Body Inside Cover (B)	108	L-1-1
GP-015851	Magnetic Switch Bracket Fixing Plate	108	L-1-9
GP-015921	Driver Radiator	111	M-1-5
GP-016007	DDC Bracket	111	M-1-11
GP-016008	IO MC Bracket	111	M-1-9
GP-016009	SMPS Bracket	112	M-1-20
GP-016011	Front Cover (L)	113	M-2-15
GP-016012	Connector PCB Cover	113	M-2-9
GP-016014	Harness Cover	113	M-2-13
GP-016015	Side Cover	113	M-2-2
GP-016016	Control Box	113	M-2-1
GP-017171	Rubber	113	M-2-23
GP-017235	SB DDC Radiator	115	M-3-26
GP-017703	DDC Radiator	111	M-1-12
GP-017710	Signal Sticker	114	M-2-32
GP-019021	Insulation Bush (A)	115	M-3-7
GP-019022	Insulation Bush (B)	115	M-3-7
GP-020670	Presser Foot Holder A'ssy	43	F-1-20
GP-021613	Needle Bar Return Spring	43	F-1-18
GP-021614	PRESSER FOOT PRESSURE SPRING	43	F-1-22
GP-024894	Hinge Block	115	M-3-42
GP_024895	Operation Box Holder Cover	115	M-3-40
GP_024895	Operation Box Holder Cover	115	M-3-41
GP-027117	PRESSER FOOT DRIVING CAM	16	B-3-10
GP-027906	Take-Up Lever Driving Cam	16	B-3-6
GP-029277	Head Oil Hose Guide	26	C-6-25
GP-029667	Encoder Fixed Bracket	113	M-2-10
GP-030369	Sponge	113	M-2-11
GP-031094	Needle Driving Shaft Connecting Rod	16	B-3-4
GP-037186	Cable Support "B"	45	F-2-20
GP-037972	PRESSER FOOT	43	F-1-19
GP-041909	CABLE COVER L=2232	117	N-1-1

Part No.	Part Name	Page	Ref.No
GP-043287	Speaker	115	M-3-23
GP-043996	Bearing Stopper Collar	62	H1-6-15
GP-044078	Beam & Body UH1506C	11	A-1-1
GP-044079	Beam Bracket Cover(L)	129	P-4-1
GP-044080	Beam Bracket Cover(R)	129	P-4-2
GP-044083	Fixed Table	106	K3-3-9
GP-044084	Fixed Table "A"	98	K1-3-4
GP-044084	Fixed Table "C"	98	K1-3-6
GP-044084	Fixed Table "C"	106	K3-3-7
GP-044085	Fixed Table "D"	98	K1-3-7
GP-044085	Fixed Table "D"	106	K3-3-8
GP-044086	Lm Guide Cover (L) L=693	98	K1-3-8
GP-044086	CAM ROLLER GUIDE COVER(L)	102	K2-3-11
GP-044086	Lm Guide Cover (L) L=693	106	K3-3-10
GP-044087	Lm Guide Cover (R) L=693	98	K1-3-9
GP-044087	CAM ROLLER GUIDE COVER(R)	102	K2-3-12
GP-044087	Lm Guide Cover (R) L=693	106	K3-3-11
GP-044133	Bed "A"	12	A-2-1
GP-044134	Bed	12	A-2-21
GP-044135	Hook Shaft Rear Bushing	12	A-2-10
GP-044170	Upper Shaft Cover(R) Bracket	49	F-5-2
GP-044170	Upper Shaft Cover(R) Bracket	126	P-2-18
GP-044171	Upper Shaft Cover(R) Bracket	49	F-5-3
GP-044171	Upper Shaft Cover(R) Bracket	126	P-2-19
GP-044297	Thread Guide Shaft (6C)	44	F-2-5
GP-044298	Thread Guide Shaft (9C)	44	F-2-5
GP-044299	Thread Guide Shaft (15C)	45	F-2-5
GP-044305	Pulley (Tubular)	38	E-3-14
GP-044306	Pulley (Tubular)	36	E-1-7
GP-044367	Y-Driving Timing Pulley	62	H1-6-13
GP-044367	Y-Driving Timing Pulley	73	H2-6-11
GP-044367	Y-Driving Timing Pulley	83	H3-6-19
GP-044502	Beam & Body (Ass'Y) (UK1204)	11	A-1-1
GP-044547	FIXED TABLE "B"	98	K1-3-5
GP-044704	Color Change Board Base	24	C-4-9
GP-044777	Needle Bar Holder	43	F-1-15
GP-044784	Needle Bar Drive Rink	17	B-4-2
GP-044787	MOTOR DRIVING CONNECT PLATE	85	I-1-20
GP-044978	Beam & Body Ass'Y (UK1206)	11	A-1-1
GP-044989	Fixed Table "A"	102	K2-3-5
GP-044990	Fixed Table "B"	102	K2-3-6
GP-044991	FIXED TABLE "C"	102	K2-3-7
GP-044992	Fixed Table "D"	102	K2-3-8
GP-044993	Fixed Table "E"	102	K2-3-9
GP-047007	Y-Driving Box	62	H1-6-1
GP-047317	Y-Bearing Bracket Cover	60	H1-4-51
GP-047317	Y-Bearing Bracket Cover	70	H2-4-54
GP-047317	Y-Bearing Bracket Cover	81	H3-4-51
GP-047345	Y-Lm Guide Support "A" (L)	69	H2-4-1
GP-047345	Y-Lm Guide Support "A" (L)	71	H2-5-1
GP-047480	Encoder Base	24	C-4-5
GP-050368	Oil Pump Set	28	C-8-1

Part No.	Part Name	Page	Ref.No
GP-051625	Transformer Box	114	M-2-43
GP-052401	Bed (Large Hook)	12	A-2-25
GP-052402	Bed "A" (Large Hook)	12	A-2-24
GP-052406	Connecting Plate (Large Hook)	89	I-4-17
GP-052407	Picker (Large Hook)	89	I-4-23
GP-052409	Picker Bracket (Large Hook)	90	I-4-26
GP-052507	Hook Cover (Large Hook)	89	I-4-5
GP-054029	Spool Post	92	J-1-10
GP-054451	Angle "A" L=2020 (UK1204)	93	J-2-3
GP-054452	Angle "B" L=2020 (UK1204)	93	J-2-4
GP-054453	Angle "C" L=2020 (UK1204)	93	J-2-5
GP-054454	Angle "D" L=2020 (UK1204)	94	J-2-6
GP-054455	Spool Plate(L=2080) (UK1204)	92	J-1-1
GP-054979	Idler	39	E-4-9
HG-000001	Hook Cover Hinge	89	I-4-6
HK-000002	Rotary Hook Set	89	I-4-1
HK-000009	Hook Set (Large Hook)	89	I-4-1
LJP-CB0001	Jump Driving Crank	23	C-3-9
LNB-KA0001	Needle Bar	42	F-1-8
LNB-CW0001	Needle Bar Reciprocator	17	B-4-5
MO-000029	Motor Ass'y	122	O-1-13
MO-000056	Jump Motor	23	C-3-1
PL-000011	TIMING PULLEY(16-S5M-32F)	60	H1-4-49
PL-000011	TIMING PULLEY(16-S5M-32F)	70	H2-4-52
PL-000011	TIMING PULLEY(16-S5M-32F)	72	H2-5-54
PL-000011	TIMING PULLEY(16-S5M-32F)	81	H3-4-49
PSC-AC0134	Screw (M3*L10)	90	I-4-41
SC-000173	Set Screw (M5*L4)	122	O-1-16
SC-000337	Hex. Bolt (M20*L70)	11	A-1-2
SC-000392	FAN Fixing Screw	115	M-3-23
SC-000406	IO MC Bracket Screw(캠타브)	111	M-1-10
SC-000406	DDC Bracket Screw(캠타브)	112	M-1-19
SC-000406	SMPS Bracket Screw(캠타브)	112	M-1-28
SC-000417	Hex. Socket Bolt (M4*L23)	42	F-1-5
SC-000417	Hex.Socket Bolt (M4)	43	F-1-30
SC-000460	Screw for Base Plate	115	M-3-9
SC-001605	Connecting Plate Stud Screw	85	I-1-25
SC-001609	Link Stud Bolt	30	D-1-15
SC-001610	Clamp Stud Bolt	30	D-1-19
SC-001612	Roller Stud Bolt	56	H1-1-41
SC-001612	Roller Stud Bolt	76	H3-1-31
SC-001625	Thread Guide (M) Screw (9/64 n=40)	44	F-2-4
SC-000629	Screw for LCD (M2xL8)	115	M-3-6
SC-001729	Stud Bolt For Driving Plate	85	I-1-16
SFAM-600-003	Direct Motor	40	E-5-1
ST-000002	Thread Guide Shaft (12C)	45	F-2-5
ST-000010	Y-Driving Shaft "A" L=1049	60	H1-4-55
ST-000010	Y-Driving Shaft "A" L=1049	62	H1-6-18
ST-000010	Y-Driving Shaft "A" L=1049	73	H2-6-29
ST-000010	Y-Driving Shaft "A" L=1049	83	H3-6-28
ST-000138	Y-Driving Shaft "B"	62	H1-6-17
SWF-00000731	Control Box Assy(110V/3.5A)	111	M-1-1
SWF-00000732	Control Box Assy(220V/3.5A)	111	M-1-1

[illegible][illegible][illegible]