

PARTS LIST

TEMX-C

MULTI HEAD

Table of Contents

● GENERAL VIEW	
● FRAMING.....	MQ-1
● TABLE.....	MQ-2
● AUTO SUB-TABLE LIFTER.....	MQ-3
● MAIN SHAFT DRIVE SYSTEM.....	MQ-4
● BED 1.....	MQ-5-1
● BED 2.....	MQ-5-2
● COLOR CHANGE SYSTEM.....	MQ-6
● ARM 1.....	MQ-7-1
● ARM 2.....	MQ-7-2
● ARM 3.....	MQ-7-3
● NEEDLE BAR CASE 1.....	MQ-8-1
● NEEDLE BAR CASE 2.....	MQ-8-2
● FRONT COVER.....	MQ-9
● UPPER THREAD HOLDER SET.....	MQ-10
● CAM DRIVE SYSTEM SET.....	MQ-11
● X-AXIS DRIVE SYSTEM 1.....	MQ-12-1
● X-AXIS DRIVE SYSTEM 2.....	MQ-12-2
● Y-AXIS DRIVE SYSTEM 1.....	MQ-13-1
● Y-AXIS DRIVE SYSTEM 2.....	MQ-13-2
● ROTARY-TYPE TENSION BASE.....	MQ-14
● THREAD STAND A.....	MQ-15a
● THREAD STAND B (FOR 15-NEEDLE M/C).....	MQ-15b
● BASE SASH.....	MQ-16
● BORDER FRAME.....	MQ-17
● ELECTRICAL PARTS.....	MQ-18
● OPERATION PANEL.....	MQ-19
● MAIN SHAFT MOTOR.....	MQ-20


Part Nos. of screws, nuts, washers etc. are listed at the end of volume.


*Regarding the part number that contains description of @, the part differs depending on model, spec. etc.

*When you place an order of such a part, please also inform us of your model, embroidery space and manufacturing number of the machine.

Ex.	TEMX-C912	(360X360)S	No.01234
	[Model]	[Emb. Space]	[Mfg. No.]

GENERAL VIEW

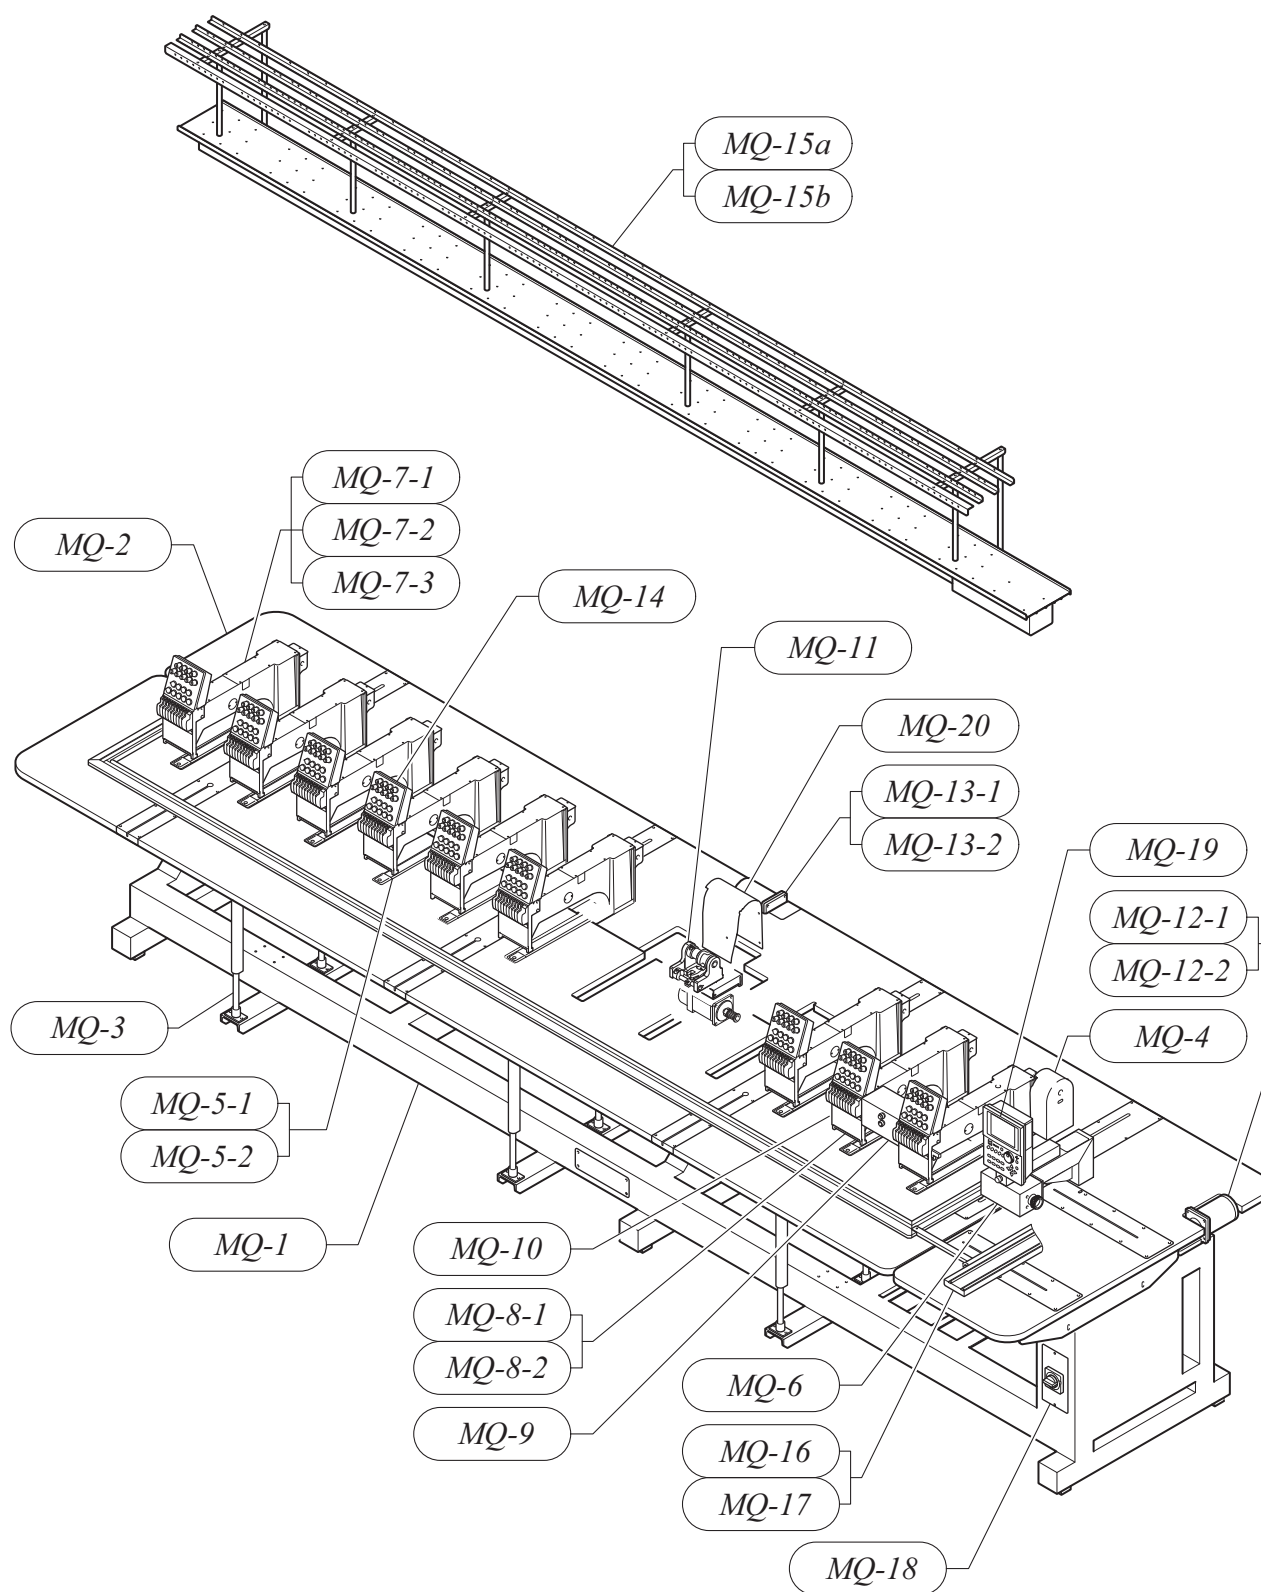

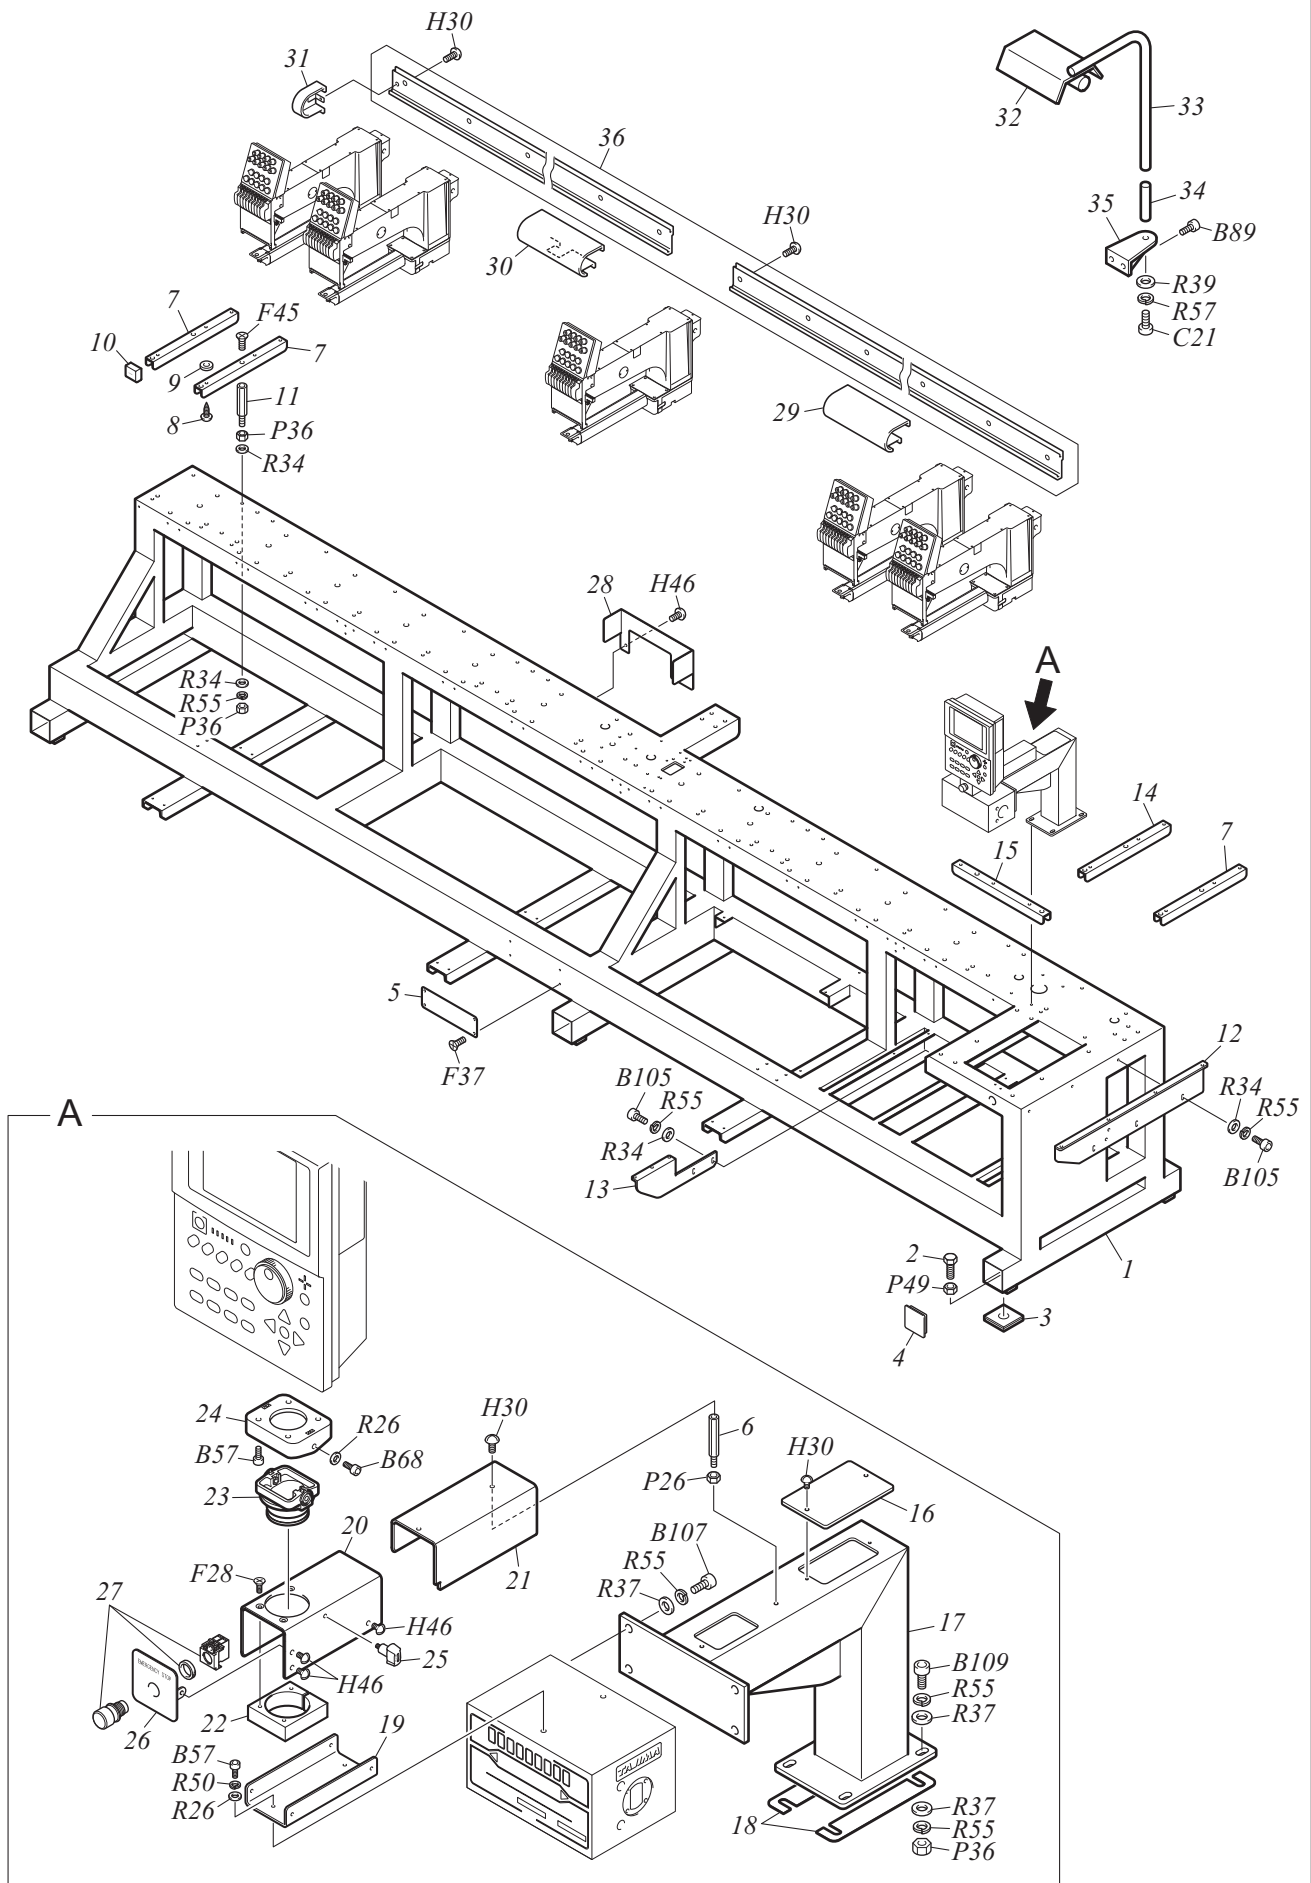


FRAMING

MQ-1

No.	Description	Part.No.	Remark
1	STAND	NS6@39@@0010	For 360P
1	STAND	NS6@50@@0000	For 500P
2	LEVELING BOLT :M20*60	030530020000	
3	VIBRATION-PREVENTIVE BASE[S]	030520120S00	
4	COVER :STAND BASE	030410070000	
5	TAJIMA BRAND NAME PLATE	030710060010	
6	STUD :NO.1 :M5-63	505105390000	
7	TABLE SUPPORT :NO.12	151220200000	
8	TRUSS HEAD TAPPING SCREW :5P*25	S530052501SD	
9	COLLAR :STAND SUPPORT	15215005@000	
10	CAP :TABLE SUPPORT	150130010000	
11	STUD :NO.1 :M10-50	505110010010	
12	TABLE SUPPORT :NO.12	151220240000	
13	TABLE SUPPORT :NO.12	151220230000	
14	TABLE SUPPORT :NO.12	151220220000	
15	TABLE SUPPORT :NO.12	15122021@000	For 360P
15	TABLE SUPPORT :NO.12 :EX555	15122025@000	For 500P
16	COVER :STAND	070230320000	
17	STAND :CHANGE BOX :A	07033002A000	For 9/12-Needle M/C
17	STAND :CHANGE BOX :B	07033002B000	For 15-Needle
18	SPACER :NO.4 :T0.5	510400030000	
18	SPACER :NO.4 :T1	510400031000	
18	SPACER :NO.4 :T2	510400032000	
19	BASE :CONTROLLER	030220890000	
20	BRACKET :CONTROLLER	030220900000	
21	COVER :WIRING	030150270000	
22	CLAMP :CONTROLLER HOLDER[S]	030220870S00	
23	HOLDER :CONTROLLER	030220580000	
24	BASE :CONTROLLER	030220590000	
25	KNOBBED SCREW :NO.2 :M5*9[S]	511F05080S10	
26	BASE :EMERGENCY STOP SWITCH[S]	030230170S10	
27	SWITCH :EMERGENCY STOP[A]	0J0603900A00	
28	STAND REAR SECTION COVER	0E0220080000	
29	SHAFT COVER :A	03047001@000	
30	SHAFT COVER :C	03047002@000	
31	SHAFT COVER :SIDE COVER	030470030030	
32	FLUORESCENT LAMP[A]	0J070050@A00	For 100V
32	FLUORESCENT LAMP[A]	0J071440@A00	For 220V
33	PIPE :FLUORESCENT LAMP	0J170070@000	For 100V
33	PIPE :FLUORESCENT LAMP	0J170080@000	For 220V
34	STAY :FLUORESCENT LAMP	030120020000	
35	BRACKET :FLUORESCENT LAMP STAY	030120050010	
36	COVER BASE :TEMX-C :0012/360S	030480010000	12H360P
36	COVER BASE :TEMX-C :0015/360S	030480020000	15H360P
36	COVER BASE :TEMX-C :0018/360S	030480030000	18H360P
36	COVER BASE :TEMX-C :0012/500S	030480040000	12H500P
37			
38			
39			
40			

Note: As for parts with mark @, please follow our instructions on Table of Contents in your parts order.

(LX05)

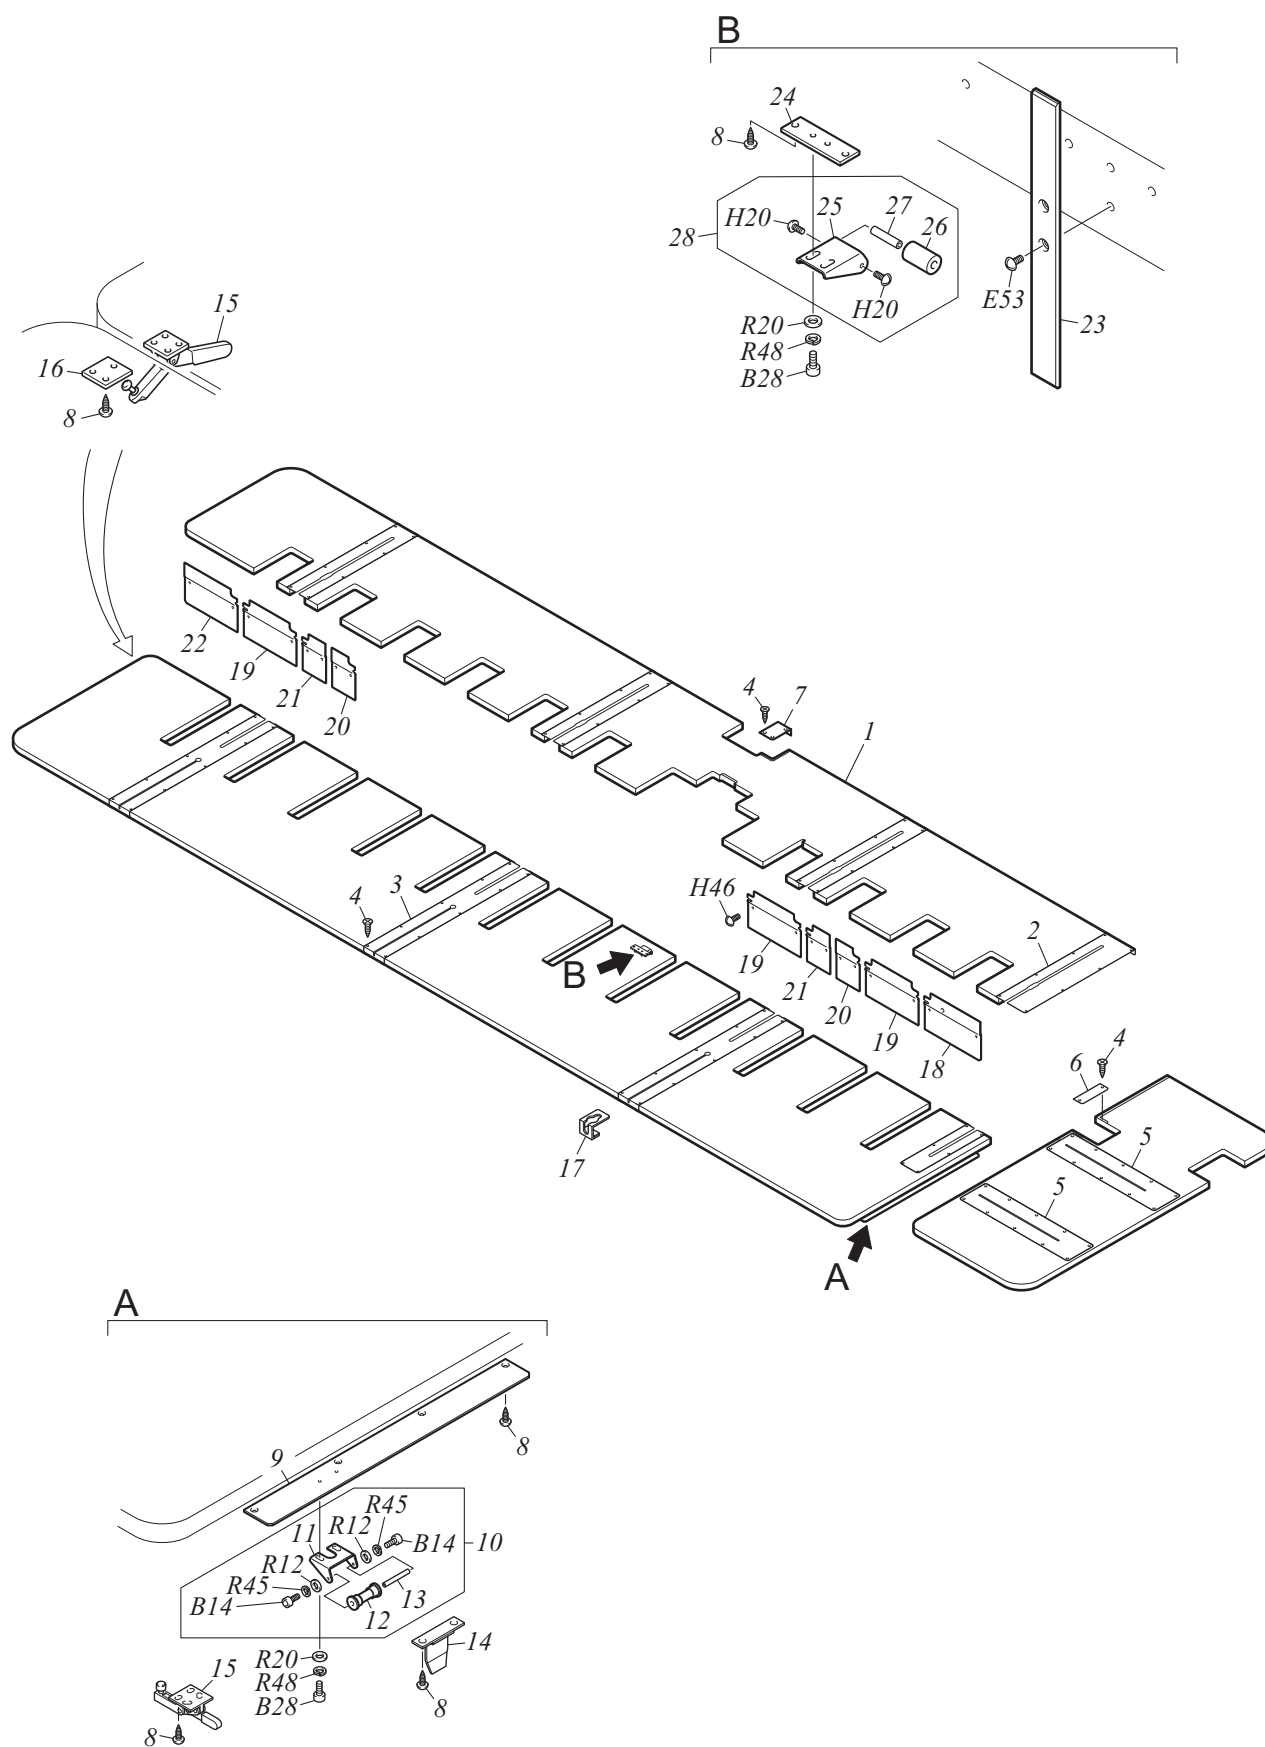


TABLE

MQ-2

No.	Description	Part.No.	Remark
1	TABLE	2S6@39010000	For 360P
1	TABLE	2S6@50010000	For 500P
2	TABLE COVER :NO.15 :A	131510030000	
3	TABLE COVER :NO.15 :B	131510040000	
4	COUNTERSUNK TAPPING SCREW :3P*12	S550031201MZ	
4	COUNTERSUNK TAPPING SCREW :3P*16	S550031601MZ	
5	TABALE COVER NO.1 :X405-580	13010032@000	
6	TABLE COVER :C	134290130000	
7	COVER :N-COUPLING	134250010000	
8	TRUSS HEAD TAPPING SCREW :4P*20	S530042001SD	
9	TABLE ALIGNING PLATE	030390080000	
10	HOLDER :ROLLER[A]	0F3290010A20	
11	HOLDER :ROLLER	0F3290010020	
12	ROLLER :6MM DIA.	515215010010	
13	STRAIGHT PIN :NO.1 :6MM DIA.	503101010000	
14	GUIDE ANGLE :UP/DOWN TABLE	030390250000	
15	TOGGLE CLAMP :GY1001	615500030001	
16	TABLE ALIGNING PLATE :L50	030390291000	
17	BEARING STOPPER	0G2210040000	
18	STAND FRONT FACE COVER :A :360P	180310010050	
18	STAND FRONT FACE COVER :A :500P	180310011050	
19	STAND FRONT FACE COVER :B :360P	180320010030	
19	STAND FRONT FACE COVER :B :500P	180320011030	
20	STAND FRONT FACE COVER :C :360P	180320020020	
21	STAND FRONT FACE COVER :D :360P	180320030030	
22	STAND FRONT FACE COVER :E :360P	180330010020	
22	STAND FRONT FACE COVER :E :500P	180330011020	
23	GUIDE PLATE :UP/DOWN TABLE	030390100010	
24	BASE :ROLLER HOLDER	030390280000	
25	HOLDER :ROLLER	0F3290180020	
26	ROLLER :6*15*25	515106010000	
27	STRAIGHT PIN :NO.1 :6MM DIA.	503101310010	
28	HOLDER :ROLLER[S]	0F3290180S20	
29			
30			
31			
32			
33			
34			
35			
36			
37			
38			
39			
40			
41			
42			
43			
44			
45			

Note: As for parts with mark @, please follow our instructions on Table of Contents in your parts order.


(LX05)

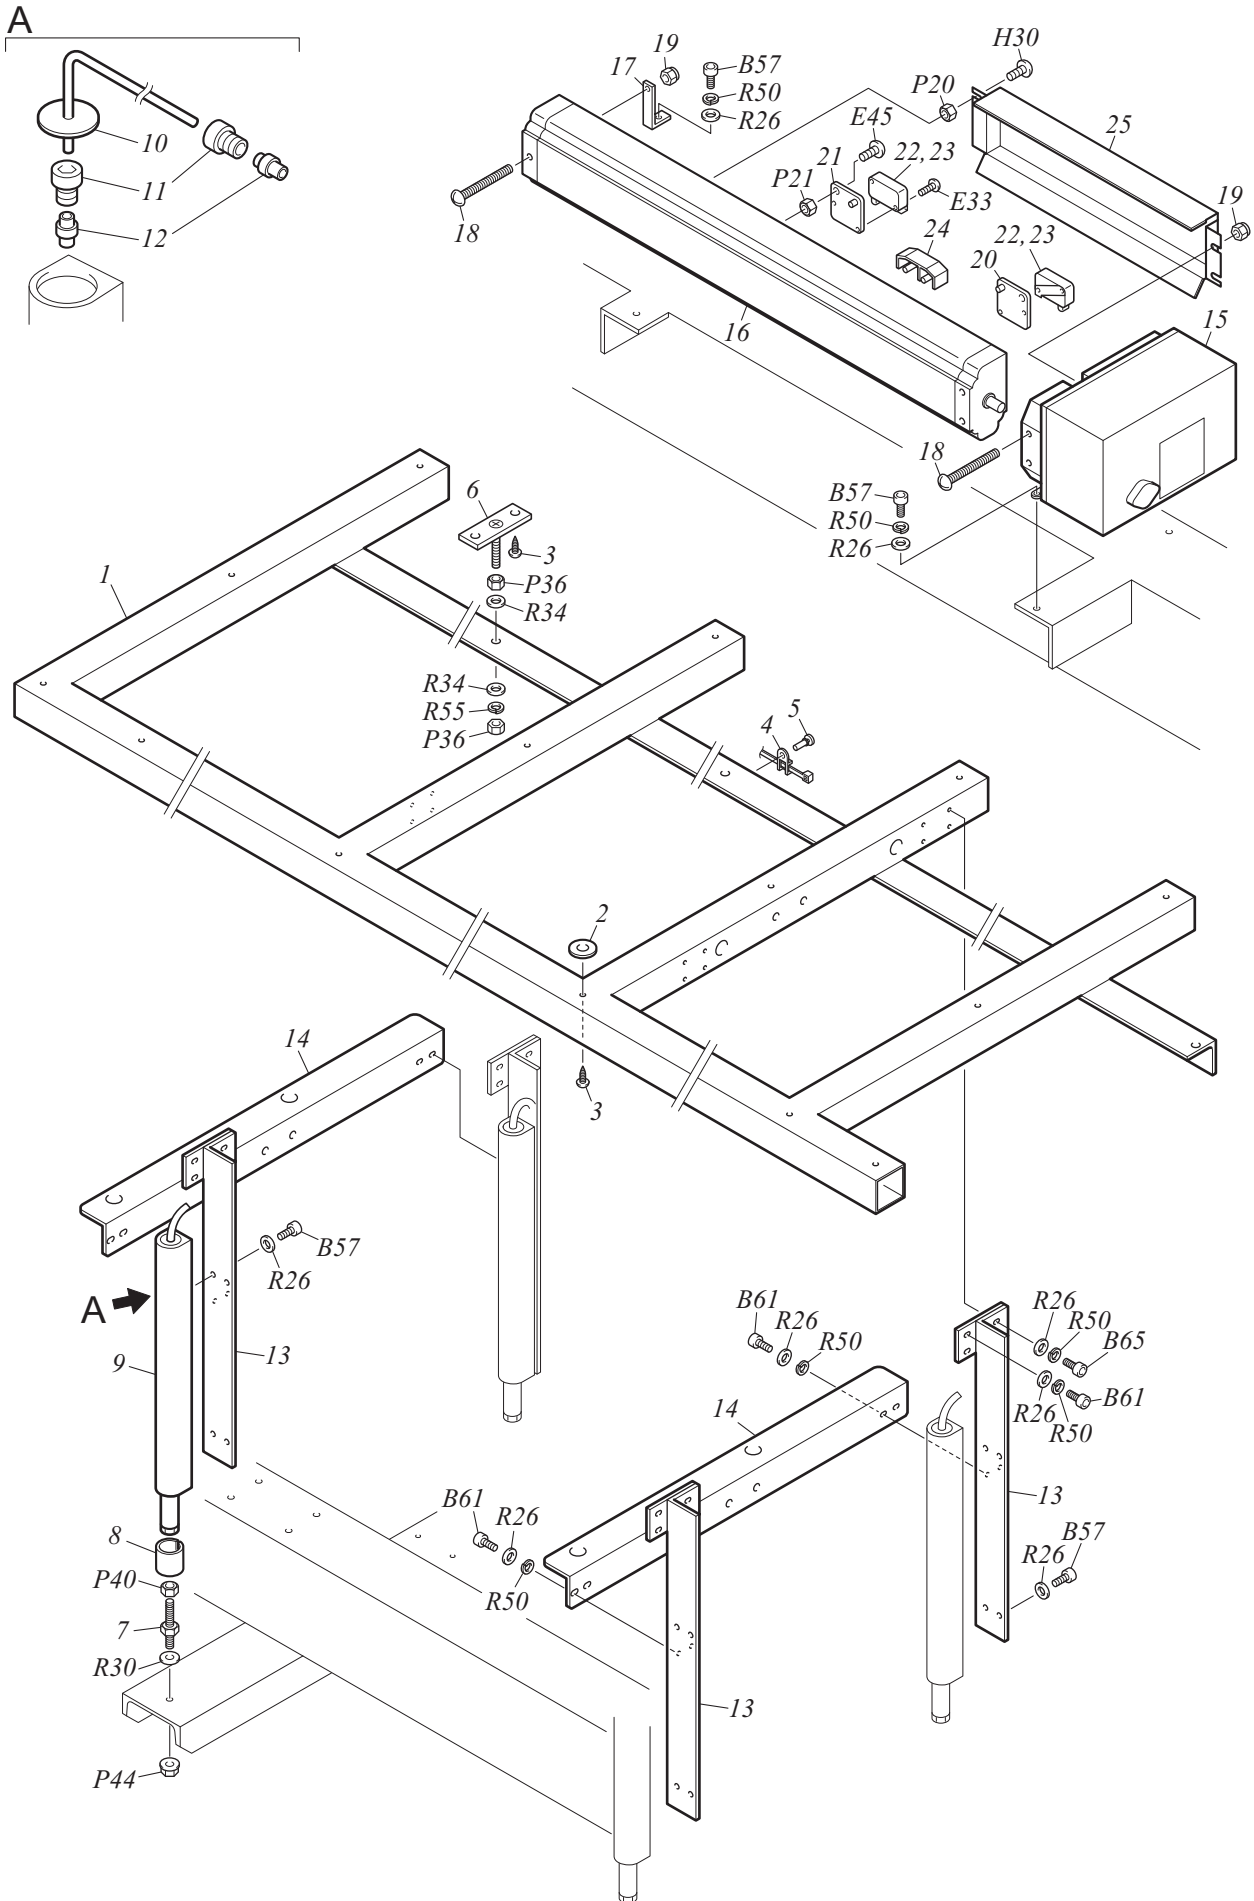

AUTO SUB-TABLE LIFTER

MQ-3


No.	Description	Part.No.	Remark
1	BASE :TABLE :0012/360S	1A1C39020000	12H360P
1	BASE :TABLE :0015/360S	1A1E39020000	15H360P
1	BASE :TABLE :0018/360S	1A1G39020000	18H360P
1	BASE :TABLE :0012/500S	1A1C50010000	12H500P
2	COLLAR :STAND SUPPORT	152150050000	
3	TRUSS HEAD TAPPING SCREW :5P*25	S530052501SD	
4	TIE-ANCHOR	644100020000	
5	PUSH RIVET	644500770000	
6	BRACKET :TABLE[A]	505108120A00	
7	STUD :NO.3 :M10-8	505310030000	
8	URETHANE COLLAR :19MM DIA.	030310020000	
9	CYLINDER :ELECTRIC MOTOR-DRIVEN TYPE-6PCS.	678100060000	
10	HD-PIPE :6PCS.	678100070000	
11	CONNECTING SCREW	678900010000	
12	CLAMPING RING	678900020000	
13	BRACKET :CYLINDER	030330090000	
14	JOINT :CYLINDER	030390270000	
15	MOTOR UNIT[A]	0J6500100A00	
16	PUMP :ELECTRIC-POWERED-6-PCS.	678200030000	
17	BRACKET :PUMP	030330100000	
18	ROUND FILLISTER HEAD SCREW :M5*59	511205010000	
19	NYLON NUT	S222050001SD	
20	BASE :MICRO SWITCH :DOWN[S]	030320010S00	
21	BASE :MICRO SWITCH :UP[S]	030320011S00	
22	SWITCH :FRAME DETECTION	642300040000	
23	ACTUATOR	644500390000	
24	SENSOR BLOCK :NO.1	030320030000	
25	PUMP COVER[S]	030320040S00	
26			
27			
28			
29			
30			
31			
32			
33			
34			
35			
36			
37			
38			
39			
40			
41			
42			
43			
44			
45			
46			
47			

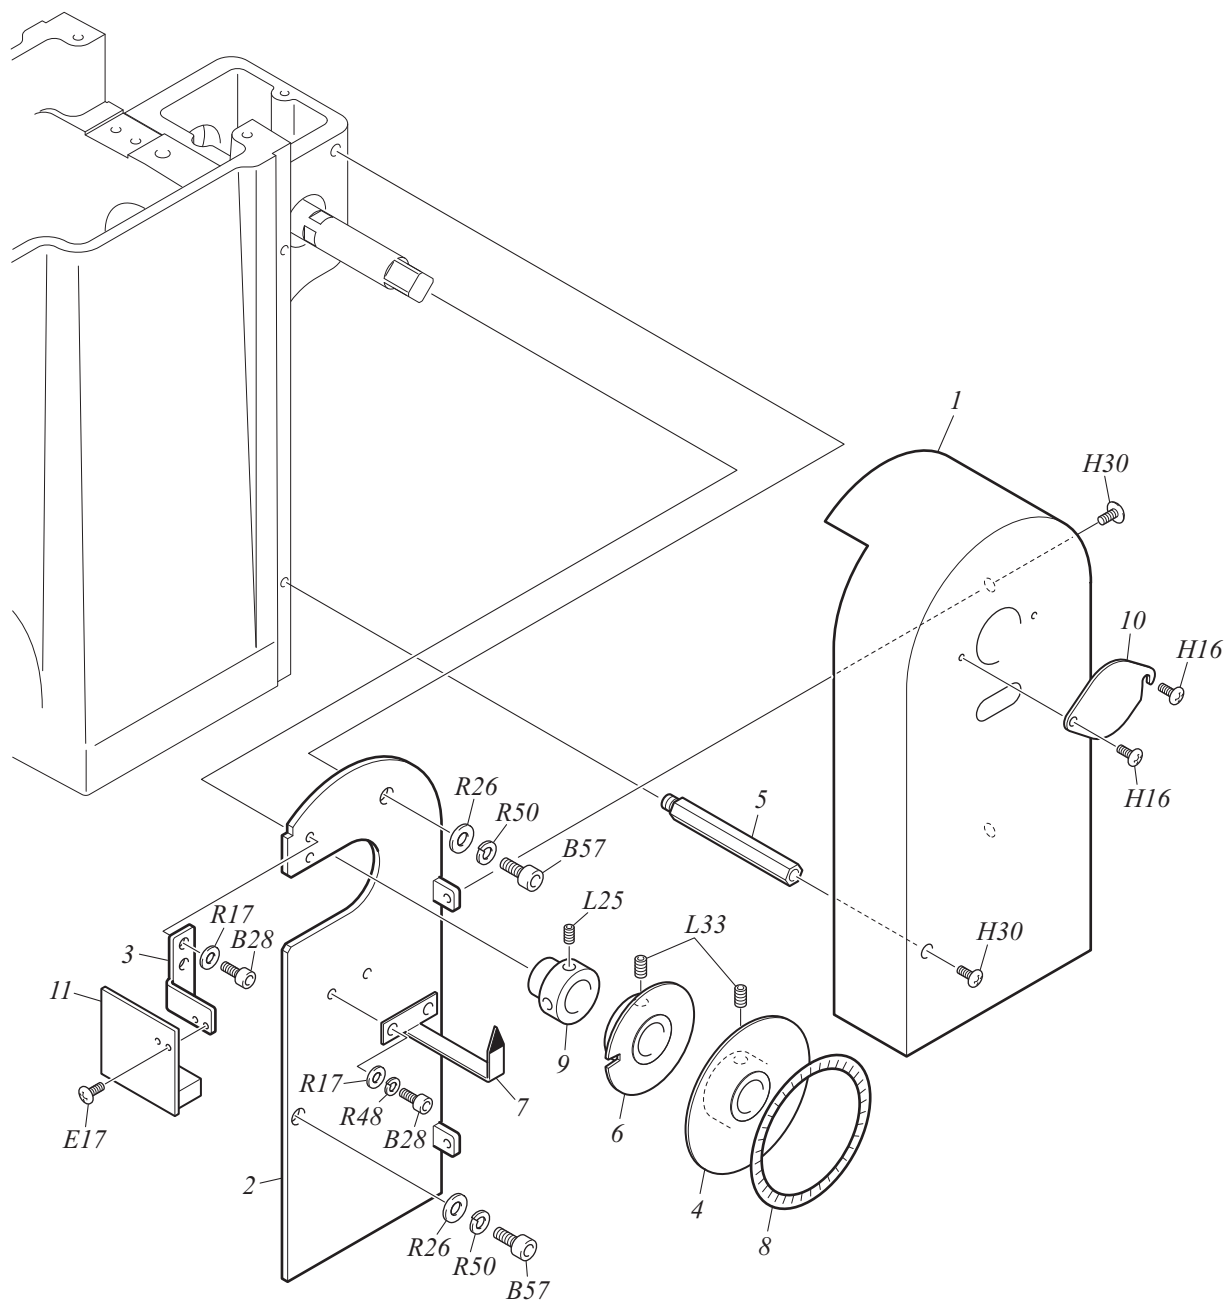

MAIN SHAFT DRIVE SYSTEM

MQ-4

No.	Description	Part.No.	Remark
1	COVER :ANGLE INDICATOR :A	040430030000	
2	COVER :ANGLE INDICATOR :B	040430040000	
3	BRACKET :SENSOR	040360110000	
4	PLATE :ANGLE INDICATOR[S]	040420290S00	
5	STUD :NO.1 :M4-43	505104190000	
6	ROTATING DETECTING PLATE[S]	040360090S10	
7	POINTER	040410060000	
8	ANGLE INDICATOR	040420230010	
9	BEARING COLLAR :15MM DIA.	502715080000	
10	LID :HANDLE	040120551030	
11	CARD :PHOTO-INTERRUPTER	0J4201600020	
12			
13			
14			
15			
16			
17			
18			
19			
20			
21			
22			
23			
24			
25			
26			
27			
28			
29			
30			
31			
32			
33			
34			
35			
36			
37			
38			
39			
40			
41			
42			
43			
44			
45			
46			
47			
48			
49			
50			

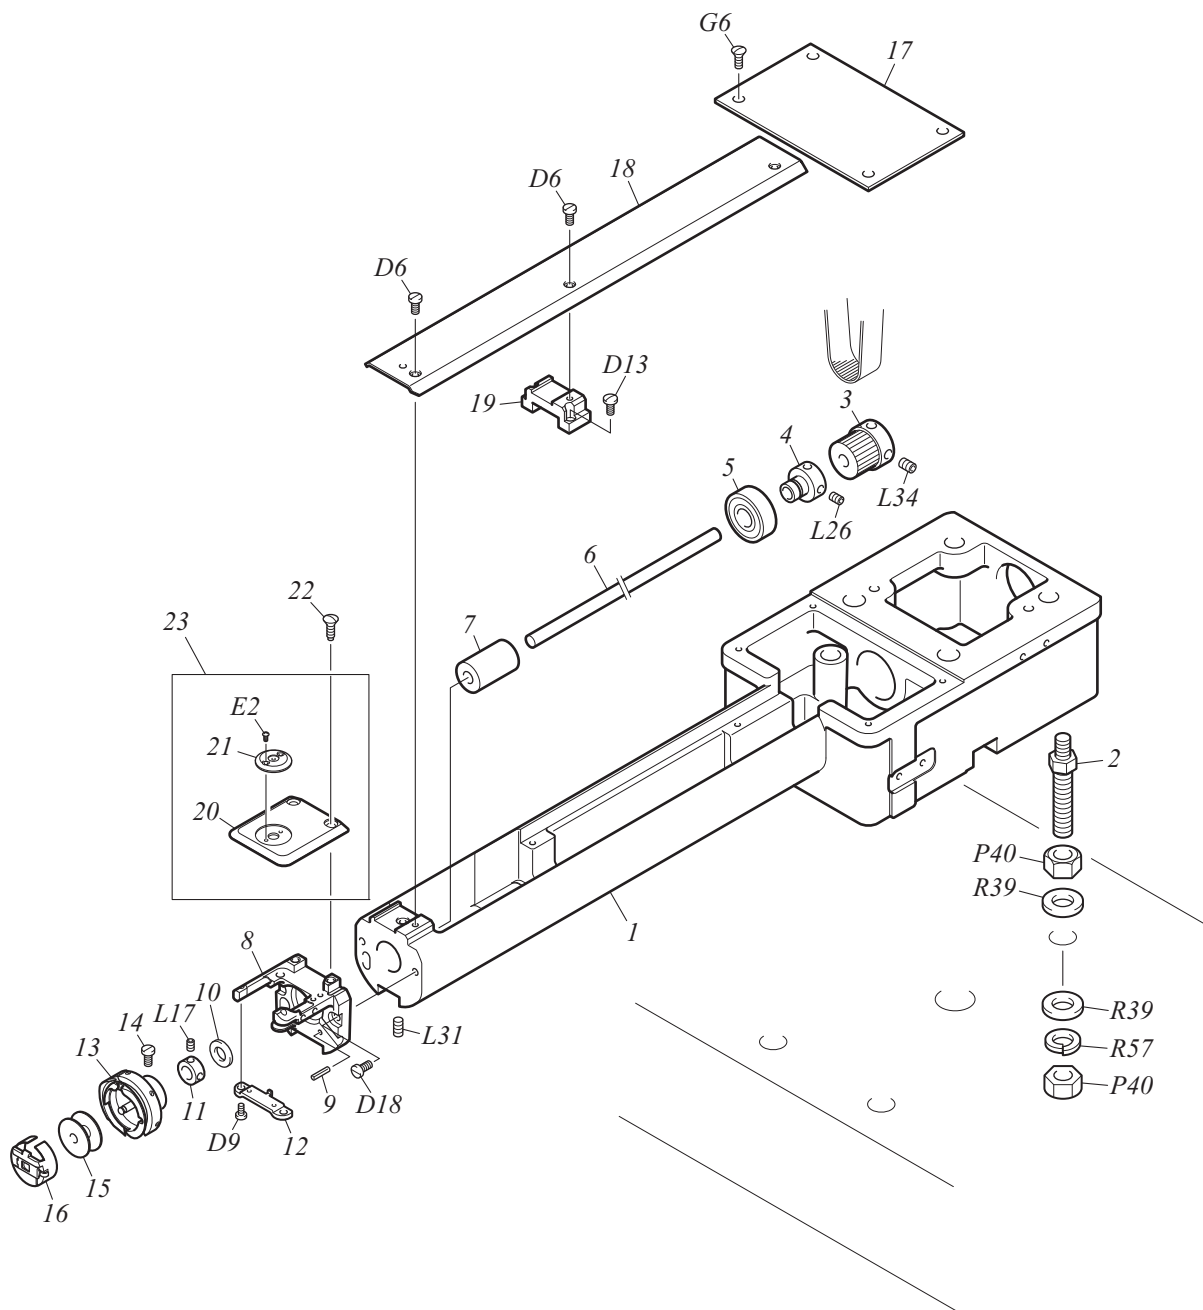

BED 1

MQ-5-1

No.	Description	Part.No.	Remark
1	CYLINDER BED	050130030000	
2	ROTARY HOOK BASE STUD	050330330000	
3	TIMING PULLEY :W15-16[S]	501430120S10	
4	BEARING COLLAR :7.94MM DIA.	502701010010	
5	BEARING :6201ZZ	630200140000	
6	SHAFT :ROTARY HOOK :7.94MM DIA.	050330360000	
7	OIL-BUSHING :NO.1 :7.94MM DIA.	509179020000	
8	NEEDLE PLATE BRACKET	050330460000	
9	SPRING PIN :3*12	611400080000	
10	PLAIN WASHER :7.94*19*T0.8	519108030000	
11	STOPPER COLLAR :7.94MM DIA.	502107010020	
12	ROTARY HOOK SUPPORT	050330270010	
13	ROTARY HOOK :REGULAR ROTARY HOOK HSL-ATR (MTQETA)	050210140010	
14	ROTARY HOOK SET SCREW	050290010000	
15	BOBBIN :REGULAR ROTARY HOOK	050260010020	
16	BOBBIN CASE :REGULAR ROTARY HOOK :STANDARD	050240150000	
17	COVER :CYLINDER BED :REAR	050330320020	
18	COVER :CYLINDER BED :FRONT	050330470010	
19	BRACKET :HEAD COVER	050330280020	
20	NEEDLE PLATE :COMMON USE	050340150010	
21	BOSS :COMMON USE NEEDLE PLATE :2.0-3.0MM DIA.	05034016@020	
22	ROUND COUNTERSUNK HEAD SCREW :11/64*8.4B	511554010000	
23	NEEDLE PLATE :CAP/NORMAL/TUBULAR[A]	05034015@A20	
24			
25			
26			
27			
28			
29			
30			
31			
32			
33			
34			
35			
36			
37			
38			
39			
40			
41			
42			
43			
44			
45			
46			
47			
48			
49			
50			




BED 2

MQ-5-2

No.	Description	Part.No.	Remark
1	SPACER :NO.2 :T3.2	510200490000	
2	HOLDER :ATH ROD	050320060000	
3	BRACKET :PROXIMITY SWITCH	050320070000	
4	CARD :MAGNETIC SENSOR A	0J4200800010	
5	MAGNET BLOCK[S]	050320380S10	
6	ATH ROD :6MM DIA.	QS6@050@0000	
7	SCREW JOINT :M6	504506010010	
8	STEPPED SCREW :NO.1 :M4*6.7	512104100040	
9	CONNECTING PLATE :MOVABLE KNIFE LEVER	050320690000	
10	CLAMP :ATH ROD	050320390010	
11	LEVER :KNIFE CONNECTING PLATE SHAFT	050320270010	
12	OIL-BUSHING :NO.1 :F81212162	638100370000	
13	LEVER SHAFT :KNIFE CONNECTING PLATE[S]	050320850S20	
14	CONNECTING PLATE :KNIFE	050320400000	
15	LEVER SHAFT :KNIFE[S]	050320040S20	
16	THREAD SEPARATING PLATE :DIRECT MOVEMENT 2-BLADE TYPE	050320930000	
17	MOVABLE KNIFE :DIRECT MOVEMENT 2-BLADE TYPE	050320920000	
18	FIXED KNIFE :DIRECT MOVEMENT 2-BLADE TYPE	050320940000	
19	UNDER THREAD PRESSER	050320740000	
20	SOLENOID :OPEN FRAME	640600020021	
21	BRACKET :PICKER SOLENOID	050320540000	
22	COVER :PICKER SOLENOID	050320360010	
23	COMPRESSION SPRING :0.6MM DIA.	507606020010	
24	O-RING :6.8MM DIA.	050320510000	
25	CONNECTING PLATE :PICKER	050320570010	
26	STEPPED SCREW :NO.1 :M2.5*6	512130010000	
27	SHAFT :PICKER	050320750040	
28	E-RING :2MM DIA.	611100050000	
29	PICKER	050320760010	
30	HOLDER :PICKER SHAFT	050320840000	
31	FLAT FILLISTER HEAD SCREW :M6*10	511106010010	
32	STOPPER :PICKER	050320700000	
33	COVER :NEEDLE PLATE BRACKET	050330510010	
34	ROTARY HOOK COVER	050330500010	
35	PLATE SPRING :ROTARY HOOK COVER :T0.2	507802050000	
36	E-RING :4MM DIA.	611100070000	
37			
38			
39			
40			
41			
42			
43			
44			
45			
46			
47			
48			
49			
50			

Note: As for parts with mark @, please follow our instructions on Table of Contents in your parts order.

(LX05)

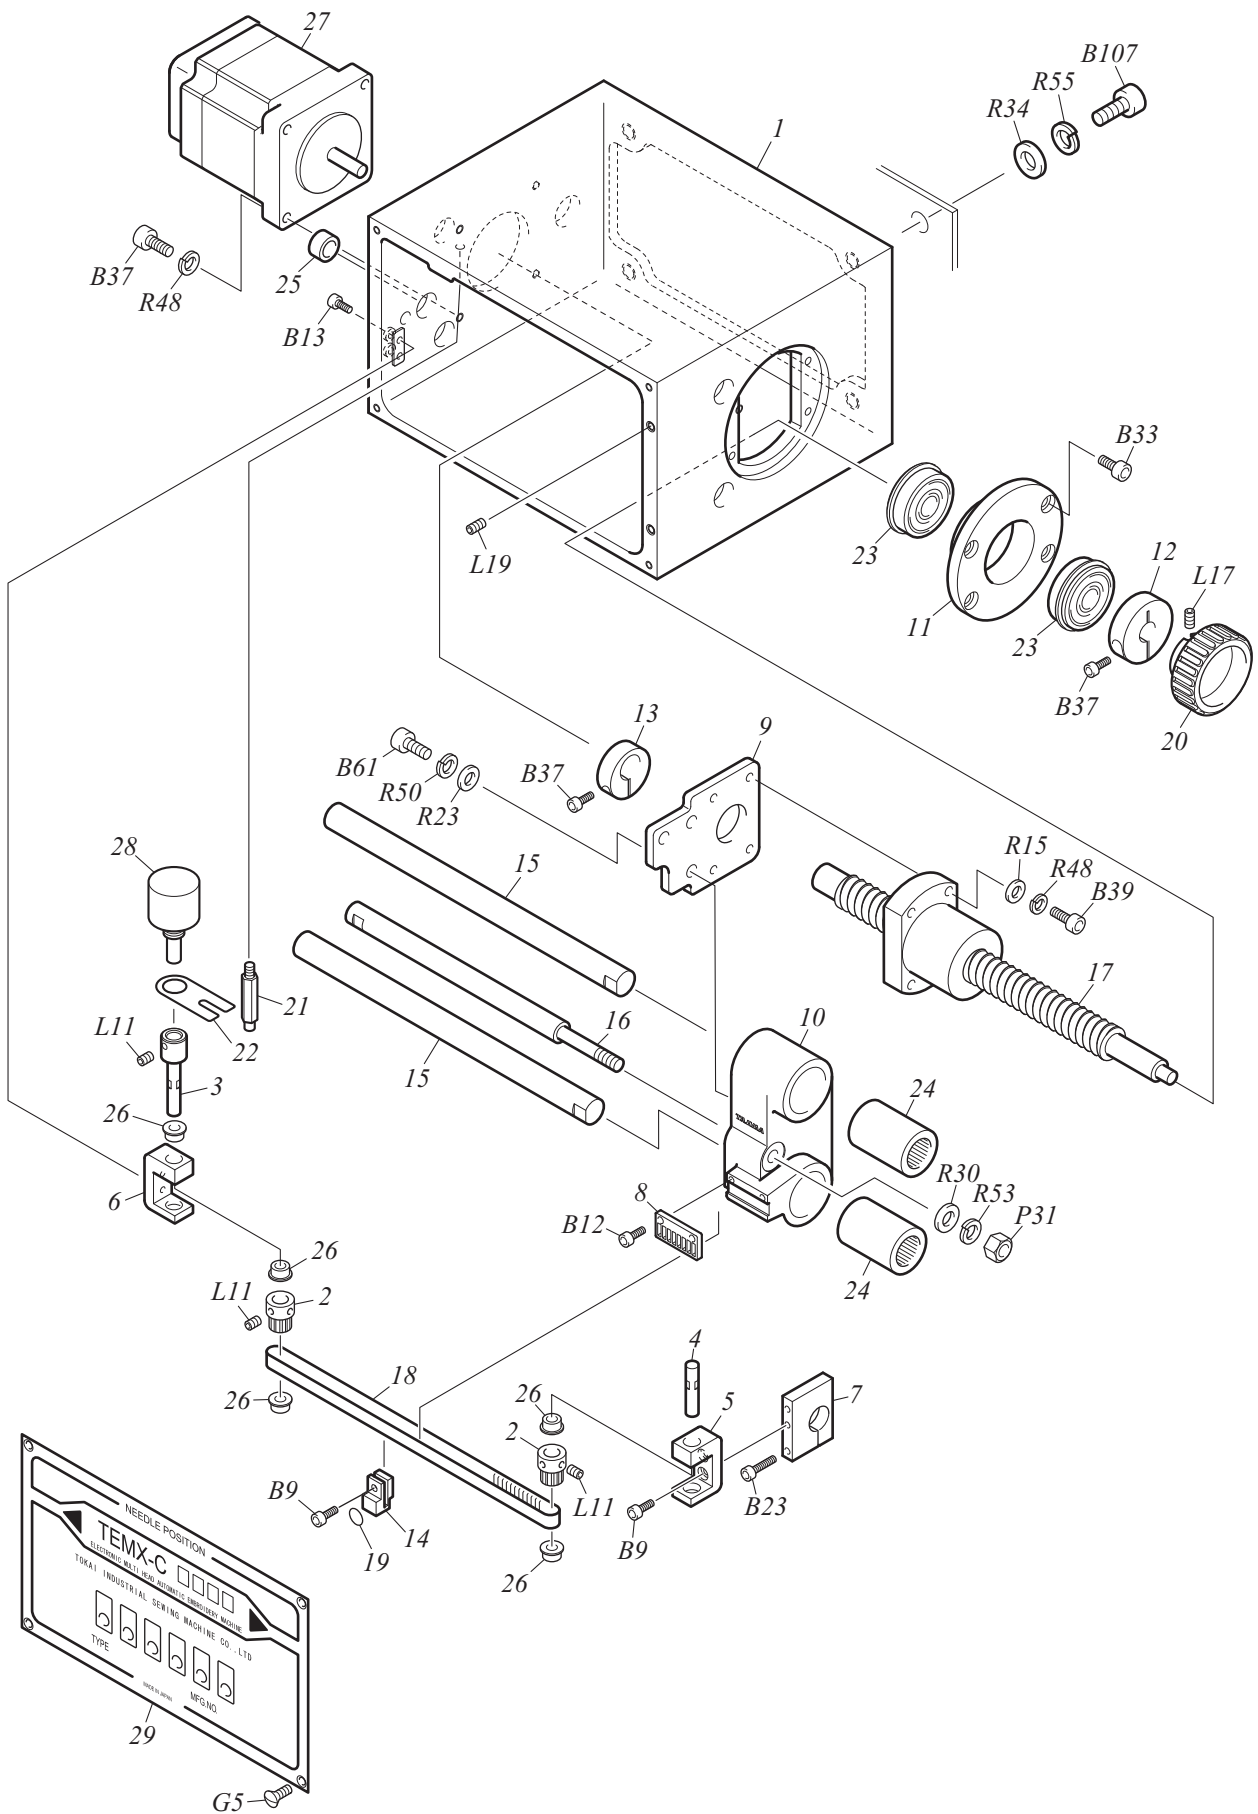


COLOR CHANGE SYSTEM

MQ-6

No.	Description	Part.No.	Remark
1	CHANGE BOX :50ST :09-12-NEEDLE	070310032000	
1	CHANGE BOX :50ST :15-NEEDLE	070310052000	
2	TIMING PULLEY :W6-10	501221010000	
3	STEPPED PIN :NO.2	503202050010	
4	STRAIGHT PIN :NO.2	503102190010	
5	BEARING CASE :TIMING PULLEY :A	070320010010	
6	BEARING CASE :TIMING PULLEY :B	070320020010	
7	BRACKET :PULLEY SHAFT HOLDER	070320160000	
8	BELT CATCHER :S3M	070320050000	
9	BASE :BALL SCREW	070320140000	
10	DRIVE BLOCK :CHANGE ROD	070320130000	
11	BEARING CASE :BALL SCREW	070320080000	
12	TIGHTENING COLLAR :10MM DIA.	502210040000	
13	TIGHTENING COLLAR :12MM DIA.	502212020000	
14	BASE :NEEDLE POSITION INDICATOR	070320150000	
15	GUIDE SHAFT	07032010@000	
16	BASE ROD :CHANGE	07032017@000	
17	BALL SCREW :CHANGE	07032012@000	
18	TIMING BELT :MA3 :W6-162E/LY	621A00020000	
18	TIMING BELT :MA3 :W6-192E/LY	621A00030000	For 15-Needle
19	LABEL :NEEDLE POSITION INDICATION :10MM DIA.	690300010000	
20	KNOB :C	08052001C010	
21	STUD :NO.4 :M4-23	505404010020	
22	BRACKET :POTENTIOMETER	0C0420020010	
23	BEARING :6200ZZNR	630300050000	
24	SLIDE BEARING :E-12	662100050000	
25	OIL-BUSHING :NO.1 :MB1010DU	638100200000	
26	DDU01 BUSHING WITH BRIM :NO.2 :DUF0504-10	638100420000	
27	PULSE MOTOR :56MM SQUARE :WITH SENSOR[A]	0J6108300A10	
28	POTENTIOMETER	640900010001	
29	MAIN NAME PLATE :TEMX-C	14S5@001@000	
30			
31			
32			
33			
34			
35			
36			
37			
38			
39			
40			
41			
42			
43			
44			
45			
46			
47			
48			

Note: As for parts with mark @, please follow our instructions on Table of Contents in your parts order.

(LX05)

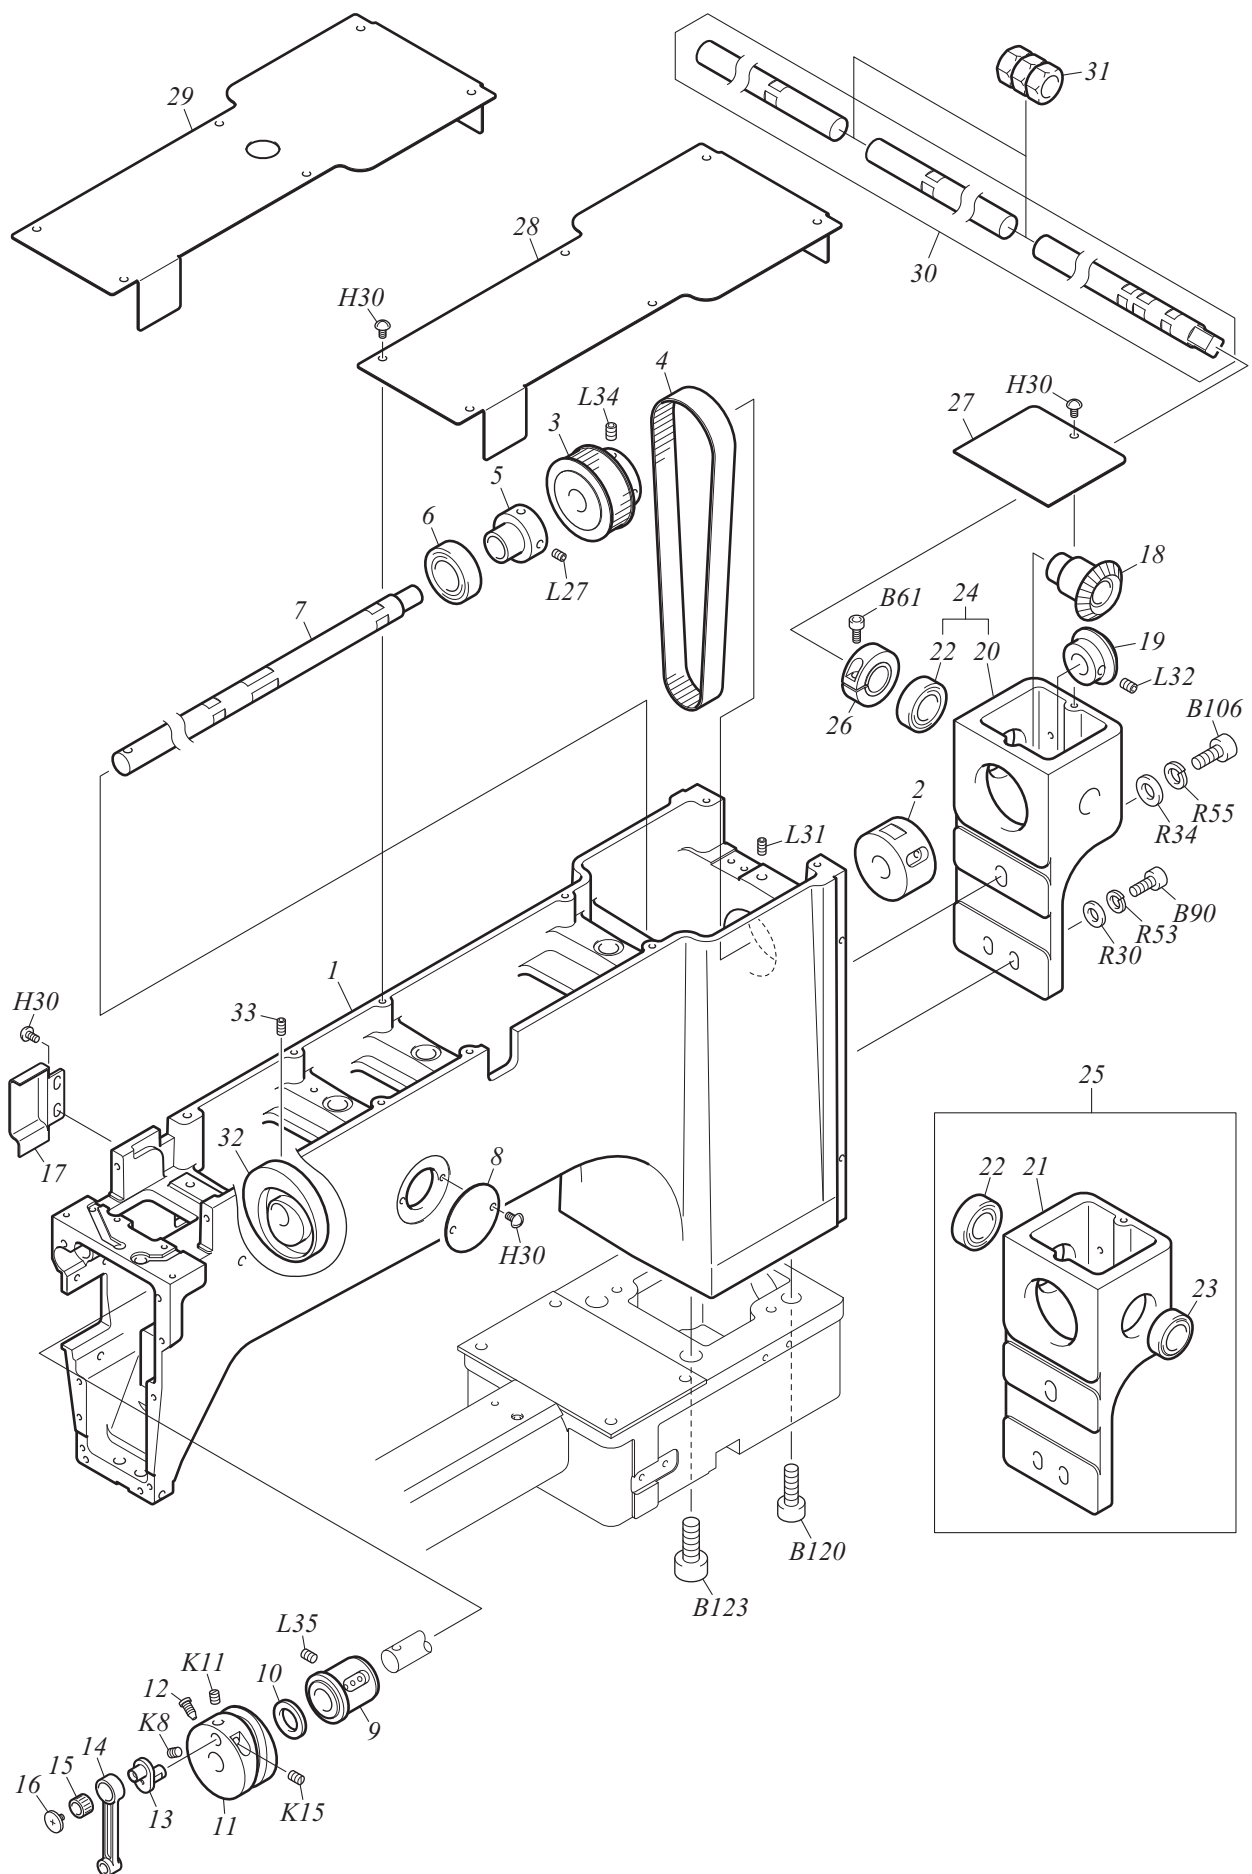


ARM 1

MQ-7-1

No.	Description	Part.No.	Remark
1	ARM	080150050010	
2	OIL-BUSHING :NO.1 :14.73MM DIA.	509146010000	
3	TIMING PULLEY :W15-32	501432010010	
4	TIMING BELT :MG5407 :W15-S5M/0525/M	625300040000	
5	BEARING COLLAR :14.72MM DIA.	502746010000	
6	BEARING :6004ZZ	630200090000	
7	UPPER SHAFT	080510250030	
8	SIDE COVER :ARM	080430040000	
9	BEARING CASE :UPPER SHAFT	080530290000	
10	COLLAR :P24*T3	502514010000	
11	CAM :TAKE-UP LEVER	080510010000	
12	FLAT FILLISTER HEAD SCREW :CAM STOPPER	511152010000	
13	CRANK	080510220000	
14	CONNECTING ROD :TAKE-UP LEVER DRIVE CAM	080510230020	
15	NEEDLE CAGE :N79A048	634400050000	
16	RIGHT-HAND COUNTERSUNK HEAD SCREW :9/64*7	511453010000	
17	SIDE COVER :ARM	080430110000	
18	SPIRAL BEVEL GEAR :NO.1 :25T	506525020000	
19	SPIRAL BEVEL GEAR :NO.1 :25T	506525010000	
20	GEAR BOX :A	08016003A000	
20	GEAR BOX :B	08016003B000	For the Left Side of Main Shaft Motor
20	GEAR BOX :C	08016003C000	For the Right Side of Main Shaft Motor
21	GEAR BOX :D	08016003D000	For 1st Head
22	BEARING :6905ZZ	630200310000	
23	BEARING :6003ZZ	630200080000	
24	GEAR BOX :A[S]	08016003AS00	
24	GEAR BOX :B[S]	08016003BS00	
24	GEAR BOX :C[S]	08016003CS00	
25	GEAR BOX :D[S]	08016003DS00	
26	TIGHTENING COLLAR :18MM DIA.	502218010000	
27	COVER :GEAR BOX :A	08041002A000	
27	COVER :GEAR BOX :B	08041002B000	For 1st Head, the Right/Left Side of Main Shaft Motor
28	ARM TOP COVER :B	08041003B010	
29	ARM TOP COVER :C	08041003C020	
30	MAIN SHAFT :15MM DIA.	QS6@010@0000	
31	N-COUPLING :N-15-15	504715010000	
32	CAM :PRESSER FOOT	080510100000	
33	SPECIAL SCREW :UNBRAKO :KCP :M8*16	690200050000	
34			
35			
36			
37			
38			
39			
40			
41			
42			
43			
44			
45			

Note: As for parts with mark @, please follow our instructions on Table of Contents in your parts order.

(LX05)

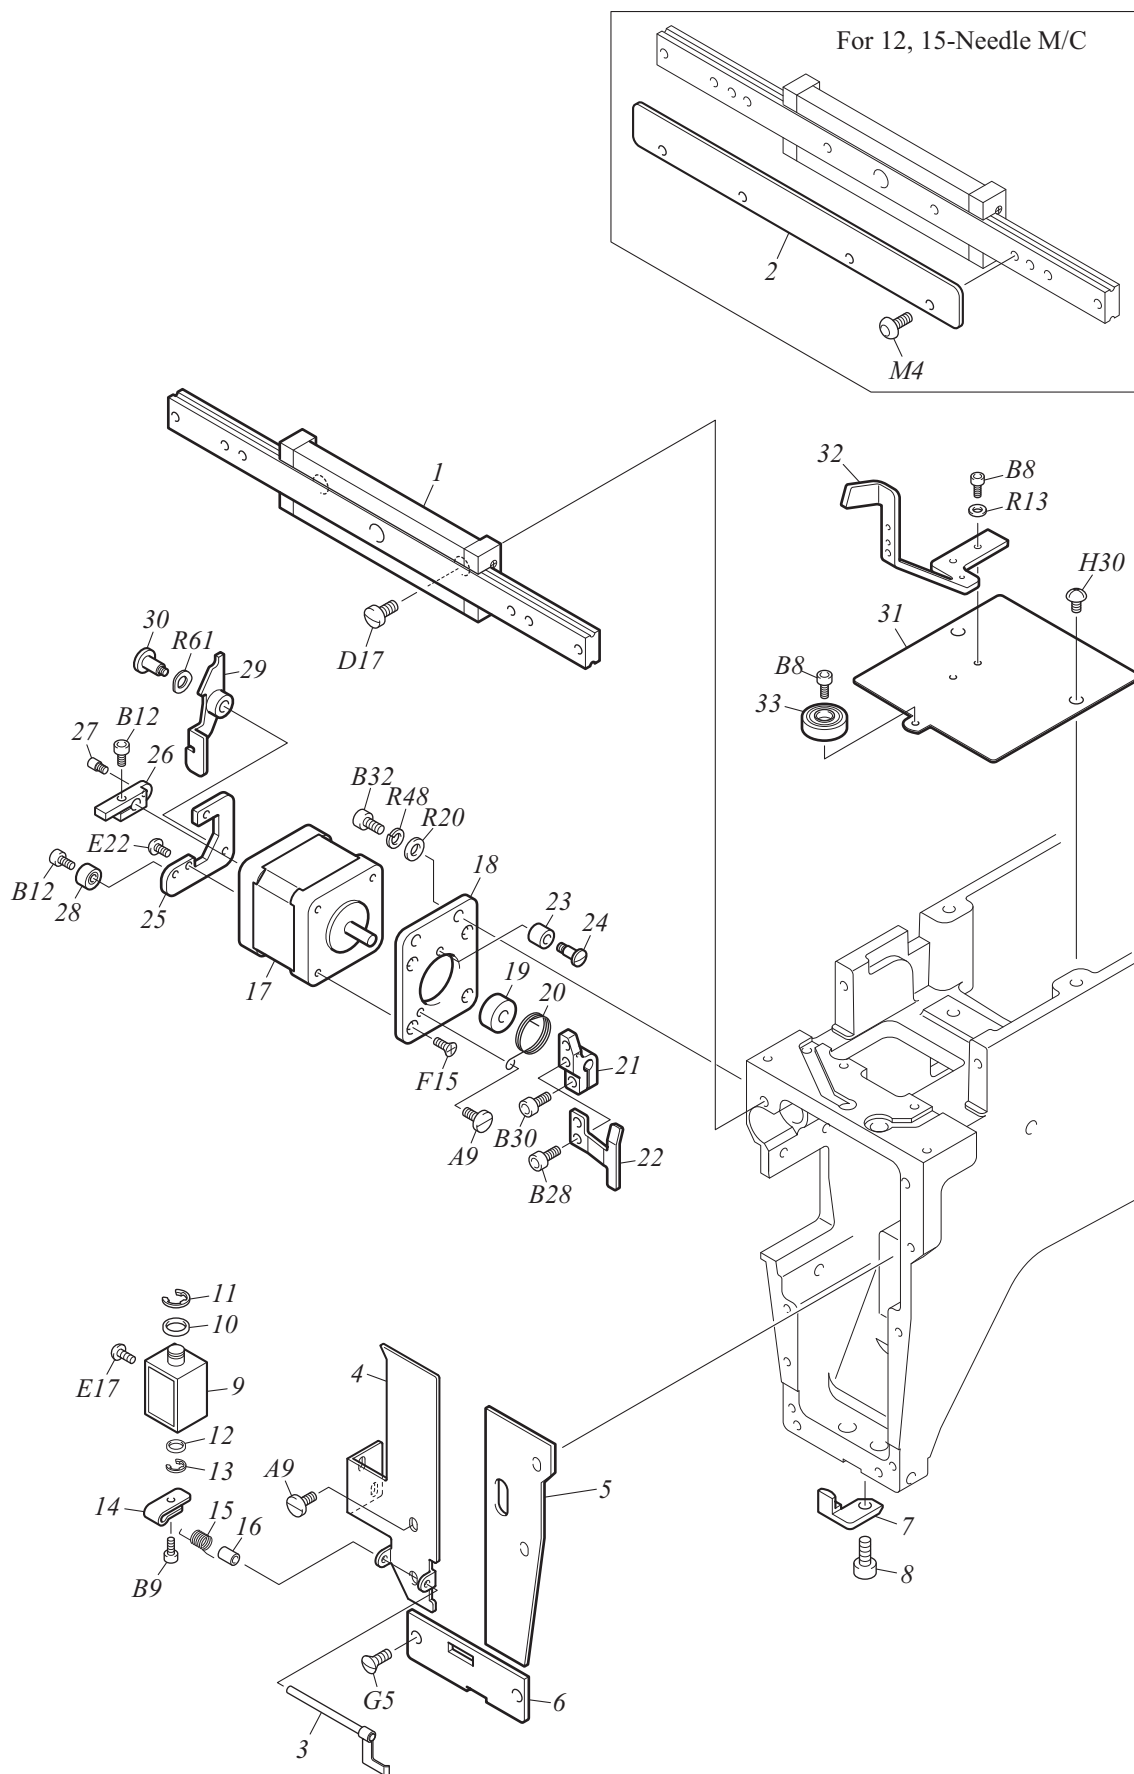


ARM 2

MQ-7-2

No.	Description	Part.No.	Remark
1	LINEAR WAY :NEEDLE BAR CASE	08025014@010	
2	REINFORCING PLATE	08025005@000	
3	DRIVE LEVER[S]	080270080S10	
4	ARM FRONT COVER :L	080420050000	
5	ARM FRONT COVER :R	080420080000	
6	GUIDE PLATE :BEARING	080250120000	
7	GUIDE BRACKET :NEEDLE BAR CASE	080250100010	
8	HEXAGON SOCKET HEAD CAP SCREW :11/64*10	511954010000	
9	SOLENOID :OPEN FRAME	640600120011	
10	O-RING :S-7	612200120000	
11	E-RING :4MM DIA.	611100070000	
12	O-RING :SS-18	612200150000	
13	E-RING :1.5MM DIA.	611100040000	
14	LEVER :SOLENOID	080270010000	
15	TORSION SPRING :0.5MM DIA.	507305020010	
16	COLLAR :NO.1 :3.1MM DIA.	502505010000	
17	PULSE MOTOR :42MM SQUARE :DOUBLE-END :WITH SCREW BASE	0J6107902000	
18	BRACKET :JUMP MOTOR	080320300010	
19	COLLAR :NO.1 :5.1MM DIA.	502504050000	
20	TORSION SPRING :0.9MM DIA.	507309020000	
21	HOLDER :JUMP LEVER	080320450010	
22	LEVER :JUMP	080320310000	
23	DAMPER RING :4MM DIA.	080320410000	
24	STEPPED SCREW :NO.1 :9/64*10	512153020000	
25	BASE :CLUTCH LEVER	080320330000	
26	LEVER :JUMP MOTOR	080320320010	
27	SCREW WITH PIN :NO.1 :9/64-4	513153060010	
28	DAMPER RING :3MM DIA. E	050320470010	
29	CLUTCH LEVER[S]	080320340S10	
30	STEPPED SCREW :NO.1 :M3*2.8	512203010010	
31	ARM TOP COVER :A	080410120000	
32	SENSOR ARM	0C0230090010	
33	ROLLER PIN[S]	080290180S10	
34			
35			
36			
37			
38			
39			
40			
41			
42			
43			
44			
45			
46			
47			
48			
49			
50			

Note: As for parts with mark @, please follow our instructions on Table of Contents in your parts order.


(LX05)

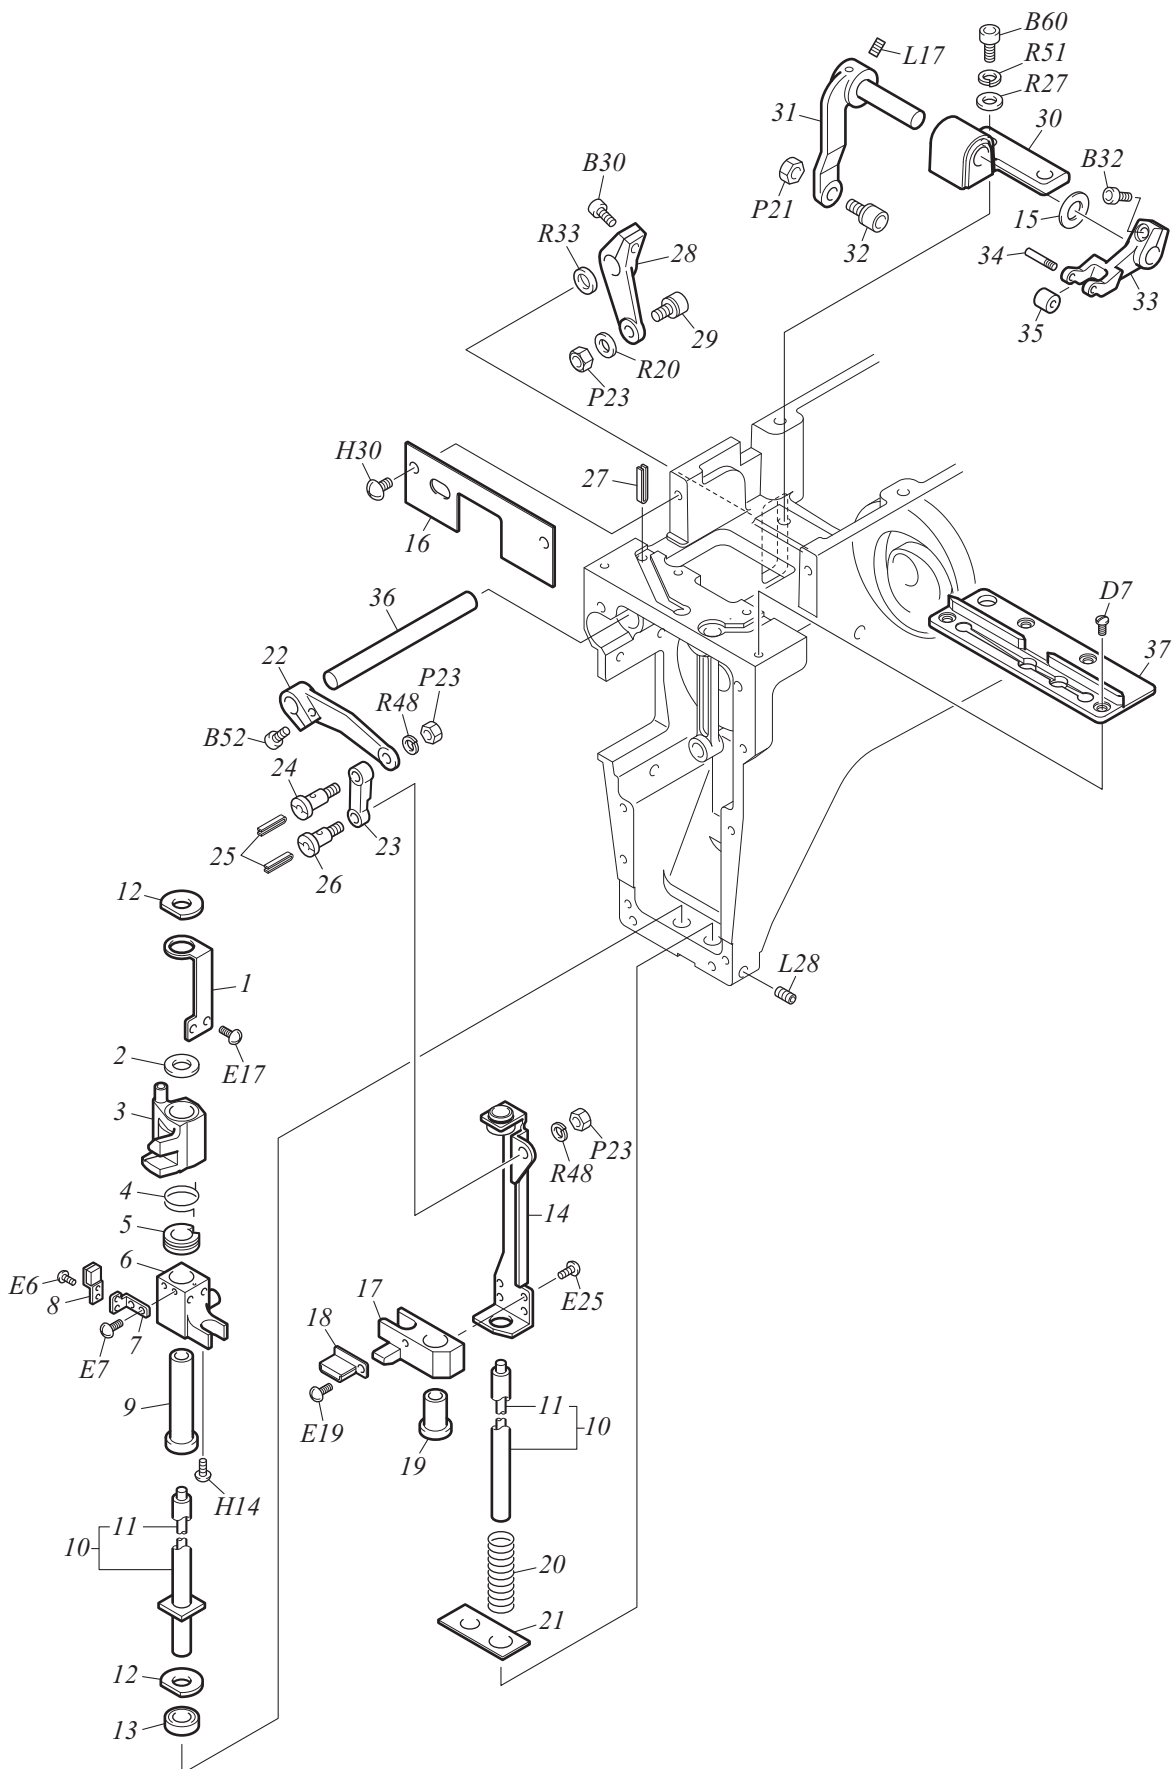

ARM 3

MQ-7-3

No.	Description	Part.No.	Remark
1	STOPPER :NEEDLE BAR RECIPROCATOR	080510030000	
2	PLAIN WASHER :10.3*14*T0.5	519112010000	
3	NEEDLE BAR RECIPROCATOR[S]	080210240S30	
4	TORSION SPRING :0.8MM DIA.	507308210000	
5	HOLDER :JUMP SPRING	080210110010	
6	RECIPROCATING SLIDE BLOCK	080210460000	
7	BASE :DAMPER BRACKET	080510040010	
8	DAMPER BRACKET :NEEDLE BAR RECIPROCATOR	080210440000	
9	PLASTIC BUSHING :NO.2 :7.24MM DIA.	509472040000	
10	NEEDLE BAR DRIVE SHAFT[S]	080210120S40	
11	WICK :3.5P*183	080240020010	
12	FELT :NEEDLE BAR DRIVE SHAFT	080240080010	
13	GUIDE :NEEDLE BAR CASE[S]	080250170S10	
14	GUIDE PLATE :PRESSER FOOT RECIPROCATOR[S]	080210080S00	
15	PLAIN WASHER :8*12*T0.2	519108040000	
15	PLAIN WASHER :8*12*T0.3	519108070000	
16	COVER :ARM	080530060030	
17	PRESSER FOOT RECIPROCATOR	080210300000	
18	DAMPER BRACKET :PRESSER FOOT RECIPROCATOR	080510060010	
19	PLASTIC BUSHING :NO.2 :7.24MM DIA.	509472010000	
20	COMPRESSION SPRING :0.7MM DIA.	507607090000	
21	FELT :OIL PAN	080240110000	
22	LEVER SHAFT :PRESSER FOOT	080510240000	
23	CONNECTING ROD :PRESSER FOOT RECIPROCATOR GUIDE PLATE	080230240000	
24	STEPPED SCREW :NO.2 :M5*16.5	512205060000	
25	WICK :2.5*1*22	080240120010	
26	STEPPED SCREW :NO.2 :M5*11	512205070000	
27	WICK :4*1*22	080240100000	
28	LEVER :PRESSER FOOT CAM	080510130000	
29	CAM FOLLOWER :CFS4-15E02	634500020000	
30	BEARING CASE :TAKE-UP LEVER CAM LEVER	080510070000	
31	LEVER :TAKE-UP LEVER[S]	080510200S10	
32	SCREW WITH ROLLER PIN :NO.1 :M5[S]	514105050S00	
33	ARM :TAKE-UP LEVER	080510210000	
34	SCREW WITH PIN :NO.4 :M3-12.5	513403020000	
35	ROLLER :3MM DIA.	515103010020	
36	STRAIGHT PIN :NO.1 :8MM DIA.	503101360000	
37	TAKE-UP LEVER GUIDE RAIL	080530210010	
38			
39			
40			
41			
42			
43			
44			
45			
46			
47			
48			
49			

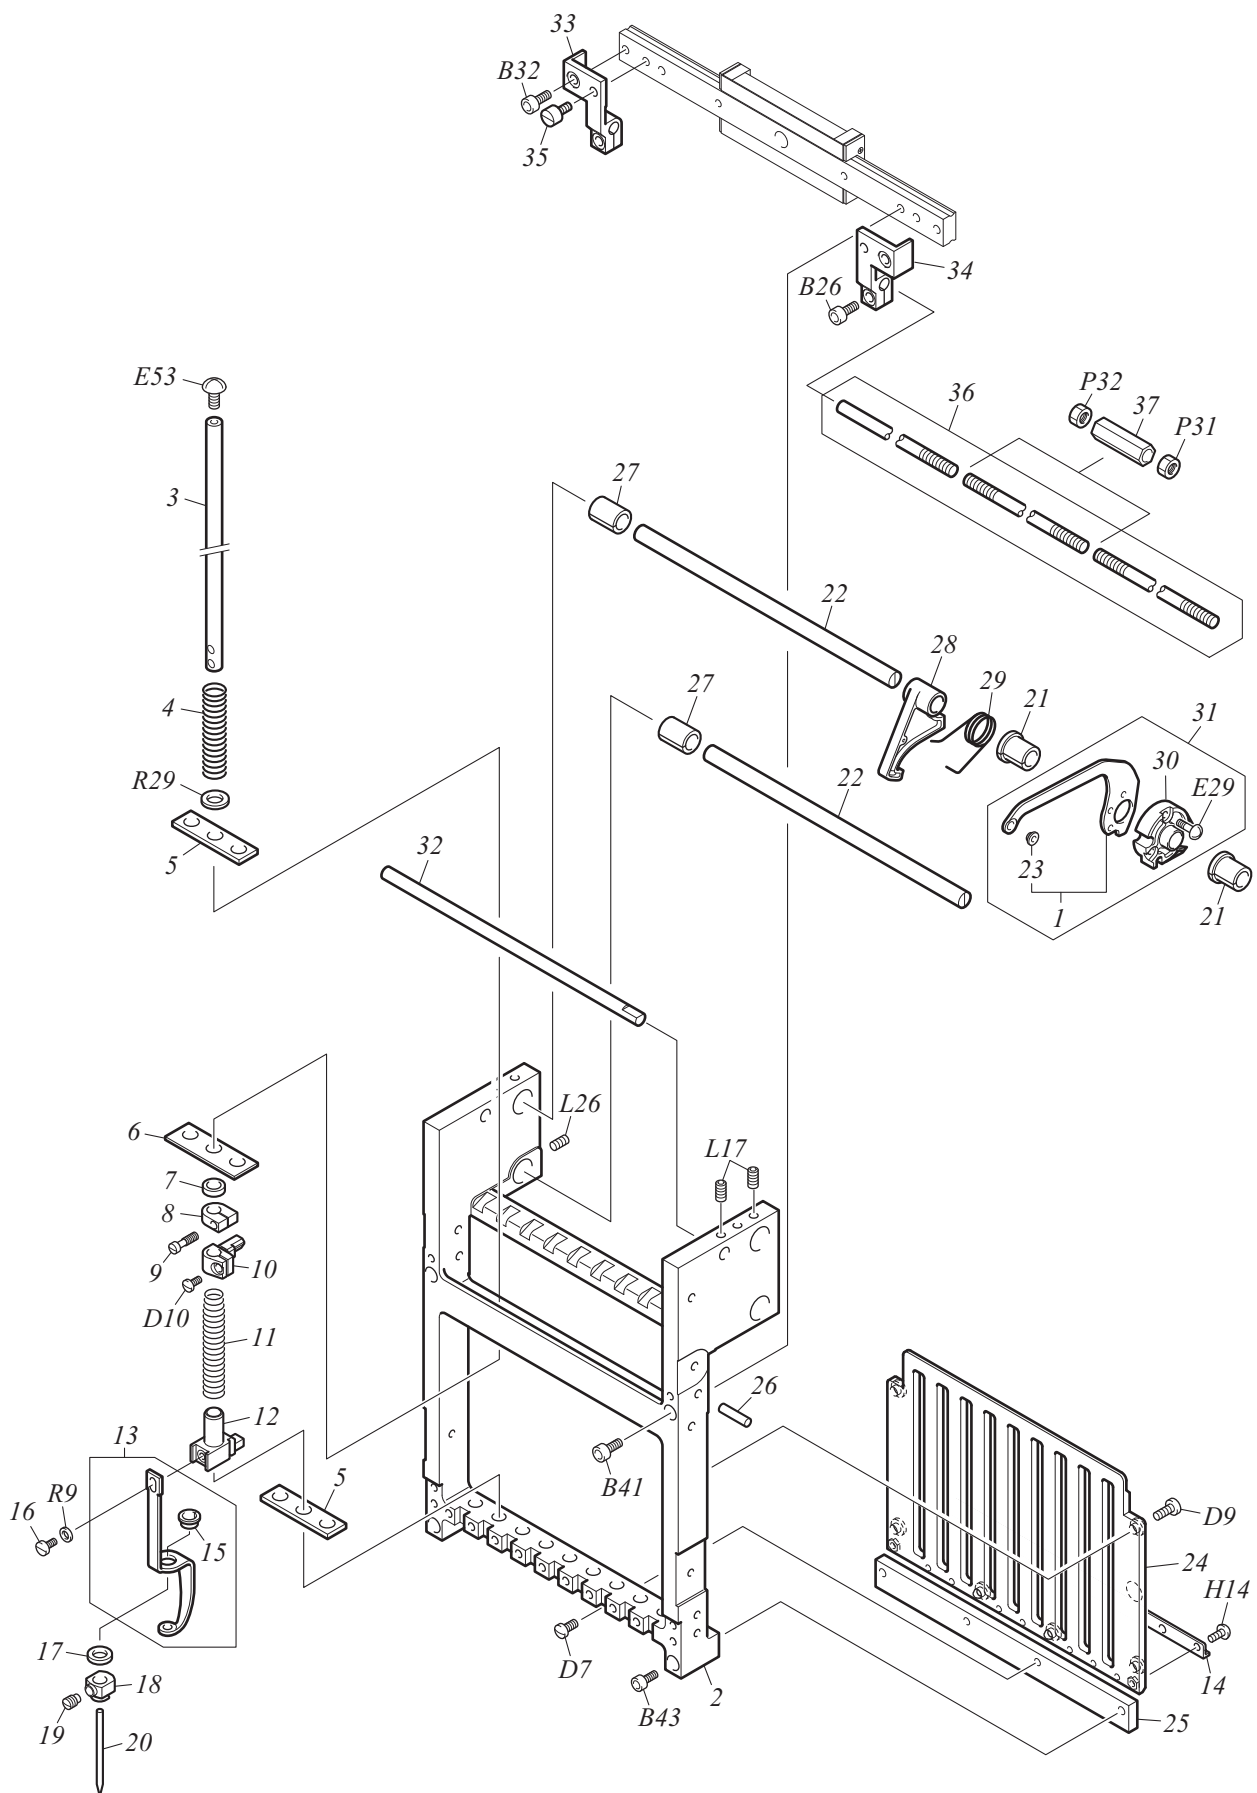

NEEDLE BAR CASE 1

MQ-8-1

No.	Description	Part.No.	Remark
1	TAKE-UP LEVER[S]	090310050S20	
2	NEEDLE BAR CASE	09013007@000	
3	NEEDLE BAR	090410020010	
4	COMPRESSION SPRING :0.5MM DIA.	507605090020	
5	FELT PACKING	090430040000	
6	DAMPER :B :T1	090430060000	
7	DAMPER RING :E	090430010000	
8	STOPPER :UPPER DEAD POINT	090420040020	
9	FLAT FILLISTER HEAD SCREW :9/64*12	SA41741201UN	
10	NEEDLE BAR CONNECTING STUD	090420060010	
11	COMPRESSION SPRING :0.8MM DIA.	507608130000	
11	COMPRESSION SPRING :0.9MM DIA.	507609030010	
12	PRESSER FOOT CONNECTING STUD	090420020020	
13	PRESSER FOOT[A]	090460070A00	
14	RAIL GUIDE	09023002@010	
15	SPLIT COLLAR :PRESSER FOOT	090460040020	
16	FLAT FILLISTER HEAD SCREW :1/8*44	090470020010	
17	DAMPER RING :A	090430070020	
18	NEEDLE CLAMP[S]	090420010S60	
19	SLOTTED HEAD SET SCREW :11/64*6B	511754010010	
20	NEEDLE :DB-K5Z1 #11	616500080000	
21	SPLIT COLLAR :NO.2 :8MM DIA.	502408020010	
21	SPLIT COLLAR :NO.2 :8MM DIA.	502408010020	For 15-Needle
22	GUIDE SHAFT :TAKE UP LEVER	09033001@000	
23	THREAD GUIDE COLLAR :1.8MM DIA.	516503010010	
24	NEEDLE BAR GUIDE :09-NEEDLE	090450079000	
24	NEEDLE BAR GUIDE :12-NEEDLE	09045005Y000	
24	NEEDLE BAR GUIDE :15-NEEDLE	09045006X010	
25	RAIL :CASE :LOWER	09044001@010	
25	RAIL :CASE :LOWER :15-NEEDLE	09044002X010	
26	PARALLEL PIN :4*16-H7	611200050000	
27	SPLIT COLLAR :NO.1 :8MM DIA.	502308010010	
27	SPLIT COLLAR :NO.1 :8MM DIA.	502308020010	For 15-Needle
28	LEVER :STOPPER	090320010000	
29	TORSION SPRING :1MM DIA.	507310040010	
30	BOSS :TAKE-UP LEVER	090310040010	
31	TAKE-UP LEVER[A]	090310050A20	
32	SPRING HOOK BAR	09033002@000	
33	BRACKET :CHANGE ROD :L	08026019L000	
34	BRACKET :CHANGE ROD :R	08026019R000	
35	FLAT FILLISTER HEAD SCREW :M4*10	511104010010	
36	CHANGE ROD :6MM DIA.	QS6@04@@@000	
37	SCREW JOINT :M6	504506010010	
38			
39			
40			
41			
42			
43			
44			

Note: As for parts with mark @, please follow our instructions on Table of Contents in your parts order.

(LX05)



NEEDLE BAR CASE 2


MQ-8-2

No.	Description	Part.No.	Remark
1	TAKE-UP LEVER COVER	09053002@000	
2	PAN HEAD SCREW :9/64*25	511353010000	
3	FLAT FILLISTER HEAD SCREW :M3*4.3	511103010000	
4	BASE :ROLLER-TYPE MIDDLE THREAD GUIDE	09021025@000	
5	ADJUSTING LEVER[S]	090210140S10	
6	COMPRESSION SPRING :0.7MM DIA.	507607160000	
7	RATCHET	090210050020	
8	TENSION COLLAR :NO.1	090210160010	
9	THREAD TAKE-UP SPRING :NO.2 :0.4MM DIA.	507204010010	
10	TENSION COLLAR :NO.2	090210170010	
11	STRAIGHT PIN :5MM DIA.	09021023@000	
12	STOPPER COLLAR :5MM DIA.	090210180010	
13	ROLLER-TYPE MIDDLE THREAD GUIDE[S]	09021009@s30	
14	STRAIGHT PIN :NO.1 :3MM DIA.	503101150020	
15	THREAD GUIDE COLLAR :1.8MM DIA.	516503010010	
16	ROLLER-TYPE MIDDLE THREAD GUIDE[A]	09021025@a10	
17	FACE PLATE :NEEDLE BAR CASE	09051001@060	
17	FACE PLATE :NEEDLE BAR CASE :15-NEEDLE	09051001X090	
18	UPPER THREAD LOCK :45	U960@0000000	
19	BASE :UPPER THREAD LOCK	08027009@040	
20	LOCK SHAFT[S]	090230030S20	
21	COMPRESSION SPRING :0.3MM DIA.	507603040030	
22	BASE :UPPER THREAD HOLDER :FD	U940@0000000	
23	BRACKET :UPPER THREAD HOLDER	0B0200080000	
24	THREAD SUSPENDER DISK	0B0200050000	
25	COMPRESSION SPRING :0.3MM DIA.	507603020010	
26	PRESSER :THREAD SUSPENDER SPRING	0B0200060000	
27	STEPPED SCREW :NO.1 :9/64*7.5	512153040000	
28	BASE :UPPER THREAD HOLDER[S]	0B020009@s00	
29	UPPER THREAD HOLDER[S]	0B020018@s00	
30	COLLAR :NO.1 :3MM DIA.	502503070010	
31	E-RING :1.5MM DIA.	611100040000	
32	STEPPED SCREW :NO.1 :9/64*8.8	512153150000	
33	ROUND COUNTERSUNK HEAD SCREW :9/64*3.5	511553010010	
34	HOLDER :STRAIGHT PIN	090210190010	
35	STRAIGHT PIN :3MM DIA.	09021022@000	
36	E-RING :2MM DIA.	611100050000	
37			
38			
39			
40			
41			
42			
43			
44			
45			
46			
47			
48			
49			

Note: As for parts with mark @, please follow our instructions on Table of Contents in your parts order.

(LX05)

FRONT COVER

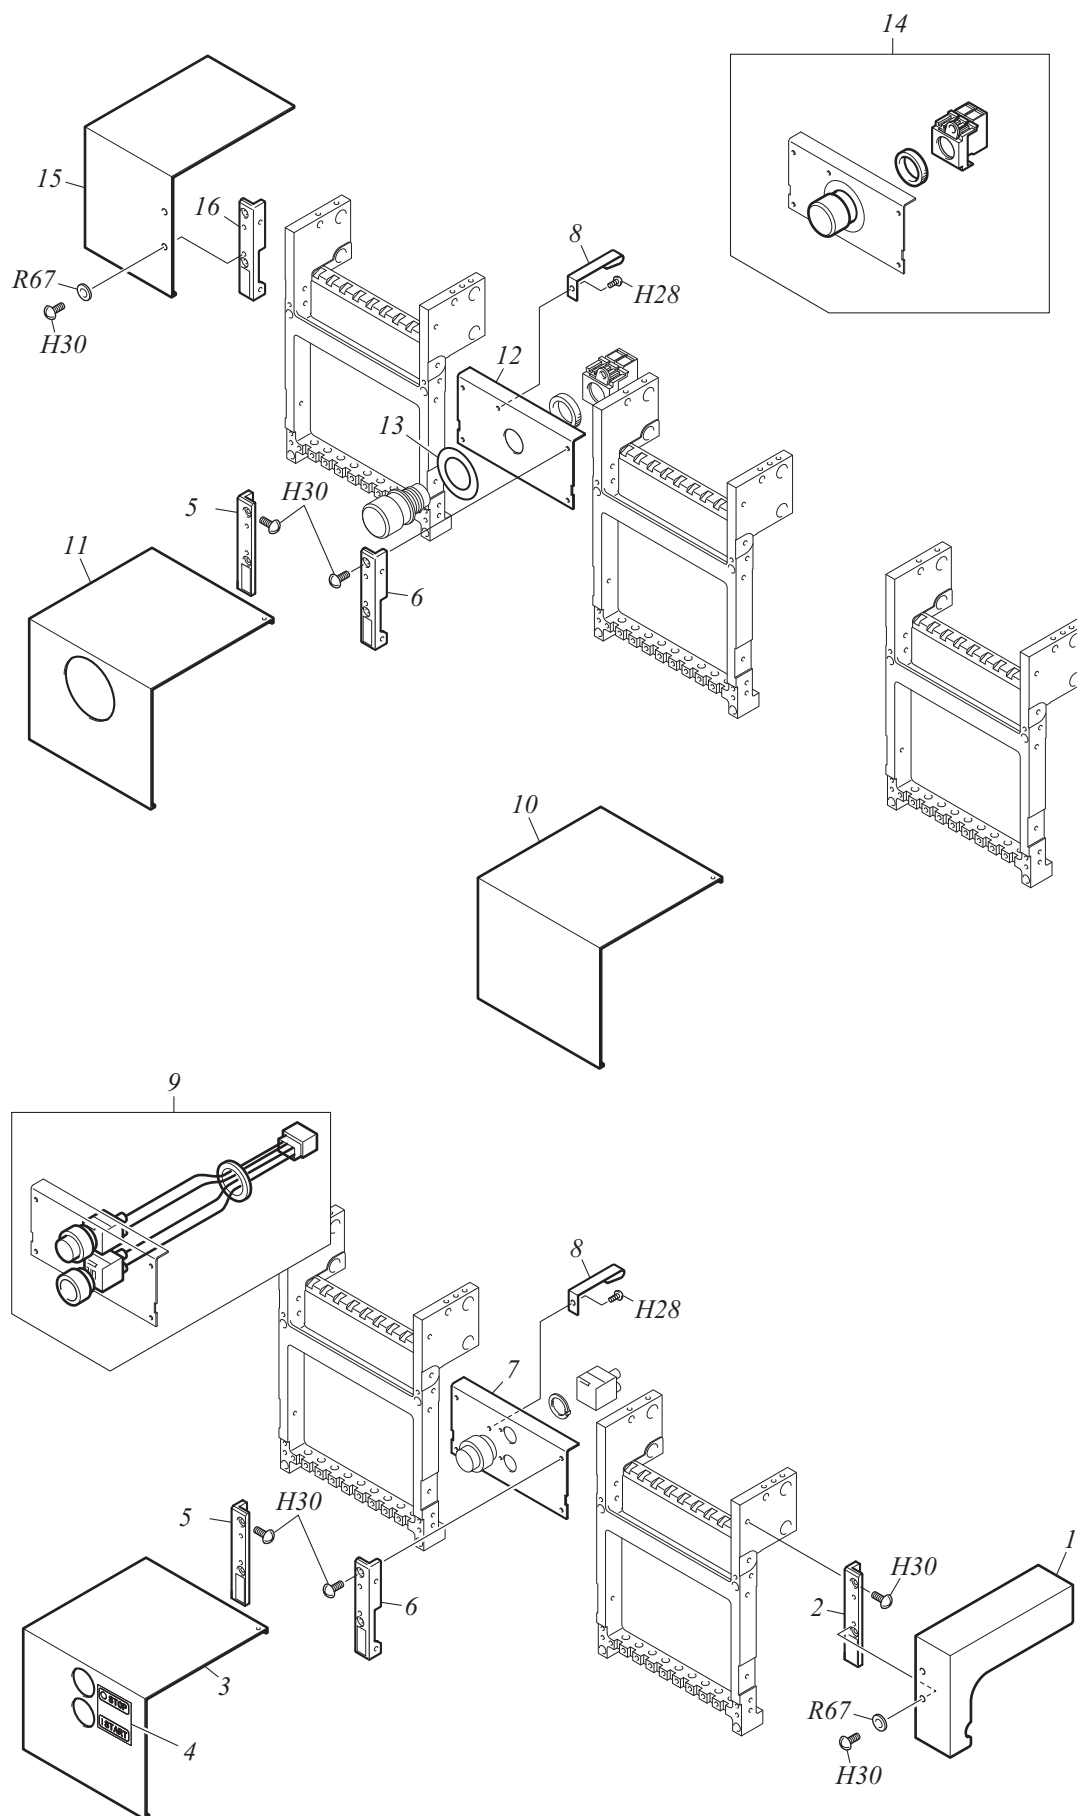


FRONT COVER

MQ-9

No.	Description	Part.No.	Remark
1	HEAD R COVER :NO.1 :L40	170750010000	
2	BRACKET :FRONT COVER :R[S]	17111017RS00	
3	FRONT COVER :NO.2	17073@@@0000	
4	LABEL :START/STOP SWITCH	644500160000	
5	BRACKET :FRONT COVER :R[S]	17111018RS00	
6	BRACKET :FRONT COVER :L[S]	17111018LS00	
7	BASE :START/STOP SWITCH	17135@@@0000	
8	CORD CLAMP	0J1501800000	
9	SWITCH :CYLINDER HEAD[A]	0J0603300A00	
10	FRONT COVER :NO.1	17045@@@0000	
11	FRONT COVER :NO.3	17047@@@0000	
12	BASE :EMERGENCY STOP SWITCH	17145@@@0000	
13	NAME PLATE :EMERGENCY STOP SWITCH	0J5100600000	
14	SWITCH :EMERGENCY STOP[A]	0J0603000A10	
15	FRONT COVER :NO.7 :L90	170120010000	
16	BRACKET :FRONT COVER :L[S]	17111017LS00	
17			
18			
19			
20			
21			
22			
23			
24			
25			
26			
27			
28			
29			
30			
31			
32			
33			
34			
35			
36			
37			
38			
39			
40			
41			
42			
43			
44			
45			
46			
47			
48			
49			
50			

Note: As for parts with mark @, please follow our instructions on Table of Contents in your parts order.

(LX05)

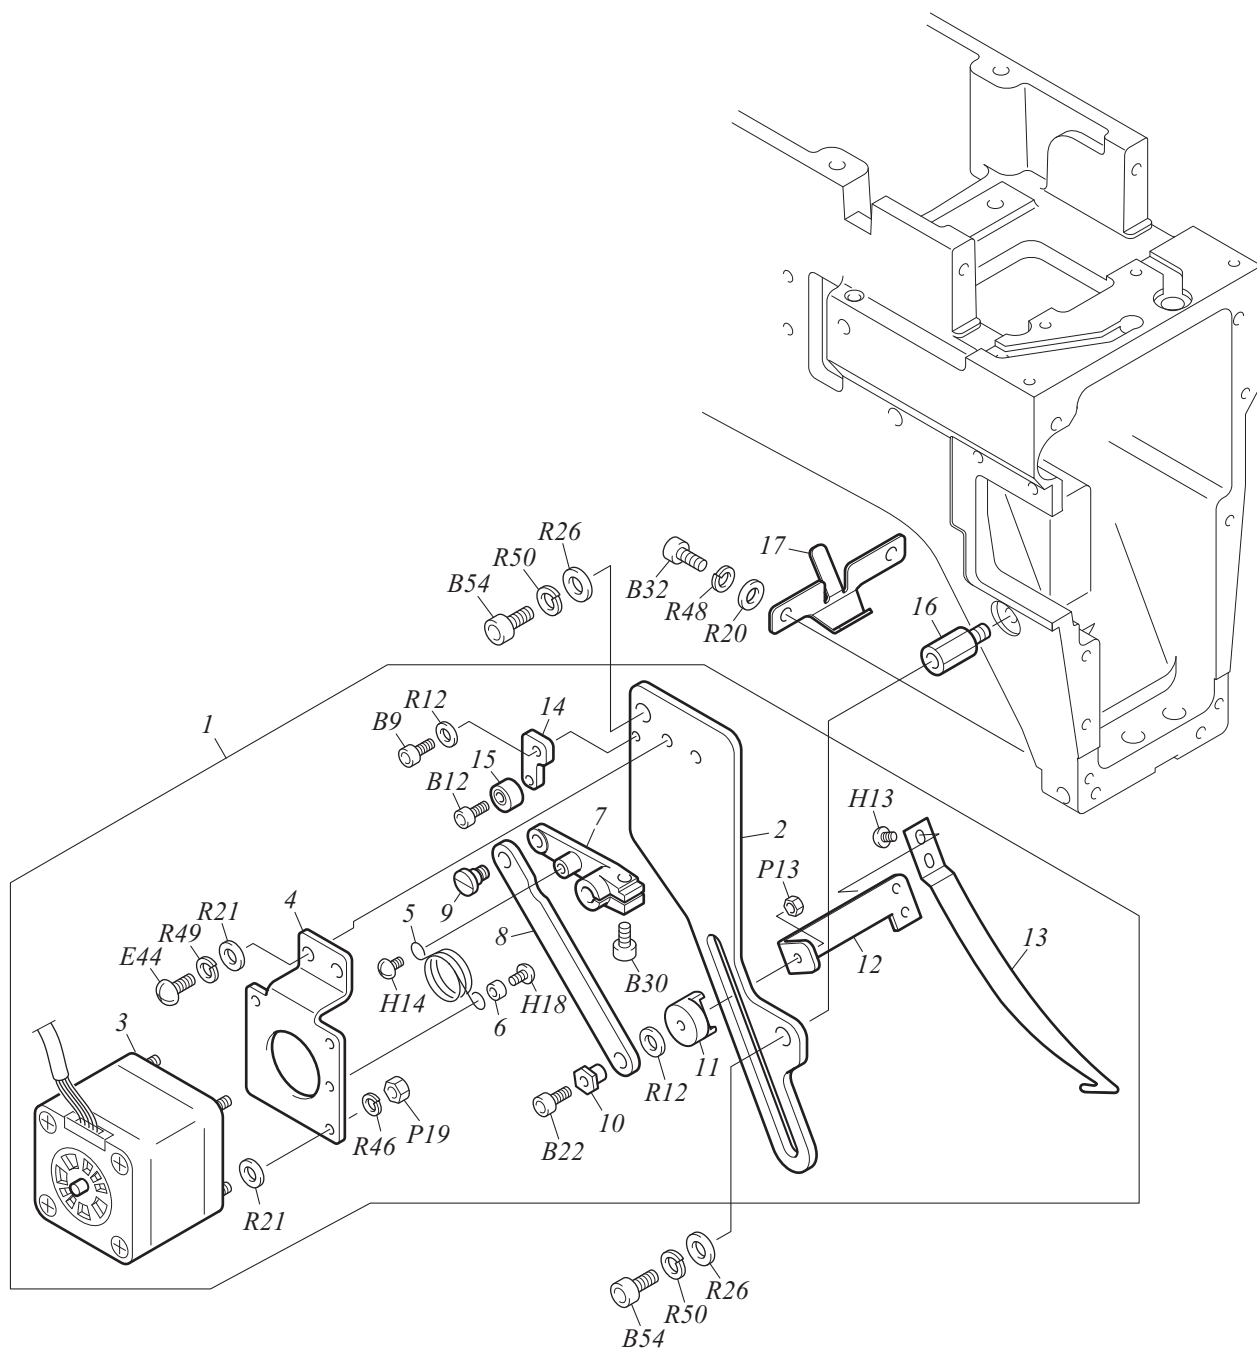

UPPER THREAD HOLDER SET

MQ-10

No.	Description	Part.No.	Remark
1	HOOK :EJT	UB1900000010	
2	BASE :HOOK	0B0110530000	
3	PULSE MOTOR :42MM SQUARE :DOUBLE-END	0J6107802000	
4	BASE :HOOK MOTOR	0B0110390010	
5	TORSION SPRING :0.9MM DIA.	507309010010	
6	COLLAR :NO.1 :3MM DIA.	502503070010	
7	LEVER :UPPER THREAD HOOK	0B0120030000	
8	CONNECTING PLATE :HOOK	0B0110540000	
9	STEPPED SCREW :NO.1 :M4*6.7	512104100040	
10	SCREW BUSHING :NO.2 :M3	0B0110130000	
11	GUIDE COLLAR :UPPER THREAD HOOK	0B0110190000	
12	JOINT :HOOK	0B0110560000	
13	HOOK	0B0110570010	
14	STOPPER BASE :HOOK	0B0110550000	
15	DAMPER RING :3MM DIA. E	050320470010	
16	STUD :NO.1 :M5-15	505105340010	
17	GUIDE :UPPER THREAD HOOK	080530070000	
18			
19			
20			
21			
22			
23			
24			
25			
26			
27			
28			
29			
30			
31			
32			
33			
34			
35			
36			
37			
38			
39			
40			
41			
42			
43			
44			
45			
46			
47			
48			
49			
50			

Note: As for parts with mark @, please follow our instructions on Table of Contents in your parts order.

(LX05)


CAM DRIVE SYSTEM SET

MQ-11

No.	Description	Part.No.	Remark
1	BASE :ATH CAM[S]	0E0110110S40	
2	LEVER :ATH	0E0210840000	
3	PIN :ATH BASE ROD	0E0210910000	
4	FLAT FILLISTER HEAD SCREW :11/64*7	511154010030	
5	ROLLER :8*12*15.8	515108050000	
6	ROLLER :8*14*8	515108030000	
7	SCREW WITH ROLLER PIN :NO.5 :M6	514406010000	
8	PLASTIC WASHER :15.5*22*T1	519216020000	
9	COMPRESSION SPRING :0.8MM DIA.	507608120010	
10	UP/DOWN COLLAR :ATH	0E0210260010	
11	TIMING PULLEY :W25-20	501454070000	
12	THRUST WASHER :AS1528	633200040000	
13	THRUST BEARING :NTB1528	633100030000	
14	NEEDLE BEARING :HMK1512	634200130000	
15	TIMING BELT :SPTG :W25-S5M0690/G	623400360000	
16	SHAFT :ATH CAM	0E0210210000	
17	CAM :ATH	0E0120010000	
18	ROUND FILLISTER HEAD SCREW :9/32*17.5B	511252010000	
19	TIGHTENING COLLAR :10MM DIA.	502210030010	
20	O-RING :S-10	612200140000	
21	BASE ROD :ATH	0E0210550000	
22	SCREW WITH PIN :NO.4 :M8-110	513408030010	
23	SPACER :NO.3 :T0.05	510300090000	
23	SPACER :NO.3 :T0.2	510300080000	
23	SPACER :NO.3 :T0.5	510300091000	
24	PULSE MOTOR :42MM SQUARE :DOUBLE-END	0J6107802000	
25	BRACKET :ATH MOTOR	0E0210670000	
26	LEVER :SHAFT LEVER ROD	0E0210280000	
27	STRAIGHT PIN :NO.2 :6MM DIA.	503102010010	
28	COVER :MAIN SHAFT BELT :360P-	04024043@000	
29	BRACKET :MAIN SHAFT BELT COVER :L	04024046L000	
30	BRACKET :MAIN SHAFT BELT COVER :R	04024046R000	
31	STUD :NO.1 :M6-90	505106020000	
32	BRACKET :BEARING CASE	040240440000	
33	SPACER :BEARING CASE BRACKET :T0.5	040240450000	
34	SPACER :BEARING CASE BRACKET :T1	040240451000	
35	RULON WASHER :TW-1020	638400090000	
36	FLAT PULLEY :30MM DIA.[S]	501903060S00	
37	TIMING PULLEY :W25-16[S]	501452040S10	
38	HOLDER :TENSION PULLEY	0E0220100000	
39	STRAIGHT PIN :NO.1 :10MM DIA.	503101460000	
40	TIGHTENING COLLAR :A :20MM DIA.	502220020000	
41	TIGHTENING COLLAR :B :20MM DIA.	502220030000	
42	TIMING PULLEY :W25-20[S]	501454060S00	
43	BEARING CASE :NO.2 :20MM DIA.[S]	508220060S00	
44	BEARING COLLAR :15MM DIA.	502715040010	
45			
46			
47			
48			

Note: As for parts with mark @, please follow our instructions on Table of Contents in your parts order.


(LX05)

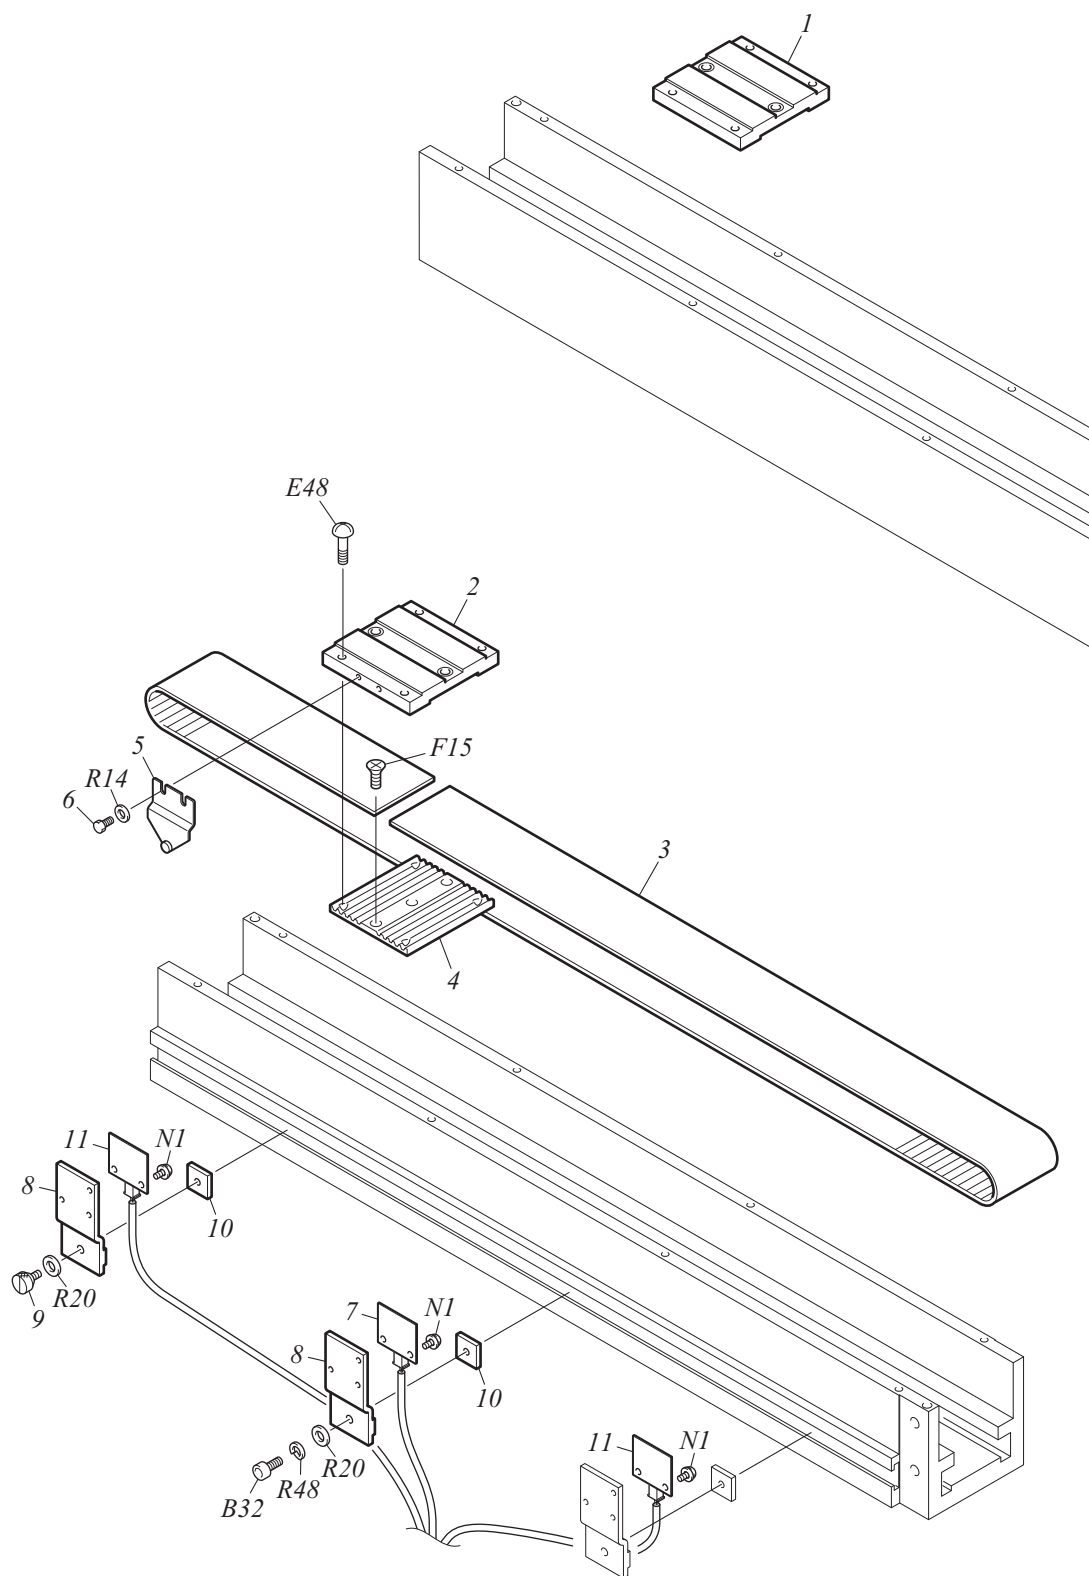

X-AXIS DRIVE SYSTEM 1

MQ-12-1

No.	Description	Part.No.	Remark
1	X-AXIS FEED PLATE :NO.2 :AZ :W50[S]	0F2220050S00	
2	X-AXIS FEED PLATE :NO.2 :BZ :W50[S]	0F2220060S00	
3	TIMING BELT :MA5 :A :W50-E/LY :EX580 OR LESS	623E0060@000	
4	JOINT PLATE :BELT	0F0130020000	
5	SENSOR PLATE :MAGNET[S]	0F0110070S00	
6	HEXAGON BOLT :M3*6	511B03010000	
7	CARD :MAGNETIC SENSOR A	0J4200800010	
8	BASE :PROXIMITY SWITCH	0F0110060000	
9	KNURLED SCREW :M4*9	511D04020000	
10	NUT :M4*3.2	0F0110030000	
11	CARD :MAGNETIC SENSOR B	0J4200801020	
12			
13			
14			
15			
16			
17			
18			
19			
20			
21			
22			
23			
24			
25			
26			
27			
28			
29			
30			
31			
32			
33			
34			
35			
36			
37			
38			
39			
40			
41			
42			
43			
44			
45			
46			
47			
48			
49			
50			

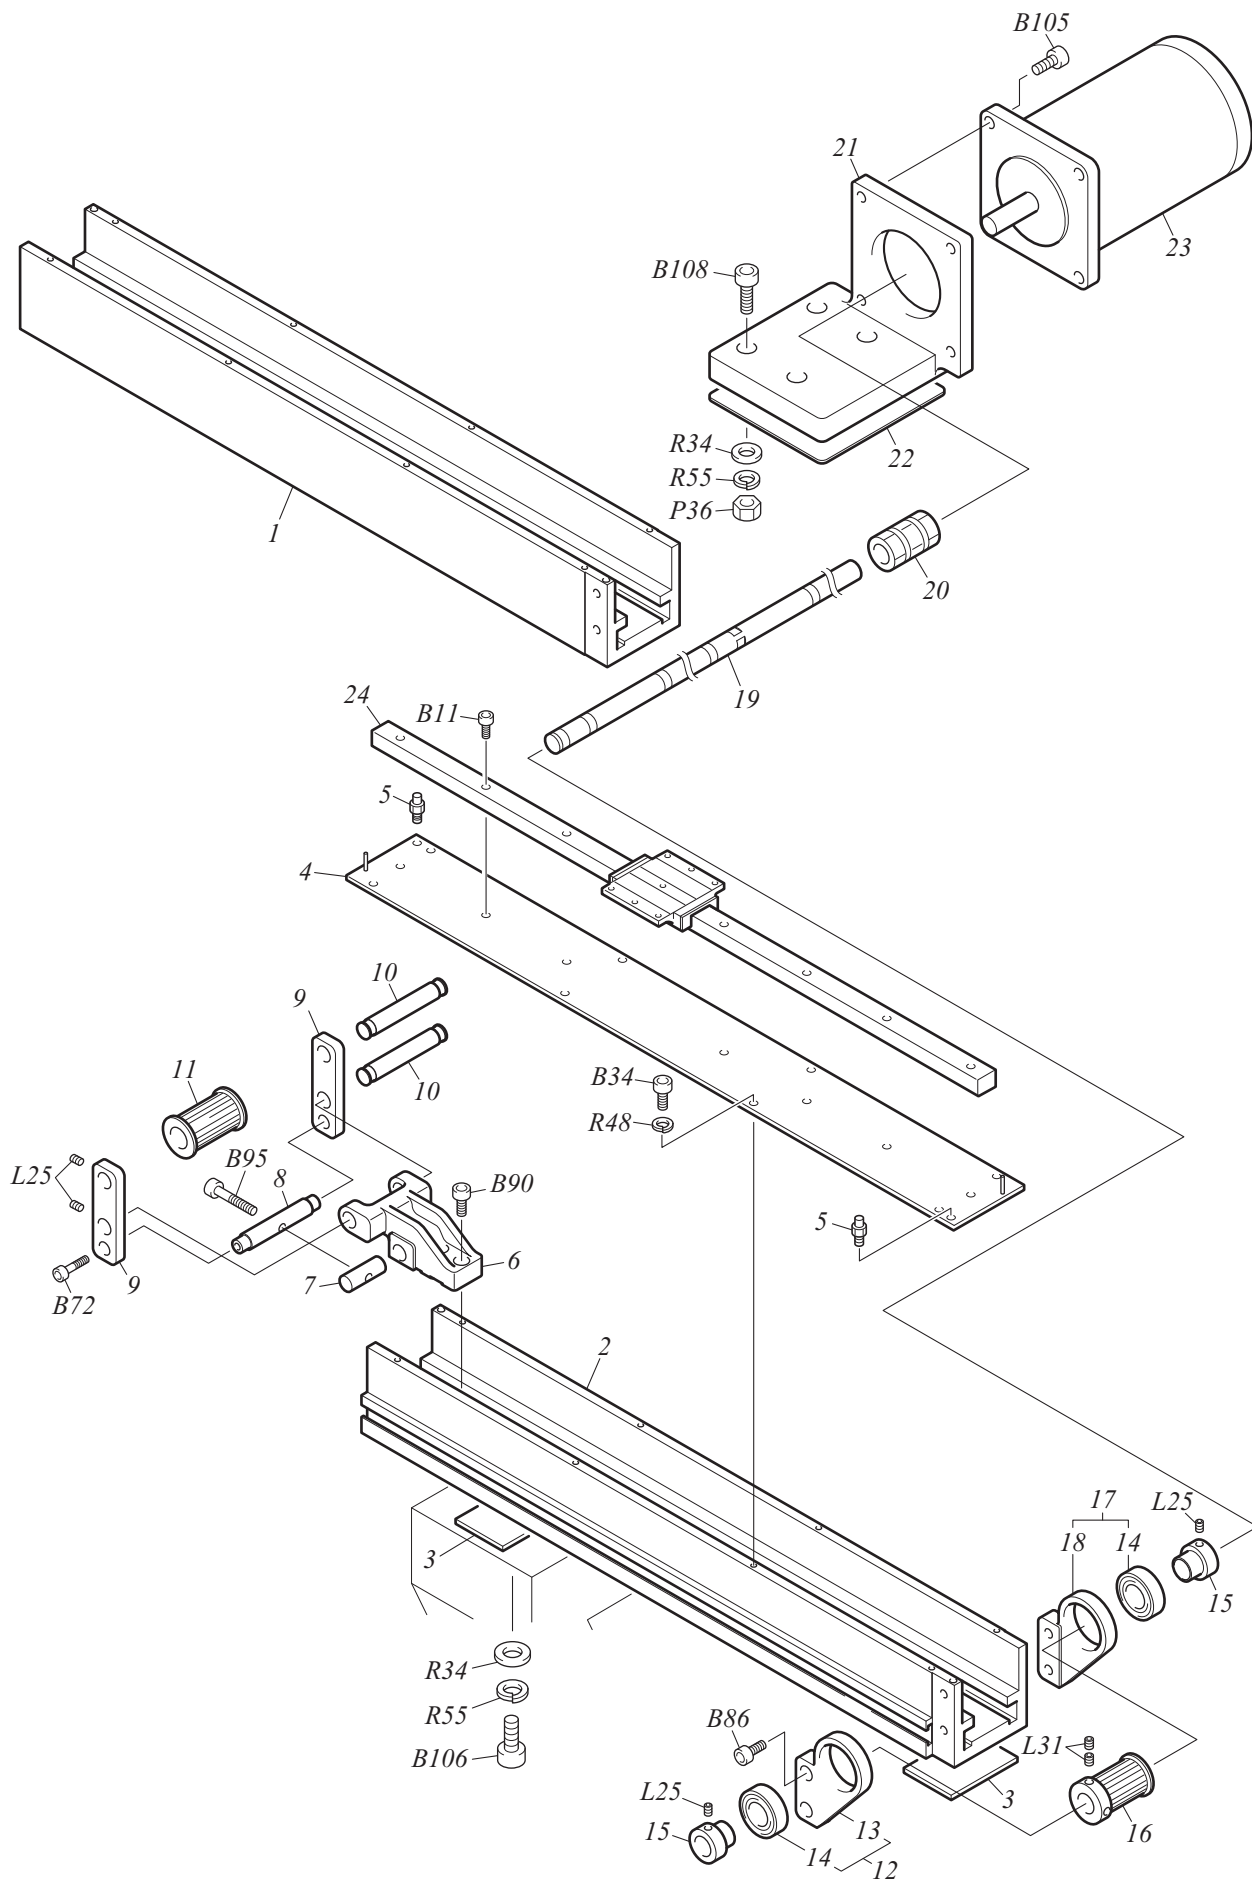

X-AXIS DRIVE SYSTEM 2

MQ-12-2

No.	Description	Part.No.	Remark
1	X DRIVE BASE :NO.1 :X580 OR LESS	16012027@000	
2	X DRIVE BASE :NO.2 :X580 OR LESS	16022027@000	
3	SPACER :NO.2 :T0.5-2	51020009@000	
4	LINEAR BASE :X180-1200	0F016001@000	
5	STUD :NO.4 :M5-7	505405010010	
6	HOLDER :TENSION PULLEY	0F0120010000	
7	STRAIGHT PIN :NO.1 :12MM DIA.	503101110000	
8	STRAIGHT PIN :NO.1 :12MM DIA.	503101070000	
9	BASE :TENSION PULLEY	0F0120020000	
10	STRAIGHT PIN :NO.4 :12MM DIA.	503104040000	
11	TIMING PULLEY :W50-16[S]	501490030S10	
12	BEARING CASE :NO.5 :L :17MM DIA.[S]	50851706LS00	
13	BEARING CASE :NO.5 :L	50851706L000	
14	BEARING :6003ZZ	630200080000	
15	BEARING COLLAR :15MM DIA.	502715080000	
16	TIMING PULLEY :W50-16	501490010000	
17	BEARING CASE :NO.5 :R :17MM DIA.[S]	50851706RS00	
18	BEARING CASE :NO.5 :R	50851706R000	
19	X SHAFT :15MM DIA./W50-490	Q001X1250000	
20	N-COUPLING :N-15-15	504715010000	
21	BRACKET :X MOTOR	0F032003@000	
22	SPACER :NO.4 :T0.5-2	51040007@000	
23	PULSE MOTOR :106MM DIA.: WITH SENSOR[A]	0J6107600A10	12H360P
23	PULSE MOTOR :106MM DIA. :WITH SENSOR[A]	0J6108100A10	15-18H360P, 12H500P
24	LINEAR WAY :EX-405	660100370000	
25			
26			
27			
28			
29			
30			
31			
32			
33			
34			
35			
36			
37			
38			
39			
40			
41			
42			
43			
44			
45			
46			
47			
48			
49			

Note: As for parts with mark @, please follow our instructions on Table of Contents in your parts order.


(LX05)



Y-AXIS DRIVE SYSTEM 1

MQ-13-1

No.	Description	Part.No.	Remark
1	Y-AXIS FEED PLATE :NO.3 :B :W35[S]	0F2330010S10	
2	Y-AXIS FEED PLATE :NO.3 :A :W35[S]	0F2330020S00	
3	TIMING BELT :MA5 :A :W35-207E/LY	623D0018G000	
4	JOINT PLATE :BELT	0F0130020000	
5	SENSOR PLATE :MAGNET[S]	0F0110070S00	
6	HEXAGON BOLT :M3*6	511B03010000	
7	CARD :MAGNETIC SENSOR A	0J4200800010	
8	BASE :PROXIMITY SWITCH	0F0110060000	
9	KNURLED SCREW :M4*9	511D04020000	
10	NUT :M4*3.2	0F0110030000	
11	CARD :MAGNETIC SENSOR B	0J4200801020	
12	DRIVE SYSTEM CONNECTING PLATE :Y360	0F0140150000	
13	SCREW WITH ROLLER PIN :NO.1 :M6[S]	514106310S00	
14	BASE :LIFT-PREVENTIVE	0F0150100000	
15	BEARING :698ZZ	631200190000	
16	STRAIGHT PIN :NO.2 :8MM DIA.	503102200000	
17	BASE :BEARING HOLDER	0G2210350000	
18	HOLDER :BEARING	0G2210320000	
19	BEARING :SSR1240Z	631200030000	
20	SCREW WITH PIN :NO.1 :9/64-6	513153030000	
21	SCREW WITH ROLLER PIN :NO.1 :M4[S]	514104010S00	
22	Y-AXIS FEED CONNECTING PLATE :Y360	0F0180290000	
23	Y-AXIS FEED PLATE :FRONT[S]	0F3210080S00	
24	BRACKET :FRAME PRESSER BLOCK	0F3290040000	
25	HOLDER BLOCK :FRAME :FRONT	0F3290160000	
26	BASE :RAIL :Y360	0F3120040000	
27	COUNTERSUNK TAPPING SCREW :4P*20	S550042001SD	
28	LINEAR WAY :EY-360	660100060000	
29			
30			
31			
32			
33			
34			
35			
36			
37			
38			
39			
40			
41			
42			
43			
44			
45			
46			
47			
48			
49			
50			

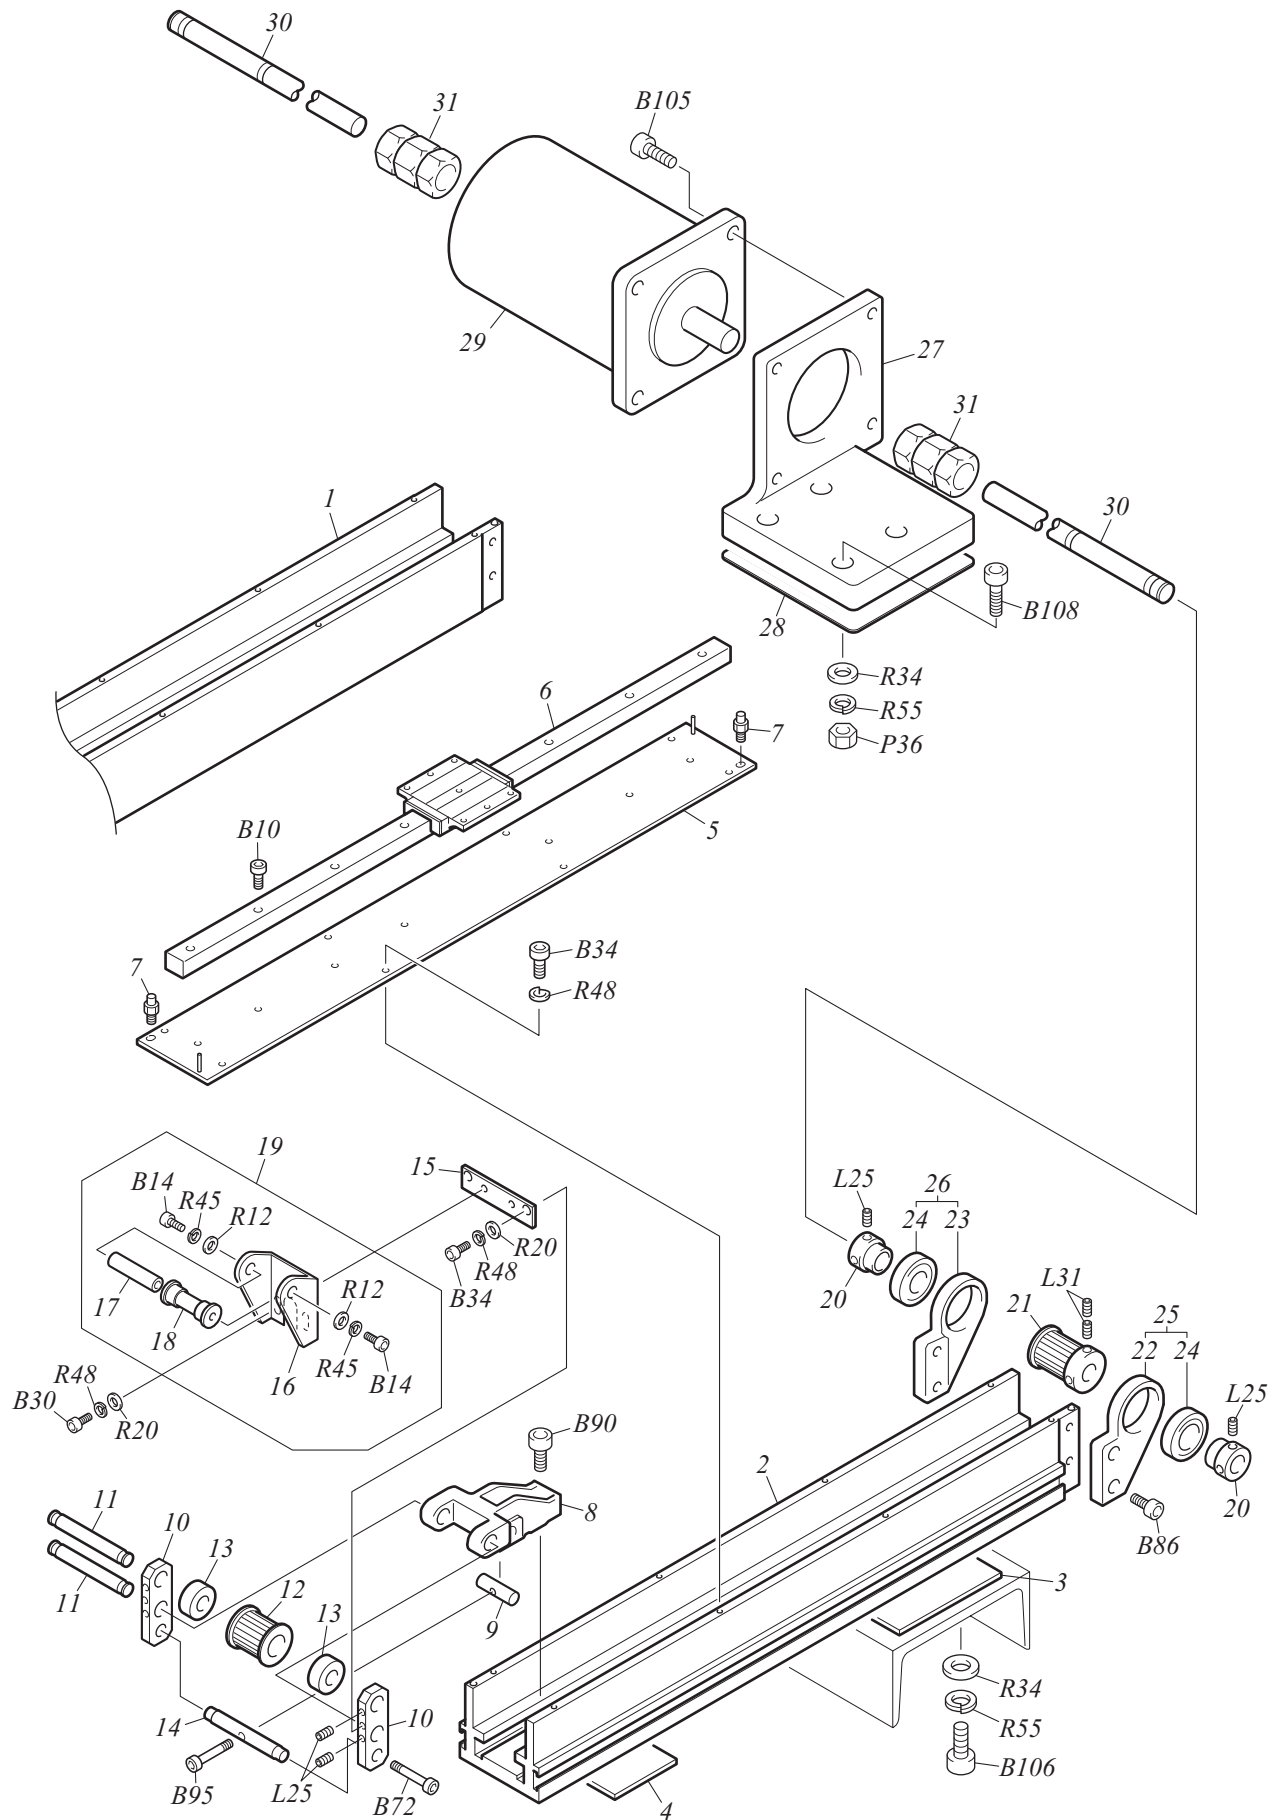


Y-AXIS DRIVE SYSTEM 2

MQ-13-2

No.	Description	Part.No.	Remark
1	Y-DRIVE BASE :NO.1 :Y360	160110200000	
2	Y-DRIVE BASE :NO.2 :Y360	160210180000	
3	SPACER :NO.3 :T0.5-2	51030011@000	
4	SPACER :NO.2 :T0.5-2	51020009@000	
5	LINEAR BASE :Y360	0F0160038000	
6	LINEAR WAY :EY-360	660100470000	
7	STUD :NO.4 :M5-7	505405010010	
8	HOLDER :TENSION PULLEY	0F0120010000	
9	STRAIGHT PIN :NO.1 :12MM DIA.	503101110000	
10	BASE :TENSION PULLEY	0F0120100000	
11	STRAIGHT PIN :NO.4 :12MM DIA.	503104040000	
12	TIMING PULLEY :W35-16[S]	501470050S10	
13	COLLAR :NO.1 :12MM DIA.	502512030000	
14	STRAIGHT PIN :NO.1 :12MM DIA.	503101070000	
15	BASE :ANTI-WARP	0F3290170030	
16	HOLDER :ROLLER	0F3290010020	
17	STRAIGHT PIN :NO.1 :6MM DIA.	503101010000	
18	ROLLER :6MM DIA.	515215010010	
19	HOLDER :ROLLER[A]	0F3290010A20	
20	BEARING COLLAR :15MM DIA.	502715080000	
21	TIMING PULLEY :W35-16	501470030000	
22	BEARING CASE :NO.5 :L	50851706L000	
23	BEARING CASE :NO.5 :R	50851706R000	
24	BEARING :6003ZZ	630200080000	
25	BEARING CASE :NO.5 :L :17MM DIA.[S]	50851706LS00	
26	BEARING CASE :NO.5 :R :17MM DIA.[S]	50851706RS00	
27	BRACKET :X MOTOR	0F0320030010	
28	SPACER :NO.4 :T0.5-2	51040007@000	
29	PULSE MOTOR :106MM DIA. :WITH SENSOR[A]	0J6105700A10	12H360P
29	PULSE MOTOR :106MM DIA. :WITH SENSOR[A]	0J6105800A10	15-18H360P, 12H500P
30	Y SHAFT :15/20MMDIA.	QS6@03010000	For 360P
30	Y SHAFT :15/20MMDIA.	QS6@03020000	For 500P
31	N-COUPLING :N-15-15	504715010000	
32			
33			
34			
35			
36			
37			
38			
39			
40			
41			
42			
43			
44			
45			
46			
47			
48			

Note: As for parts with mark @, please follow our instructions on Table of Contents in your parts order.

(LX05)

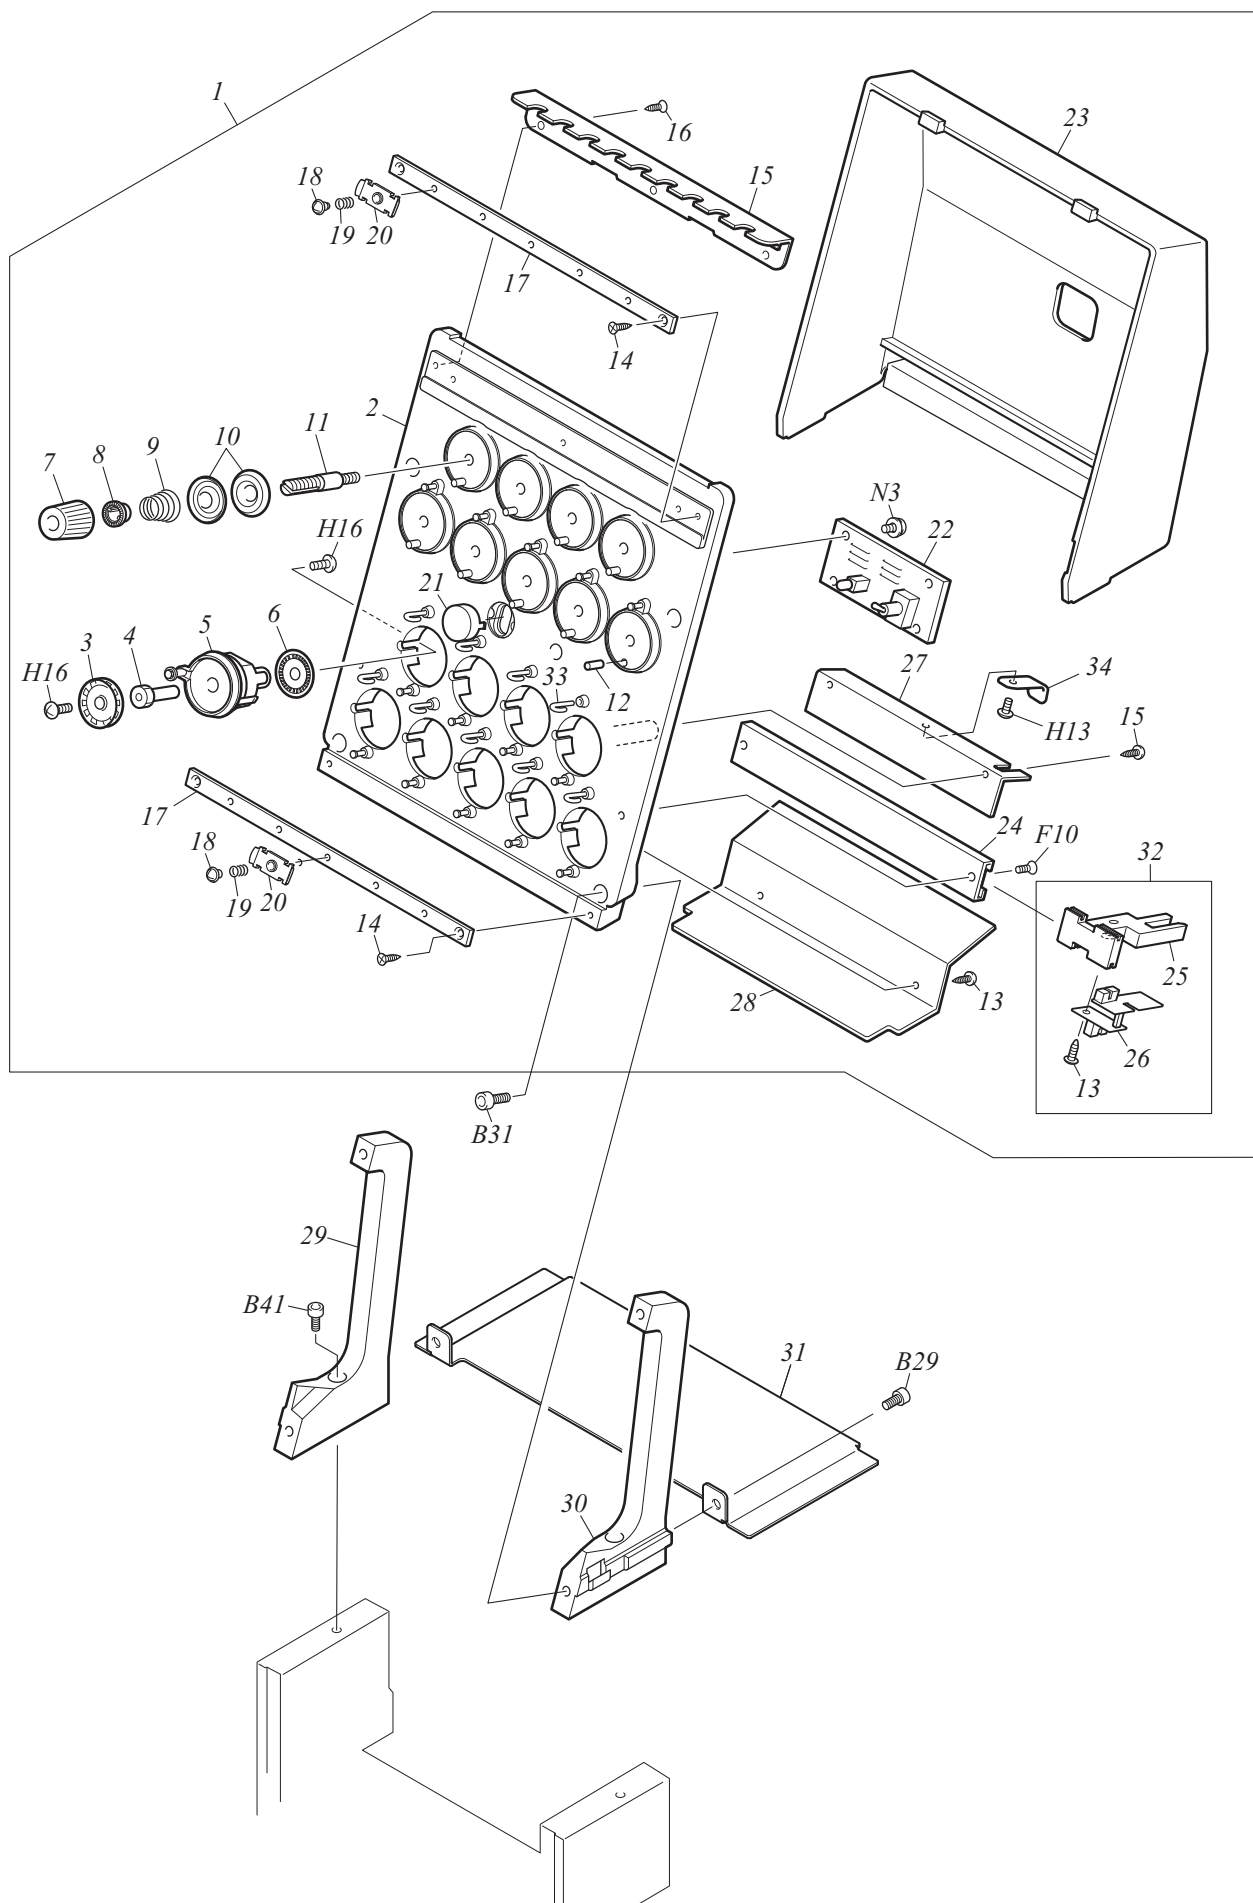


ROTARY-TYPE TENSION BASE

MQ-14

No.	Description	Part.No.	Remark
1	TENSION BASE :ROTARY :TEMX	UC2E@0000000	
2	TENSION BASE :ROTARY[S]	0C012002@S40	
3	ROTARY TENSION DISK	0C0230120010	
4	SHAFT :ROTARY TENSION DISK	0C0230130030	
5	BASE :ROTARY TENSION DISK[S]	0C0230190S10	
6	SLIT PLATE :ROTARY DISK :50	0J4203800000	
7	KNOB :THREAD TENSION :A	0C0220150000	
8	SPRING HOOK	0C0220080000	
9	TAPER SPRING :0.55MM DIA.	507725010010	
10	TENSION DISK	0C0210020000	
11	THREAD TENSION STUD	0C0210010010	
12	STRAIGHT PIN :NO.1 :3MM DIA.	503101100000	
13	TRUSS HEAD TAPPING SCREW :3P*6	S530030601SD	
14	COUNTERSUNK TAPPING SCREW :3P*10	S550031001SD	
15	UPPER THREAD GUIDE :TENSION BASE	0C022017@020	
16	COUNTERSUNK TAPPING SCREW :3P*8	S550030801SD	
17	BASE :THREAD PRESSER	0C022018@010	
18	TRUSS HEAD SCREW :STEPPED :M3*4*2	S132030401TD	
19	TAPER SPRING :0.2MM DIA.	507702010000	
20	THREAD PRESSER	0C0220030010	
21	LAMP COVER :TENSION BASE	0C0250050000	
22	CARD :TENSION BASE	0J2601900010	
23	COVER :TENSION BASE[S]	0C015007@S00	
24	RAIL :THREAD BREAKAGE SENSOR :12-NEEDLE	0C023014Y000	
25	BRACKET :TC SENSOR CARD	0C0230220010	
26	CARD :TC SENSOR	0J2602100010	
27	DISK GUARD :A	0C023020@010	
28	DISK GUARD :C	0C023025@000	
29	BRACKET :TENSION BASE :L[S]	0C024003LS00	
30	BRACKET :TENSION BASE :R[S]	0C024003RS00	
31	TENSION BASE CORD COVER :B	0C054020@000	
32	TC SENSOR[A]	0J2602300A20	
33	THREAD GUIDE :NO.3	0C0220200010	
34	PLATE SPRING :T0.3	507803050000	
35			
36			
37			
38			
39			
40			
41			
42			
43			
44			
45			
46			
47			
48			
49			
50			

Note: As for parts with mark @, please follow our instructions on Table of Contents in your parts order.

(LX05)

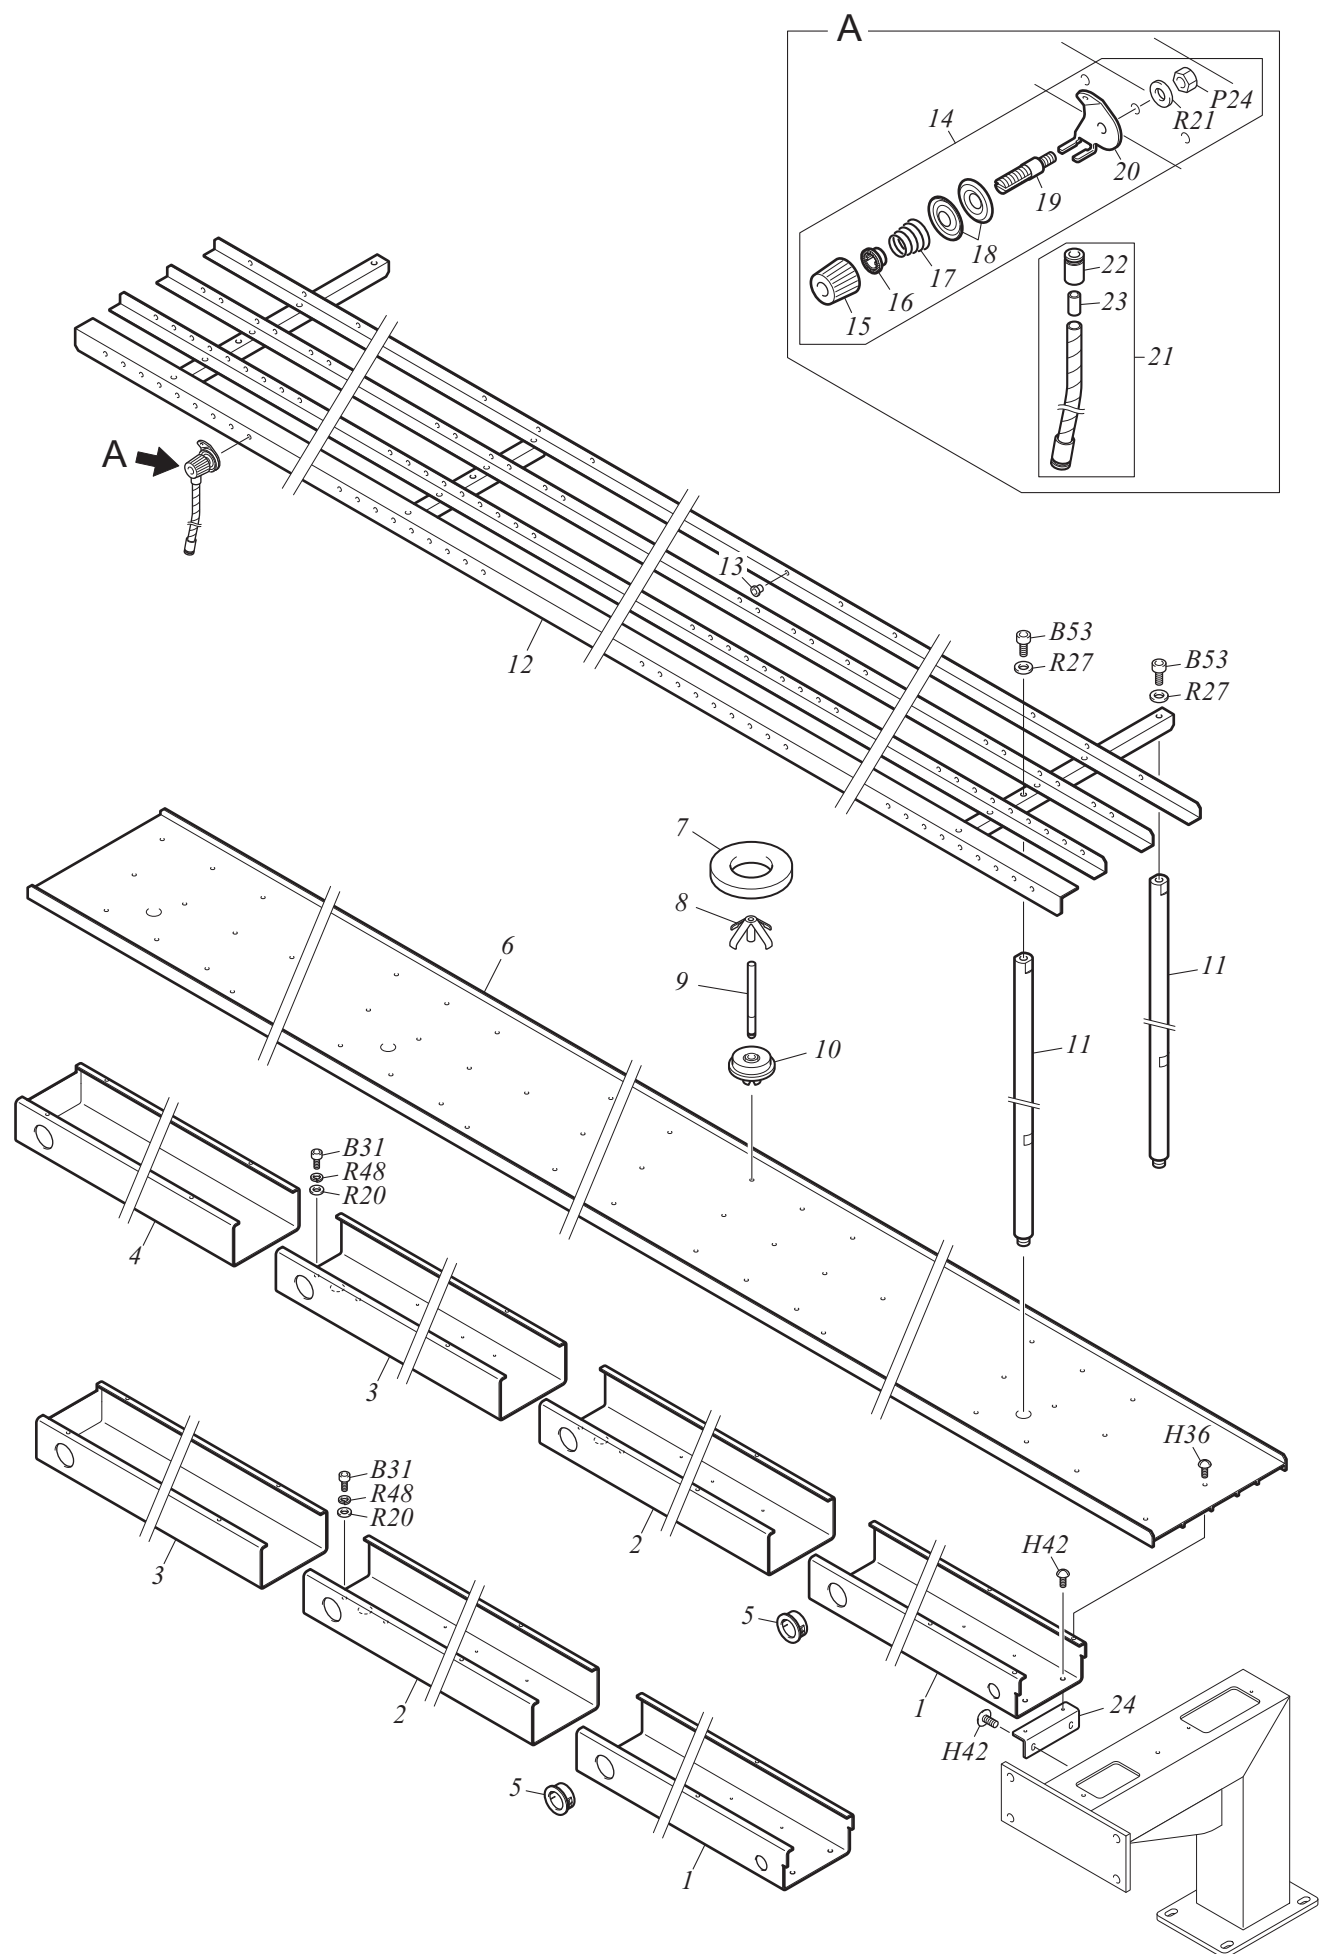


THREAD STAND A

MQ-15a

No.	Description	Part.No.	Remark
1	WIRING DUCT :A :360S	1F2039010000	
1	WIRING DUCT :A :500S	1F2050010000	
2	WIRING DUCT :B	1F2@39010000	For 360P
2	WIRING DUCT :B	1F2@50010000	For 500P
3	WIRING DUCT :C	1F2@39020000	For 360P
3	WIRING DUCT :C	1F2@50020000	For 500P
4	WIRING DUCT :D	1F2@39030000	For 360P
4	WIRING DUCT :D	1F2@50030000	For 500P
5	BUSHING :TB-2533	644501050000	
6	THREAD STAND PLATE	1DC@3901@000	For 360P
6	THREAD STAND PLATE	1DC@5001@000	For 500P
7	FELT :THREAD STAND PLATE	0D0110020000	
8	THREAD STAND BLADE	0D0110010000	
9	THREAD STAND STUD	0D0110410000	
10	BASE :THREAD STAND STUD	0D0110420000	
11	THREAD COURSE SUPPORT BAR :L495	0D0210318010	
12	THREAD COURSE	1EE@3901@000	For 360P
12	THREAD COURSE	1EE@5001@000	For 500P
13	THREAD GUIDE COLLAR :RED :4MM DIA.	516501011000	
13	THREAD GUIDE COLLAR :BLACK :4MM DIA.	516501012000	
14	THREAD TENSION :TUBE	UD1100000000	
15	KNOB :THREAD TENSION :A	0C0220150000	
16	SPRING HOOK	0C0220080000	
17	TAPER SPRING :0.55MM DIA.	507725010010	
18	TENSION DISK	0C0220160010	
19	THREAD TENSION STUD	0C0210010010	
20	THREAD TENSION GUIDE :TUBE	0D0210150020	
21	SPIRAL TUBE :L240[A]	0D0210053A00	
22	JOINT :SPIRAL TUBE	0D0210130000	
23	COLLAR :NO.1 :5MM DIA.	0D0210140000	
24	BRACKET :WIRING DUCT	030110310000	
25			
26			
27			
28			
29			
30			
31			
32			
33			
34			
35			
36			
37			
38			
39			
40			
41			
42			
43			


Note: As for parts with mark @, please follow our instructions on Table of Contents in your parts order.

(LX05)

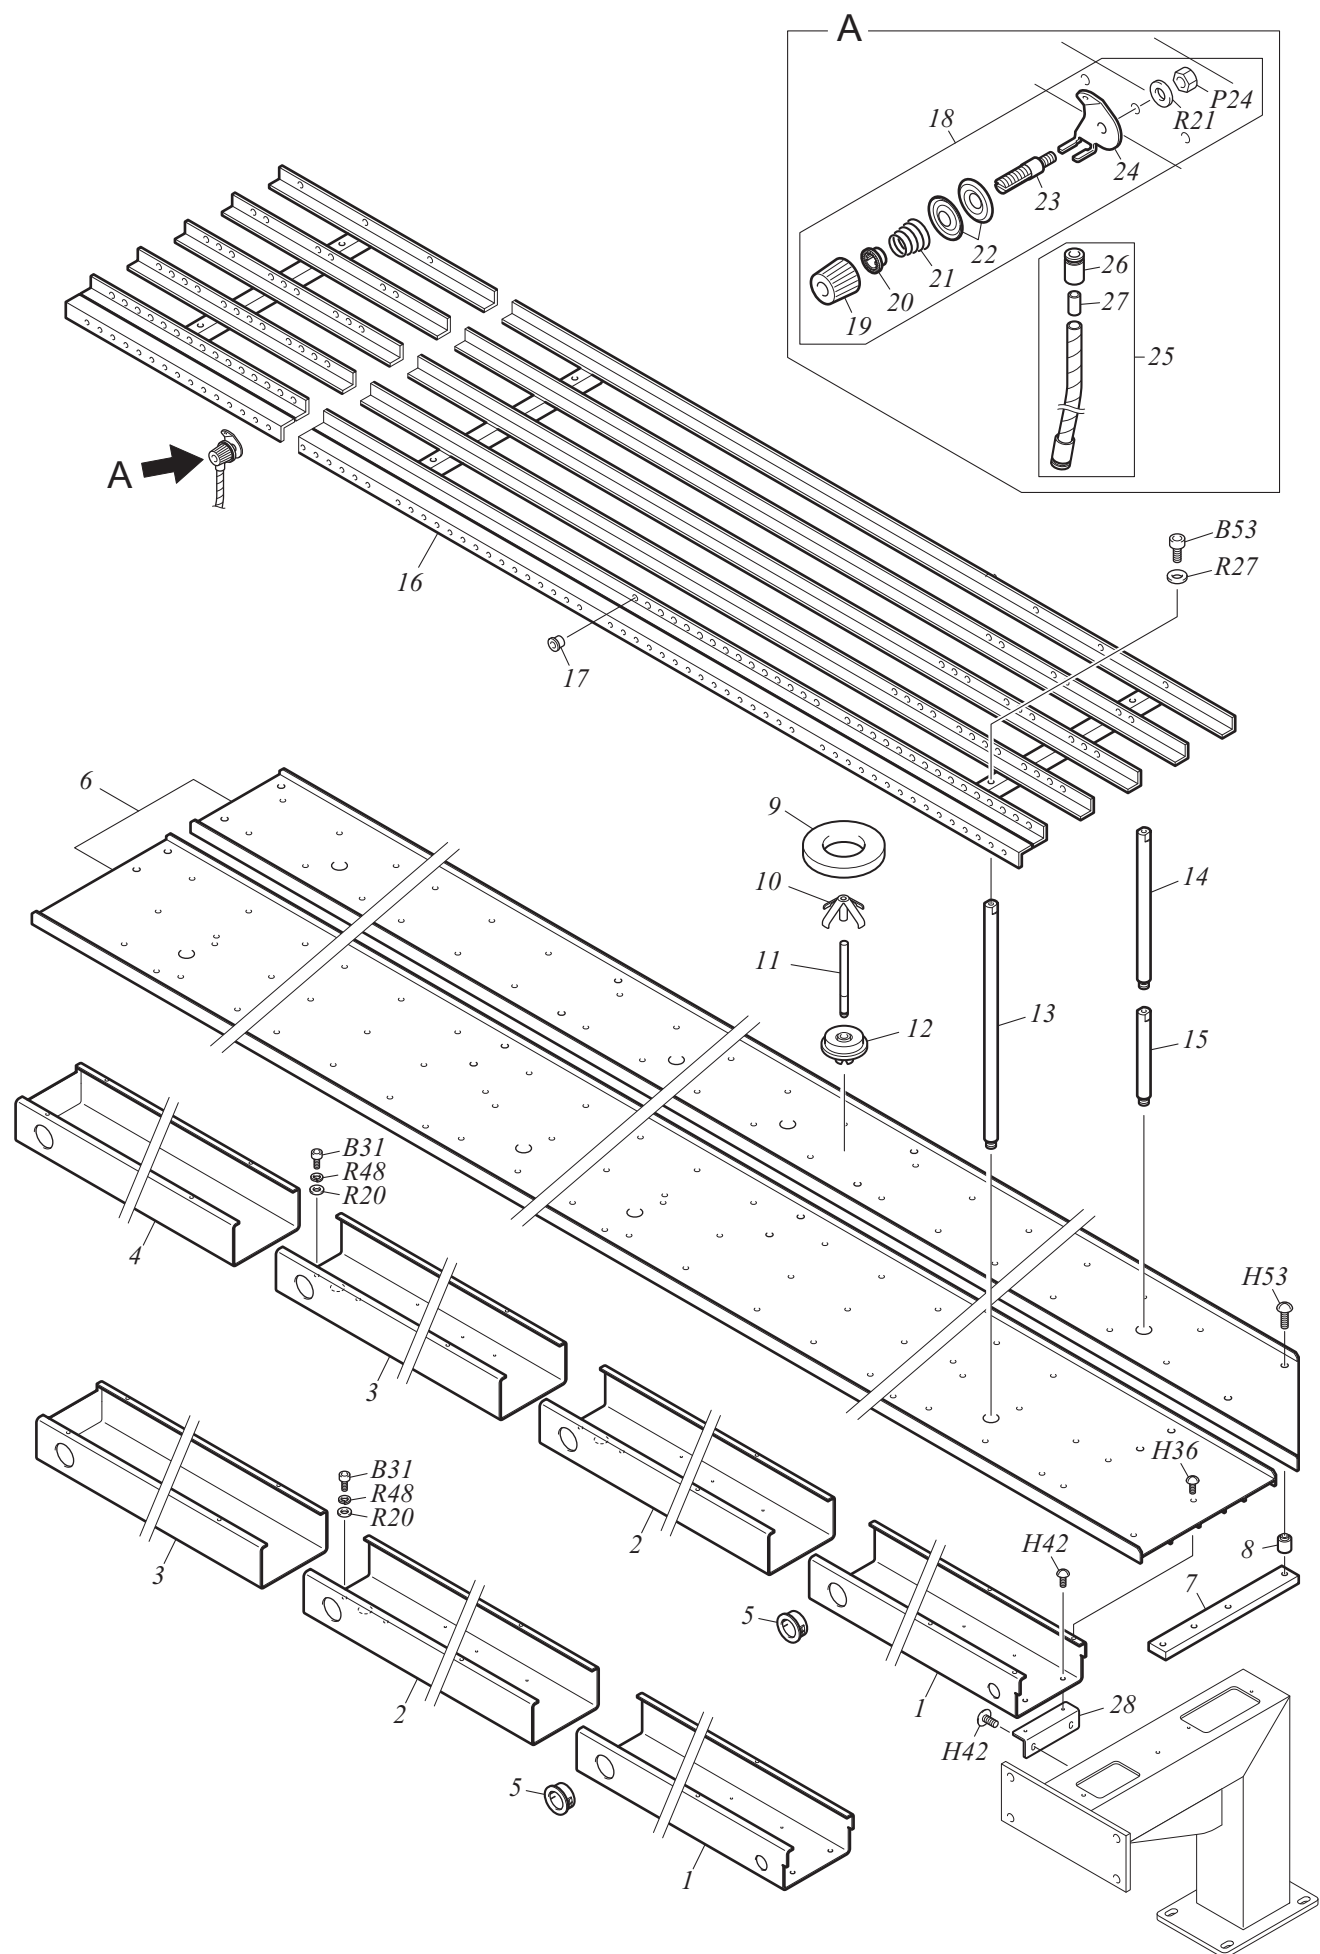

THREAD STAND B (FOR 15-NEEDLE M/C) MQ-15b

No.	Description	Part.No.	Remark
1	WIRING DUCT :A :360S	1F2039010000	
1	WIRING DUCT :A :500S	1F2050010000	
2	WIRING DUCT :B	1F2@39010000	For 360P
2	WIRING DUCT :B	1F2@50010000	For 500P
3	WIRING DUCT :C	1F2@39020000	For 360P
3	WIRING DUCT :C	1F2@50020000	For 500P
4	WIRING DUCT :D	1F2@39030000	For 360P
4	WIRING DUCT :D	1F2@50030000	For 500P
5	BUSHING :TB-2533	644501050000	
6	THREAD STAND PLATE	1DC@3902X000	For 360P
6	THREAD STAND PLATE	1DC@5002X000	For 500P
7	BASE :THREAD STAND PLATE	0D0110460000	
8	COLLAR :NO.2 :7MM DIA.	502607010000	
9	FELT :THREAD STAND PLATE	0D0110020000	
10	THREAD STAND BLADE	0D0110010000	
11	THREAD STAND STUD	0D0110410000	
12	BASE :THREAD STAND STUD	0D0110420000	
13	THREAD COURSE SUPPORT BAR :L495	0D0210318010	
14	THREAD COURSE SUPPORT BAR :REAR	0D0210340000	
15	STUD :THREAD STAND PLATE	0D0110470000	
16	THREAD COURSE	1EE@3902X000	For 360P
16	THREAD COURSE	1EE@5002X000	For 500P
17	THREAD GUIDE COLLAR :RED :4MM DIA.	516501011000	
17	THREAD GUIDE COLLAR :BLACK :4MM DIA.	516501012000	
18	THREAD TENSION :TUBE	UD1100000000	
19	KNOB :THREAD TENSION :A	0C0220150000	
20	SPRING HOOK	0C0220080000	
21	TAPER SPRING :0.55MM DIA.	507725010010	
22	TENSION DISK	0C0220160010	
23	THREAD TENSION STUD	0C0210010010	
24	THREAD TENSION GUIDE :TUBE	0D0210150020	
25	SPIRAL TUBE :L240[A]	0D0210053A00	
26	JOINT :SPIRAL TUBE	0D0210130000	
27	COLLAR :NO.1 :5MM DIA.	0D0210140000	
28	BRACKET :WIRING DUCT	030110310000	
29			
30			
31			
32			
33			
34			
35			
36			
37			
38			
39			
40			
41			
42			
43			

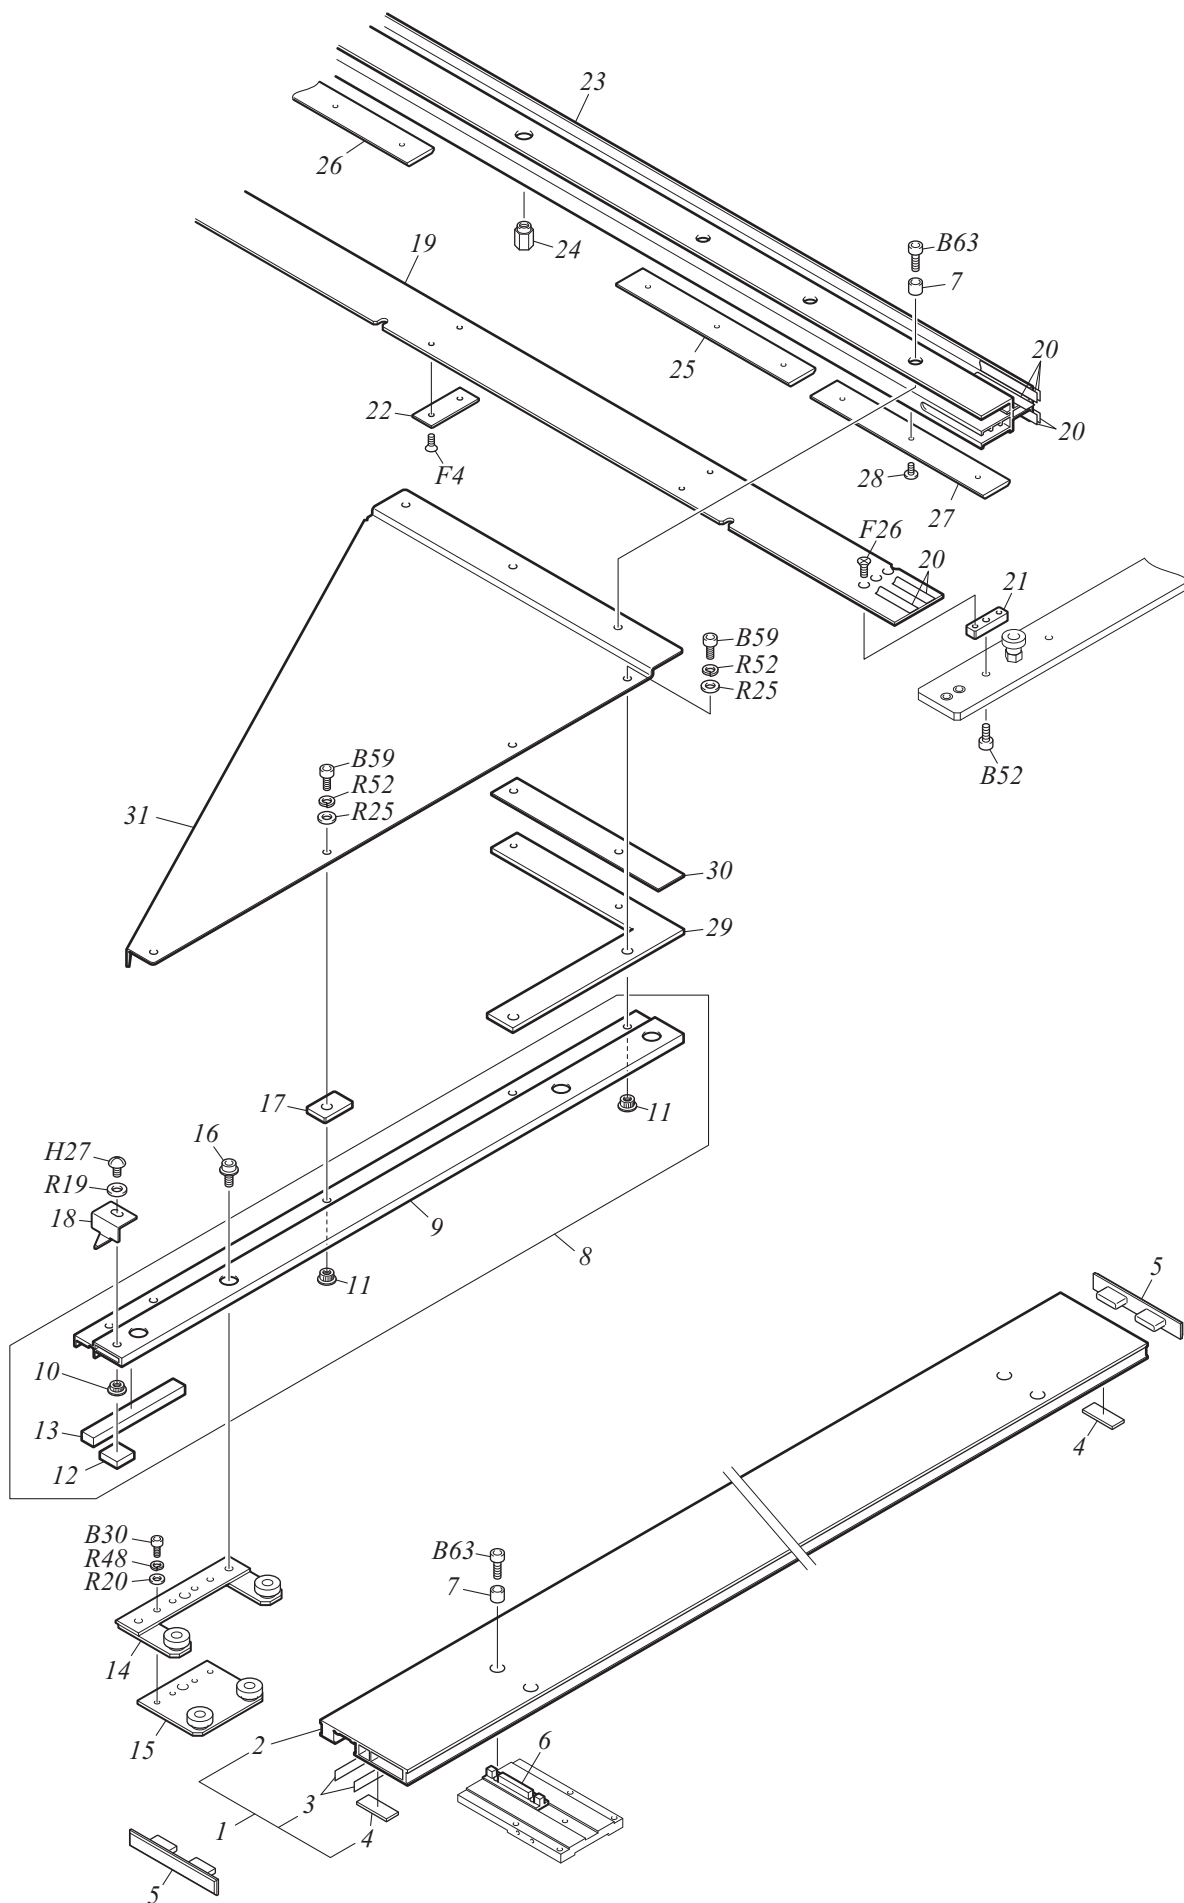


BASE SASH

MQ-16

No.	Description	Part.No.	Remark
1	XZ SASH :Y360[S]	361105010S00	
2	XZ SASH :Y360	361105010000	
3	RAIL PLATE :0.5*10*870	518102450000	
4	FELT :Z-SPEC. FRAME SASH	0G0140030000	
5	COVER :Z-SPEC. FRAME SASH	0G0120040010	
6	SPACER :Z-SPEC. FRAME SASH	0G0110030000	
7	HOLDER BUSHING :M5	509905010010	
8	GUIDE PLATE :COMMON USE BASE FRAME :Y360[S]	0G2210360S00	
9	GUIDE PLATE :COMMON USE BASE FRAME :Y360	0G2210360000	
10	SCREW BUSHING :NO.2 :M5	509805030000	
11	SCREW BUSHING :NO.2 :M5	509805090010	
12	CORK	0G2210140000	
13	FELT :18*7.5	0G0240060000	
14	BRACKET :BEARING :UPPER[S]	0G0280010S00	
15	BRACKET :BEARING :LOWER[S]	0G0280020S10	
16	HEXAGON SOCKET HEAD FLANGE SCREW :M6*8	S123060801TD	
17	SPACER :Z-SPEC. ROLLER CONNECTOR	0G2210290000	
18	POINTER :EMBROIDERY FRAME	0G0270080000	
19	BASE PLATE	345@39020000	For 360P
19	BASE PLATE	345@50010000	For 500P
20	RAIL PLATE :0.5*10	518102@@0000	
21	BRACKET :BASE PLATE	0G2210390000	
22	SLIDE PLATE :L50	0G2210020000	
23	SLIDE BASE	346@39010000	For 360P
23	SLIDE BASE	346@50010000	For 500P
24	BUSHING :HEXAGON	0G2210130000	
25	SLIDE PLATE	0G221006@000	
26	SLIDE PLATE	0G221008@000	
27	SLIDE PLATE	0G221010@000	
28	FLAT FILLISTER HEAD SCREW :M3*4.3	511103010000	
29	CORNER	0G2210380000	
30	SPACER :NO.2 :T1.5	510200480000	
31	COVER :CORNER	0G2210370000	
32			
33			
34			
35			
36			
37			
38			
39			
40			
41			
42			
43			
44			
45			
46			
47			
48			

Note: As for parts with mark @, please follow our instructions on Table of Contents in your parts order.

(LX05)

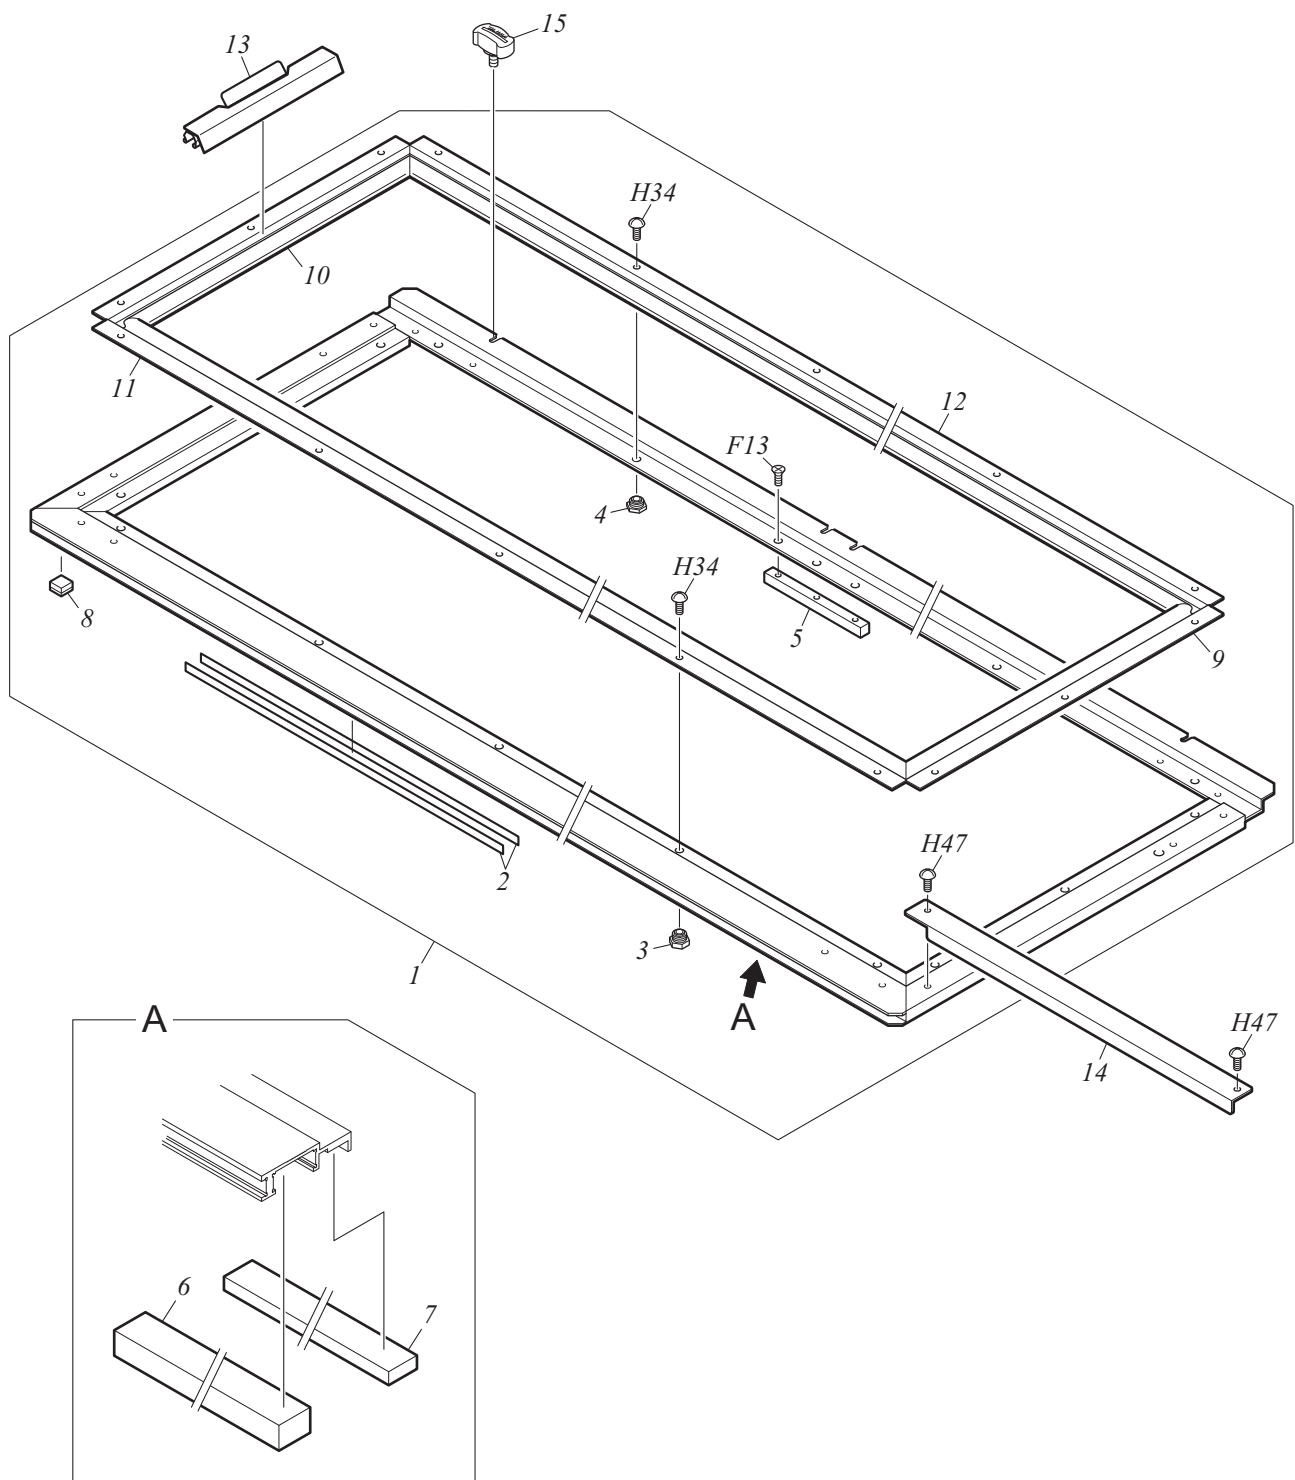


BORDER FRAME

MQ-17

No.	Description	Part.No.	Remark
1	COMMON-USE BORDER FRAME[A]	347@39010A00	For 360P
1	COMMON-USE BORDER FRAME[A]	347@50010A00	For 500P
2	RAIL PLATE :0.5*10	518102@@0000	
3	SCREW BUSHING :NO.2 :M4	0G0260020000	
4	SCREW BUSHING :NO.2 :M4	0G2210160000	
5	FRAME HOLDER BLOCK	0G2110130010	
6	FELT :20*14*50	0G0240110000	
7	FELT :18*7.5*50	0G0240130000	
8	CORK :CORNER :T10.3[S]	0G0230120S00	
9	BORDER FRAME LENGTHWISE SASH :R :Y360	0G1140010000	
10	BORDER FRAME LENGTHWISE SASH :L :Y360	0G1150010000	
11	BORDER FRAME CROSSWISE SASH :FRONT	0G1210040000	
12	BORDER FRAME CROSSWISE SASH :REAR	0G1220040000	
13	BORDER FRAME CLIP :BFF6 :L180-300	0G052007@040	
14	JOINT :BORDER FRAME :P275-500[S]	0G221040@S00	
15	KNOBBED SCREW :NO.2 :M5*9[S]	511F05080S10	
16			
17			
18			
19			
20			
21			
22			
23			
24			
25			
26			
27			
28			
29			
30			
31			
32			
33			
34			
35			
36			
37			
38			
39			
40			
41			
42			
43			
44			
45			
46			
47			
48			
49			

Note: As for parts with mark @, please follow our instructions on Table of Contents in your parts order.

(LX05)

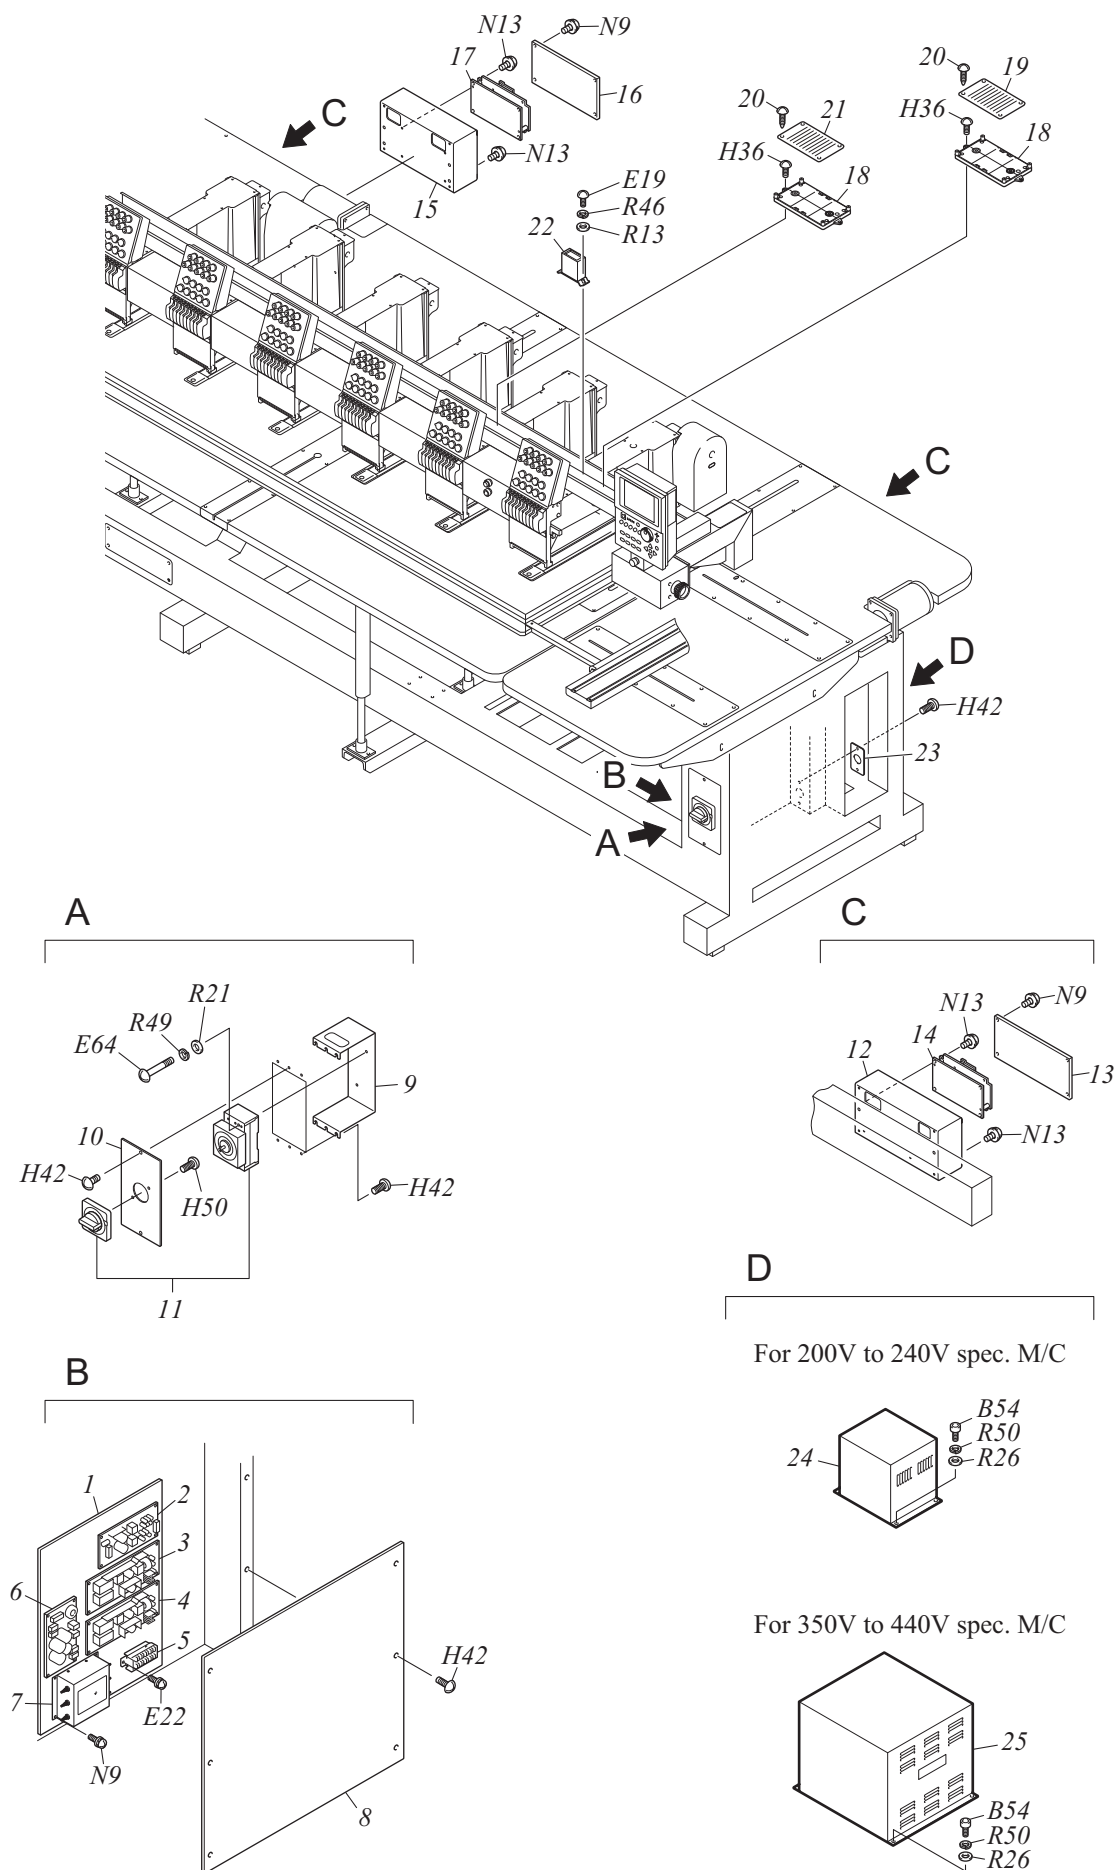


ELECTRICAL PARTS

MQ-18

No.	Description	Part.No.	Remark
1	BASE :CARD	030190360000	
2	DC POWER SUPPLY :5V +/-12V	645300030000	
3	DC POWER SUPPLY :24V :240W	645300220011	
4	DC POWER SUPPLY :24V	645300191011	For 12-Head
4	DC POWER SUPPLY :24V :240W	645300220011	For 15, 18-Head
5	TERMINAL BASE :9P	643400080011	
6	CARD :POWER SUPPLY :3-PHASE :A	0J2102200010	
7	NOISE FILTER :3-PHASE	641400100000	
8	COVER :ELECTRICAL COMPONENT	030150260000	
9	BRACKET :BREAKER	0J1106700000	
10	COVER :BREAKER	0J1106800000	
11	NO FUSE BREAKER :3-PHASE[T]	646100150T00	
12	BOX :Y DRIVER	030190250000	
13	COVER :Y DRIVER	030190260000	
14	DRIVER :X12-L[A]	0J0302900A00	
15	BOX :MAIN SHAFT DRIVER	030190370000	
16	COVER :MAIN SHAFT DRIVER	030190380000	
17	DRIVER :X12-K[A]	0J0302800A00	
18	BRACKET :HEAD CARD	0J1941800000	
19	CARD :MACHINE :S5A	0J2503300010	
20	TRUSS HEAD TAPPING SCREW :3P*8	S530030801SD	
21	CARD :HEAD :S5B	0J2703300000	
22	COUNTER :ELECTRO-MAGNETIC	0J4500200010	
23	HOLDER HARNESS :A	03014003A010	
24	TRANSFORMER :FLUORESCENT LAMP :4[A]	0J0800300A00	3-phase 200 to 240V
25	TRANSFORMER :SEPARATE :X16[A]	0J0902500A00	3-phase 350 to 440V
26			
27			
28			
29			
30			
31			
32			
33			
34			
35			
36			
37			
38			
39			
40			
41			
42			
43			
44			
45			
46			
47			
48			
49			

Note: As for parts with mark @, please follow our instructions on Table of Contents in your parts order.

(LX05)

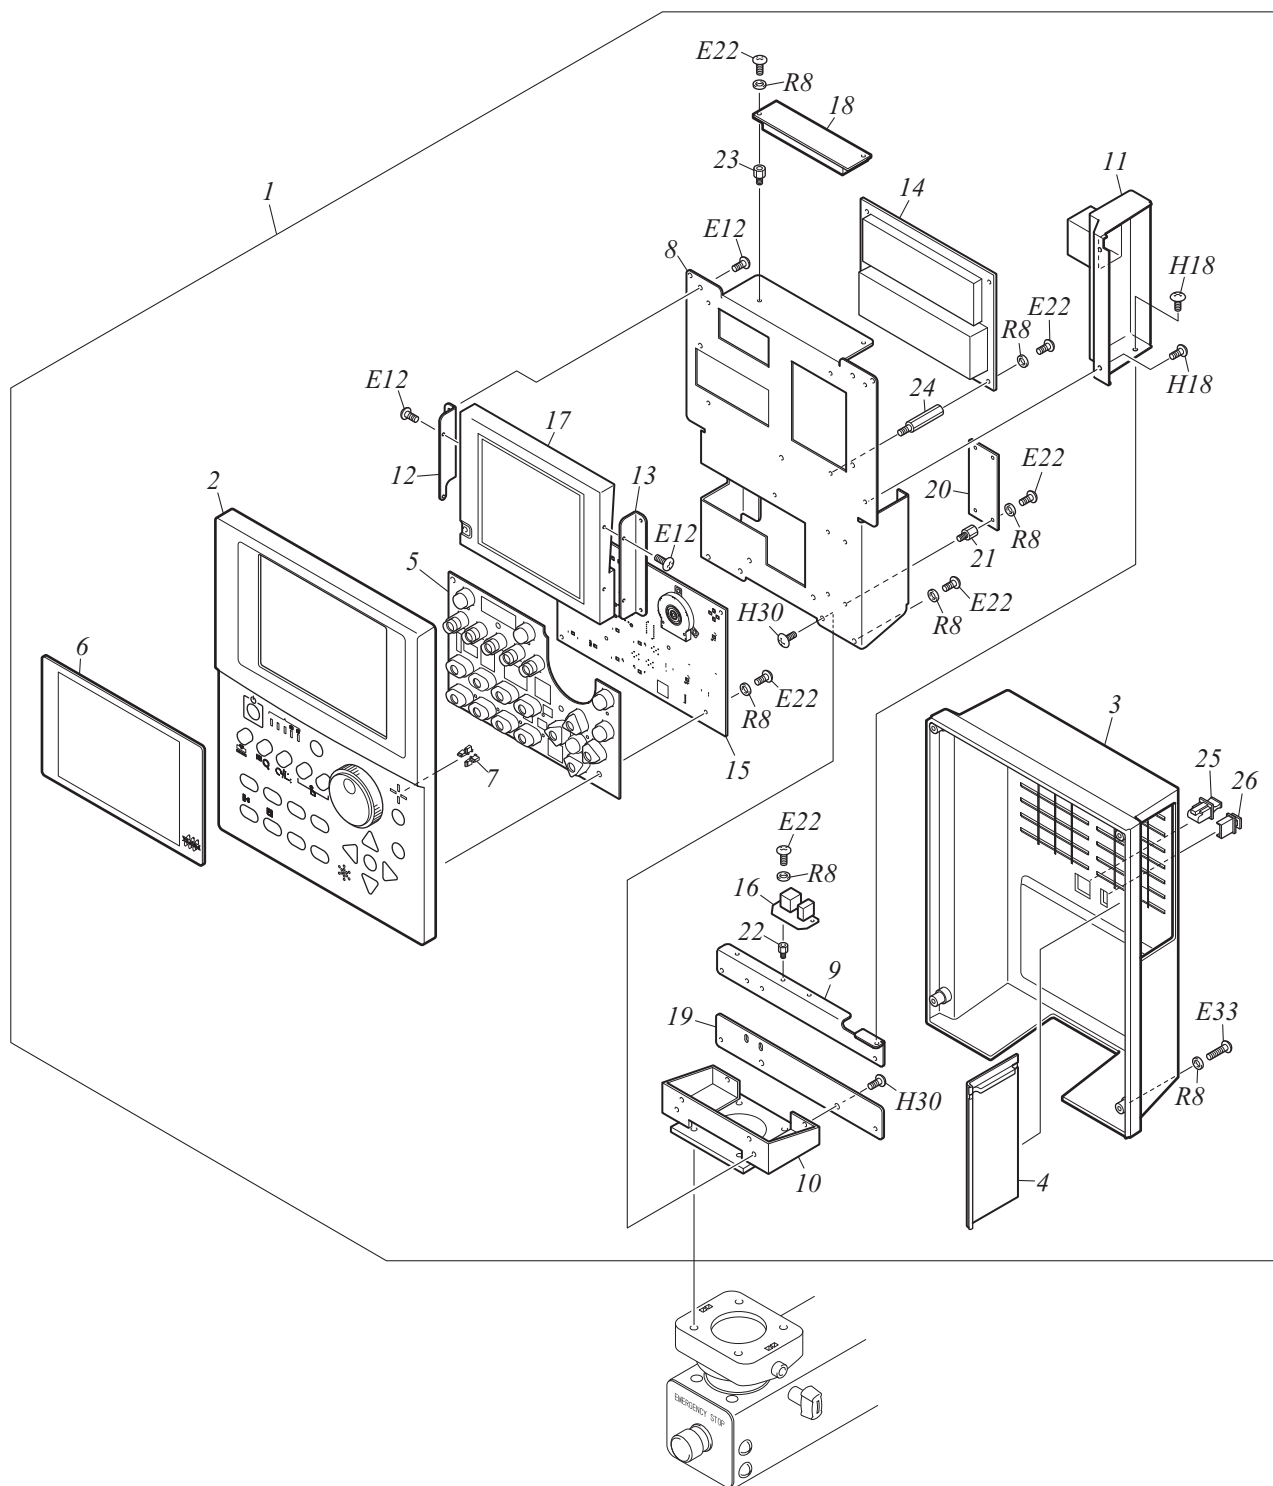

OPERATION PANEL

MQ-19

No.	Description	Part.No.	Remark
1	CONTROLLER :X16-J[A]	0J0204000A00	Japanese
1	CONTROLLER :X16-E[A]	0J0204001A00	English
2	OPERATION PANEL :FRONT[S]	0J1404200S10	
3	OPERATION PANEL :REAR	0J1404300000	
4	SHUTTER :FDD	0J1404400000	
5	OPERATION BUTTON	0J1404500000	
6	COVER :LCD PANEL	0J1404600010	
7	COVER :LAMP	0J1404700000	
8	BASE :CARD	0J1407600000	
9	SUPPORT :CARD BASE	0J1406500020	
10	BASE :OPERATION PANEL[S]	0J1405000S00	
11	COVER :USB	0J1408500000	
12	BRACKET :LCD :L	0J14077L0000	
13	BRACKET :LCD :R	0J14077R0000	
14	CARD :CPU-J :X16[A]	0J2304802A10	Japanese
14	CARD :CPU-E :X16[A]	0J2304803A10	English
15	CARD :SWITCH	0J3502000010	
16	CARD :I/F CONNECTOR	0J3200700010	
17	LCD :6.5 INCH	641200140000	
18	INVERTER :BACKLIGHT	645500160000	
19	SUPPORT :PANEL BASE	0J1406600020	
20	CARD :CAPACITOR	0J3502600010	
21	SPACER :HEXAGON	644500880000	
22	SPACER :HEXAGON	644500300000	
23	SPACER :HEXAGON	644500360000	
24	SPACER :HEXAGON :BSB-320	644500620000	
25	DUST CAP :USB	644500490000	
26	DUST CAP :LAN	644500500000	
27			
28			
29			
30			
31			
32			
33			
34			
35			
36			
37			
38			
39			
40			
41			
42			
43			
44			
45			
46			
47			
48			

Note: As for parts with mark @, please follow our instructions on Table of Contents in your parts order.

(LX05)



MAIN SHAFT MOTOR

MQ-20

No.	Description	Part.No.	Remark
1	SERVO MOTOR :1.5KW	0J6300700000	
2	BRACKET :MAIN SHAFT MOTOR	040240380000	
3	BASE :MAIN SHAFT MOTOR :C[S]	040240340S00	
4	BASE :MAIN SHAFT MOTOR :A	040240320000	
5	BASE :MAIN SHAFT MOTOR :B	040240330000	
6	BASE :MAIN SHAFT MOTOR :D	040240350000	
7	BEARING COLLAR :18MM DIA.	502718010010	
8	TIMING PULLEY :W35-18	501471050000	
9	COVER :MOTOR BASE	040240360000	
10	COVER :MAIN SHAFT MOTOR	040240390000	
11	TIMING BELT :SPTG :W35-S5M0975/G	623500080000	
12	TIMING PULLEY :W35-60	501474020010	
13	SPECIAL SCREW :UNBRAKO :KCP :M8*16	690200050000	
14	HOLDER :TENSION ROLLER	040240400000	
15	STRAIGHT PIN :NO.1 :15MM DIA.	503101450000	
16	FLAT PULLEY :45MM DIA.	501905030000	
17	BEARING :6202ZZ	630200150000	
18	COVER :PULLEY :L	04024037L000	
19	COVER :PULLEY :R	04024037R000	
20	PULLEY COVER :360P-	04024041@000	
21	RUBBER BUSHING :PULLEY COVER :360P-	04024042@000	
22			
23			
24			
25			
26			
27			
28			
29			
30			
31			
32			
33			
34			
35			
36			
37			
38			
39			
40			
41			
42			
43			
44			
45			
46			
47			
48			
49			
50			

Note: As for parts with mark @, please follow our instructions on Table of Contents in your parts order.

(LX05)

No.	Part No.	Remark	No.	Part No.	Remark
<i>A</i>	Flat Fillister Head Screw		<i>B12</i>	S120030802TN	M3*8
<i>A1</i>	SA41730351CN	1/8*44*3.5	<i>B13</i>	S120031001TD	M3*10
<i>A2</i>	SA41730501CN	1/8*44*5	<i>B14</i>	S120031002TN	M3*10
<i>A3</i>	SA41730551CN	1/8*44*5.5	<i>B15</i>	S120031203TD	M3*12
<i>A4</i>	SA41730601CN	1/8*44*6	<i>B16</i>	S120031201TN	M3*12
<i>A5</i>	SA41740301CN	9/64*40*3	<i>B17</i>	S120031502TD	M3*15
<i>A6</i>	SA41740402CN	9/64*40*4	<i>B18</i>	S120031501TN	M3*15
<i>A7</i>	SA41740401SA	9/64*40*4	<i>B19</i>	S120031601TN	M3*16
<i>A8</i>	SA41740403CL	9/64*40*4	<i>B20</i>	S120031801TN	M3*18
<i>A9</i>	SA41740404CN	9/64*40*4	<i>B21</i>	S120032003TD	M3*20
<i>A10</i>	SA41740501CN	9/64*40*5	<i>B22</i>	S120032001TN	M3*20
<i>A11</i>	SA41740601CN	9/64*40*6	<i>B23</i>	S120032501TN	M3*25
<i>A12</i>	SA41740602CN	9/64*40*6	<i>B24</i>	S120033001TN	M3*30
<i>A13</i>	SA41740701CN	9/64*40*7	<i>B25</i>	S120040501TD	M4*5
<i>A14</i>	SA41740801CN	9/64*40*8	<i>B26</i>	S120040502TN	M4*5
<i>A15</i>	SA41740802CN	9/64*40*8	<i>B27</i>	S120040602TD	M4*6
<i>A16</i>	SA41740803CN	9/64*40*8	<i>B28</i>	S120040601TN	M4*6
<i>A17</i>	SA41741001CN	9/64*40*10	<i>B29</i>	S120040801TD	M4*8
<i>A18</i>	SA41741202CN	9/64*40*12	<i>B30</i>	S120040802TN	M4*8
<i>A19</i>	SA41741501CN	9/64*40*15	<i>B31</i>	S120041001TD	M4*10
<i>A20</i>	SA41750431TN	11/64*40*4.3	<i>B32</i>	S120041002TN	M4*10
<i>A21</i>	SA41750701CN	11/64*40*7	<i>B33</i>	S120041201TD	M4*12
<i>A22</i>	SA41750751CN	11/64*40*7.5	<i>B34</i>	S120041202TN	M4*12
<i>A23</i>	SA41750901SH	11/64*40*9	<i>B35</i>	S120041401TN	M4*14
<i>A24</i>	SA41751151CN	11/64*40*11.5	<i>B36</i>	S120041502TD	M4*15
<i>A25</i>	SA41751201CN	11/64*40*12	<i>B37</i>	S120041501TN	M4*15
<i>A26</i>	S141030801SC	M3*8	<i>B38</i>	S120041601TN	M4*16
<i>A27</i>	S141030802SD	M3*8	<i>B39</i>	S120041801TN	M4*18
<i>A28</i>	S141031001CC	M3*10	<i>B40</i>	S120042002TD	M4*20
<i>A29</i>	S141041001SC	M4*10	<i>B41</i>	S120042001TN	M4*20
			<i>B42</i>	S120042502TD	M4*25
			<i>B43</i>	S120042501TN	M4*25
			<i>B44</i>	S120042504TN	M4*25
			<i>B45</i>	S120043001TN	M4*30
			<i>B46</i>	S120043502TD	M4*35
			<i>B47</i>	S120043501TN	M4*35
			<i>B48</i>	S120044001TN	M4*40
			<i>B49</i>	S120044501TN	M4*45
<i>B</i>	Hexagon Socket Head Cap Screw		<i>B50</i>	S120050601TN	M5*6
<i>B1</i>	S120020801TD	M2*8	<i>B51</i>	S120050801TD	M5*8
<i>B2</i>	S120021001TD	M2*10	<i>B52</i>	S120050802TN	M5*8
<i>B3</i>	S120480501TN	M2.6*5	<i>B53</i>	S120051001TD	M5*10
<i>B4</i>	S120030301TN	M3*3	<i>B54</i>	S120051002TN	M5*10
<i>B5</i>	S120030401TN	M3*4	<i>B55</i>	S120051004TP	M5*10
<i>B6</i>	S120030502TD	M3*5	<i>B56</i>	S120051201TD	M5*12
<i>B7</i>	S120030501TN	M3*5	<i>B57</i>	S120051202TN	M5*12
<i>B8</i>	S120030601TD	M3*6	<i>B58</i>	S120051401TN	M5*14
<i>B9</i>	S120030602TN	M3*6	<i>B59</i>	S120051501MZ	M5*15
<i>B10</i>	S120030804MZ	M3*8	<i>B60</i>	S120051502TD	M5*15
<i>B11</i>	S120030801TD	M3*8	<i>B61</i>	S120051503TN	M5*15

B.C

No.	Part No.	Remark	No.	Part No.	Remark
B	Hexagon Socket Head	Cap Screw	B111	S120084501TN	M8*45
B62	S120051601TN	M5*16	B112	S120084502TN	M8*45
B63	S120051801TN	M5*18	B113	S120085001TN	M8*50
B64	S120052001TD	M5*20	B114	S120086001TN	M8*60
B65	S120052002TN	M5*20	B115	S120087001TN	M8*70
B66	S120052201TN	M5*22	B116	S120102002TD	M10*20
B67	S120052301TN	M5*23	B117	S120102001TN	M10*20
B68	S120052501TN	M5*25	B118	S120102501TN	M10*25
B69	S120053001TN	M5*30	B119	S120103001TN	M10*30
B70	S120053503TD	M5*35	B120	S120103501TN	M10*35
B71	S120053501TN	M5*35	B121	S120104001TN	M10*40
B72	S120053502TN	M5*35	B122	S120123001TN	M12*30
B73	S120054001TN	M5*40	B123	S120123501TN	M12*35
B74	S120054501TN	M5*45	B124	S120081801TN	M8*18
B75	S120055001TN	M5*50	B125	S120470501TN	M2.5*5
B76	S120055002TN	M5*50	B126	S120052502TD	M5*25
B77	S120055501TN	M5*55	B127	S120030302TD	M3*3
B78	S120056001TN	M5*60	B128	S120051504TN	M5*15 LOW HEAD
B79	S120056003TN	M5*60			
B80	S120060801TN	M6*8			
B81	S120060901TN	M6*9			
B82	S120061001TN	M6*10			
B83	S120061202TD	M6*12			
B84	S120061201TN	M6*12			
B85	S120061501TD	M6*15	C	Hexagon Bolt	
B86	S120061502TN	M6*15	C1	S121030601SD	M3*6
B87	S120061801TD	M6*18	C2	S121040801SD	M4*8
B88	S120061802TN	M6*18	C3	S121042501SD	M4*25
B89	S120062001TN	M6*20	C4	S121051001SD	M5*10
B90	S120062501TN	M6*25	C5	S121051502SC	M5*15
B91	S120063001TN	M6*30	C6	S121051501SD	M5*15
B92	S120063501TN	M6*35	C7	S121052001SD	M5*20
B93	S120064001TN	M6*40	C8	S121061501SC	M6*15
B94	S120064501TN	M6*45	C9	S121062501TN	M6*25
B95	S120064502TN	M6*45	C10	S121064501SD	M6*45
B96	S120065001TN	M6*50	C11	S121065001SC	M6*50
B97	S120066501TN	M6*65	C12	S121065002SD	M6*50
B98	S120067501TN	M6*75	C13	S121065501SD	M6*55
B99	S120068001TN	M6*80	C14	S121066501SD	M6*65
B100	S12006A001TN	M6*100	C15	S121067501SC	M6*75
B101	S120081201TN	M8*12	C16	S121081501TN	M8*15
B102	S120081502TN	M8*15	C17	S121081801TN	M8*18
B103	S120081503TP	M8*15	C18	S121103001TN	M10*30
B104	S120081601TN	M8*16	C19	S121103502SC	M10*35
B105	S120082001TN	M8*20	C20	S121103501TN	M10*35
B106	S120082502TN	M8*25	C21	S121104001SC	M10*40
B107	S120083001TN	M8*30	C22	S121125001TN	M12*50
B108	S120083501TN	M8*35	C23	S12112B001TN	M12*110
B109	S120084001TN	M8*40	C24	S121082501TN	M8*25
B110	S120084002TN	M8*40	C25	S121102501TN	M10*25

No.	Part No.	Remark	No.	Part No.	Remark
D	Round Fillister Head Screw		E23	S160030801MZ	M3*8
D1	SA43740401CL	9/64*40*4	E24	S160030803SA	M3*8
D2	SA43740501CL	9/64*40*5	E25	S160030802SD	M3*8
D3	SA43740502CN	9/64*40*5	E26	S160031001MZ	M3*10
D4	SA43740503CN	9/64*40*5	E27	S160031003SC	M3*10
D5	SA43740504CN	9/64*40*5	E28	S160031002SD	M3*10
D6	SA43740601CL	9/64*40*6	E29	S160031101SC	M3*11
D7	SA43740602CN	9/64*40*6	E30	S160031201MZ	M3*12
D8	SA43740603CL	9/64*40*6	E31	S160031202SD	M3*12
D9	SA43740604CN	9/64*40*6	E32	S160031401SA	M3*14
D10	SA43740682CN	9/64*40*6.8	E33	S160031402SD	M3*14
D11	SA43740801CL	9/64*40*8	E34	S160031501SD	M3*15
D12	SA43740802CN	9/64*40*8	E35	S160031601SD	M3*16
D13	SA43741001CN	9/64*40*10	E36	S160031801SD	M3*18
D14	SA43741201CN	9/64*40*12	E37	S160032001SD	M3*20
D15	SA43750601CN	11/64*40*6	E38	S160033001SD	M3*30
D16	SA43750652CN	11/64*40*6.5	E39	S160034001SD	M3*40
D17	SA43751051CN	11/64*40*10.5	E40	S160035001SD	M3*50
D18	SA43751201CN	11/64*40*12	E41	S160040401SD	M4*4
D19	SA43751501CN	11/64*40*15	E42	S160040501SD	M4*5
D20	SA43812451CN	9/32*28*24.5	E43	S160040601MZ	M4*6
D21	S143030501SD	M3*5	E44	S160040602SD	M4*6
			E45	S160040801SD	M4*8
			E46	S160041001SD	M4*10
			E47	S160041201SD	M4*12
			E48	S160041501SD	M4*15
			E49	S160041801SD	M4*18
E	Pan Head Screw		E50	S160043001SD	M4*30
E1	S160410141MZ	M1.4*1.4	E51	S160045001SD	M4*50
E2	S160020202MZ	M2*2	E52	S160046001SD	M4*60
E3	S160020301MZ	M2*3	E53	S160050601SD	M5*6
E4	S160020401MZ	M2*4	E54	S160050701SD	M5*7
E5	S160020801MZ	M2*8	E55	S160050801SD	M5*8
E6	S160470301MZ	M2.5*3	E56	S160051002MZ	M5*10
E7	S160470402MZ	M2.5*4	E57	S160051001SD	M5*10
E8	S160470501MZ	M2.5*5	E58	S160051201SD	M5*12
E9	S160470801MZ	M2.5*8	E59	S160053001SD	M5*12
E10	S160471301MZ	M2.5*13	E60	S160051501SD	M5*15
E11	S160471302SD	M2.5*13	E61	S160054501SD	M5*45
E12	S160480601SD	M2.6*6	E62	S160055001SD	M5*50
E13	S160030301MZ	M3*3	E63	S160056001SD	M5*60
E14	S160030302SD	M3*3	E64	S160047001SD	M4*70
E15	S160030403CD	M3*4	E65	S160480801SD	M2.6*8
E16	S160030401MZ	M3*4	E66	S160030504SC	M3*5
E17	S160030402SD	M3*4	E67	S160480602MZ	M2.6*6
E18	S160030501MZ	M3*5	E68	S160031403MZ	M3*14
E19	S160030502SD	M3*5			
E20	S160030601MZ	M3*6			
E21	S160030603SA	M3*6			
E22	S160030602SD	M3*6			

No.	Part No.	Remark	No.	Part No.	Remark
<i>F</i>	Countersunk Head Screw		<i>G</i>	Round Countersunk Head Screw	
<i>F1</i>	SA51741001CN	9/64*40*10	<i>G1</i>	SA53730601CL	1/8*44*6
<i>F2</i>	SA50750801CN	11/64*40*8	<i>G2</i>	SA53740301CL	9/64*40*3
<i>F3</i>	S150020601SD	M2*6	<i>G3</i>	SA53740351CL	9/64*40*3.5
<i>F4</i>	S150030401MZ	M3*4	<i>G4</i>	SA53740401CL	9/64*40*4
<i>F5</i>	S150030402SD	M3*4	<i>G5</i>	SA53740601CL	9/64*40*6
<i>F6</i>	S150030501MZ	M3*5	<i>G6</i>	SA53740701CL	9/64*40*7
<i>F7</i>	S150030502SD	M3*5	<i>G7</i>	SA53740951CL	9/64*40*9.5
<i>F8</i>	S151030601SD	M3*6	<i>G8</i>	SA53741201CL	9/64*40*12
<i>F9</i>	S150030601MZ	M3*6			
<i>F10</i>	S150030602SD	M3*6			
<i>F11</i>	S150030701SD	M3*7			
<i>F12</i>	S151030801SD	M3*8			
<i>F13</i>	S150030801MZ	M3*8			
<i>F14</i>	S150030804SC	M3*8			
<i>F15</i>	S150030802SD	M3*8			
<i>F16</i>	S150030803SN	M3*8	<i>H</i>	Truss Head Screw	
<i>F17</i>	S150031002MZ	M3*10	<i>H1</i>	SA30730701CL	1/8*44*7
<i>F18</i>	S150031001SD	M3*10	<i>H2</i>	SA30740301CL	9/64*40*3.5
<i>F19</i>	S150031201MZ	M3*12	<i>H3</i>	SA30740401CL	9/64*40*4
<i>F20</i>	S150031202SD	M3*12	<i>H4</i>	SA31740401CM	9/64*40*4
<i>F21</i>	S150031501MZ	M3*15	<i>H5</i>	SA30740601CL	9/64*40*6
<i>F22</i>	S150031601SD	M3*16	<i>H6</i>	SA30740801CL	9/64*40*8
<i>F23</i>	S150040501SD	M4*5	<i>H7</i>	S130470301MZ	M2.5*3
<i>F24</i>	S150040602MZ	M4*6	<i>H8</i>	S130470302SD	M2.5*3
<i>F25</i>	S150040601SD	M4*6	<i>H9</i>	S130470401MZ	M2.5*4
<i>F26</i>	S150040801MZ	M4*8	<i>H10</i>	S130470402SA	M2.5*4
<i>F27</i>	S150040802SD	M4*8	<i>H11</i>	S130470403SD	M2.5*4
<i>F28</i>	S150041001MZ	M4*10	<i>H12</i>	S130030301MZ	M3*3
<i>F29</i>	S150041002SD	M4*10	<i>H13</i>	S130030302SD	M3*3
<i>F30</i>	S150041201SD	M4*12	<i>H14</i>	S130030402SD	M3*4
<i>F31</i>	S150041401SD	M4*14	<i>H15</i>	S130030501MZ	M3*5
<i>F32</i>	S150041501SD	M4*15	<i>H16</i>	S130030502SD	M3*5
<i>F33</i>	S150042001SD	M4*20	<i>H17</i>	S130030601MZ	M3*6
<i>F34</i>	S150042201SD	M4*22	<i>H18</i>	S130030601SD	M3*6
<i>F35</i>	S150042501SD	M4*25	<i>H19</i>	S130030603SA	M3*6
<i>F36</i>	S150050601SD	M5*6	<i>H20</i>	S130030802SD	M3*8
<i>F37</i>	S150050801SD	M5*8	<i>H21</i>	S130030803SA	M3*8
<i>F38</i>	S150051001MZ	M5*10	<i>H22</i>	S130031001MZ	M3*10
<i>F39</i>	S150051002SD	M5*10	<i>H23</i>	S130031002SD	M3*10
<i>F40</i>	S150051201SD	M5*12	<i>H24</i>	S130032001SD	M3*20
<i>F41</i>	S150051501SD	M5*15	<i>H25</i>	S130040401MZ	M4*4
<i>F42</i>	S150053001SD	M5*30	<i>H26</i>	S130040402SD	M4*5
<i>F43</i>	S150053501SD	M5*35	<i>H27</i>	S130040501MZ	M4*5
<i>F44</i>	S150054001SD	M5*40	<i>H28</i>	S130040502SD	M4*5
<i>F45</i>	S150061502SC	M6*15	<i>H29</i>	S130040601MZ	M4*6
<i>F46</i>	S150061503SD	M6*15	<i>H30</i>	S130040602SD	M4*6
<i>F47</i>	S150063501SD	M6*35	<i>H31</i>	S130040651SD	M4*6.5
<i>F48</i>	S150081201SD	M8*12	<i>H32</i>	S130040801MZ	M4*8
<i>F49</i>	S150087001TN	M8*70	<i>H33</i>	S130040802SD	M4*8

No.	Part No.	Remark	No.	Part No.	Remark
<i>H</i>	Truss Head Screw		<i>K</i>	Slotted Set Screw	
<i>H34</i>	S130040803MZ	M4*8	<i>K1</i>	SA71730351CN	1/8*44*3.5
<i>H35</i>	S130041002MZ	M4*10	<i>K2</i>	SA71740601CN	9/64*40*6
<i>H36</i>	S130041001SD	M4*10	<i>K3</i>	SA71750251CN	11/64*40*2.5
<i>H37</i>	S130041201SD	M4*12	<i>K4</i>	SA71750351CN	11/64*40*3.5
<i>H38</i>	S130041502SD	M4*15	<i>K5</i>	SA71750401CN	11/64*40*4
<i>H39</i>	S130042001SD	M4*20	<i>K6</i>	SA71750501CN	11/64*40*5
<i>H40</i>	S130050501SD	M5*5	<i>K7</i>	SA71790501CN	15/64*28*5
<i>H41</i>	S130050602MZ	M5*6	<i>K8</i>	SA71791001CN	15/64*28*10
<i>H42</i>	S130050601SD	M5*6	<i>K9</i>	SA71791501CN	15/64*28*15
<i>H43</i>	S130050651SD	M5*6.5	<i>K10</i>	SA71791701CN	15/64*28*17
<i>H44</i>	S130050701SD	M5*7	<i>K11</i>	SA71800401CN	1/4*40*4
<i>H45</i>	S130050801MZ	M5*8	<i>K12</i>	SA71800451CN	1/4*40*4.5
<i>H46</i>	S130050802SD	M5*8	<i>K13</i>	SA71800501CN	1/4*40*5
<i>H47</i>	S130051002MZ	M5*10	<i>K14</i>	SA71800601CN	1/4*40*6
<i>H48</i>	S130051001SD	M5*10	<i>K15</i>	SA71800801CN	1/4*40*8
<i>H49</i>	S130051201MZ	M5*12	<i>K16</i>	SA71811201CN	9/32*28*12
<i>H50</i>	S130051202SD	M5*12	<i>K17</i>	S171050601TN	M5*6
<i>H51</i>	S130051501SD	M5*15			
<i>H52</i>	S130052001SD	M5*20			
<i>H53</i>	S130052502SD	M5*25			
<i>H54</i>	S130053001SD	M5*30			
<i>H55</i>	S130053501SD	M5*35			
<i>H56</i>	S130060801SD	M6*8	<i>L</i>	Hexagon Socket Head Set Screw	
<i>H57</i>	S130061001SD	M6*10	<i>L1</i>	SA70730251CN	1/8*44*2.5
<i>H58</i>	S130062201SD	M6*22	<i>L2</i>	SA70730301CN	1/8*44*3
<i>H59</i>	S130062501SD	M6*25	<i>L3</i>	SA70750901CN	11/64*28*9
<i>H60</i>	S130063501SD	M6*35	<i>L4</i>	SA70750401CN	11/64*40*4
<i>H61</i>	S130064001SD	M6*40	<i>L5</i>	SA70750601CN	11/64*40*6
<i>H62</i>	S130031501SD	M3*15	<i>L6</i>	SA70750801CN	11/64*40*8
<i>H63</i>	S130043501SD	M4*35	<i>L7</i>	SA70790401CN	15/64*28*4
<i>H64</i>	S130020201SD	M2*2	<i>L8</i>	SA70790901CN	15/64*28*9
<i>H65</i>	S130470503SD	M2.5*5	<i>L9</i>	S170470301TN	M2.5*3
<i>H66</i>	S130052002MZ	M5*20	<i>L10</i>	S170030201TN	M3*2
			<i>L11</i>	S170030301TN	M3*3
			<i>L12</i>	S170030401TN	M3*4
			<i>L13</i>	S170030501TN	M3*5
			<i>L14</i>	S170030601TN	M3*6
			<i>L15</i>	S170030801TN	M3*8
			<i>L16</i>	S170040301TN	M4*3
<i>J</i>	Round Head Screw		<i>L17</i>	S170040401TN	M4*4
<i>J1</i>	S162020301MZ	M2*3	<i>L18</i>	S170040501TN	M4*5
<i>J2</i>	S162030801SD	M3*8	<i>L19</i>	S170040601TN	M4*6
<i>J3</i>	S162030802SE	M3*8	<i>L20</i>	S170040602TN	M4*6
<i>J4</i>	S162031001MZ	M3*10	<i>L21</i>	S170040801TN	M4*8
			<i>L22</i>	S170041001TN	M4*10
			<i>L23</i>	S170041201TN	M4*12
			<i>L24</i>	S170050401TN	M5*4
			<i>L25</i>	S170050501TN	M5*5
			<i>L26</i>	S170050601TN	M5*6

L.M.N.P

No.	Part No.	Remark	No.	Part No.	Remark
<i>L</i>	Hexagon Socket Head Set Screw		<i>N10</i>	S660041001SE	M4*10
<i>L27</i>	S170050801TN	M5*8	<i>N11</i>	S660041201SE	M4*12
<i>L28</i>	S170051001TN	M5*10	<i>N12</i>	S660045501SE	M4*55
<i>L29</i>	S170051201TN	M5*12	<i>N13</i>	S660051001SE	M5*10
<i>L30</i>	S170051501TN	M5*15	<i>N14</i>	S660051201SE	M5*12
<i>L31</i>	S170060501TN	M6*5	<i>N15</i>	S660051401SE	M5*14
<i>L32</i>	S170060601TN	M6*6	<i>N16</i>	S660051801SE	M5*18
<i>L33</i>	S170060801TN	M6*8	<i>N17</i>	S660030801MZ	M3*8
<i>L34</i>	S170061001TN	M6*10	<i>N18</i>	S660030502MZ	M3*5
<i>L35</i>	S170061801TN	M6*18	<i>N19</i>	S660031502MZ	M3*15 6MM DIA. WASHER
<i>L36</i>	S170080801TN	M8*8			
<i>L37</i>	S170081001TN	M8*10			
<i>L38</i>	S170081501TN	M8*15			
<i>L39</i>	S170031001TN	M3*10			
<i>L40</i>	S170031201TN	M3*12			
			<i>P</i>	Nut	
			<i>P1</i>	SB10730601CN	1/8*44*6*3
			<i>P2</i>	SB10740601CL	9/64*40*6*2
			<i>P3</i>	SB10740602CN	9/64*40*6*3
			<i>P4</i>	SB10750602CN	11/64*40*6*2
<i>M</i>	Hexagon Socket Head Button Screw		<i>P5</i>	SB10750603CN	11/64*40*6*3
<i>M1</i>	S124030401SC	M3*4	<i>P6</i>	SB10750701CN	11/64*40*7*3
<i>M2</i>	S124040601SC	M4*6	<i>P7</i>	SB11750701CN	11/64*40*7*3
<i>M3</i>	S124040802SC	M4*8	<i>P8</i>	S210420001XA	M1.6 Type 1
<i>M4</i>	S124040803SD	M4*8	<i>P9</i>	S210020001SD	M2 Type 1
<i>M5</i>	S124051001SC	M5*10	<i>P10</i>	S212020002SD	M2 Type 3
<i>M6</i>	S124051002SD	M5*10	<i>P11</i>	S210460002SD	M2.3 Type 1
<i>M7</i>	S124051501SD	M5*15	<i>P12</i>	S210470001MZ	M2.5 Type 1
<i>M8</i>	S124081201SC	M8*12	<i>P13</i>	S212480001SD	M2.6 Type 3
<i>M9</i>	S124081202SD	M8*12	<i>P14</i>	S210030001MZ	M3 Type 1
<i>M10</i>	S124081501SD	M8*15	<i>P15</i>	S210030002SC	M3 Type 1
<i>M11</i>	S124030501SC	M3*5	<i>P16</i>	S210030003SD	M3 Type 1
<i>M12</i>	S124030801SC	M3*8	<i>P17</i>	S215030001SD	M3 Thumbscrew Type 2
<i>M13</i>	S124030502TC	M3*5	<i>P18</i>	S212030001SC	M3 Type 3
			<i>P19</i>	S212030002SD	M3 Type 3
			<i>P20</i>	S212530001SC	M3.5 Type 3
			<i>P21</i>	S210040001SC	M4 Type 1
			<i>P22</i>	S210040002SD	M4 Type 1
			<i>P23</i>	S212040001SC	M4 Type 3
			<i>P24</i>	S212040002SD	M4 Type 3
<i>N</i>	Screw with Washer		<i>P25</i>	S217040001SD	M4 Cap
<i>N1</i>	S660480601SE	M2.6*6	<i>P26</i>	S210050001SC	M5 Type 1
<i>N2</i>	S660030601SE	M3*6	<i>P27</i>	S210050002SD	M5 Type 1
<i>N3</i>	S660030801SE	M3*8	<i>P28</i>	S212050001SC	M5 Type 3
<i>N4</i>	S660031001SE	M3*10	<i>P29</i>	S212050002SD	M5 Type 3
<i>N5</i>	S660031501SE	M3*15	<i>P30</i>	S217050001SD	M5 Cap
<i>N6</i>	S660031601SE	M3*16	<i>P31</i>	S210060001SC	M6 Type 1
<i>N7</i>	S660031801SE	M3*18	<i>P32</i>	S210060002SC	M6 Type 1 (Left)
<i>N8</i>	S660040601SE	M4*6	<i>P33</i>	S210060003SD	M6 Type 1
<i>N9</i>	S660040801SE	M4*8	<i>P34</i>	S210060004SD	M6 Type 1 (Left)

No.	Part No.	Remark	No.	Part No.	Remark
P	Nut		R26	S301051202SC	Plain M5*12*t0.8
P35	S212060001SC	M6 Type 3	R27	S301051203SD	Plain M5*12*t0.8
P36	S210080001SC	M8 Type 1	R28	S301061102SC	Plain M6*11*t1.6
P37	S210080002SD	M8 Type 1	R29	S301061151SC	Plain M6*11.5*t0.8
P38	S212080001SC	M8 Type 3	R30	S301061301SC	Plain M6*13*t1.0
P39	S212080002SD	M8 Type 3	R31	S301061302SD	Plain M6*13*t1.0
P40	S210100001SC	M10 Type 1	R32	S301061601SC	Plain M6*16*t1.0
P41	S213100002SD	M10 With Flange	R33	S301081601SD	Plain M8*16*t1.2
P42	S213100003SD	M10 With Disk Spring	R34	S301081801SC	Plain M8*18*t1.6
P43	S210120001SC	M12 Type 1	R35	S301081802SD	Plain M8*18*t1.6
P44	S212120001SC	M12 Type 3	R36	S301081803SC	Plain M8*18*t3.2
P45	S212120002SD	M12 Type 3	R37	S301082201SC	Plain M8*22*t3.2
P46	S210160001SD	M16 Type 1	R38	S301102201SC	Plain M10*22*t1.6
P47	S212160002SC	M16 Type 1	R39	S301102601SC	Plain M10*26*t3.2
P48	S212160001SD	M16 Type 3	R40	S301102602SD	Plain M10*26*t3.2
P49	S210200001SC	M20 Type 1	R41	S301122051SC	Plain M12*20.5*t2
P50	S212470001SC	M2.5 Type 3	R42	S301163201SD	Plain M16*32*t2.5
P51	SB12750701SC	11/64*7*2.2 Type 3	R43	S402020001KD	Spring M2
P52	S211040001SD	M4 Type 2	R44	S402480001KC	Spring M2.6
			R45	S402030001KC	Spring M3
			R46	S402030002KD	Spring M3
			R47	S402530001KC	Spring M3.5
			R48	S402040001KC	Spring M4
			R49	S402040002KD	Spring M4
R	Washer		R50	S402050001KC	Spring M5
R1	S301410301MZ	Plain M1.4*3*t0.3	R51	S402050002KD	Spring M5
R2	S301020351XZ	Plain M2*3.5*t0.5	R52	S402050003MZ	Spring M5
R3	S301020431SD	Plain M2*4.3*t0.3	R53	S402060001KC	Spring M6
R4	S301480501XB	Plain M2.6*5*t0.5	R54	S402060002KD	Spring M6
R5	S301480751XB	Plain M2.6*7.5*t0.5	R55	S402080001KC	Spring M8
R6	S301030602XZ	Plain M3*6*t0.3	R56	S402080002KD	Spring M8
R7	S301030603SC	Plain M3*6*t0.5	R57	S402100001KC	Spring M10
R8	S301030601SD	Plain M3*6*t0.5	R58	S402100002KD	Spring M10
R9	S301030701SD	Plain M3*7*t0.5	R59	S402120001KC	Spring M12
R10	S301030804SD	Plain M3*8*t0.3	R60	S305041101TP	Wave M4
R11	S301030805MZ	Plain M3*8*t0.5	R61	S305051101TN	Wave M5
R12	S301030801SC	Plain M3*8*t0.5	R62	S305061051TN	Wave M6
R13	S301030802SD	Plain M3*8*t0.5	R63	S304040851TP	With teeth M4
R14	S301030803SD	Plain M3*8*t1	R64	S304051001TP	With teeth M5
R15	S301040805SC	Plain M4*8*t0.5	R65	S306080001SC	Slant M8
R16	S301040802SD	Plain M4*8*t0.5	R66	S303040801SC	Disk Spring M4
R17	S301040804SC	Plain M4*8*t0.8	R67	S301040901EZ	Plain M4*9*t0.3
R18	S301040803SD	Plain M4*8*t0.8	R68	S301470252MZ	Plain M2.5*5*t0.5
R19	S301041004MZ	Plain M4*10*t0.8	R69	S301030605SD	Plain M3*6*t1.0
R20	S301041002SC	Plain M4*10*t0.8	R70	S301030604MZ	Plain M3*6*T0.5
R21	S301041003SD	Plain M4*10*t0.8			
R22	S301041201SC	Plain M4*12*t1			
R23	S301051002SC	Plain M5*10*t0.8			
R24	S301051003SD	Plain M5*10*t0.8			
R25	S301051204MZ	Plain M5*12*t0.8			

1st Edition August, 2007
2nd Edition May, 2008

■ **Manufactured by:**
Tokai Industrial Sewing Machine Co., Ltd.

NO.1800, Ushiyama-cho, Kasugai, Aichi-pre., 486-0901, Japan
Telephone:568-33-1161 Fax:568-33-1191

■ **Distributed by:**
Tajima Industries Ltd.

19-22, Shirakabe, 3-chome, Higashi-ku, Nagoya, 461-0011, Japan
Telephone:52-932-3444 Fax:52-932-2457

■ **Authorized Distributor:**



●Copy, reprint, or reform of a part or whole of this manual without permission is prohibited.

THE TAJIMA GROUP

<http://www.tajima.com>

Tajima Industries Ltd.

19-22, Shirakabe, 3-chome, Higashi-ku, Nagoya, 461-0011, JAPAN
TEL.81-52-932-3811 FAX.81-52-932-3815

Tokai Industrial Sewing Machine Co., Ltd.

NO.1800, Ushiyama-cho, Kasugai, Aichi-pre., 486-0901, JAPAN
TEL.81-568-33-1161 FAX.81-568-33-1191